


# ZL4600

English language

Leaflet No. 462810 rev 00

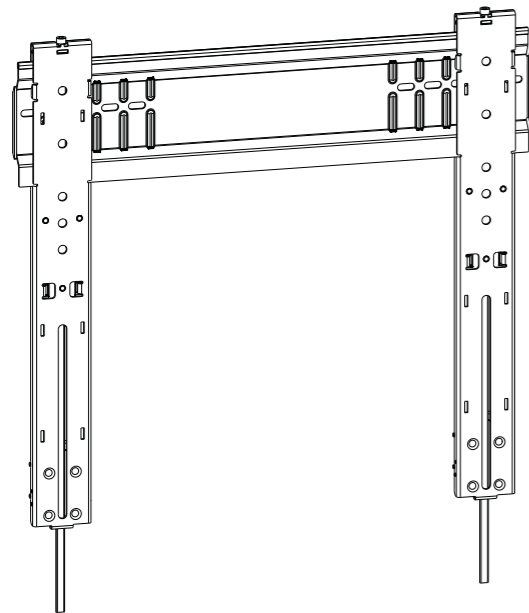

*If you have any questions about this product or issues with installation contact the customer services helpline before returning this product to the store.*

## AVF Group Ltd.

Road 30, Hortonwood Ind Est, Telford, Shropshire, TF1 7YE, England.

**+44 (0) 1952 670009**

**0870 0609777 (UK)**

## AVF Incorporated.

3187, Cornerstone Drive, Mira Loma, CA 91752, USA.


**1-800 667 0808 (USA)**

## Orbital Holdings Inc.


3187, Cornerstone Drive, Mira Loma, CA 91752, USA.

**1-800 601 8450 (USA)**

## 1 Boxed Parts

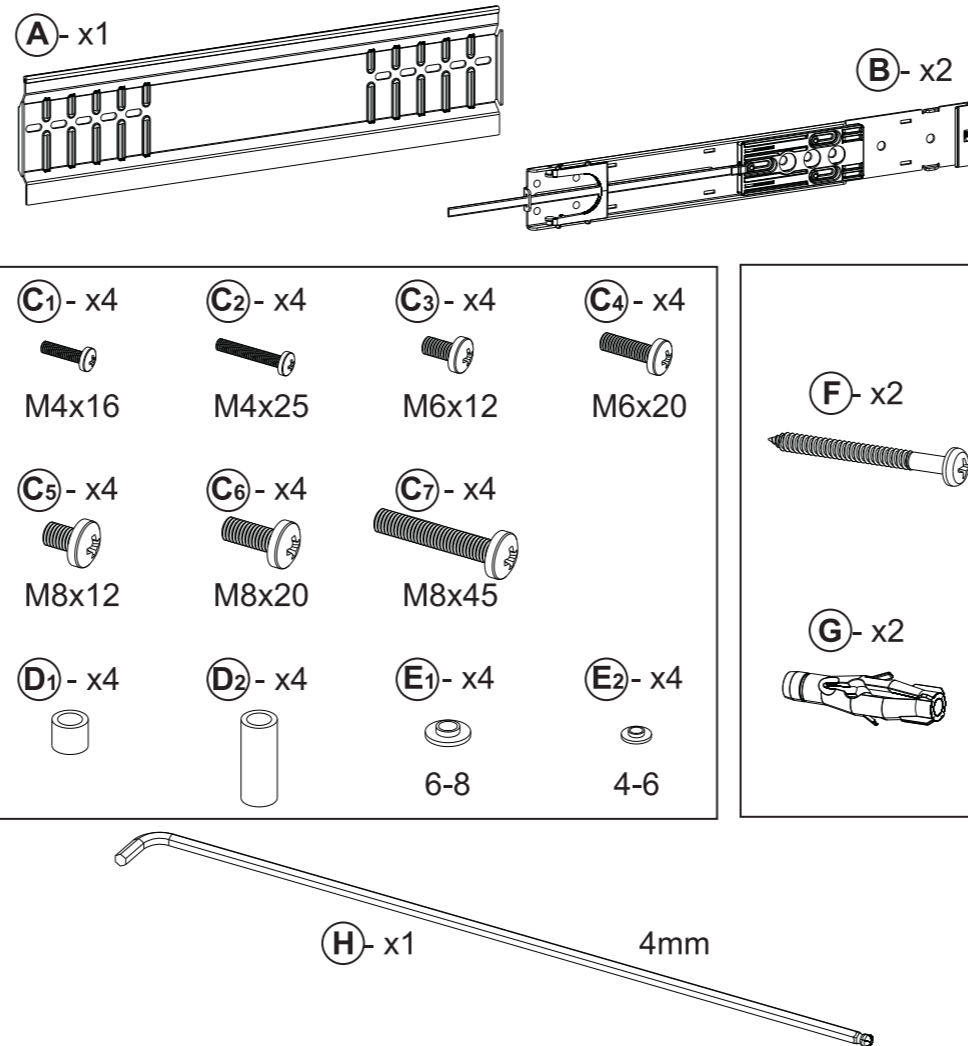



## 2 Tools Required

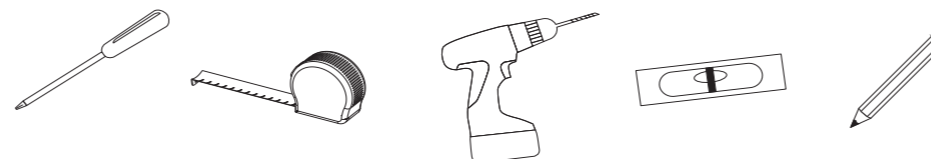

## 3 Fit Screen Brackets

When fitting the screen brackets, fit them close to the top of the TV (without them being visible). This will make hanging the TV and adjusting its level much easier.

Dimension "B" should not be greater than 120mm [4 3/4"].

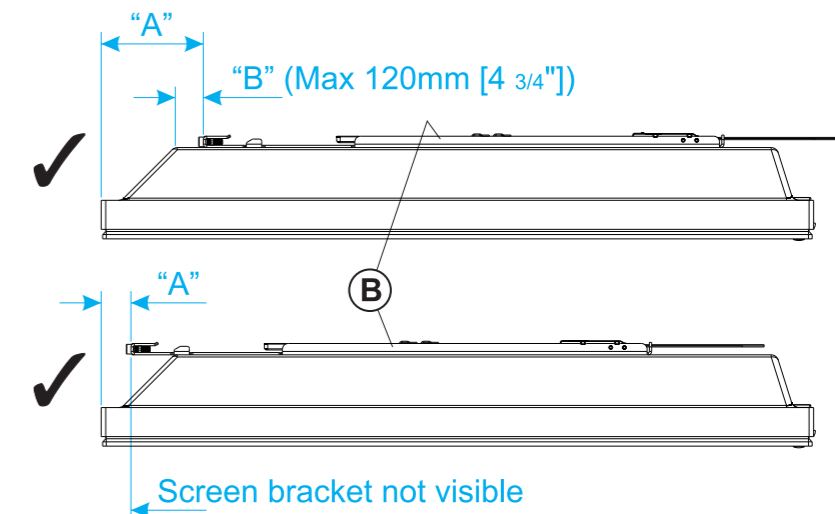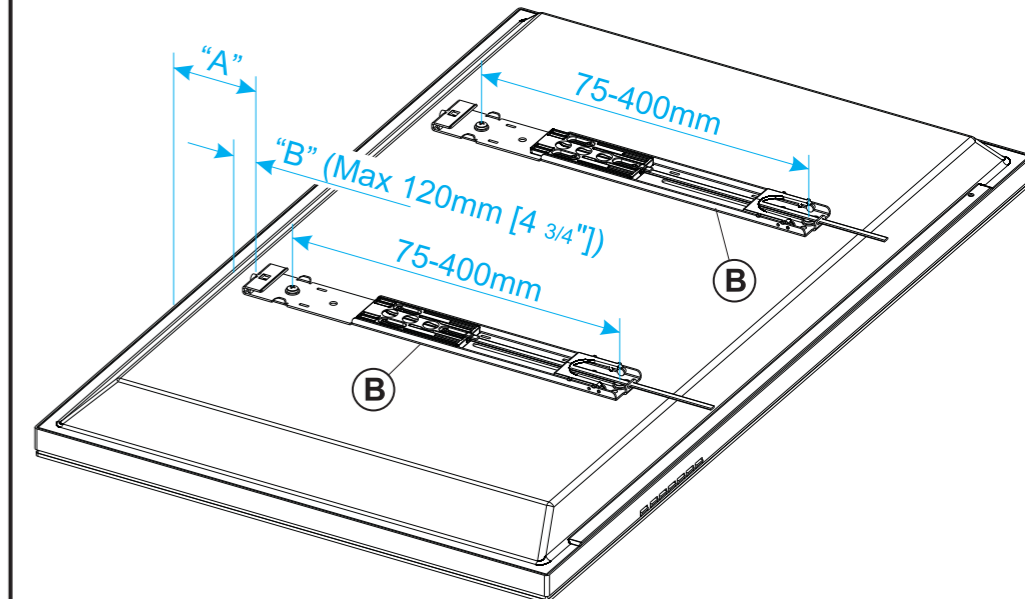

Choose the screws C1-C7 that suit your TV  
Use spacers D1-D2 to space the bracket away from your TV if required

**CAUTION!**  
If "H" is greater than 400mm [15<sup>3</sup>/<sub>4</sub>"] stop installation now and contact the customer help line

## 4 Determine Wall Bracket Height

64mm [2 1/2"]  
Wall bracket screw  
B - A - 64mm [2 1/2"]  
Height of wall bracket screw  
Desired screen height  
Floor  
Measure dimension "A"

## 5 Fit Bracket To Wall

Use the bracket as a template  
Hold the bracket level while marking the wall

Mark and drill 2 places

**Solid Wall**  
Ø10mm  
Remove dust from hole  
70mm  
Ø10mm

**Wood Stud Wall**  
Ø3mm [1/8"]  
70mm  
Ø3mm

**IMPORTANT!**  
Ensure both fixings are on the centre of the wood stud

Lubricate screw thread with soap

DO NOT over tighten screws  
Tighten screws by hand only

## 6 Assemble

**ia**  
**ib**  
**ic**  
**id**

Pull to lock 2 places  
Pull to unlock 2 places  
Cable access stay

**ii**  
Adjust screen level  
Trim cord length with scissors to suit  
**Rear View**