 


JZL104

Leaflet No. **463444** rev01

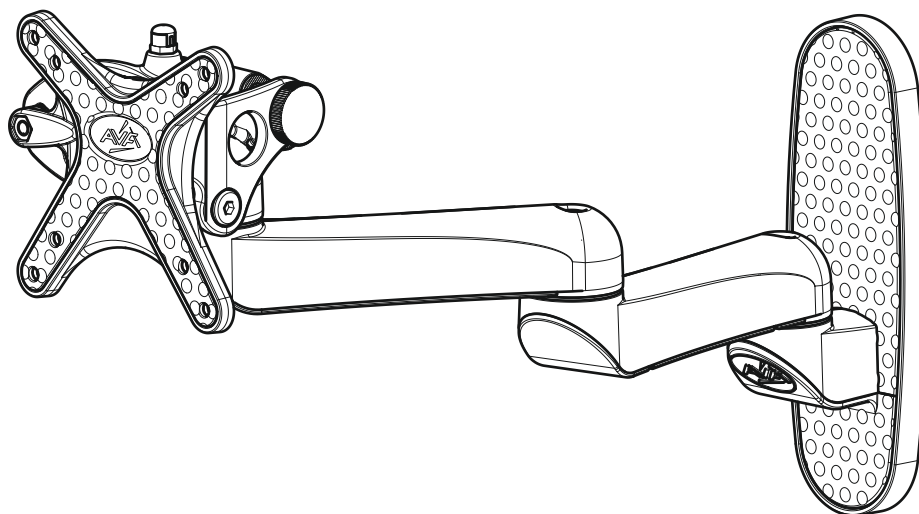

*Read through ALL instructions before commencing installation.
If you have any questions about this product or issues with installation
contact the customer services helpline before returning this product to
the store. See jl.avfgroup.com/p/jzl104 for more information.*

CUSTOMER SERVICES HELP LINE NUMBER:

 
01952 670009




AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England

Assembly Overview


Fit the Mounting Plate

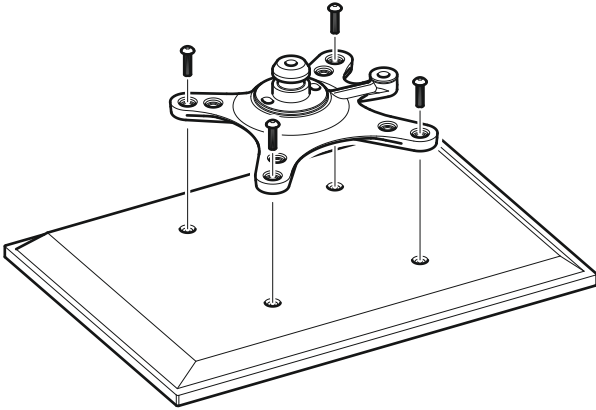

Fit the Wall Bracket

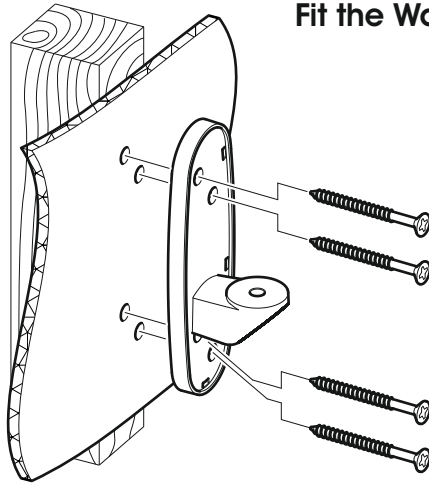 

Attach the TV

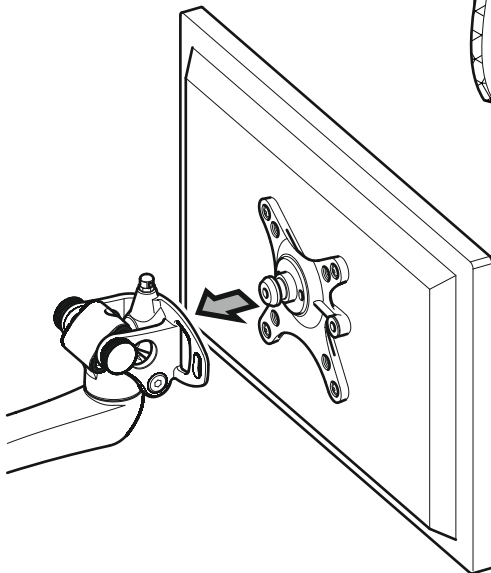 

Index

- 1** Measure the TV fixing holes Width and Height
- 2** Fitting the TV Mounting Plate
- 3** Fitting the Wall Bracket
- 4** Assemble the Bracket
- 5** Fitting the Top and Bottom Covers
- 6** Attach the TV
- 7** Fitting the Arm Covers and Cable Management
- 8** TV Levelling and Tilt

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/ Illustrations.

 
You will not need all these parts, so expect there to be some left over depending upon the specification of wall.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.


Tools Recommended

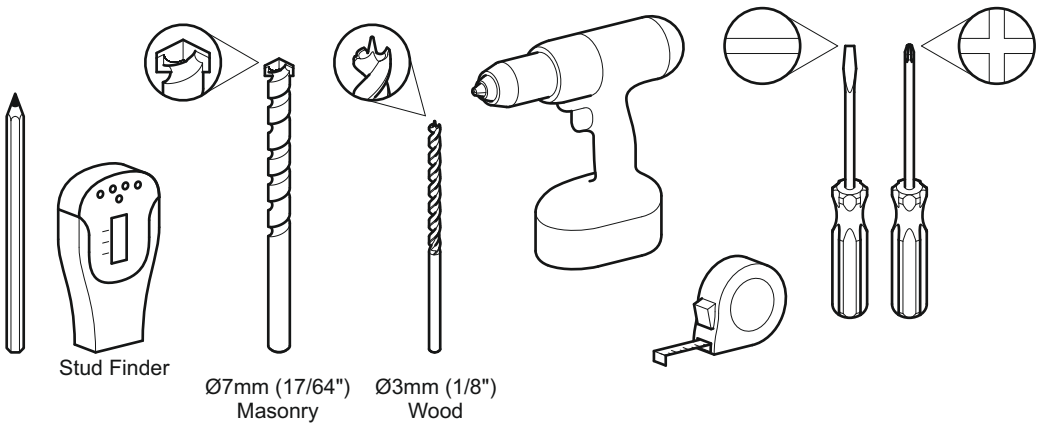

Boxed Parts

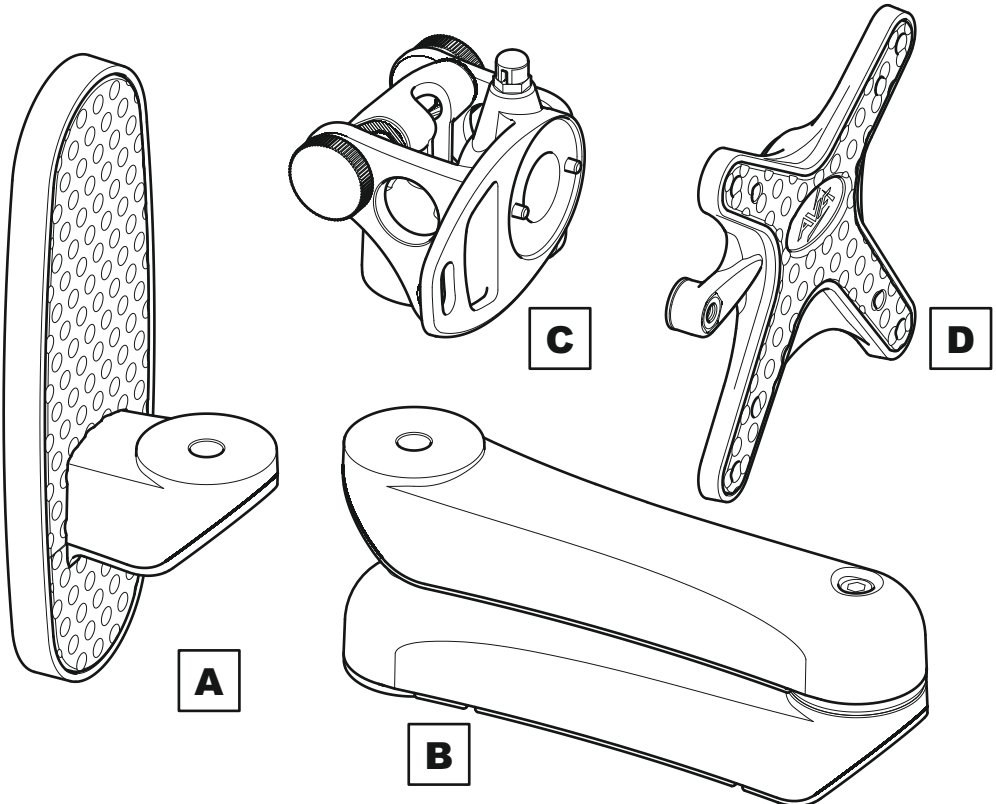 


TV Screws

 


M4

 
E x4

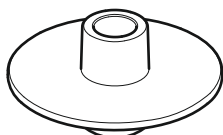

F x2

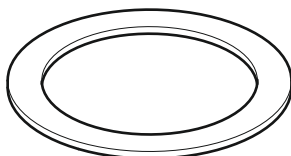 

G x2

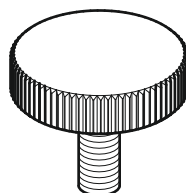 

H x1



I x1



 
J x2




K x2



L x2




M x2

 

N x4




 O x4

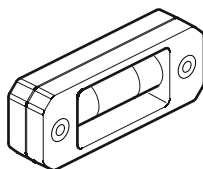


P x1

 2.5mm



Q x1

 3mm



R x1

5mm

 


S x1

Before you begin


i

Remove
bottom cover

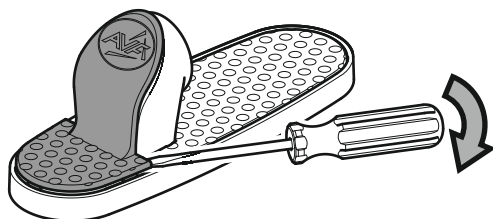

ii

 
Remove
top cover

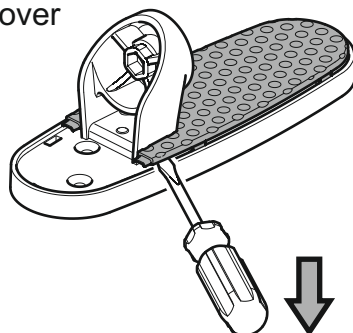


Keep top and bottom covers until step 5.

1

 
Measure the TV fixing holes Width and Height

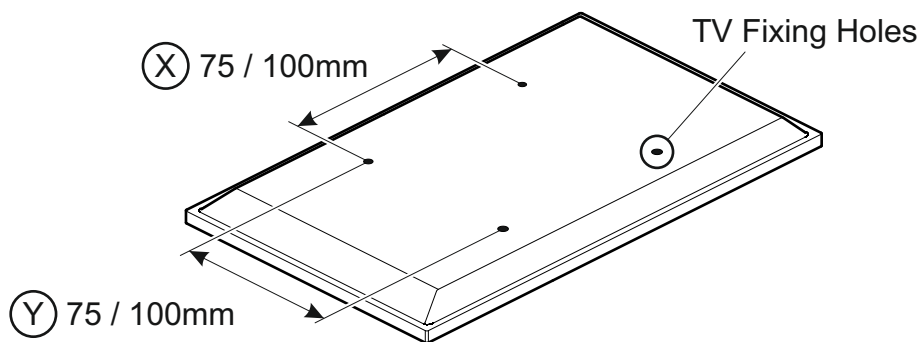

 
If (X) or (Y) are not equal to 75 or 100mm STOP installation now and contact the customer help line.

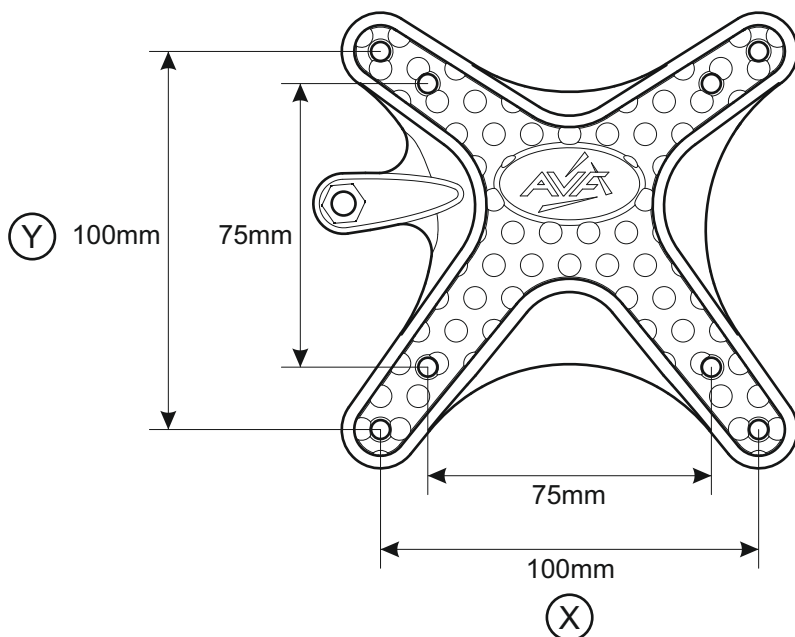

2 Fitting the TV Mounting Plate


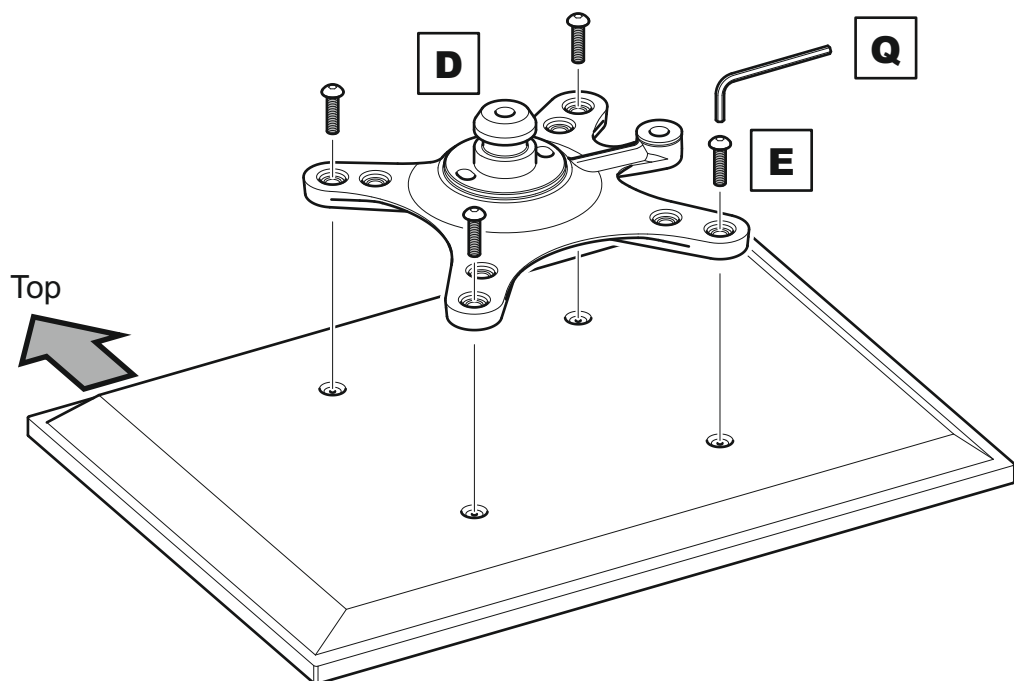 


 If your TV has an irregular back or if you have any issues fitting to the back of your TV with the screws supplied, please call the customer services helpline **01952 670009 / 0870 0609777**

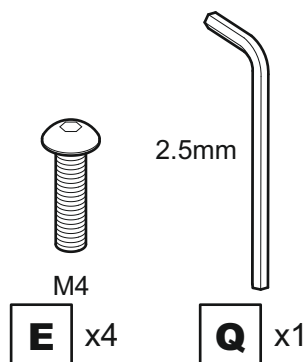



3 Fitting the Wall Bracket

  Solid Wall

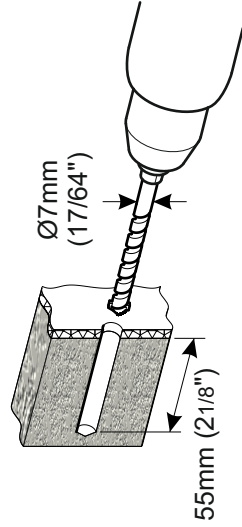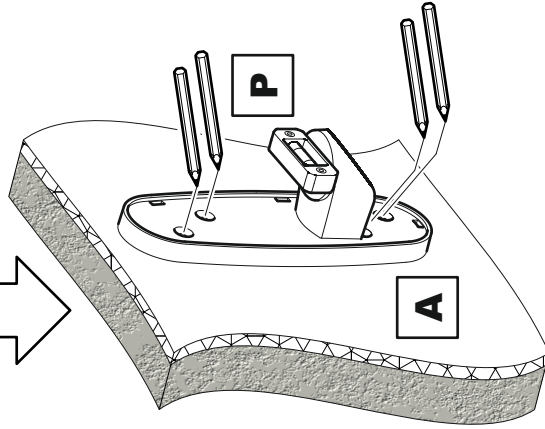



Remove dust from hole

  Wood Stud

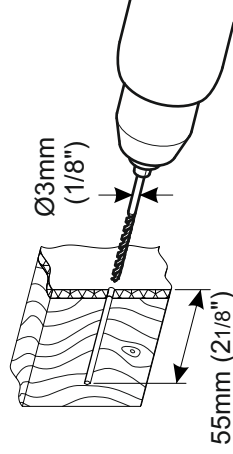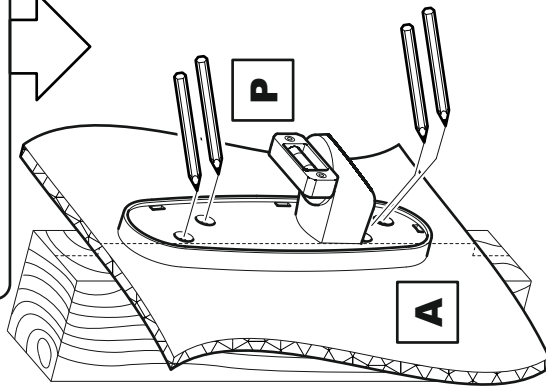


  Ensure bracket is in the centre of the wood stud

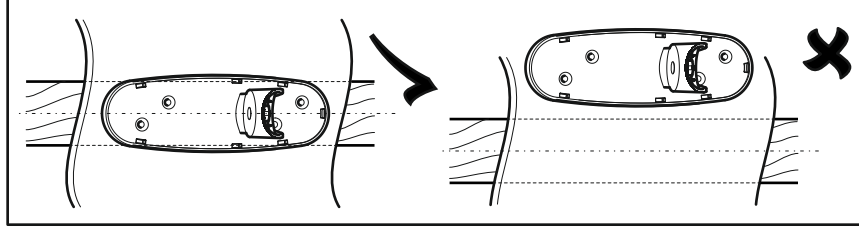

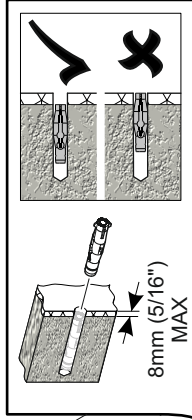

8mm (5/16")
MAX

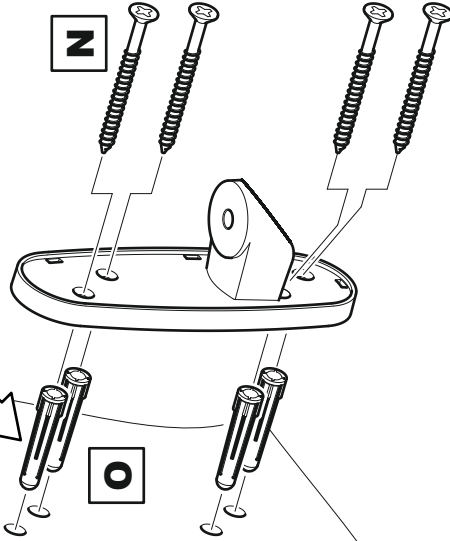 

Lubricate screw
thread with soap



 
DO NOT over tighten screws
Tighten screws by hand only




N x4



O x4



Lubricate screw
thread with soap

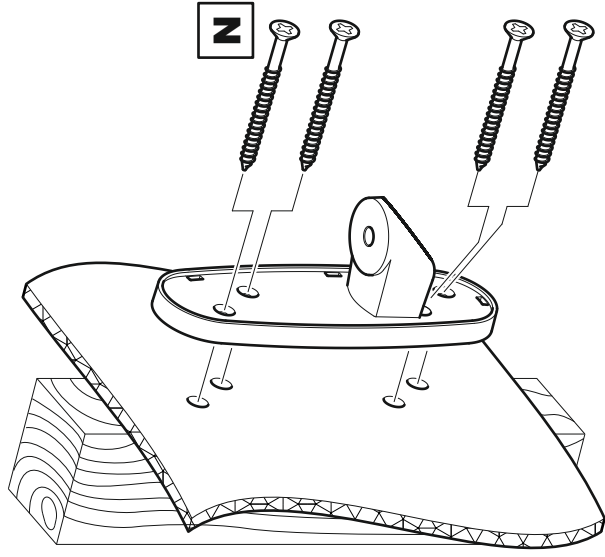 


N x4



DO NOT over tighten screws
Tighten screws by hand only


4 Assemble the bracket

 Before you assemble the bracket, please remove the 2 arm covers and screws from arm **B** and keep until step 7.

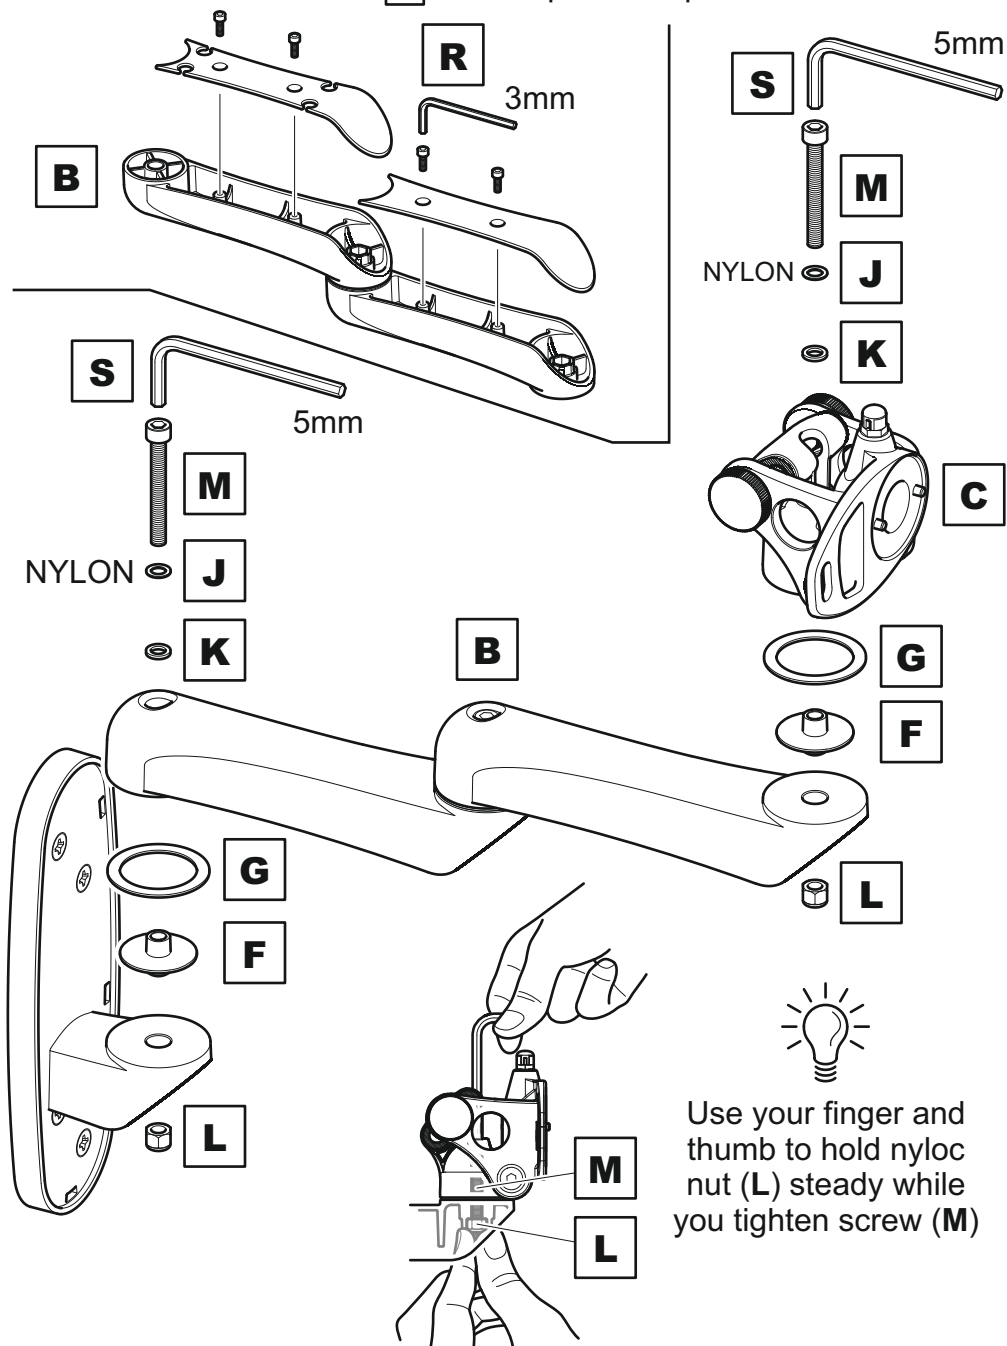


5 Fitting the Top and Bottom Covers

 i Fit the top cover

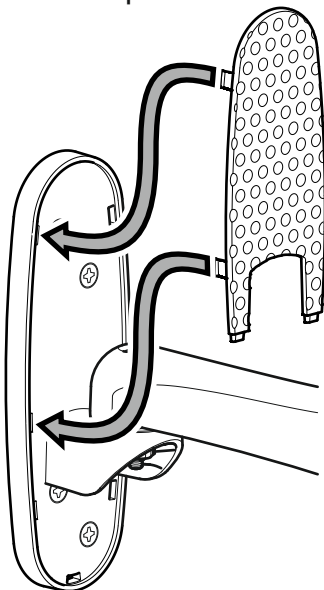


ii Fit the bottom cover

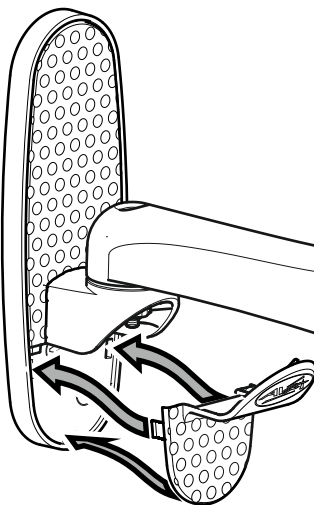 


6 Attach the TV

 i

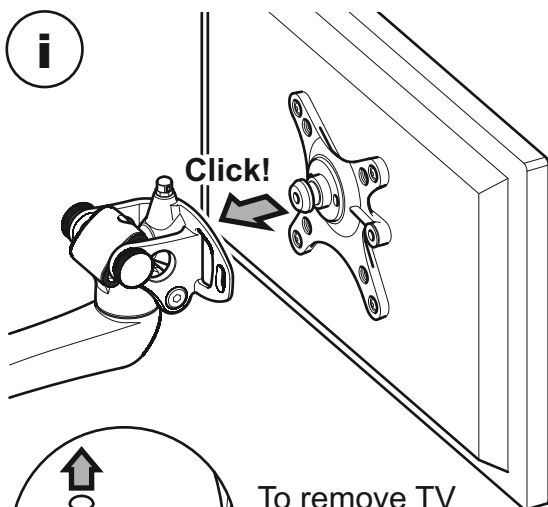


ii

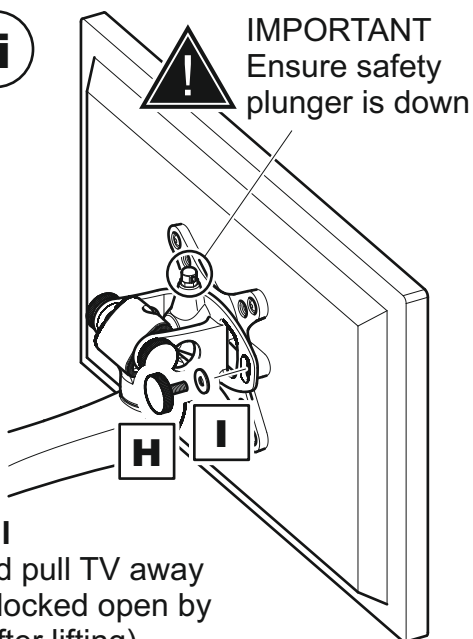 

To remove TV
i. Remove parts **H** and **I**
ii. Lift safety plunger and pull TV away
(Safety plunger can be locked open by turning anti clockwise after lifting)

7

 Fitting the Arm Covers and Cable Management

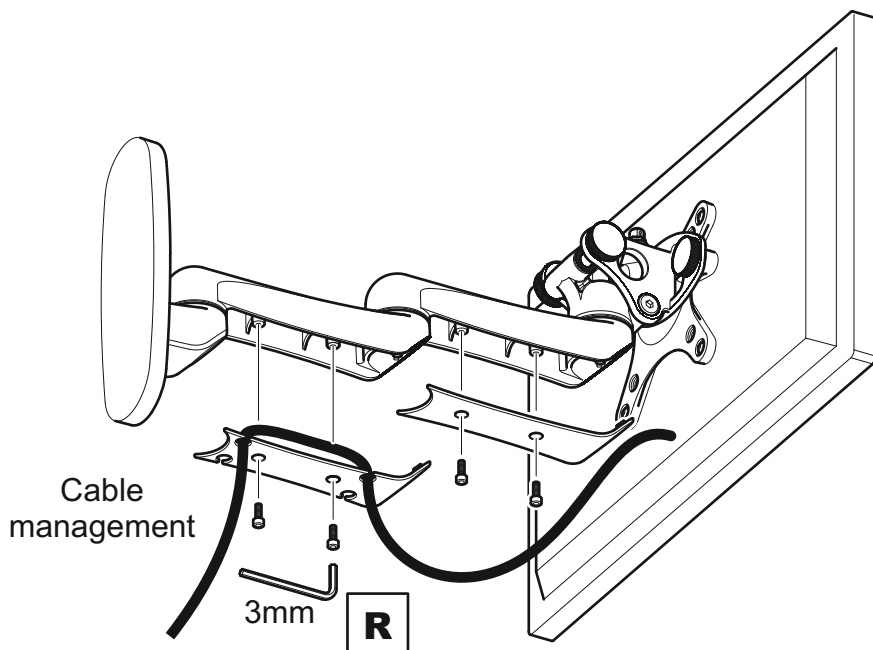

8

TV levelling and Tilt

