
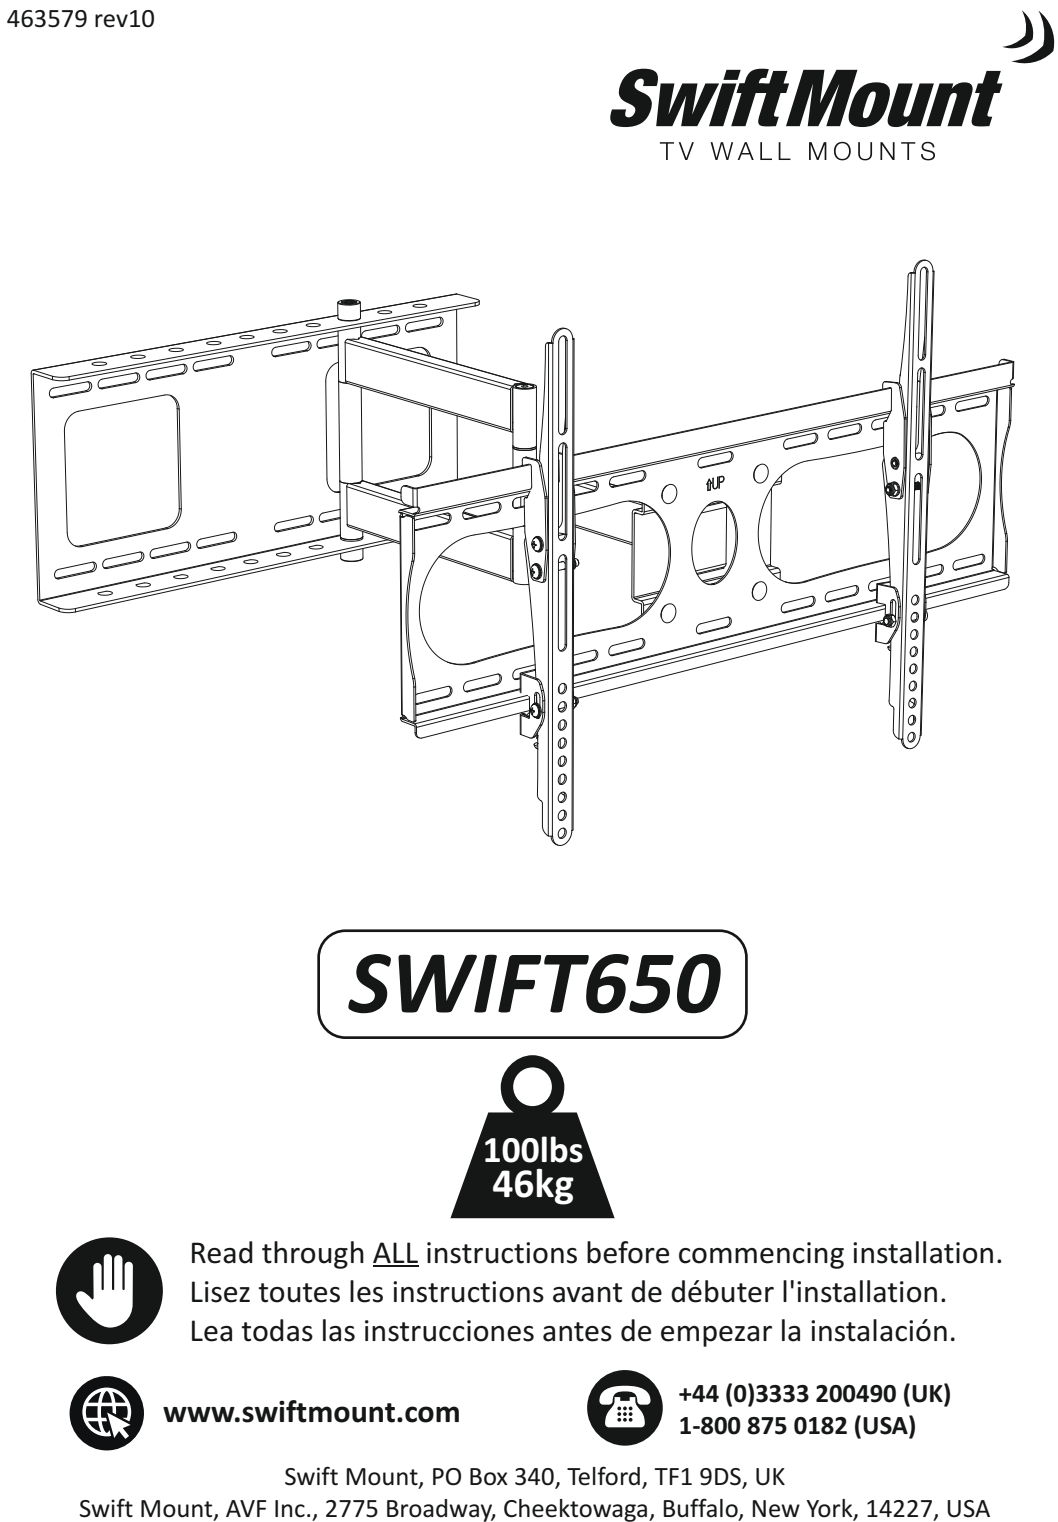


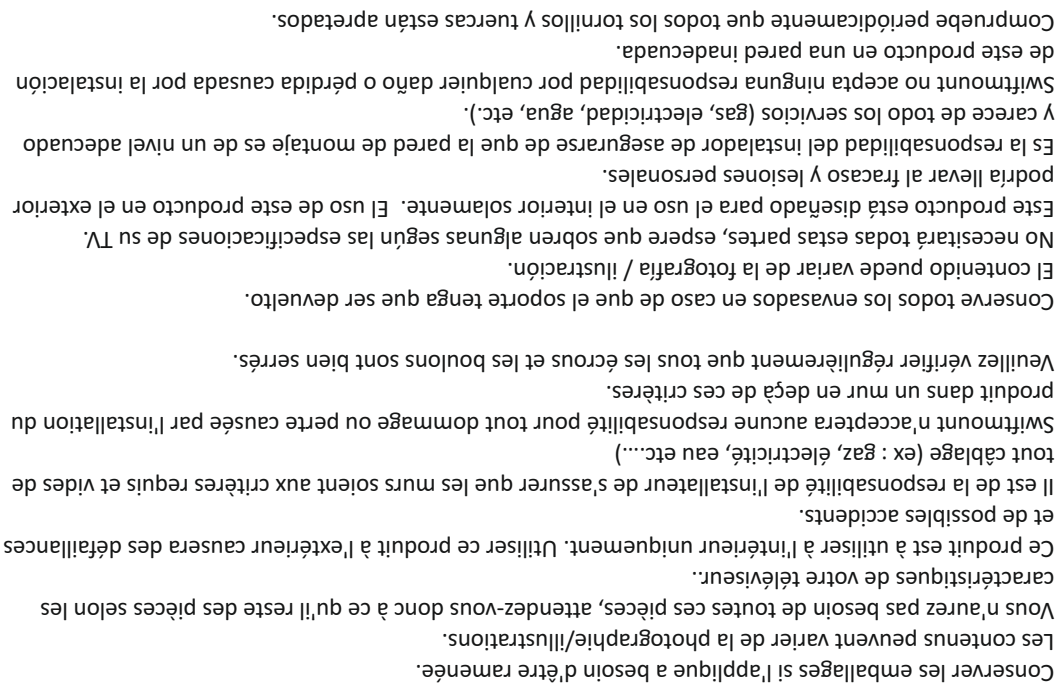

2

Top
Haut
Parte Supérieur

T1_{x4}
M4 x 16mm

T2_{x4}
M5 x 16mm

T3_{x4}
M6 x 16mm

T4_{x4}
M8 x 16mm

T5_{x4}
M5

T6_{x4}
M6

T7_{x4}

TV

TV

TV

T1+T5
T2+T5
T3+T6
T4

T1+T5+T7
T2+T5+T7
T3+T6+T7
T4+T7

3

65mm (2 9/16")

50mm (2") MIN

Remove dust from hole
Retirez la poussière du trou
Elimine el polvo del agujero

Ø10mm (25/64")

W3_{x6}

M6

W1_{x6}

W2_{x6}

Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

3

50mm (2")

Ensure bracket is in the centre of the wood stud
 Assurez-vous que l'applique est au centre de la latte de bois
 Asegúrese de que el soporte está en el centro de la viga de madera

Ø3mm (1/8")

W3x4
M6

W1x4

Lubricate screw thread with soap
 Lubrifiez le pas de vis avec du savon
 Lubrique la rosca del tornillo con jabón

4

Lock tilt
Inclinaison verrouillée
Cerradura de la función de inclinación

The diagram illustrates the process of locking the tilt function of a monitor in three steps:

- i**: A hand moves the tilt lock lever from the unlocked position (indicated by an open padlock icon) to the locked position (indicated by a closed padlock icon).
- ii**: The monitor is tilted upwards, as indicated by a large curved arrow.
- iii**: The monitor is tilted back to its original position. The tilt lock lever remains in the locked position, as indicated by the closed padlock icon.

A warning icon in the top right corner shows two people, indicating that this feature should be used with caution to avoid injury.