 


# JZL204

Leaflet No. **463864** rev01

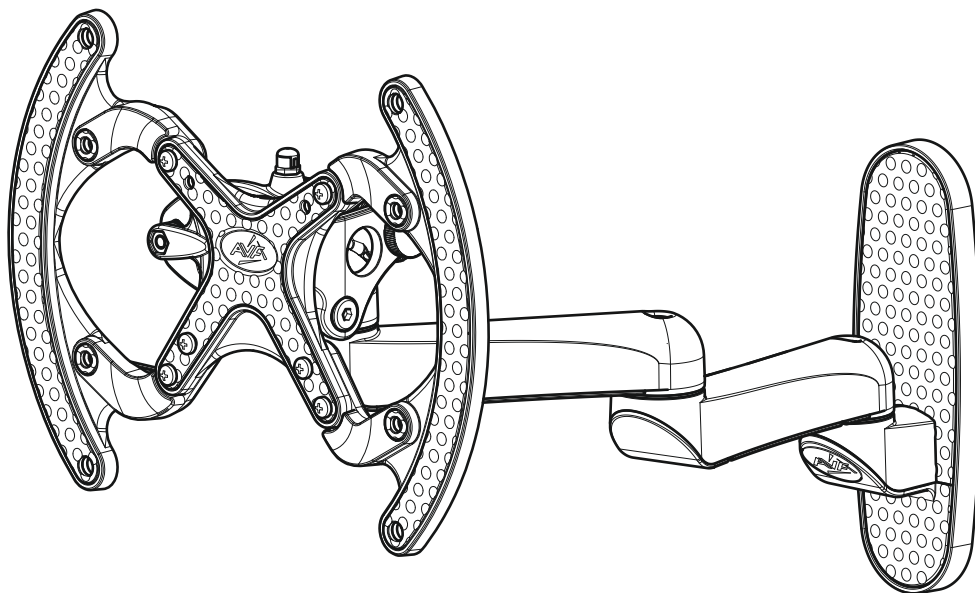

*Read through ALL instructions before commencing installation.  
If you have any questions about this product or issues with installation  
contact the customer services helpline before returning this product to  
the store. See [jl.avfgroup.com/p/jzl204](http://jl.avfgroup.com/p/jzl204) for more information.*

CUSTOMER SERVICES HELP LINE NUMBER:

 
**01952 670009**




**AVF Group Ltd.** Hortonwood 30, Telford, Shropshire, TF1 7YE, England

## Assembly Overview


### Fit the Mounting Plate

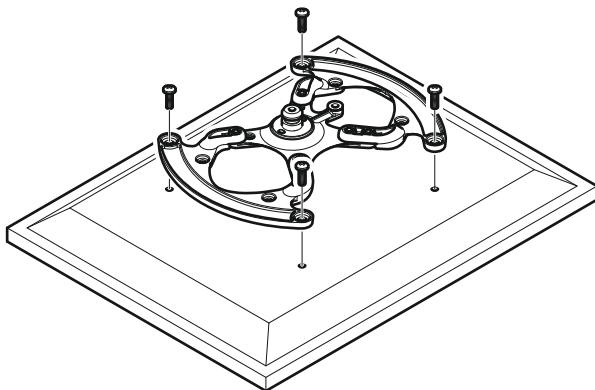

### Fit the Wall Bracket

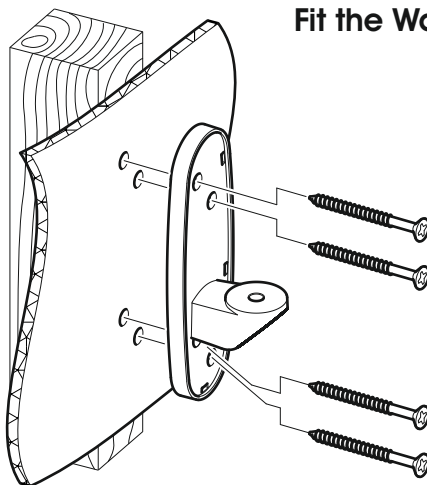 

### Attach the TV

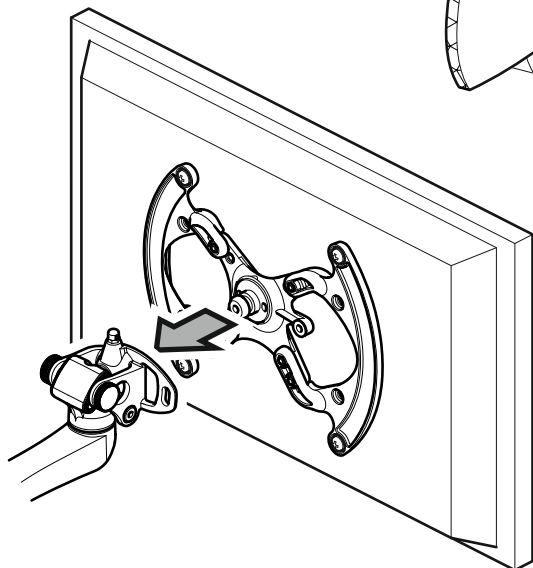 

## Index

- 1** Measure the TV fixing holes Width and Height
- 2** Choose and Prepare the TV Mounting Plate
- 3** Fitting the TV Mounting Plate
- 4** Fitting the Wall Bracket
- 5** Assemble the Bracket
- 6** Fitting the Top and Bottom Covers
- 7** Attach the TV
- 8** Fitting the Arm Covers and Cable Management
- 9** TV Levelling and Tilt

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/ Illustrations.

 
You will not need all these parts, so expect there to be some left over depending upon the specification of wall.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).




AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.

## Tools Recommended

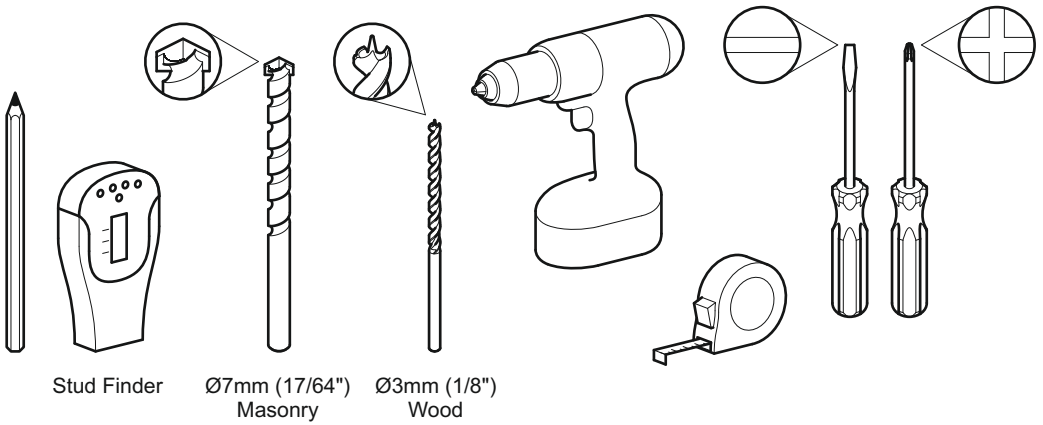



## Boxed Parts

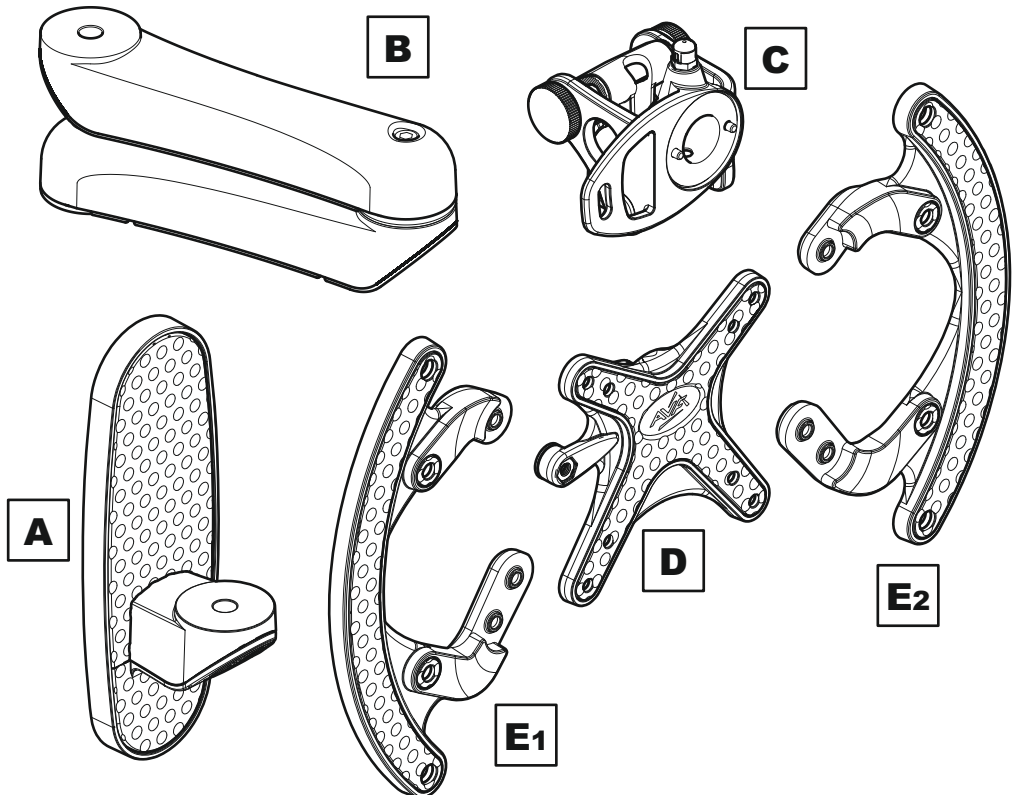 

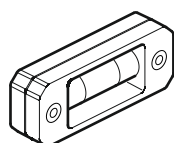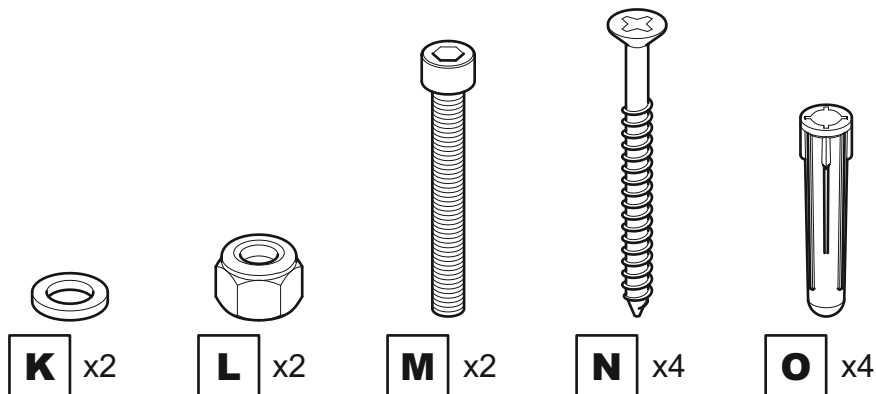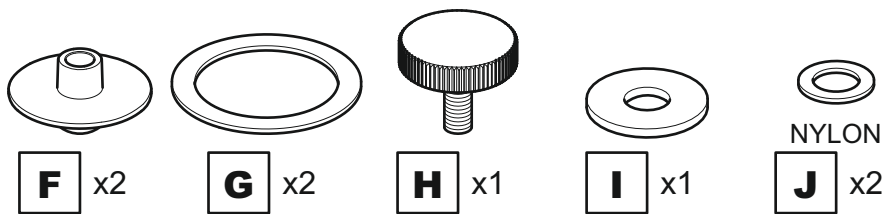   

**P** x1


### TV Screws

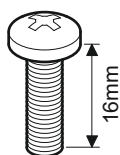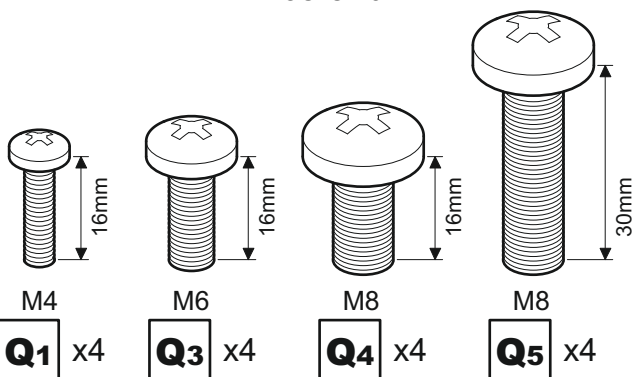  


M5  
**Q2** x6



 **R** x6

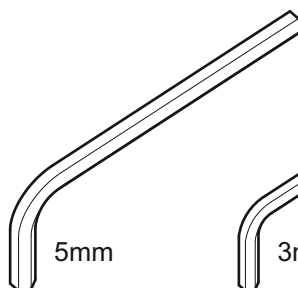


**S** x1

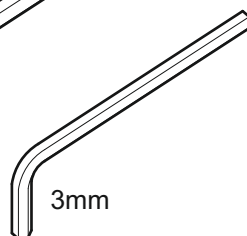 


**T** x1

## Before you begin

 **i** Remove bottom cover

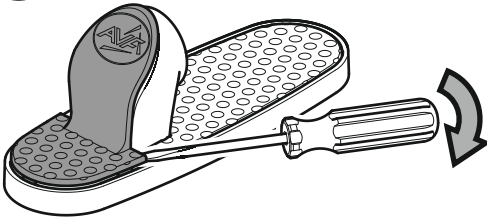


**ii** Remove top cover

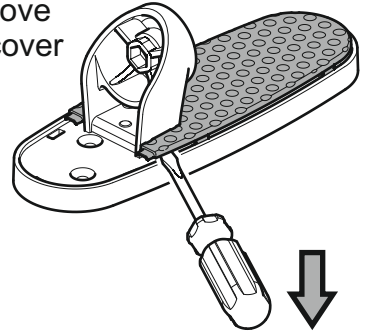 


Keep top and bottom covers until step 6.

## 1 Measure the TV fixing holes Width and Height

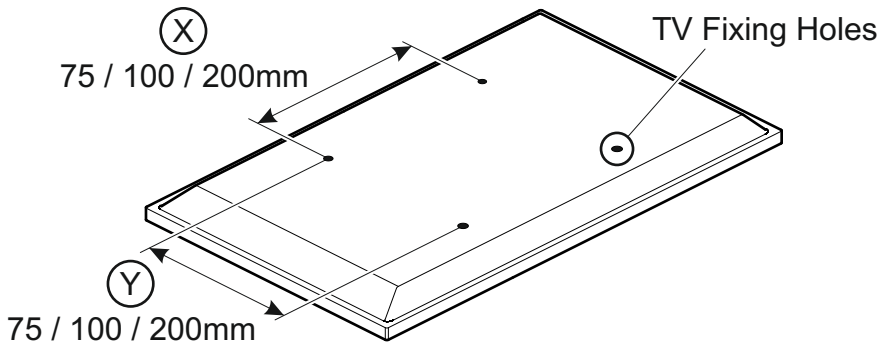 

 If your TV holes do not line up STOP installation now and contact the customer help line

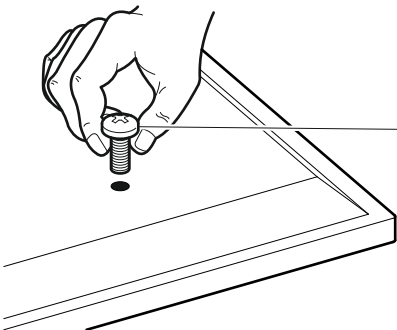

**M4 = Q1**

**M6 = Q3**

**M8 = Q4-Q5**

You are provided with 3 diameters of TV fixing screws, **M4**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 3.

## 2

 
## Choose and Prepare the TV Mounting Plate

Use the option that fits your TV

### OPTION 1

(X) = 75mm / 100mm

(Y) = 75mm / 100mm

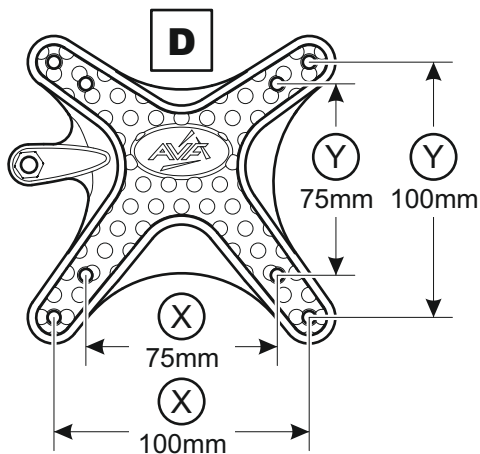


### OPTION 2



(X) = 200mm

(Y) = 100mm / 200mm

 If you choose **OPTION 2** you will need to attach adaptors **E1** & **E2**. Please see over the page for details.

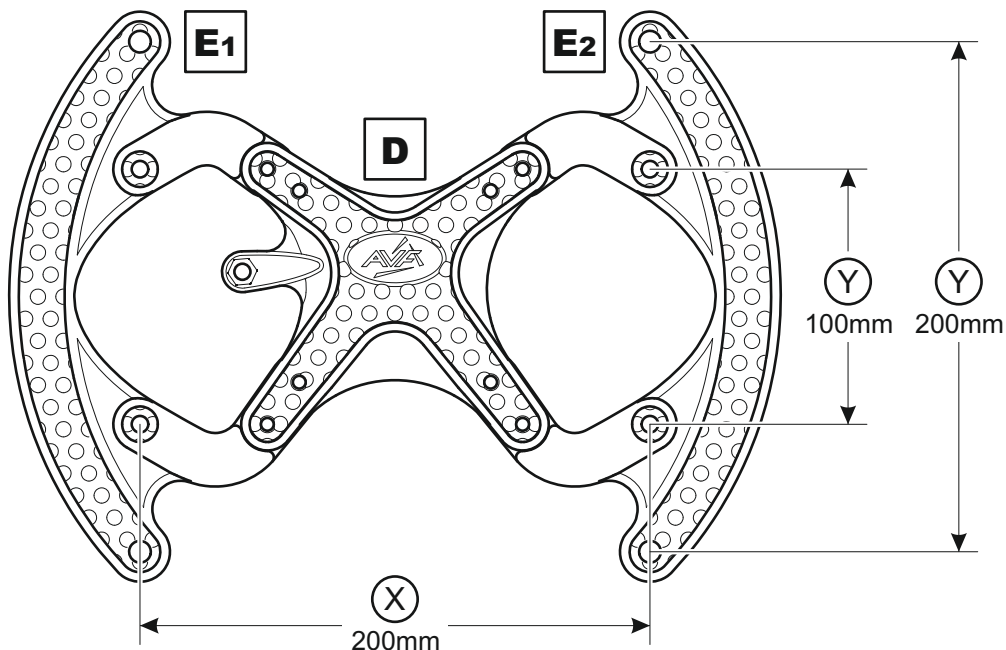

OPTION 2

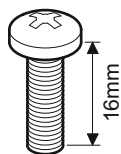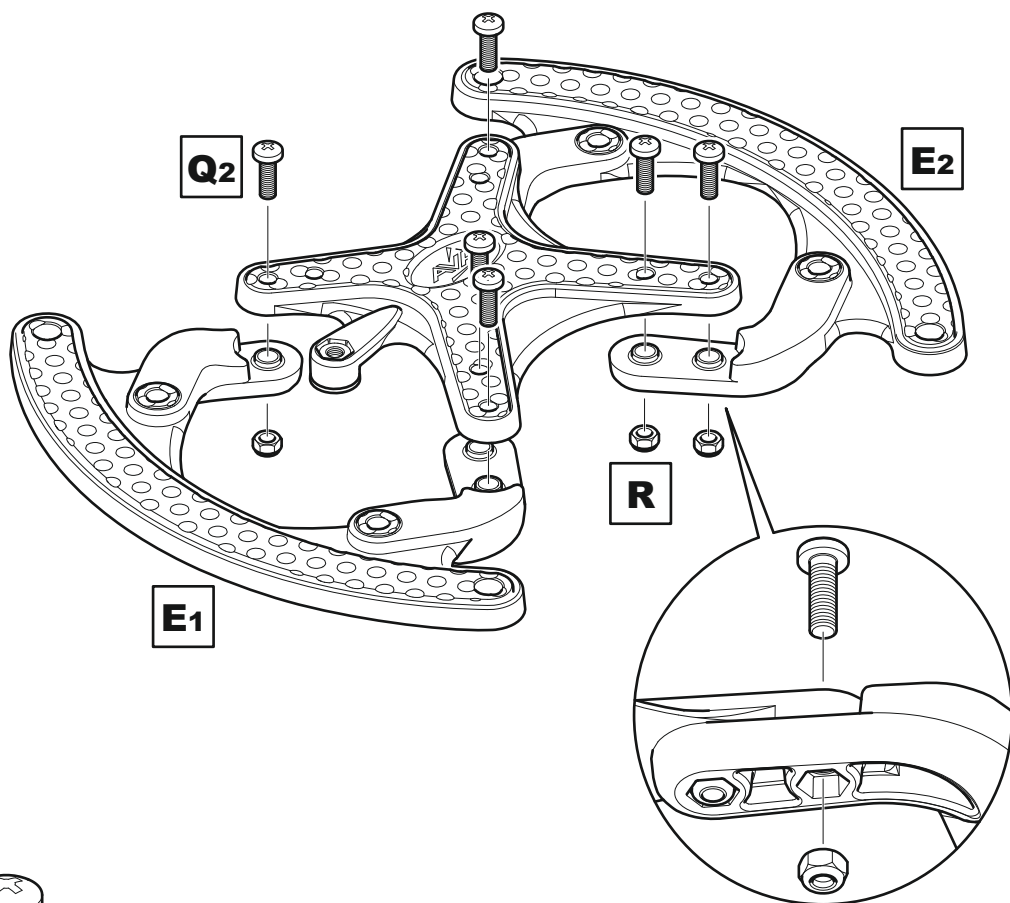  

M5



**Q2**

x6

**R**

x6

 


### 3 Fitting the TV Mounting Plate

#### OPTION 1

Only use this option if your TV fixing holes are 75 x 75mm or 100mm x 100mm

- \* You can only use screw **Q1** with 75 x 75mm or 100 x 100mm TV fixing holes

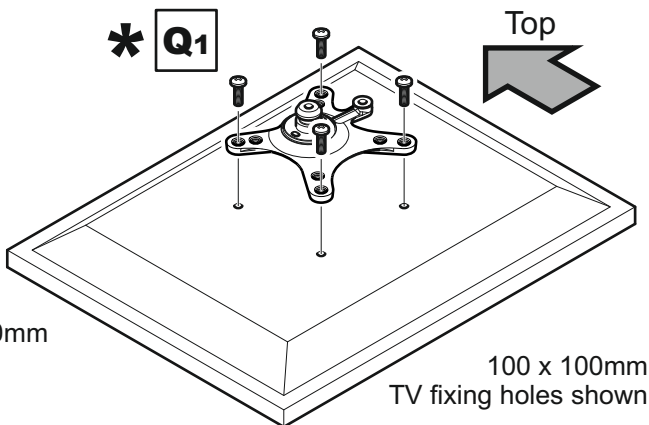


#### OPTION 2

Only use this option if your TV Fixing holes are 200 x 100mm or 200mm x 200mm

- ▲ You can only use screws **Q1** or **Q3** with 200 x 100mm TV fixing holes

 
You can only use screws **Q3-Q5** with 200 x 200mm TV fixing holes

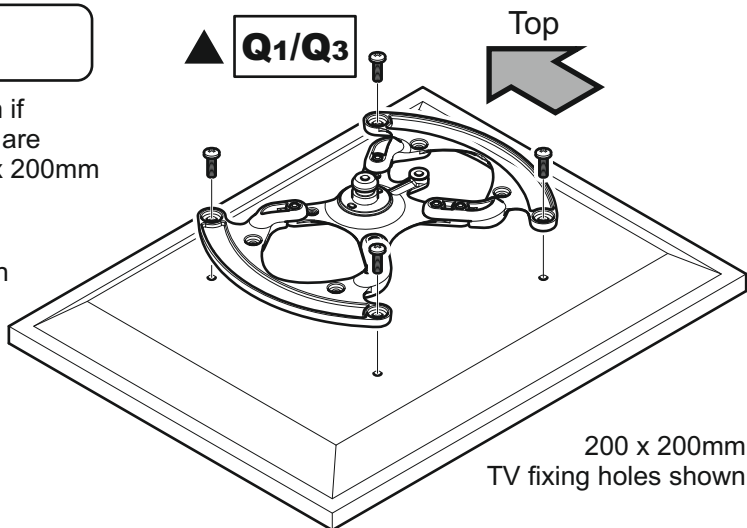

If your TV has an irregular back or if you have any issues fitting to the back of your TV with the screws supplied, please call the customer services helpline **01952 670009**





 After completing step 3 you will have fittings left over, please keep for future reference

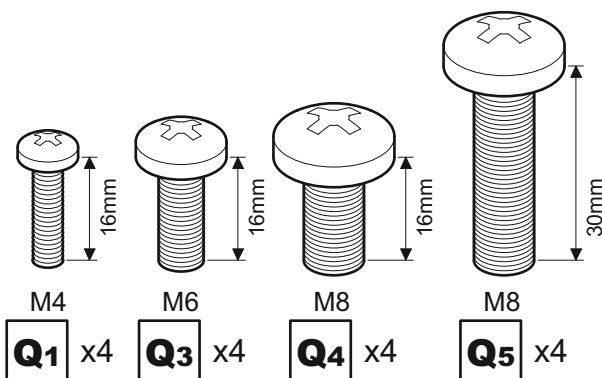

## 4 Fitting the Wall Bracket

 
 
Solid Wall

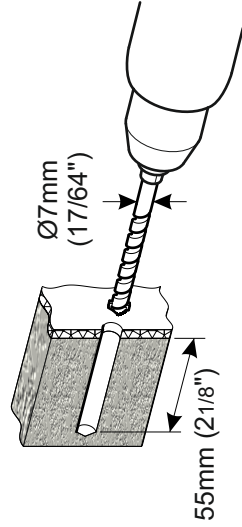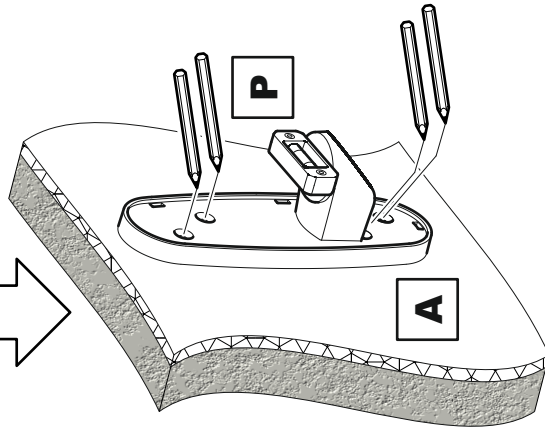


Remove dust from hole




  Wood Stud

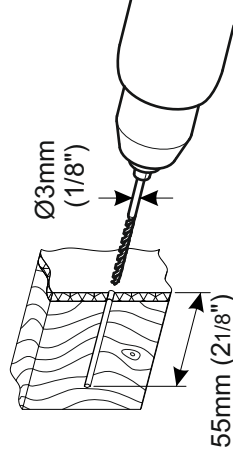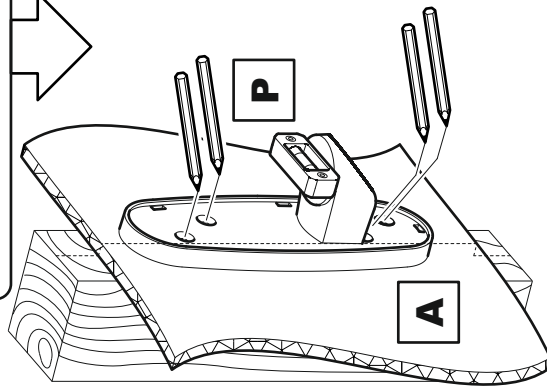


  Ensure bracket is in the centre of the wood stud

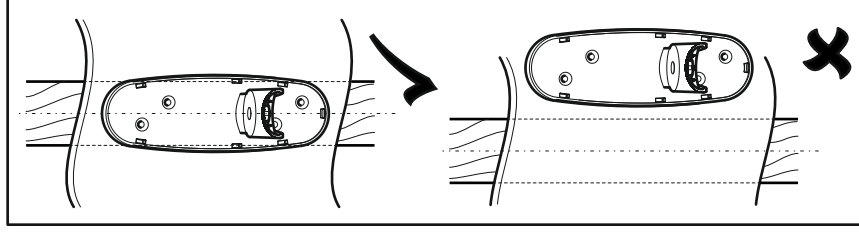

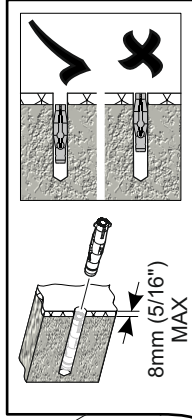

8mm (5/16")  
MAX

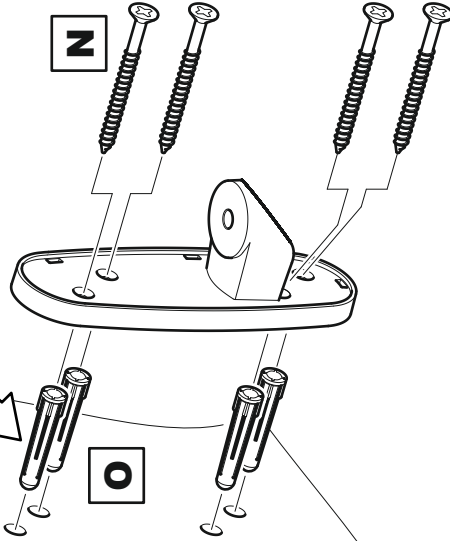 

Lubricate screw  
thread with soap



 
DO NOT over tighten screws  
Tighten screws by hand only




**N** x4



**O** x4



Lubricate screw  
thread with soap

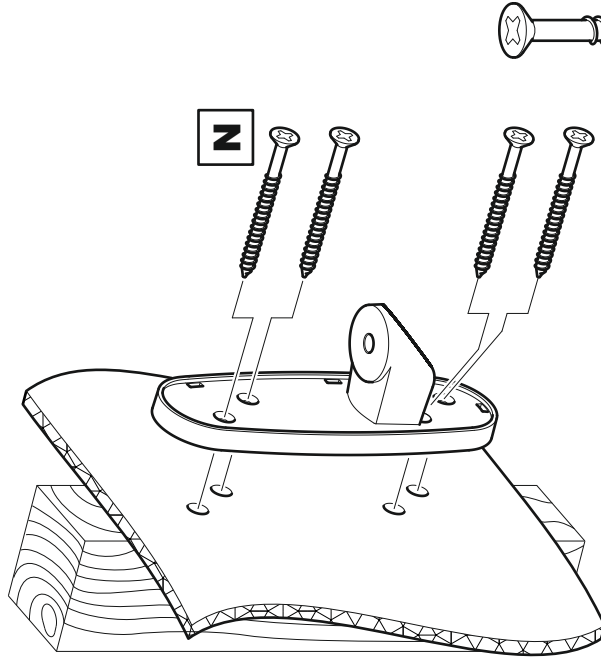 

DO NOT over tighten screws  
Tighten screws by hand only



**N** x4

5

**B**



 
Use your finger and thumb to hold nyloc nut (**L**) steady while you tighten screw (**M**)

## 6

## Fitting the Top and Bottom Covers


i

Fit the top cover

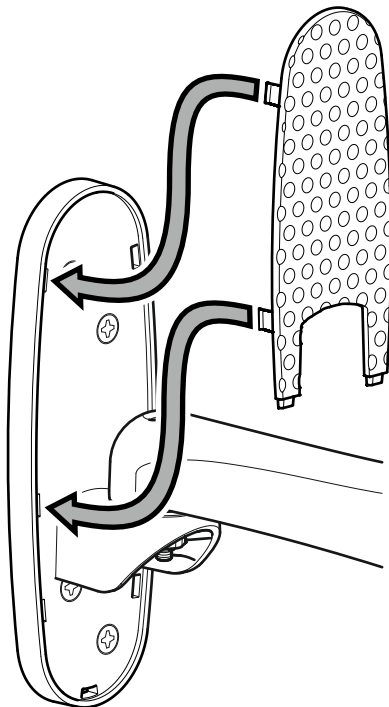



ii

 Fit the bottom cover

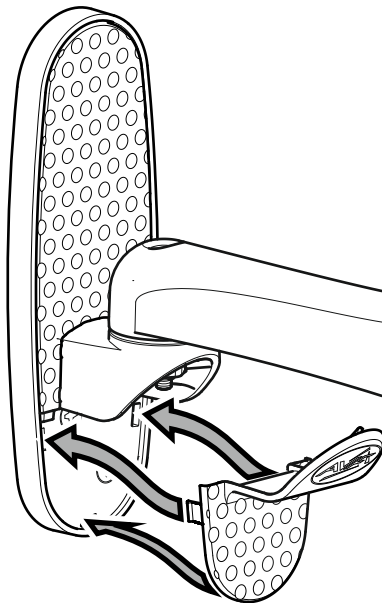


**7**
  
## Attach the TV

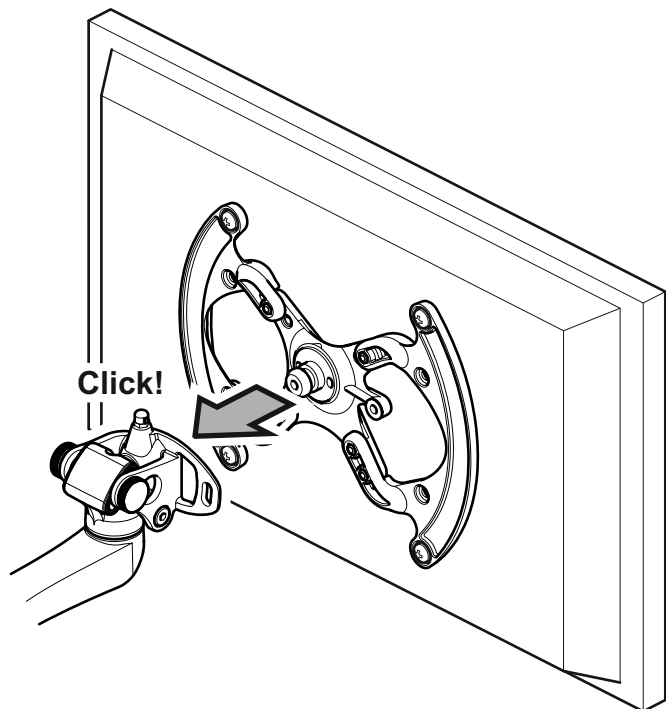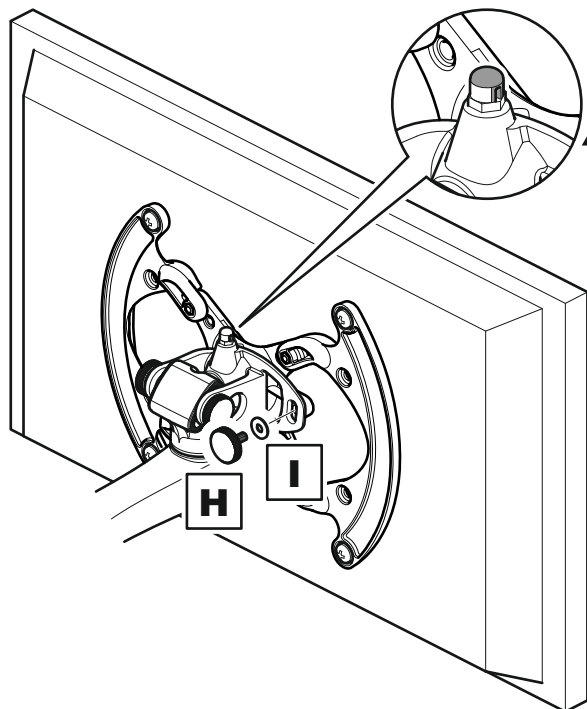
**i****ii**

**IMPORTANT**  
Ensure safety  
plunger is down

### To remove TV

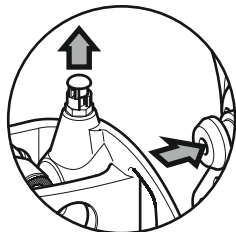 


 - i. Remove parts **H** and **I**
- ii. Lift safety plunger and pull TV away (Safety plunger can be locked open by turning anti-clockwise after lifting)

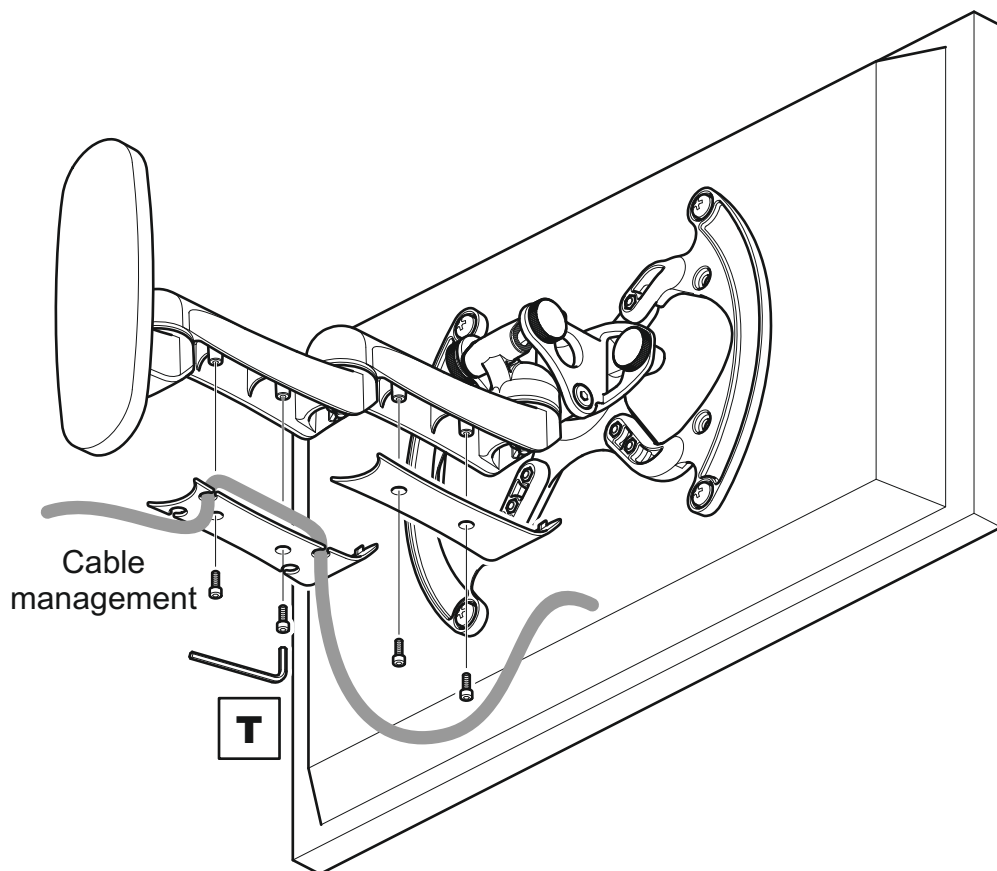

## 9 TV Levelling and Tilt

 Levelling

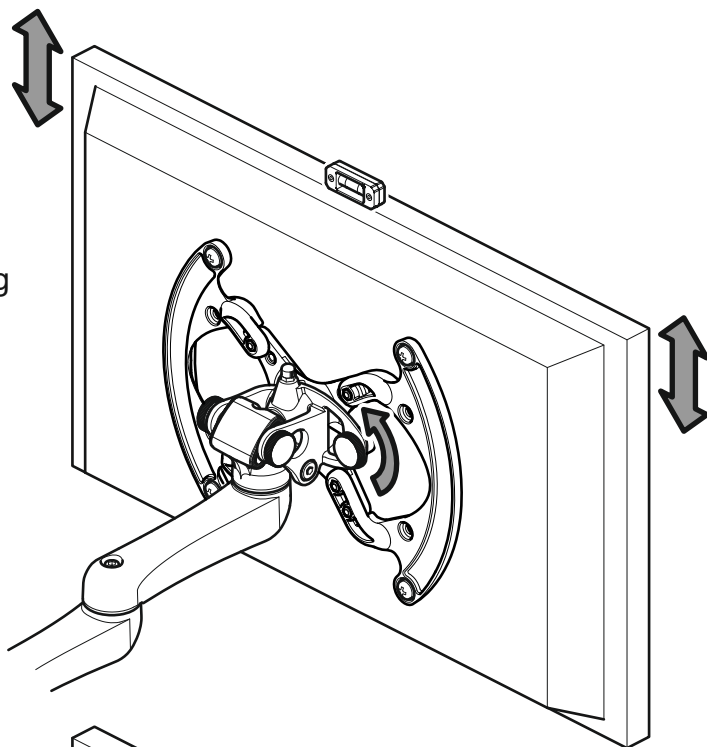

Tilt

