



Read through <u>ALL</u> instructions before commencing installation. If you have any questions about this product or issues with installation contact the customer services helpline before returning this product to the store. See il.avfgroup.com/p/inl454 for more information.

CUSTOMER SERVICES HELP LINE NUMBER:

01952 670009






AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England

Assembly Overview




2 Person Installation Recommended


Fit the TV Mounting Plate

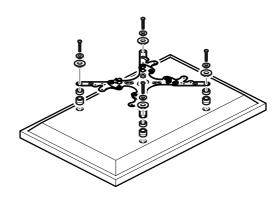

Fit the Wall Bracket

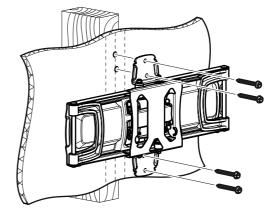

Connect the TV

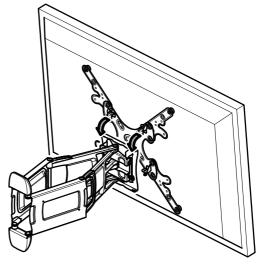

Index

- Measure the TV fixing holes Width and Height
- Preparing the Front Adaptor Plate
- 3 Preparing the TV Mounting Plate
- 4 Fitting the TV Mounting Plate
- 5 Fitting the Wall Bracket
- 6 Fitting the Wall Bracket Covers
- 7 Connecting the TV
- 8 Cable Management

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/ Illustrations.


You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).


AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.

Tools Recommended

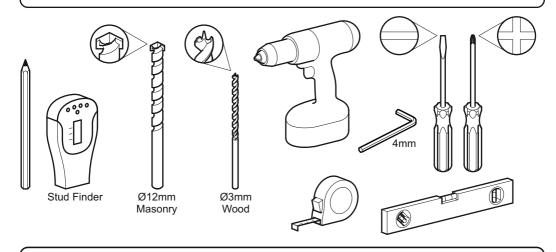


Boxed Parts

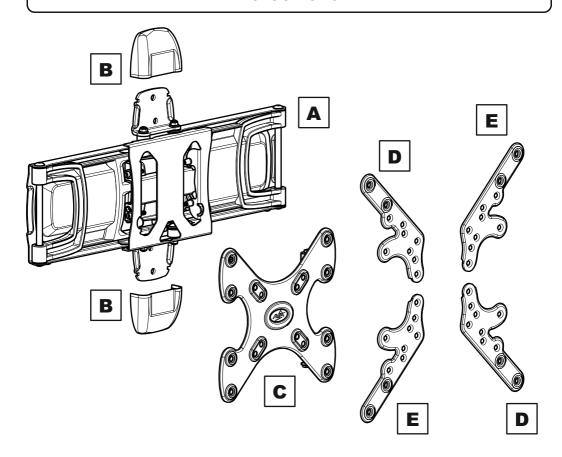

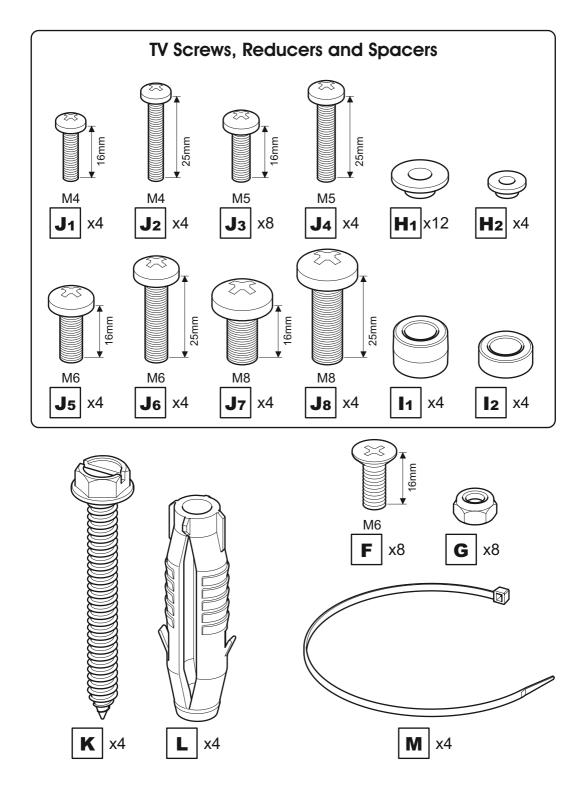


Measure the TV fixing holes Width and Height

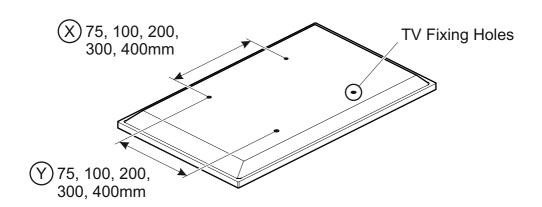

If width \bigcirc is not equal to 75, 100, 200, 300 or 400mm or height \bigcirc is not equal to 75, 100, 200, 300 or 400mm

STOP installation now and contact the customer help line


You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 4.

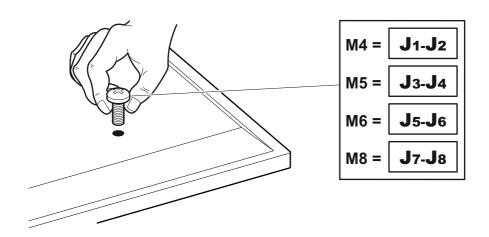



After completing step 4 you will have fittings left over, please keep for future reference

2 Preparing the Front Adaptor Plate

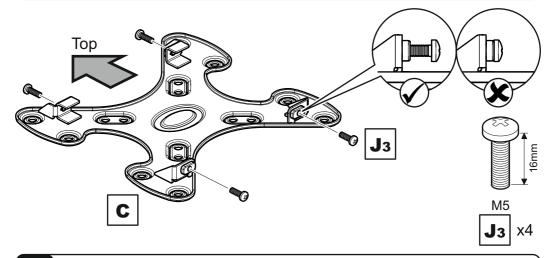

3 Preparing the TV Mounting Plate

Use the option that fits your TV. Do not fully tighten.

OPTION 1

(X) = 75, 100, 200mm

(Y) = 75, 100, 200 mm

OPTION 2

(X) = 300 or 400 mm

(Y) = 200 mm

OPTION 3

(X) = 300 mm

(Y) = 300mm

OPTION 4

(X) = 400 mm


(Y) = 300mm


OPTION 5


(X) = 400 mm


(Y) = 400 mm

OPTION 1

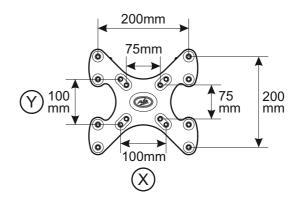

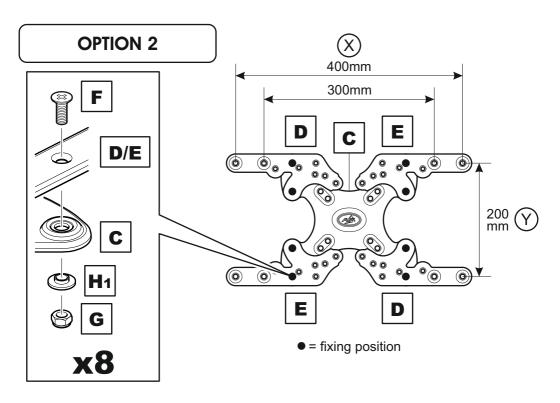

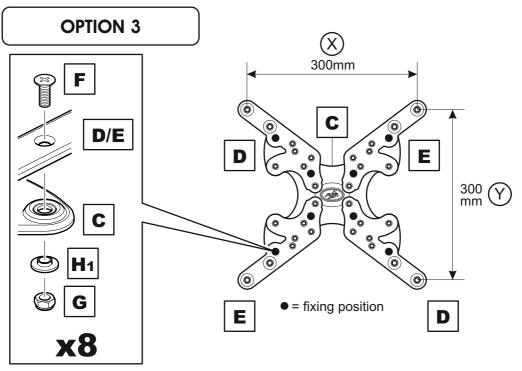


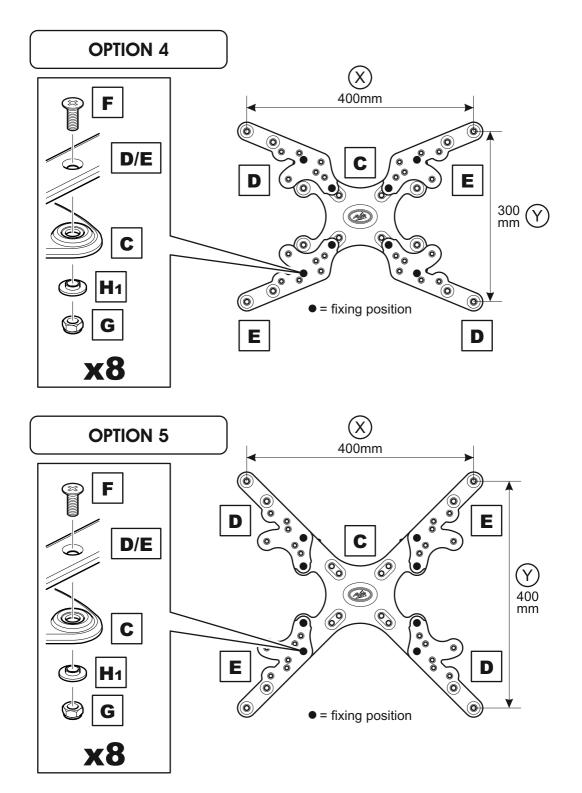


4

Fitting the TV Mounting Plate

Before you fully tighten the TV mounting plate please check that the mounting plate holes line up with the fixing holes on the back of your TV.

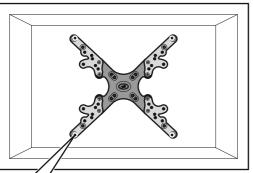


Holes do not line up and small adjustment is required before you fully tighten

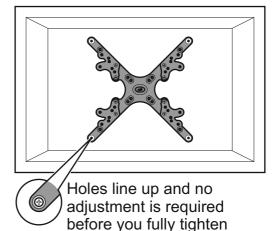


No Spacers

 For TVs with flat/unobstructed back





Spacer 11-12


For TVs with irregular/obstructed back

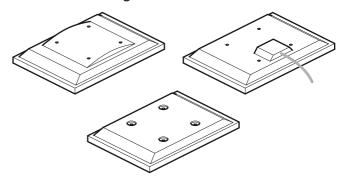


WARNING

 

 


 

 





After completing step 4 you will have fittings left over, please keep for future reference

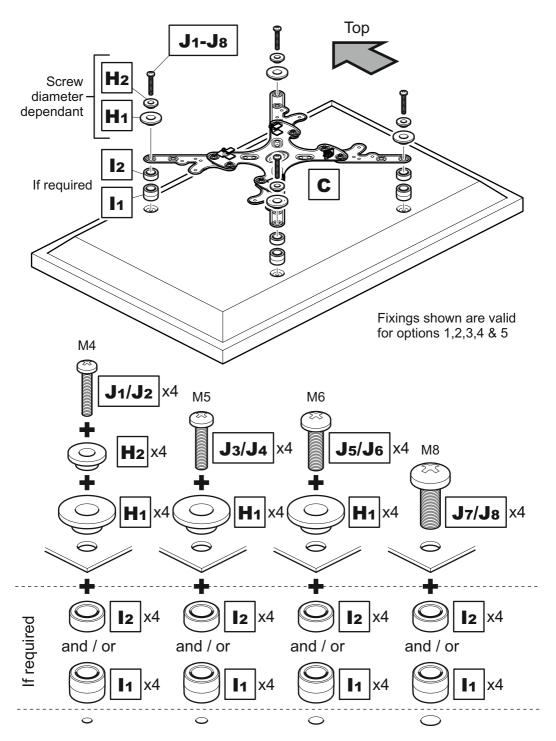


Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.

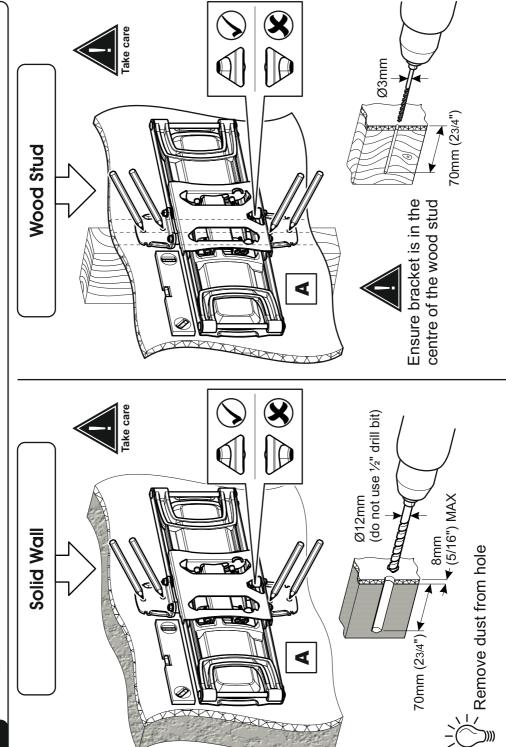


2

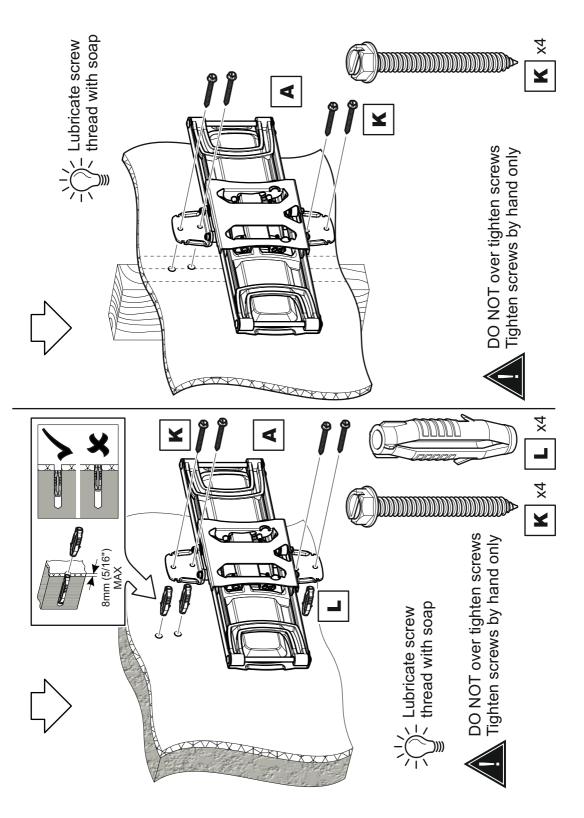


6 Fitting the Wall Bracket Covers

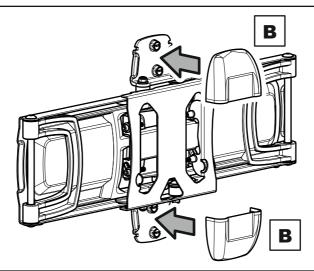

7 Connecting the TV

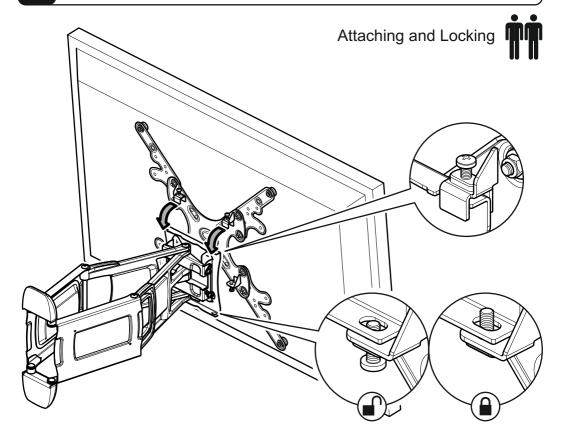

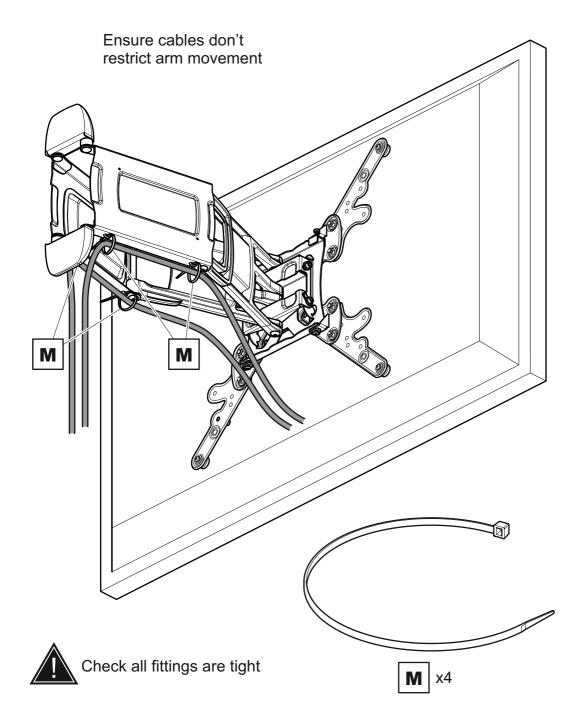

Optional

