

# **JML8451**


# 464236 rev02

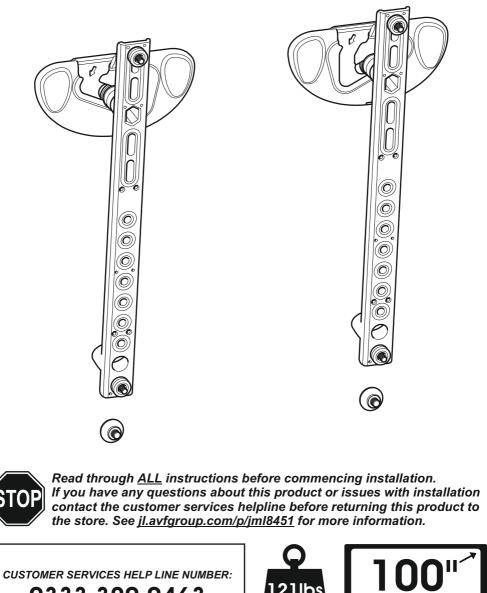

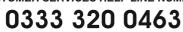



AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England

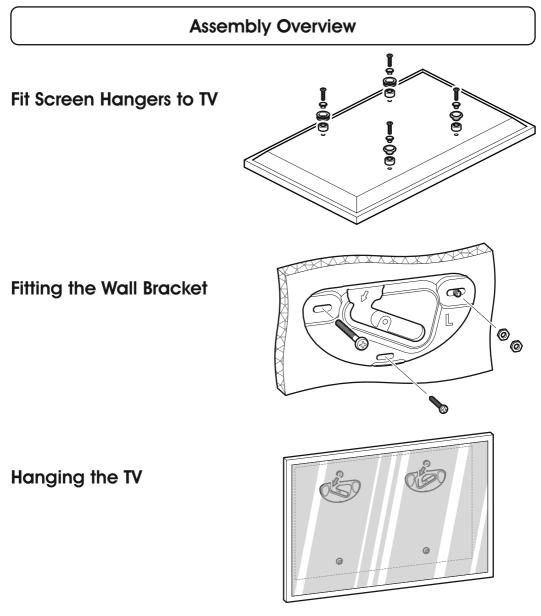

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/ Illustrations.

You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.


#### Index

#### Measure the TV fixing holes Width and Height


#### Flat to wall only


3 Assemble Positioning Template
4 Determine Bracket Hole Centres
5 Marking Wall For Drill Points
6 Fitting the Wall Bracket
7 Fitting the Wall Bracket Covers
8 Hanging the TV

#### Tilt Position only

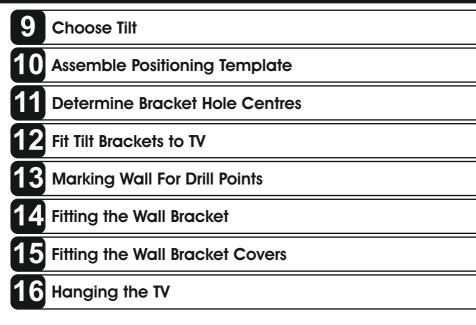


#### **Tools Recommended**

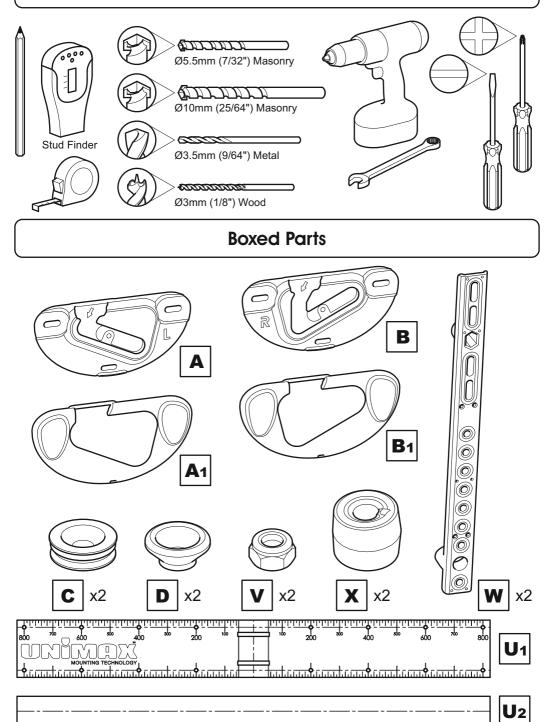

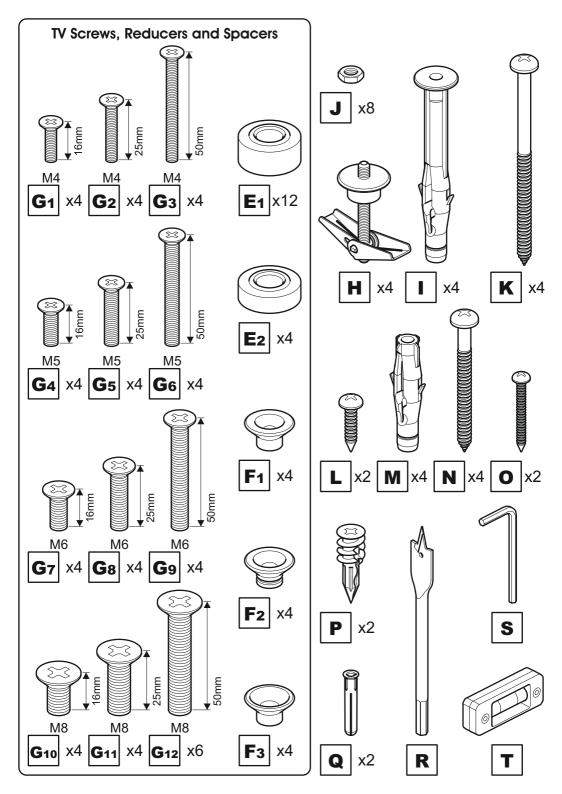


## Remove the Wall Bracket Covers and keep for step 7 or 15

Wall bracket covers A1 & B1 are removed in the same way.

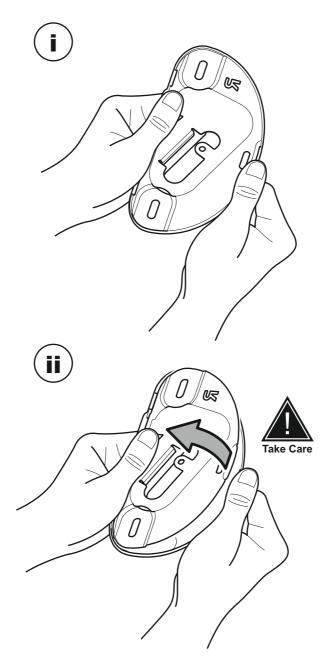


#### Measure the TV fixing holes Width and Height

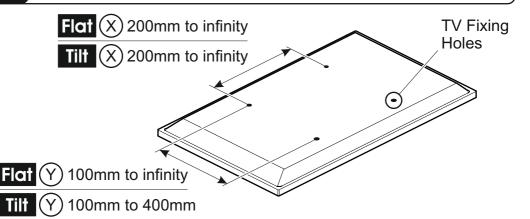

If width  $\bigotimes$  is less than 200mm or height  $\bigotimes$  is less than 100mm STOP installation now and contact the customer help line

You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 2 or 12.

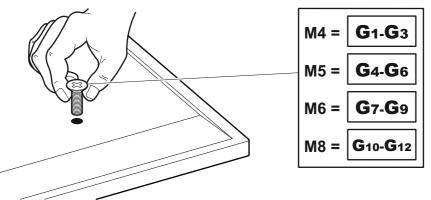

After completing step 1 you will have TV fixing screws left over, please keep for future reference


# Flat to Wall or Tilt Position


Before you start please choose if you would like your TV to be either Flat to Wall or in a Tilt Position.


Flat to Wall Follow steps 2 - 8 **Tilt Position** Follow steps 9 - 16 Fit Screen Hangers to TV


#### Flat to Wall only

Once you have established which screw diameter you need for your TV you will need to choose which wall spacing you require. Check the back of your TV and use the **OPTION** that fits your TV. Please see page opposite for more details.

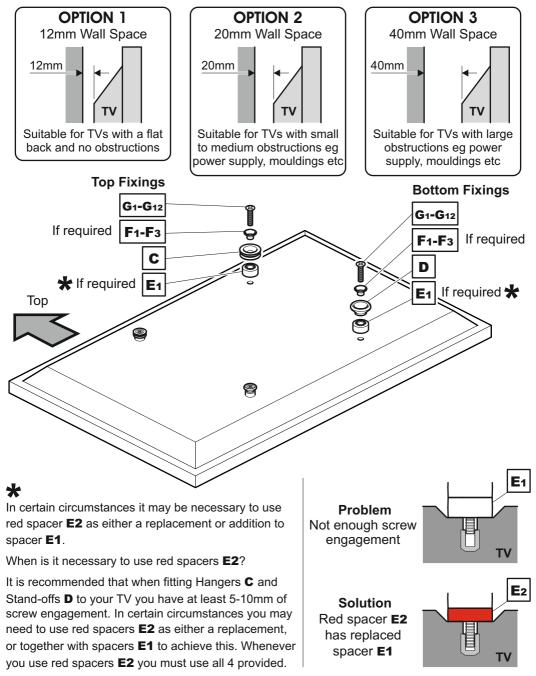

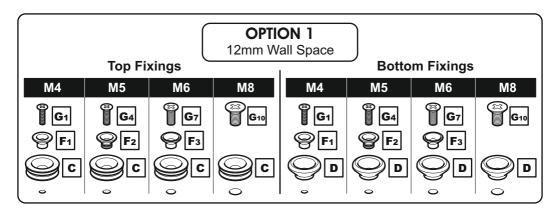


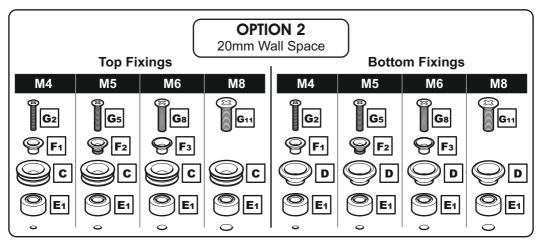

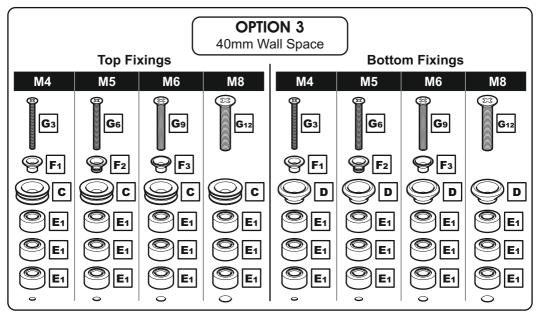


## Flat to Wall only Assemble Positioning Template U1 Flat to Wall only **Determine Bracket Hole Centres** Δ Lay the template on the back of the TV and follow the instructions below. С Place the top row of holes on template U1 over hangers C. Mark off the top fixing centres \* The centre line of the template U2 represents Top row holes the centre of your TV. Line up with top of the screen. Top 9 P Cut the template U2 so it is flush with the bottom of your TV so that when the template is on the wall you can see exactly where your TV will be vertically (distance from the floor and ceiling).

★ If hangers C do not line up with any holes on the template then ensure template is firmly in position and punch 2 holes to match your top fixing centres with a pencil or sharp object.

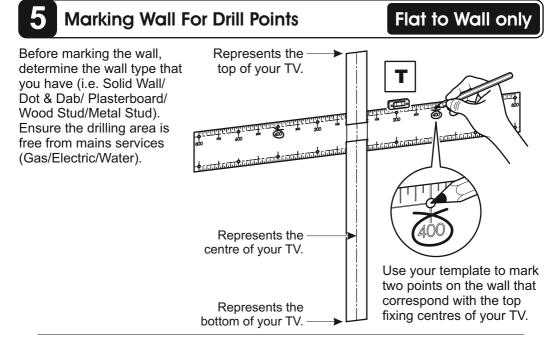


Next, use the Wall Brackets **A** and **B** as a template and position them over the appropriate **PENCIL MARKS** you have made, so that the mark is in the middle of the **CENTRAL HOLE** of the Wall Bracket. Ensure the bracket is level and mark the three **DRILL POINTS** with a pencil. Repeat for other bracket.


Drill six 3mm pilot holes and select appropriate fixings (see section 6)

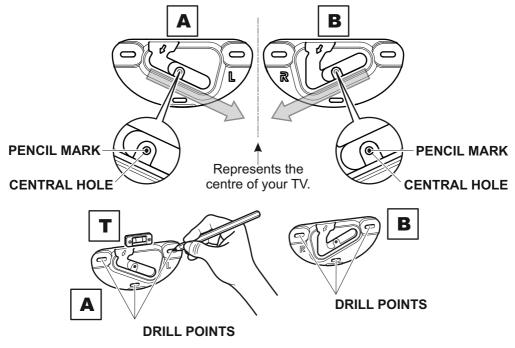



## Flat to Wall only

Use the correct fixings for your wall type. Mixing fixing screws may be required for installations that span different wall types. DO NOT OVER TIGHTEN SCREWS.

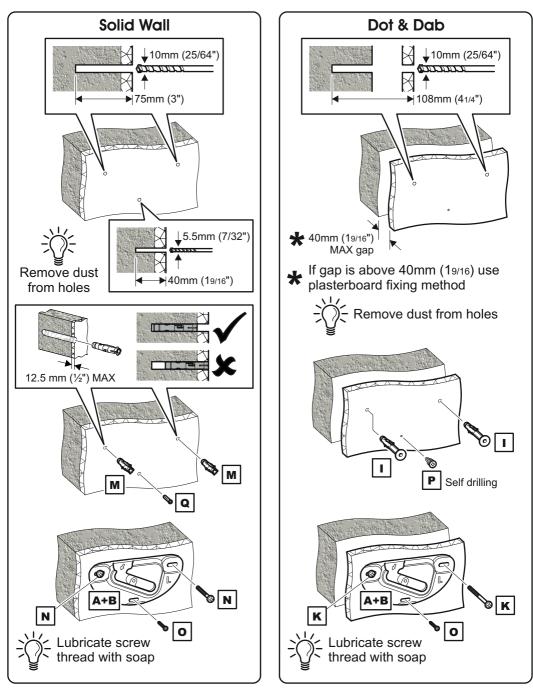

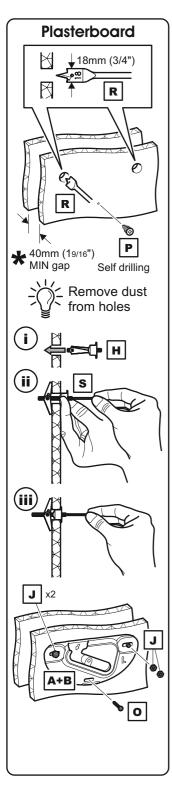

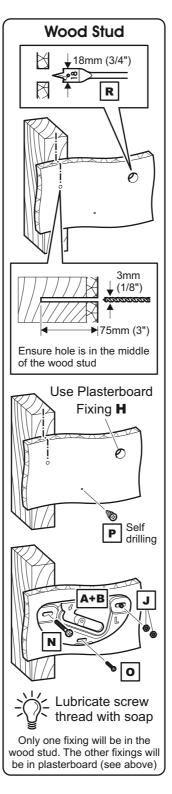


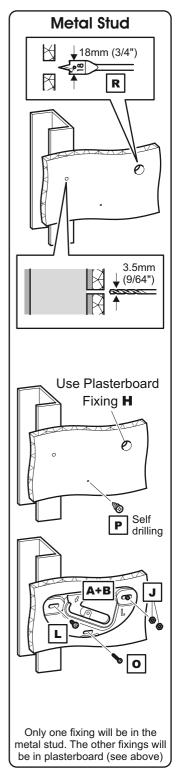

## Fitting the Wall Bracket Covers

Flat to Wall only

On wall bracket covers **A1** & **B1** are 3 retaining tabs. These locate onto 3 retaining lips on wall brackets **A** & **B** and lock the wall bracket covers in position.

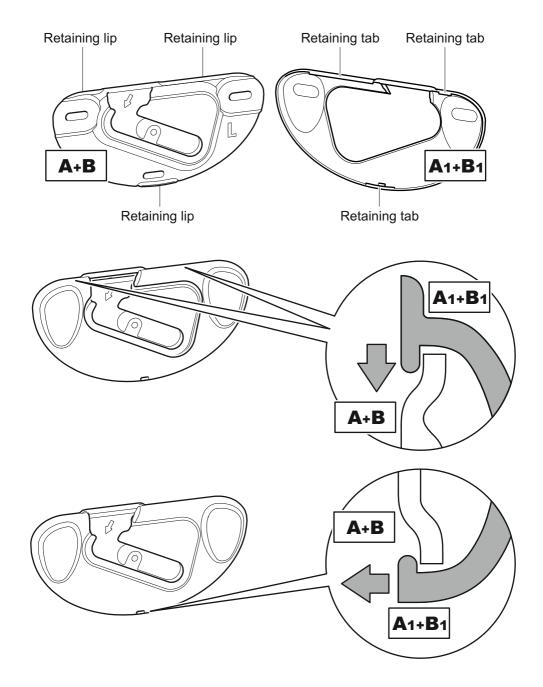


Hanging the TV

#### Hanging the TV is a two person job.


Present hangers **C** (on the back of the TV) to the opening on brackets **A** & **B**. Slide down and across into place. Ensure both hangers are fully engaged. If cables from the TV prevent the TV resting against the wall then an alternative hanger configuration will be required (see section 2).

TV must be parallel to wall. Use spacers / stand-offs as shown in section 2.

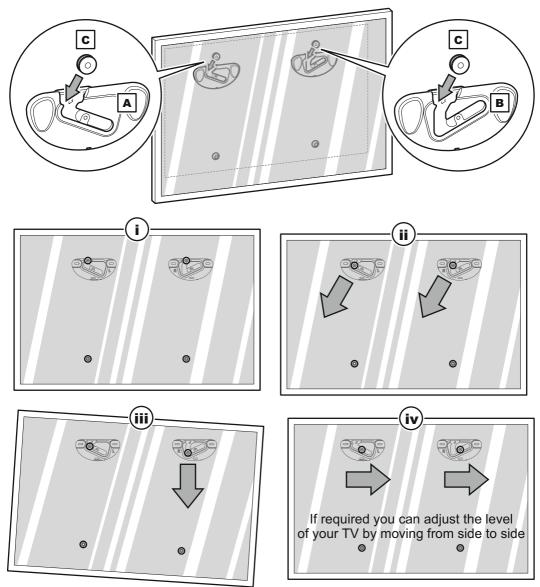



#### Removing the TV

This is a two person job. To remove the TV reverse the movements as shown above.

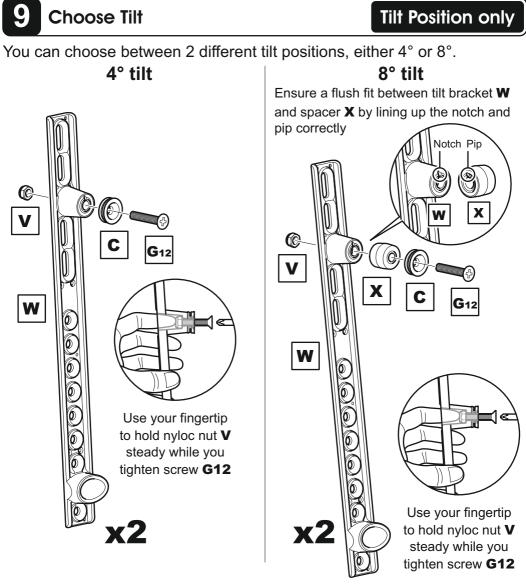


Check to see if your TV will clash with the wall, if clash occurs it will be necessary to add spacers to prevent this, the size of your TV will determine if you need to use 1 or 3 spacers. If clash occurs even after using 3 spacers you will have to change the tilt. Please see below for an example.

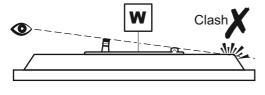

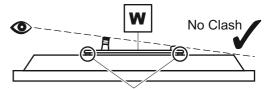


Spacers **E1** are used between tilt bracket **W** and TV to prevent clash with wall

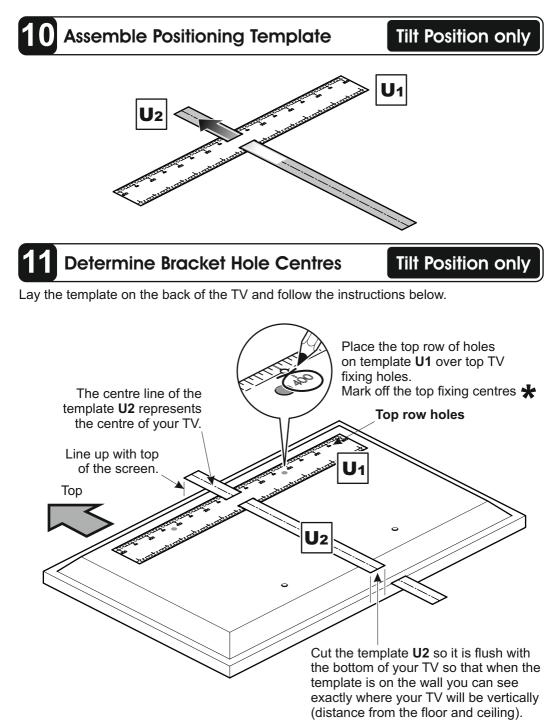



If top TV fixing holes do not line up with any holes on the template then ensure template is firmly in position and punch 2 holes to match your top fixing centres with a pencil or sharp object. Fit Tilt Brackets to TV


#### **Tilt Position only**

Once you have established which screw diameter you need for your TV you will need to choose which wall spacing you require. Check the back of your TV and use the **OPTION** that fits your TV. Please see page opposite for more details.

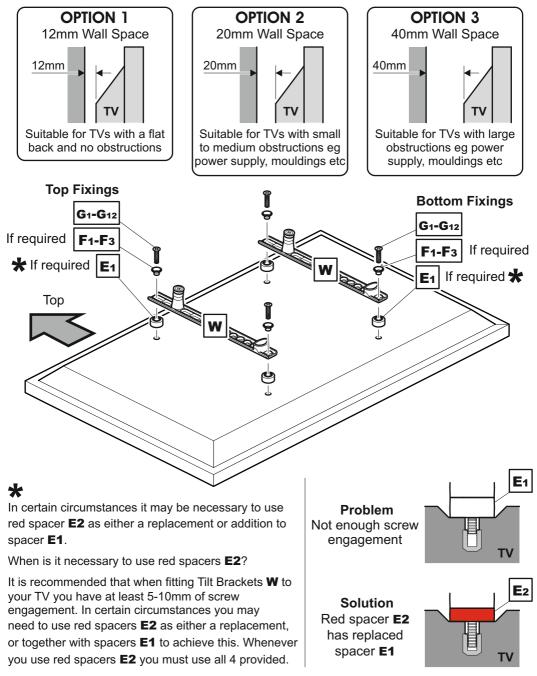

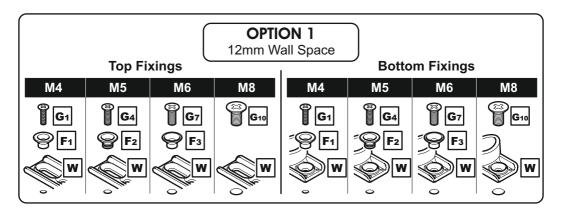

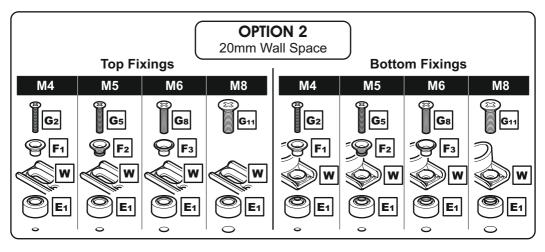

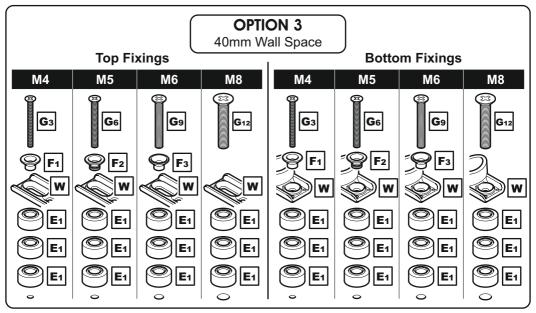


## Marking Wall For Drill Points

**Tilt Position only** 




Use the marks on the top row that you made in step 11 and make the same marks on the bottom row. You will use the marks on the bottom row to make 2 pencil marks on the wall.

Before marking the wall, determine the wall type that you have (i.e. Solid Wall/Dot & Dab/ Plasterboard/Wood Stud/Metal Stud). Ensure the drilling area is free from mains services (Gas/Electric/Water).

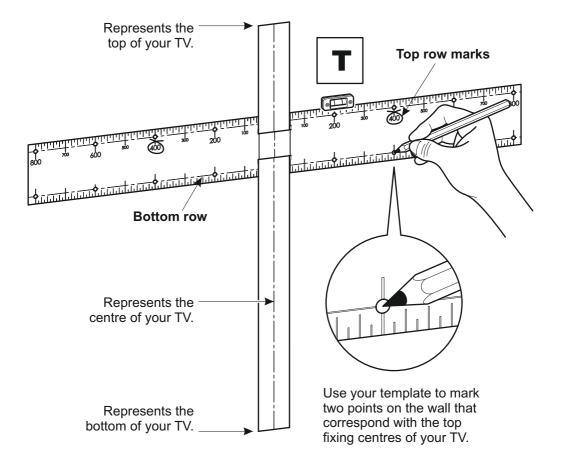

Next, use the Wall Brackets **A** and **B** as a template and position them over the appropriate **PENCIL MARKS** you have made, so that the mark is in the middle of the **CENTRAL HOLE** of the Wall Bracket. Ensure the bracket is level and mark the three **DRILL POINTS** with a pencil. Repeat for other bracket.


Drill six 3mm pilot holes and select appropriate fixings (see section 14)

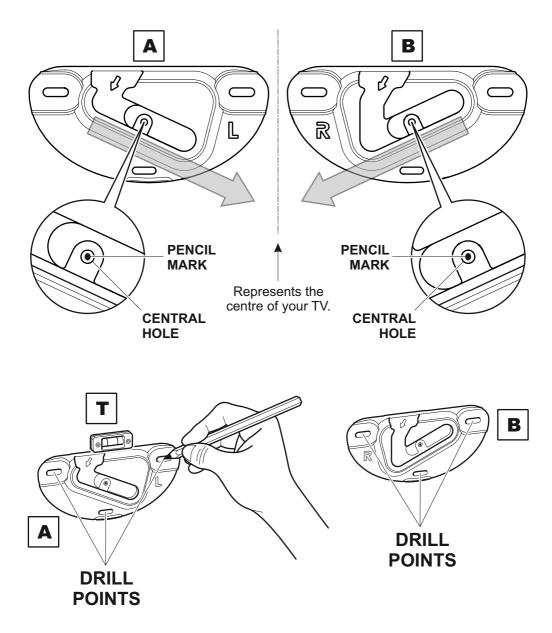



# **14** Fitting the Wall Bracket


#### Tilt Position only

Use the correct fixings for your wall type. Mixing fixing screws may be required for installations that span different wall types. DO NOT OVER TIGHTEN SCREWS.

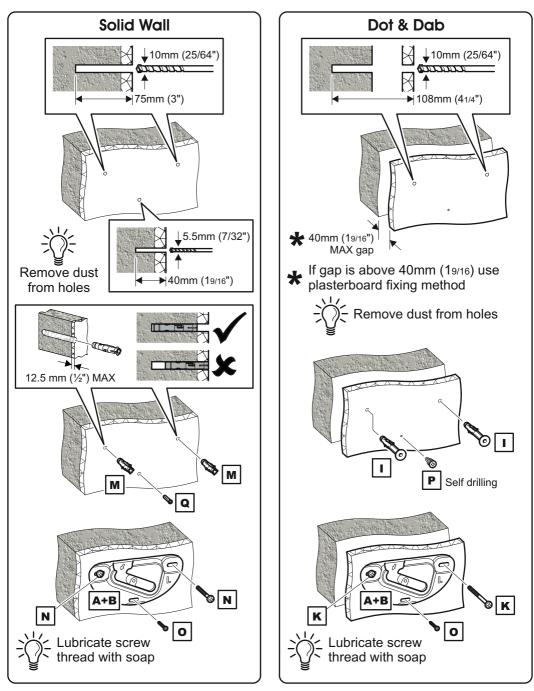

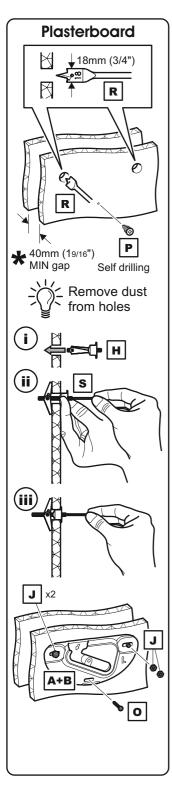

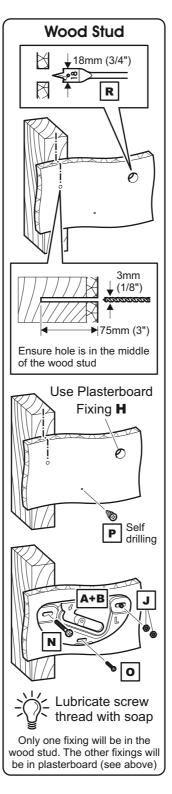


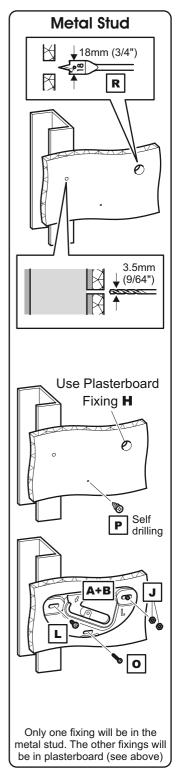

## **15** Fitting the Wall Bracket Covers

**Tilt Position only** 

On wall bracket covers **A1** & **B1** are 3 retaining tabs. These locate onto 3 retaining lips on wall brackets **A** & **B** and lock the wall bracket covers in position.

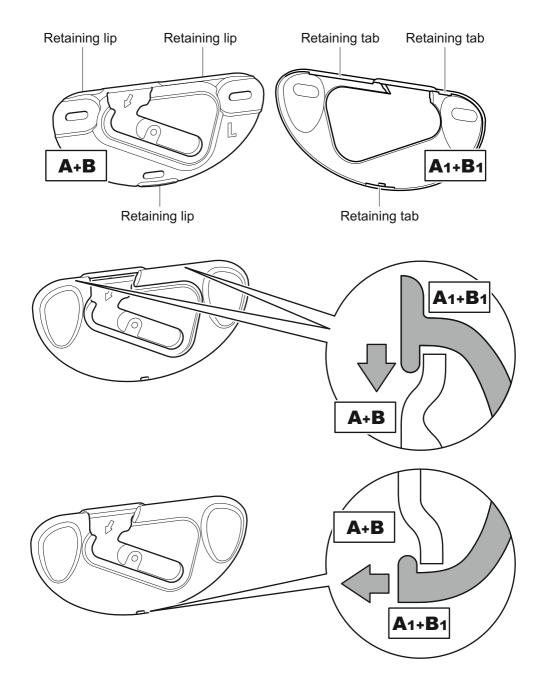


## **6** Hanging the TV

#### Hanging the TV is a two person job.

Present hangers **C** (on the back of the TV) to the opening on brackets **A** & **B**. Slide down and across into place. Ensure both hangers are fully engaged. If cables from the TV prevent the TV resting against the wall then an alternative hanger configuration will be required (see section 12).

TV must be parallel to wall. Use spacers / stand-offs as shown in section 12.

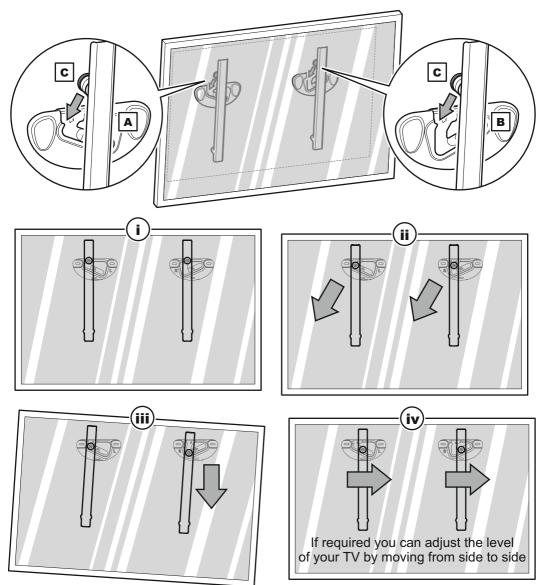

#### Removing the TV

This is a two person job. To remove the TV reverse the movements as shown above.

#### Removing the Wall Bracket Covers

Should you want to remove the wall bracket covers please follow the steps below.

