



Read through ALL instructions before commencing installation. If you have any questions about this product or issues with installation contact the customer services help line before returning this product to the store. See www.avfgroup.com/unimax for instruction video.


CUSTOMER SERVICES HELP LINE NUMBER: +44 (0)1952 670009 (UK) 1-800 667 0808 (USA)




AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England AVF Incorporated 3187, Cornerstone Drive, Eastvale, CA 91752, USA www.avfgroup.com

Assembly Overview


Fit Screen Hangers to TV

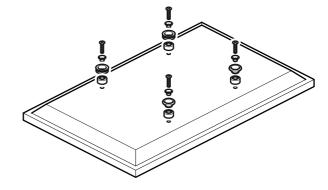

Fitting the Wall Bracket

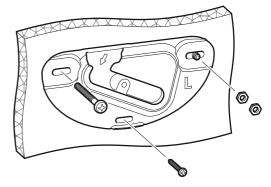

Hanging the TV

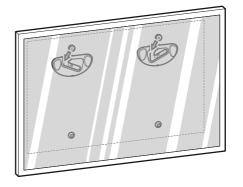

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/ Illustrations.

You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.

Index

1 Measure the TV fixing holes Width and Height


Flat to wall only

- **2** Fit Screen Hangers to TV
- 3 Assemble Positioning Template
- 4 Determine Bracket Hole Centres
- **5** Marking Wall For Drill Points
- 6 Fitting the Wall Bracket
- 7 Fitting the Wall Bracket Covers
- 8 Hanging the TV


Tilt Position only


- 9 Choose Tilt
- 10 Assemble Positioning Template
- 11 Determine Bracket Hole Centres
- 12 Fit Tilt Brackets to TV
- 13 Marking Wall For Drill Points
- **14** Fitting the Wall Bracket
- 15 Fitting the Wall Bracket Covers
- **16** Hanging the TV

Tools Recommended

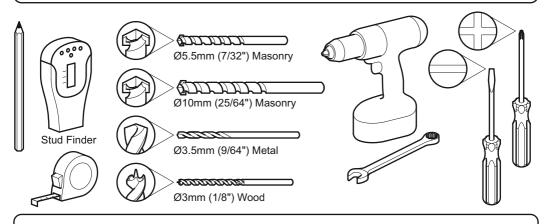


Boxed Parts

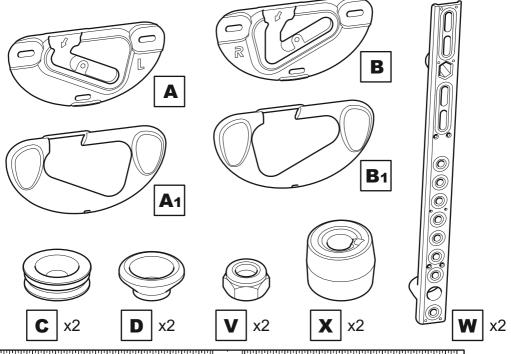

 


U2

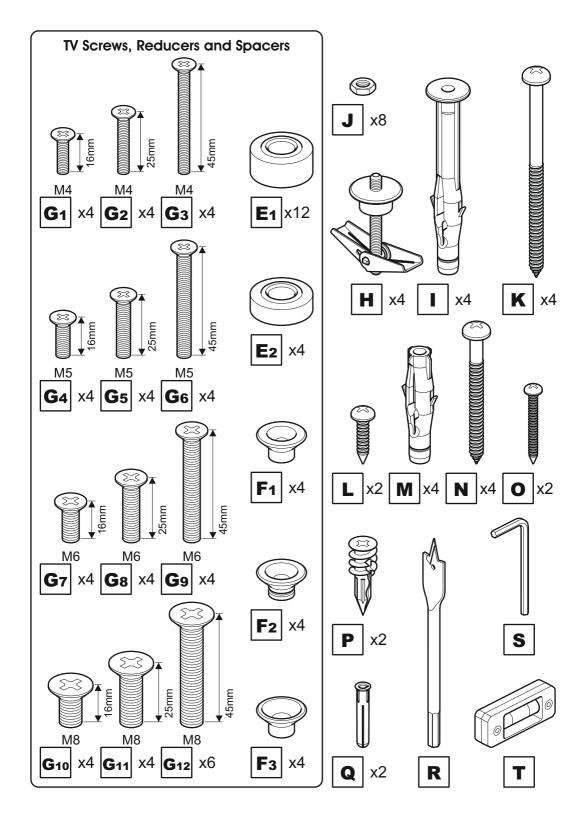


Remove the Wall Bracket Covers and keep for step 7 or 15

Wall bracket covers A1 & B1 are removed in the same way.

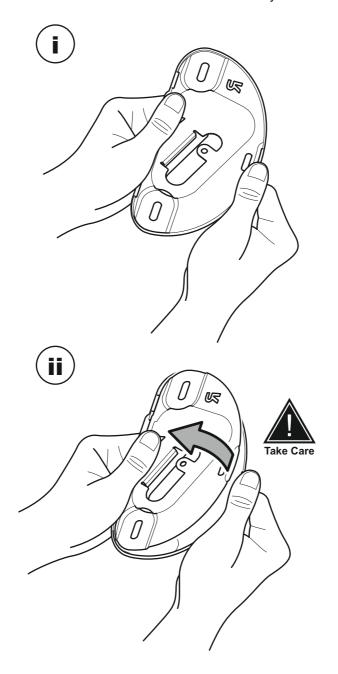


Measure the TV fixing holes Width and Height

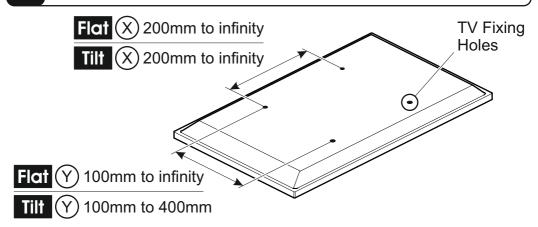

A II

If width (X) is less than 200mm or height (Y) is less than 100mm STOP installation now and contact the customer help line

You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 2 or 12.

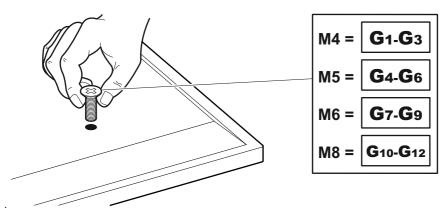


After completing step 1 you will have TV fixing screws left over, please keep for future reference


Flat to Wall or Tilt Position

Before you start please choose if you would like your TV to be either Flat to Wall or in a Tilt Position.


Flat to Wall Follow steps 2 - 8 **Tilt Position** Follow steps 9 - 16


Once you have established which screw diameter you need for your TV you will need to choose which wall spacing you require. Check the back of your TV and use the **OPTION** that fits your TV. Please see page opposite for more details.

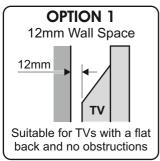

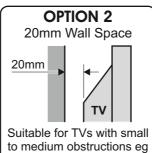

power supply, mouldings etc

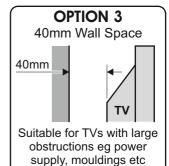


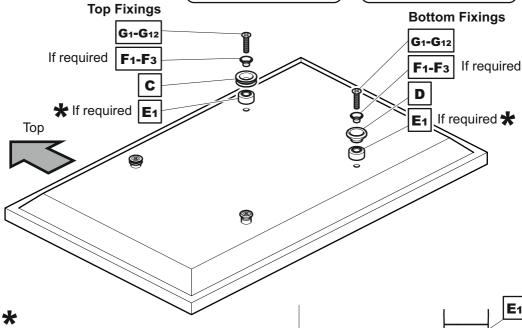


In certain circumstances it may be necessary to use red spacer **E2** as either a replacement or addition to spacer **E1**.


When is it necessary to use red spacers **E2**?

  
It is recommended that when fitting Hangers **C** and Stand-offs **D** to your TV you have at least 5-10mm of screw engagement. In certain circumstances you may need to use red spacers **E2** as either a replacement, or together with spacers **E1** to achieve this. Whenever you use red spacers **E2** you must use all 4 provided.







Solution
Red spacer E2
has replaced
spacer E1

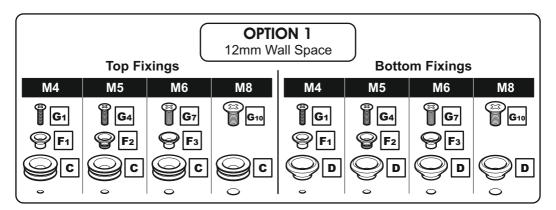

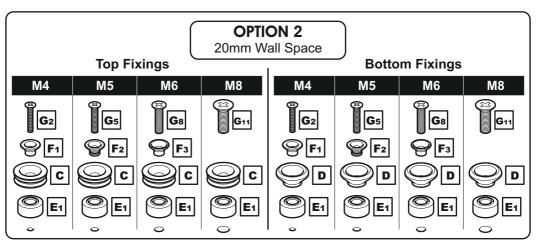

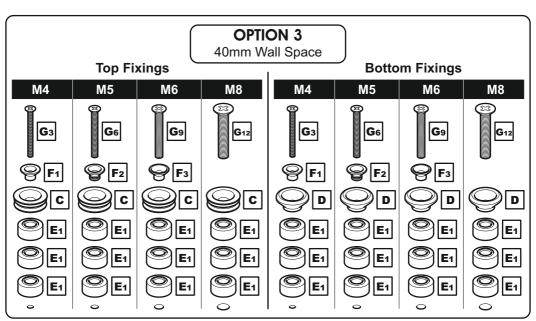


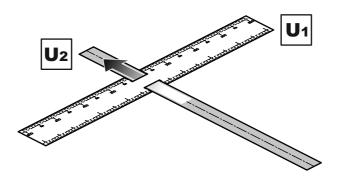

4 Determine Bracket Hole Centres

Flat to Wall only

Lay the template on the back of the TV and follow the instructions below.

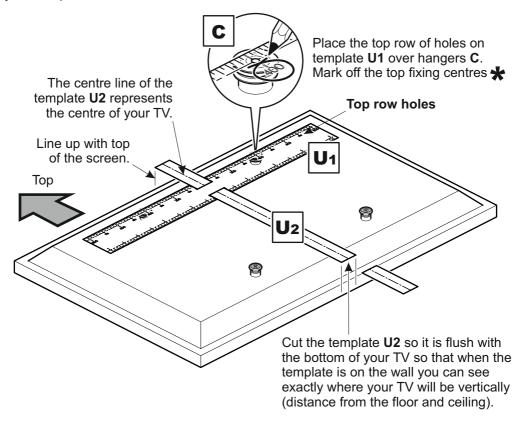


★ If hangers C do not line up with any holes on the template then ensure template is firmly in position and punch 2 holes to match your top fixing centres with a pencil or sharp object.

5

Marking Wall For Drill Points

Flat to Wall only

Before marking the wall, determine the wall type that you have (i.e. Solid Wall/Dot & Dab/ Plasterboard/Wood Stud/Metal Stud). Ensure the drilling area is free from mains services (Gas/Electric/Water).

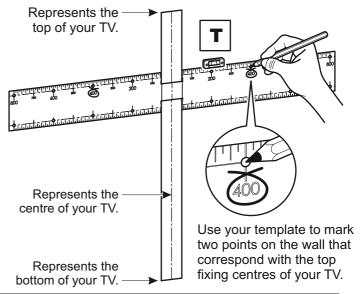

Next, use the Wall Brackets **A** and **B** as a template and position them over the appropriate **PENCIL MARKS** you have made, so that the mark is in the middle of the **CENTRAL HOLE** of the Wall Bracket. Ensure the bracket is level and mark the three **DRILL POINTS** with a pencil. Repeat for other bracket.

Drill six 3mm pilot holes and select appropriate fixings (see section 6)

PENCIL MARK
CENTRAL HOLE


Represents the centre of your TV.


CENTRAL HOLE


DRILL POINTS


DRILL POINTS


Use the correct fixings for your wall type. Mixing fixing screws may be required for installations that span different wall types. DO NOT OVER TIGHTEN SCREWS.

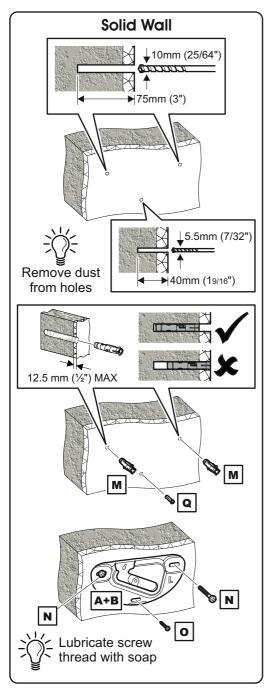

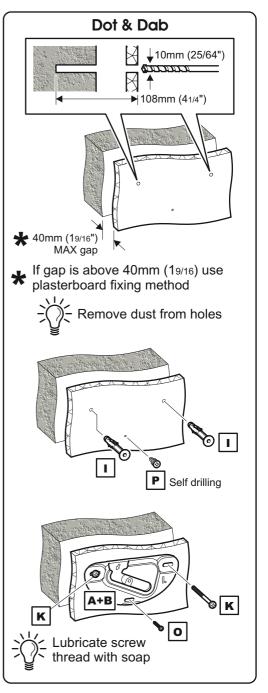


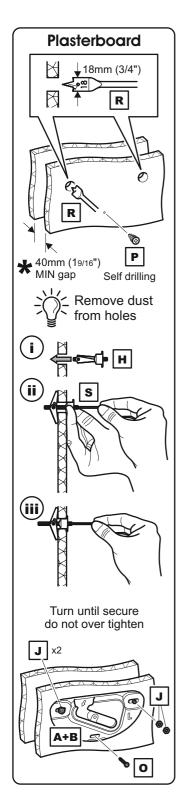

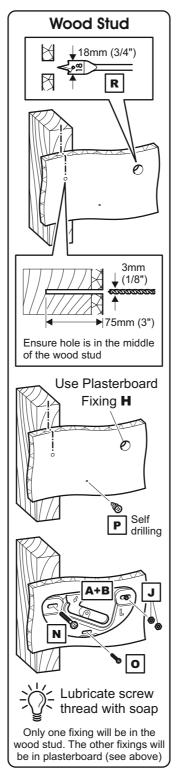

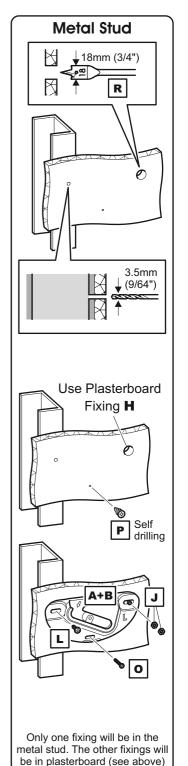


On wall bracket covers **A1** & **B1** are 3 retaining tabs. These locate onto 3 retaining lips on wall brackets **A** & **B** and lock the wall bracket covers in position.

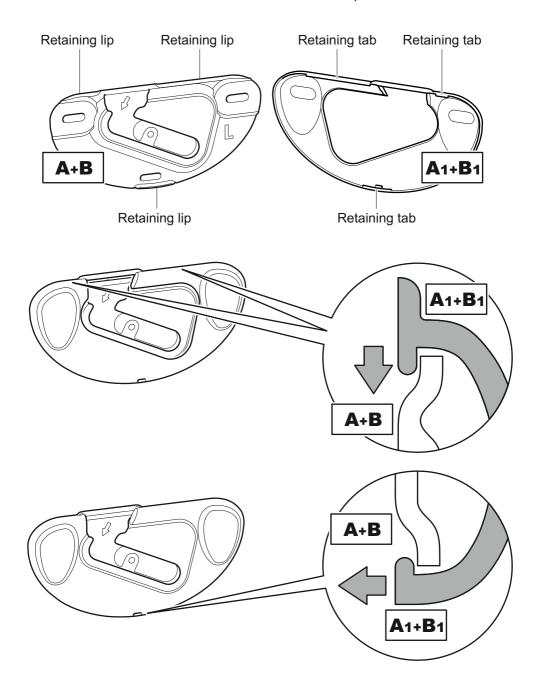

Hanging the TV is a two person job.

Present hangers **C** (on the back of the TV) to the opening on brackets **A** & **B**. Slide down and across into place. Ensure both hangers are fully engaged. If cables from the TV prevent the TV resting against the wall then an alternative hanger configuration will be required (see section 2).


TV must be parallel to wall. Use spacers / stand-offs as shown in section 2.

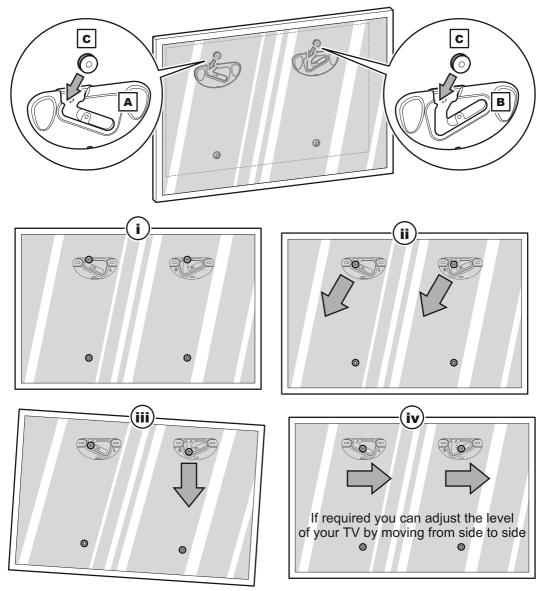


Removing the TV

This is a two person job. To remove the TV reverse the movements as shown above.

You can choose between 2 different tilt positions, either 4° or 8°.

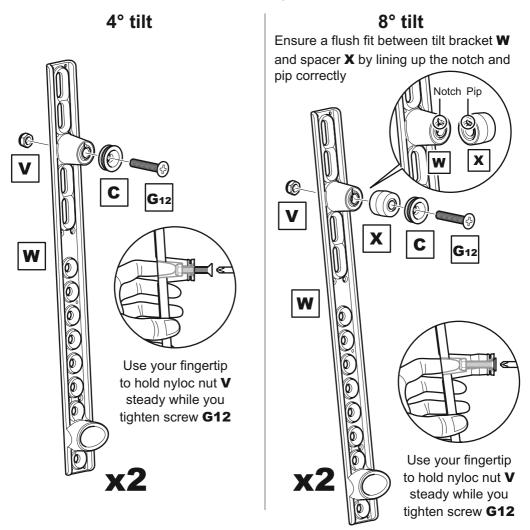

 
If you have chosen 8° tilt option and your TV size is 65" or over it will be necessary to add spacers to prevent your TV clashing with the wall, the size of your TV will determine if you need to use 1 or 3 spacers. Please see below for an example.



Spacers **E1** are used between tilt bracket **W** and TV to prevent clash with wall

10 Assemble Positioning Template


Tilt Position only

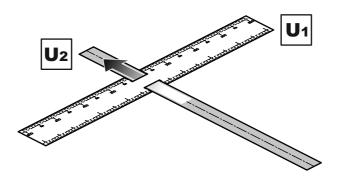

11 Determine Bracket Hole Centres


Tilt Position only


Lay the template on the back of the TV and follow the instructions below.

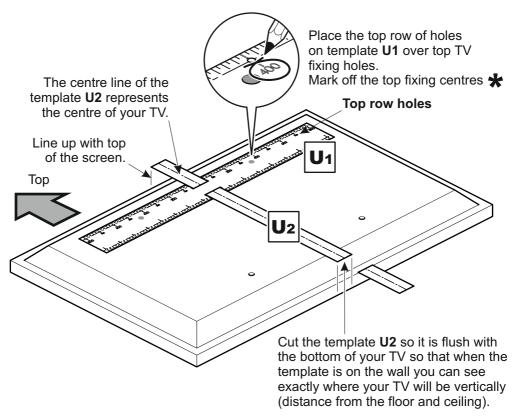


If top TV fixing holes do not line up with any holes on the template then ensure template is firmly in position and punch 2 holes to match your top fixing centres with a pencil or sharp object.


Once you have established which screw diameter you need for your TV you will need to choose which wall spacing you require. Check the back of your TV and use the **OPTION** that fits your TV. Please see page opposite for more details.

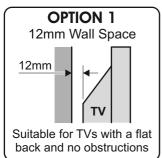

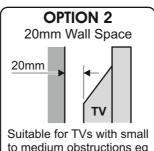

power supply, mouldings etc

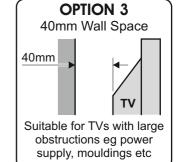


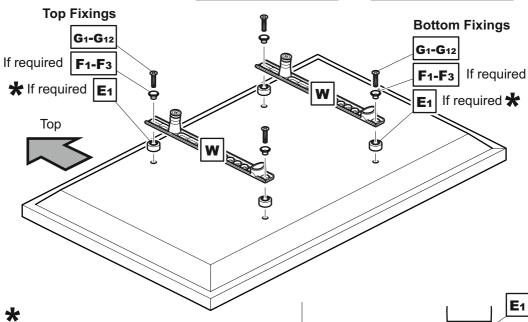



In certain circumstances it may be necessary to use red spacer **E2** as either a replacement or addition to spacer **E1**.


When is it necessary to use red spacers **E2**?

  
It is recommended that when fitting Tilt Brackets **W** to your TV you have at least 5-10mm of screw engagement. In certain circumstances you may need to use red spacers **E2** as either a replacement, or together with spacers **E1** to achieve this. Whenever you use red spacers **E2** you must use all 4 provided.





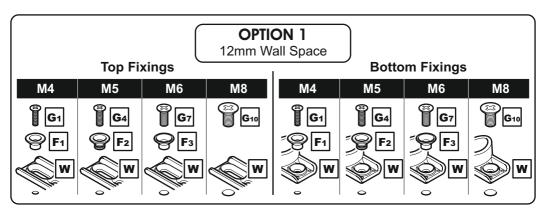

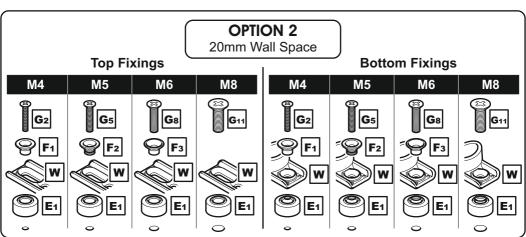


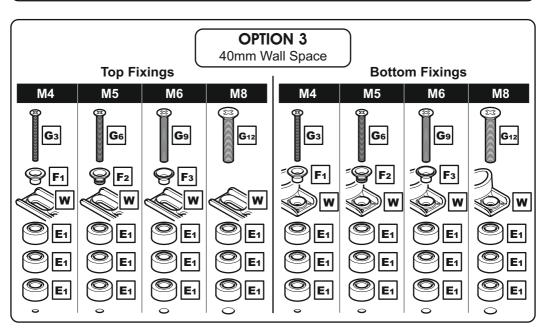




Use the marks on the top row that you made in step 11 and make the same marks on the bottom row. You will use the marks on the bottom row to make 2 pencil marks on the wall.

Before marking the wall, determine the wall type that you have (i.e. Solid Wall/Dot & Dab/ Plasterboard/Wood Stud/Metal Stud). Ensure the drilling area is free from mains services (Gas/Electric/Water).

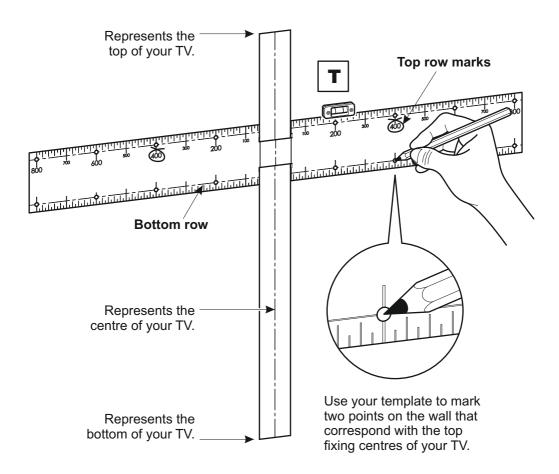



Next, use the Wall Brackets **A** and **B** as a template and position them over the appropriate **PENCIL MARKS** you have made, so that the mark is in the middle of the **CENTRAL HOLE** of the Wall Bracket. Ensure the bracket is level and mark the three **DRILL POINTS** with a pencil. Repeat for other bracket.


Drill six 3mm pilot holes and select appropriate fixings (see section 14)

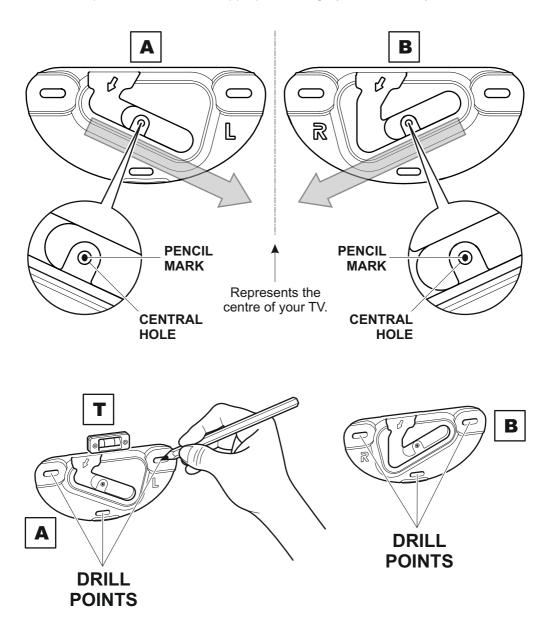



Use the correct fixings for your wall type. Mixing fixing screws may be required for installations that span different wall types. DO NOT OVER TIGHTEN SCREWS.

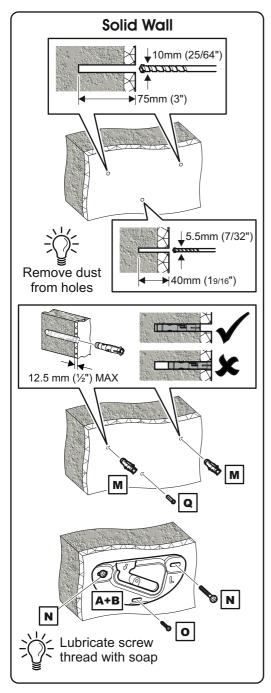

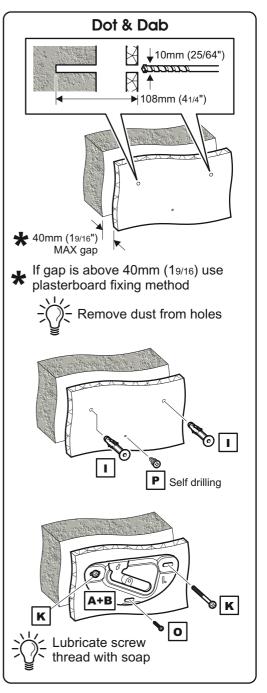


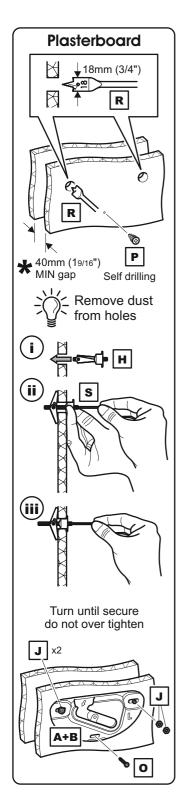

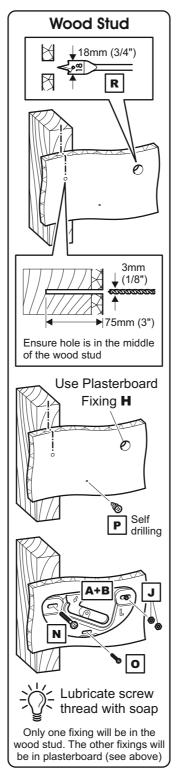

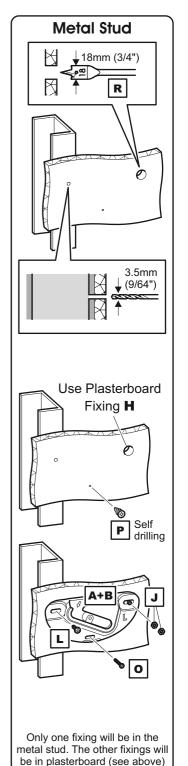


On wall bracket covers **A1** & **B1** are 3 retaining tabs. These locate onto 3 retaining lips on wall brackets **A** & **B** and lock the wall bracket covers in position.

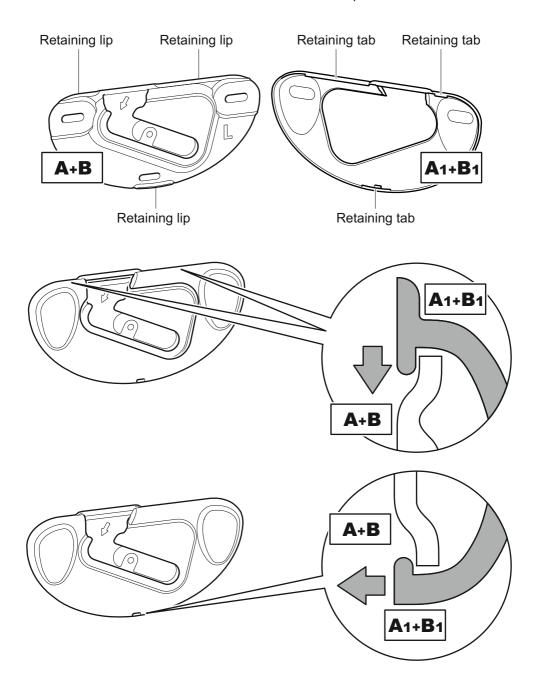

Hanging the TV is a two person job.

Present hangers **C** (on the back of the TV) to the opening on brackets **A** & **B**. Slide down and across into place. Ensure both hangers are fully engaged. If cables from the TV prevent the TV resting against the wall then an alternative hanger configuration will be required (see section 12).

Use spacers / stand-offs as shown in section 12.

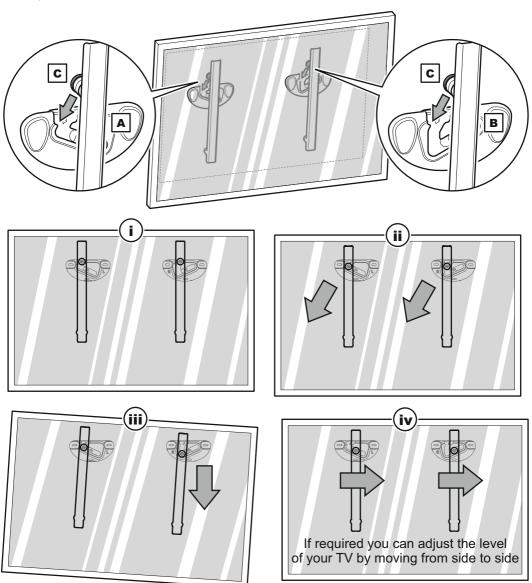

Removing the TV

This is a two person job. To remove the TV reverse the movements as shown above.

Removing the Wall Bracket Covers

Should you want to remove the wall bracket covers please follow the steps below.

