

465108 rev00 ##

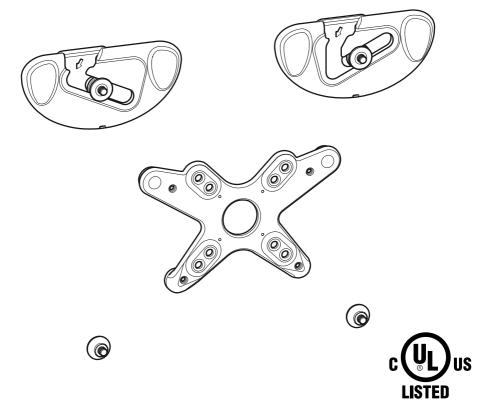


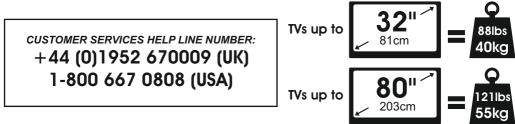

Read through ALL instructions before commencing installation. If you have any questions about this product or issues with installation contact the customer services help line before returning this product to the store. See www.avfgroup.com/unimax for instruction video.



AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England AVF Incorporated 3187, Cornerstone Drive, Eastvale, CA 91752, USA www.avfgroup.com

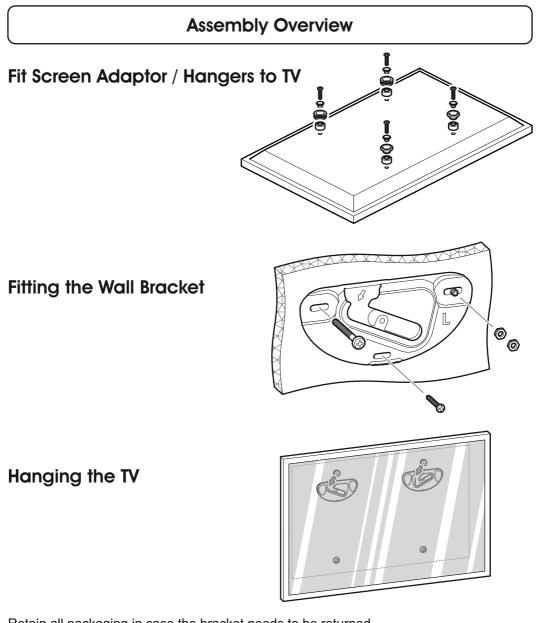

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/ Illustrations.

You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.

Index

Measure the TV fixing holes Width and Height

Adaptor Required

2 Fit Adaptor to TV


1


- **3** Assemble Positioning Template
- 4 Determine Bracket Hole Centers
- 5 Marking Wall For Drill Points
- 6 Fitting the Wall Bracket
- 7 Fitting the Wall Bracket Covers
- 8 Hanging the TV

No Adaptor Required

9 Fit Screen Hangers to TV
10 Assemble Positioning Template
11 Determine Bracket Hole Centers
12 Marking Wall For Drill Points
13 Fitting the Wall Bracket
14 Fitting the Wall Bracket Covers
15 Hanging the TV


Tools Recommended

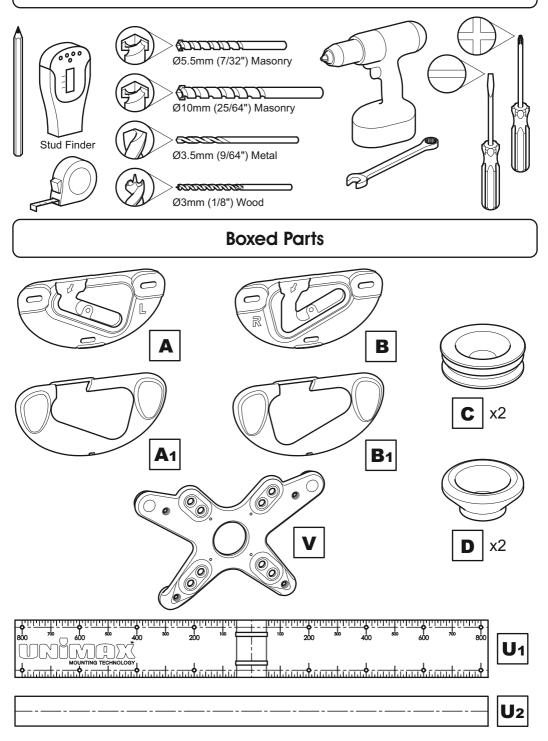

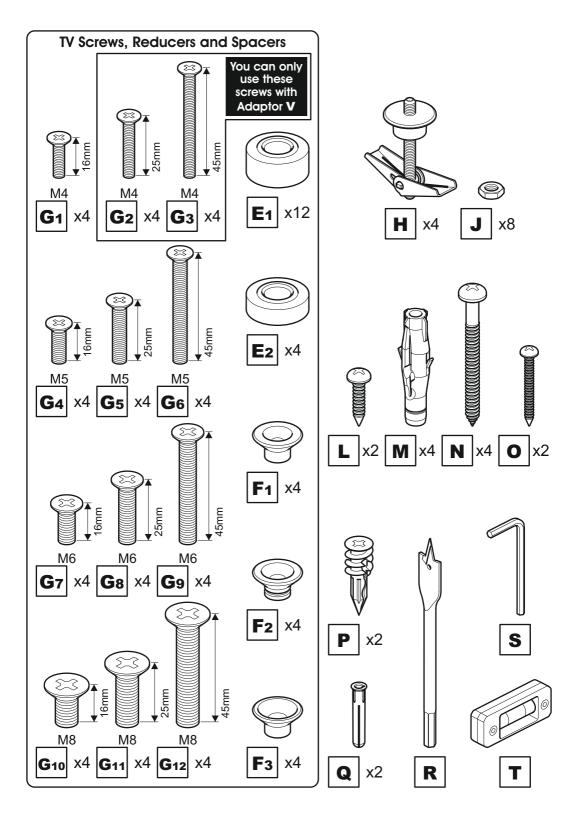


Remove the Wall Bracket Covers and keep for step 7 or 14

Wall bracket covers A1 & B1 are removed in the same way.

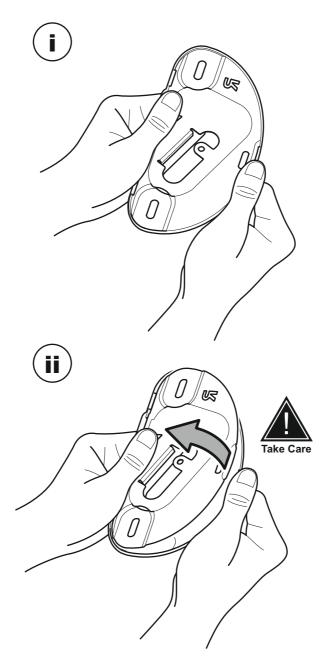


Measure the TV fixing holes Width and Height

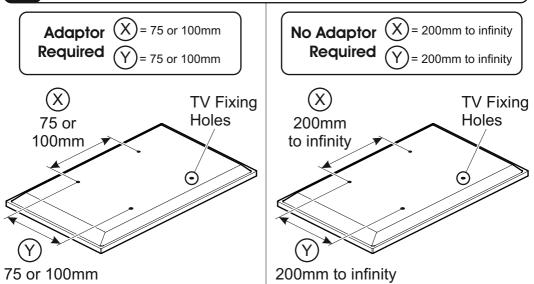

If width \bigotimes and height \bigotimes are not equal to 75mm or 100mm and are less than 200mm, STOP installation now and contact the customer help line

You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 2 or 9.

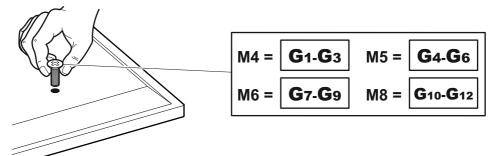

With or Without Adaptor

The width and height of your TV fixing holes will determine if you need to use the adaptor supplied.

With Adaptor Follow steps 2 - 8



Without Adaptor Follow steps 9 - 15





Fit Adaptor to TV

2


With Adaptor

Once you have established which screw diameter you need for your TV you will need to choose which wall spacing you require. Check the back of your TV and use the **OPTION** that fits your TV. Please see page opposite for more details.

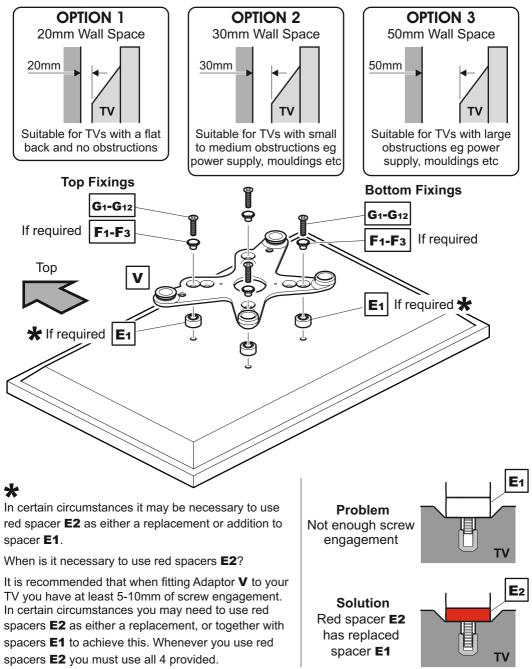

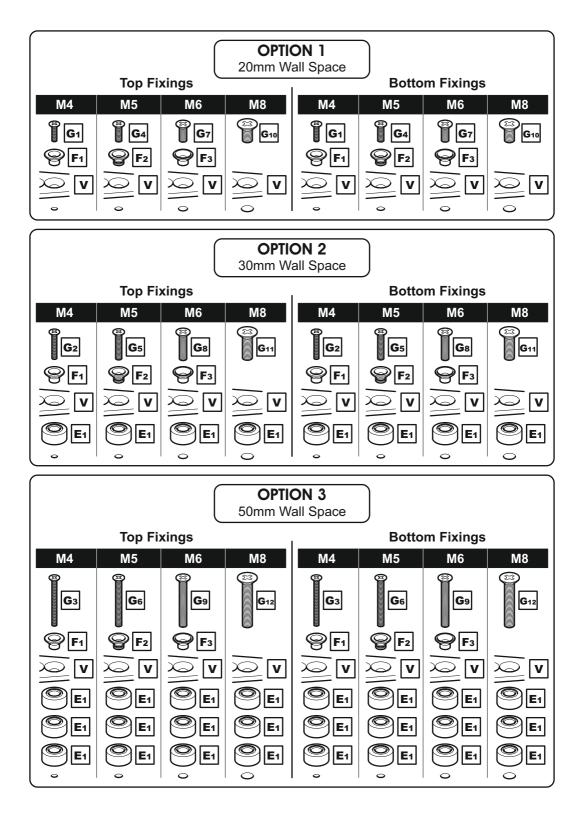


Assemble Positioning Template

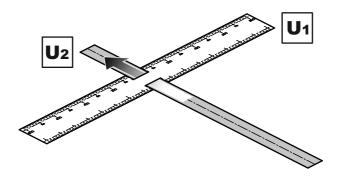


Determine Bracket Hole Centers

With Adaptor

Lay the template on the back of the TV and follow the instructions below.

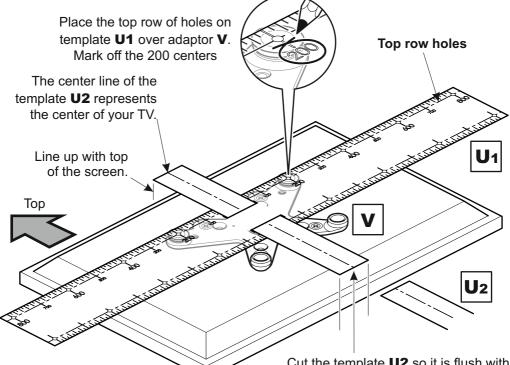


Cut the template **U2** so it is flush with the bottom of your TV so that when the template is on the wall you can see exactly where your TV will be vertically (distance from the floor and ceiling).

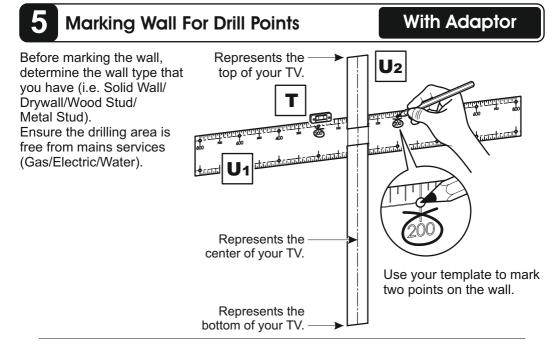

Next, use the Wall Brackets **A** and **B** as a template and position them over the appropriate **PENCIL MARKS** you have made, so that the mark is in the middle of the **CENTRAL HOLE** of the Wall Bracket. Ensure the bracket is level and mark the three **DRILL POINTS** with a pencil. Repeat for other bracket.


Drill six 3mm pilot holes and select appropriate fixings (see section 6)

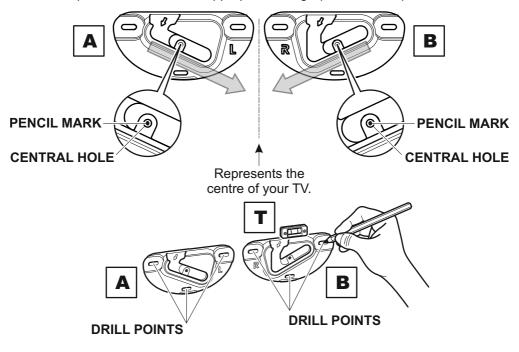


6 Fitting the Wall Bracket


With Adaptor

Use the correct fixings for your wall type. Mixing fixing screws may be required for installations that span different wall types. DO NOT OVER TIGHTEN SCREWS.

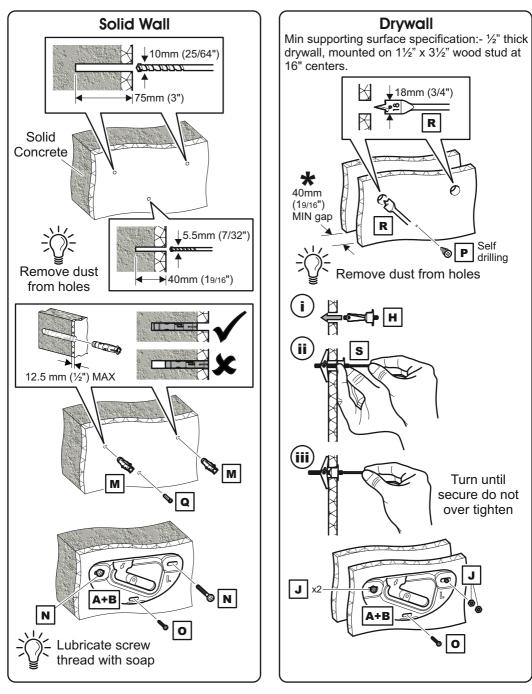

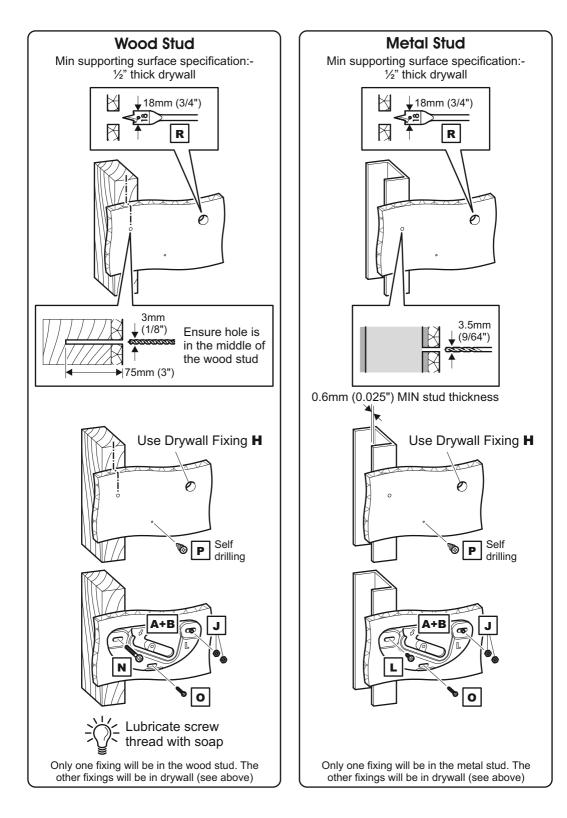

On wall bracket covers **A1** & **B1** are 3 retaining tabs. These locate onto 3 retaining lips on wall brackets **A** & **B** and lock the wall bracket covers in position.

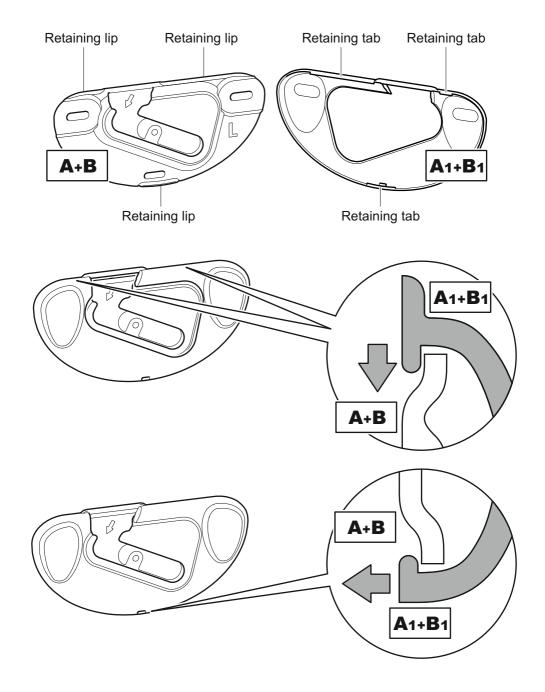




Hanging the TV

Hanging the TV is a two person job.

Present adaptor **V** (on the back of the TV) to the opening on brackets **A** & **B**. Slide down and across into place. Ensure adaptor is fully engaged. If cables from the TV prevent the TV resting against the wall then an alternative hanger configuration will be required (see section 2).

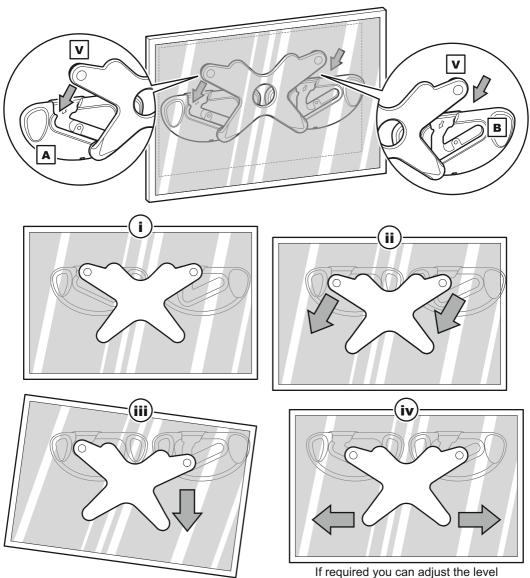

Removing the TV

of your TV by moving from side to side


This is a two person job. To remove the TV reverse the movements as shown above.


Fit Screen Hangers to TV

9

Without Adaptor


Once you have established which screw diameter you need for your TV you will need to choose which wall spacing you require. Check the back of your TV and use the **OPTION** that fits your TV. Please see page opposite for more details.

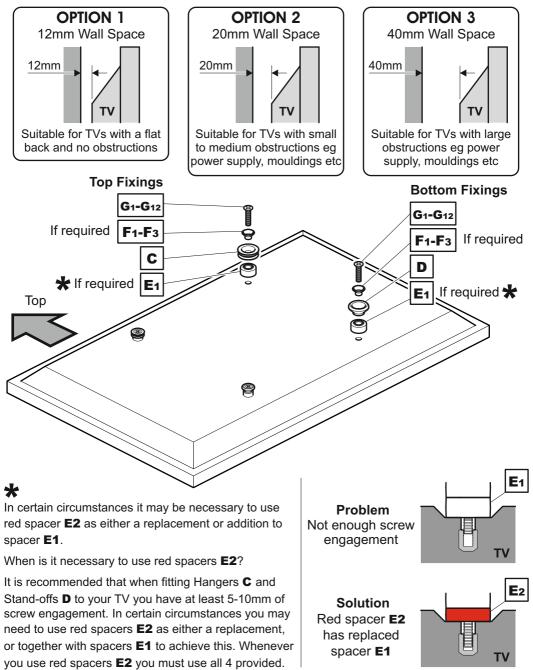

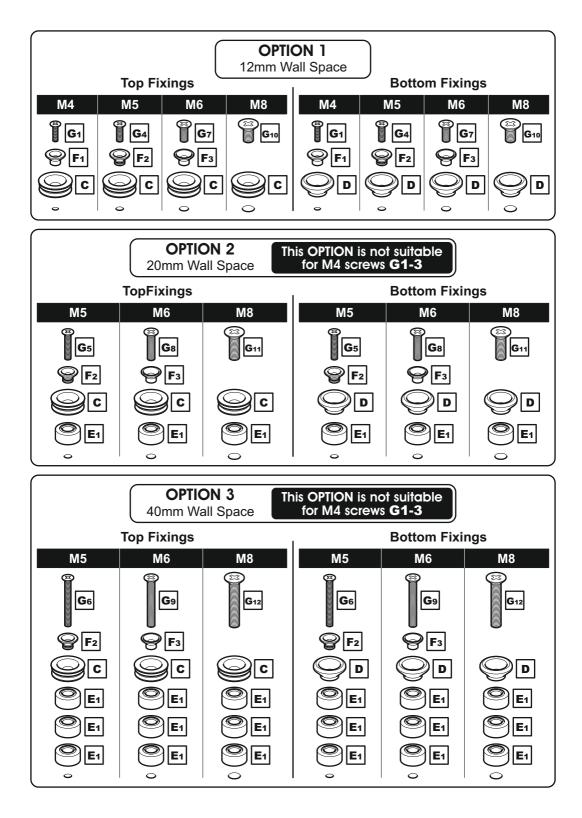

Assemble Positioning Template


Without Adaptor

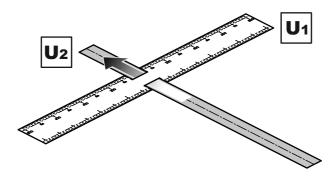


11 Determine Bracket Hole Centers

Without Adaptor

Lay the template on the back of the TV and follow the instructions below.

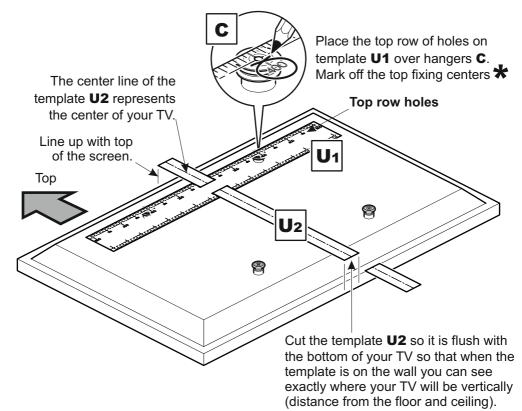


★ If hangers C do not line up with any holes on the template then ensure template is firmly in position and punch 2 holes to match your top fixing centers with a pencil or sharp object.

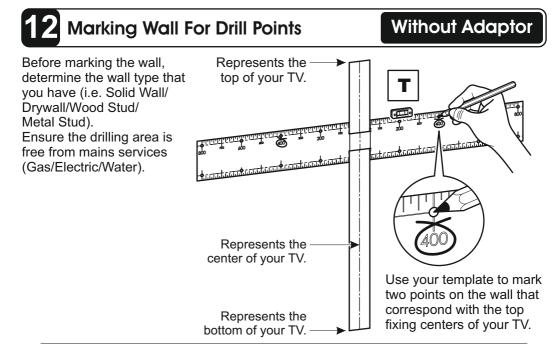

Next, use the Wall Brackets **A** and **B** as a template and position them over the appropriate **PENCIL MARKS** you have made, so that the mark is in the middle of the **CENTRAL HOLE** of the Wall Bracket. Ensure the bracket is level and mark the three **DRILL POINTS** with a pencil. Repeat for other bracket.


Drill six 3mm pilot holes and select appropriate fixings (see section 13)

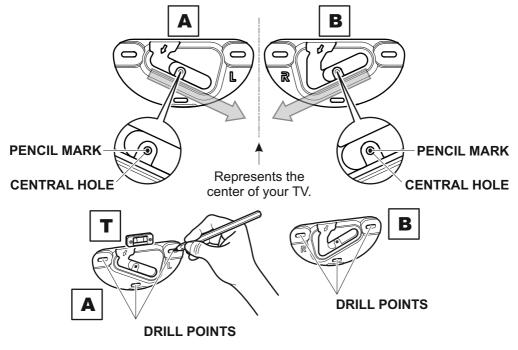


13 Fitting the Wall Bracket

Without Adaptor

Use the correct fixings for your wall type. Mixing fixing screws may be required for installations that span different wall types. DO NOT OVER TIGHTEN SCREWS.

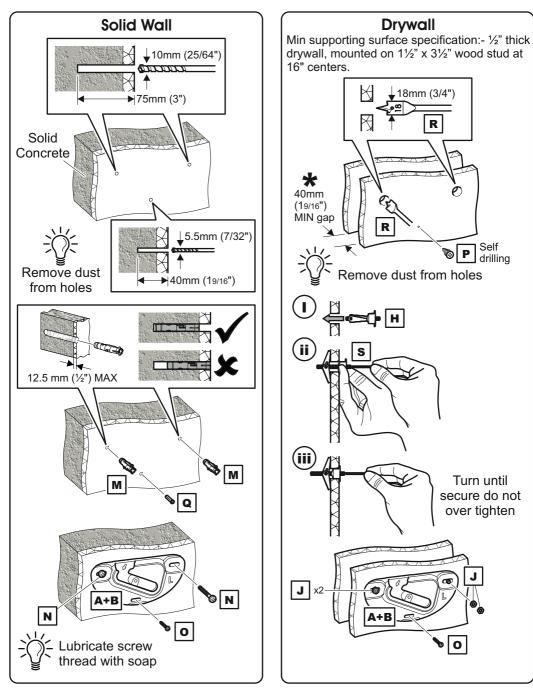


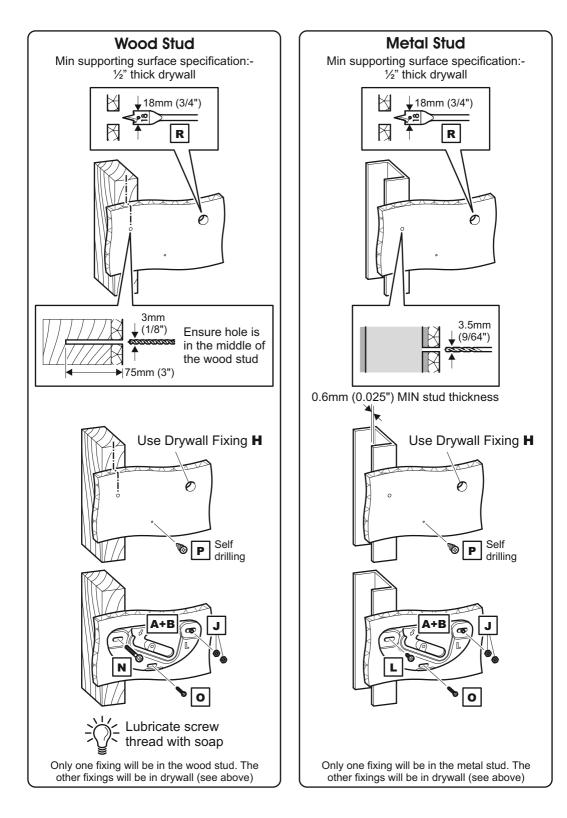

14 Fitting the Wall Bracket Covers

Without Adaptor

On wall bracket covers **A1** & **B1** are 3 retaining tabs. These locate onto 3 retaining lips on wall brackets **A** & **B** and lock the wall bracket covers in position.

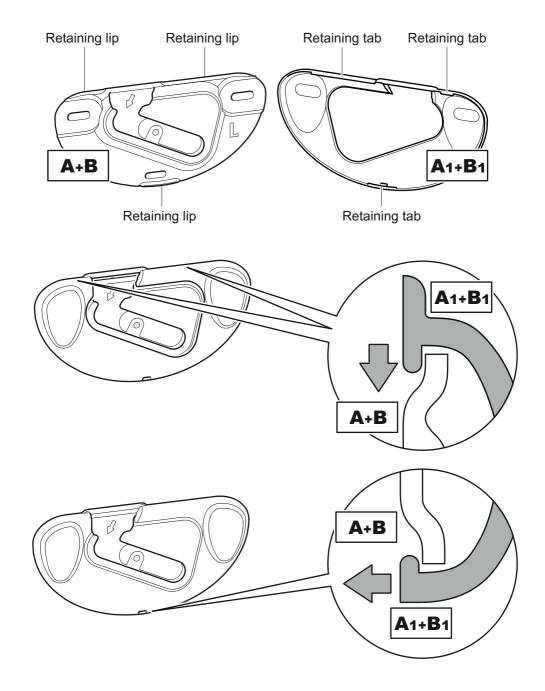


15 Hanging the TV

Hanging the TV is a two person job.

Present hangers **C** (on the back of the TV) to the opening on brackets **A** & **B**. Slide down and across into place. Ensure both hangers are fully engaged. If cables from the TV prevent the TV resting against the wall then an alternative hanger configuration will be required (see section 9).

TV must be parallel to wall. Use spacers / stand-offs as shown in section 9.

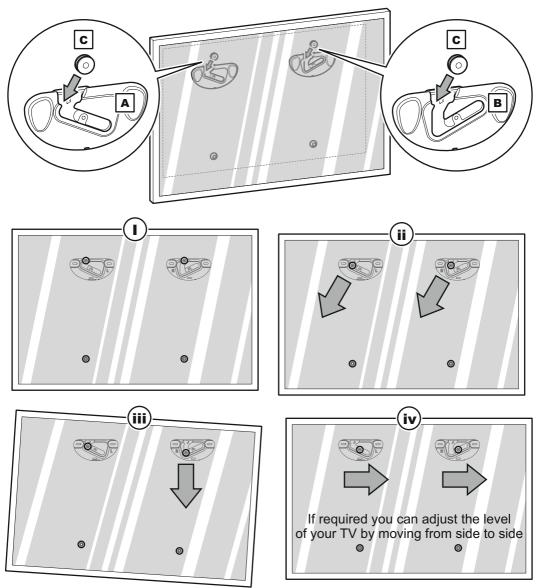

Removing the TV

This is a two person job. To remove the TV reverse the movements as shown above.

Removing the Wall Bracket Covers

Should you want to remove the wall bracket covers please follow the steps below.

