


JNL655

465396 rev01

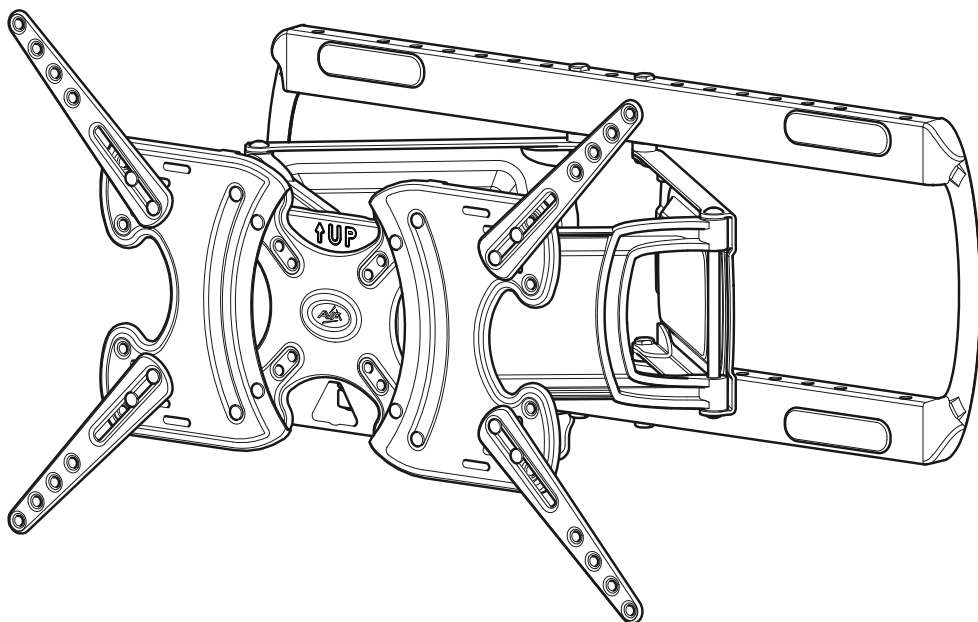

Read through ALL instructions before commencing installation.
If you have any questions about this product or issues with installation
contact the customer services helpline before returning this product to
the store. See jl.avfgroup.com/p/jnl655 for more information.


CUSTOMER SERVICES HELP LINE NUMBER:

0333 320 0463



AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England


Do Not remove
until step 6

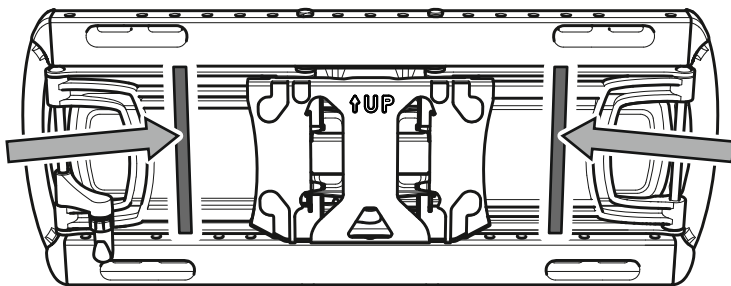



Do Not remove
until step 6

Assembly Overview




2 Person Installation Recommended


Fit the TV Mounting Plate

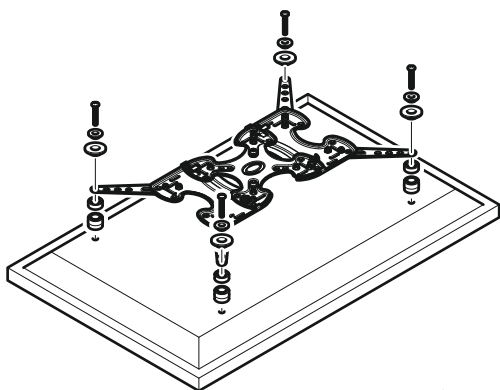

Fit the Wall Bracket

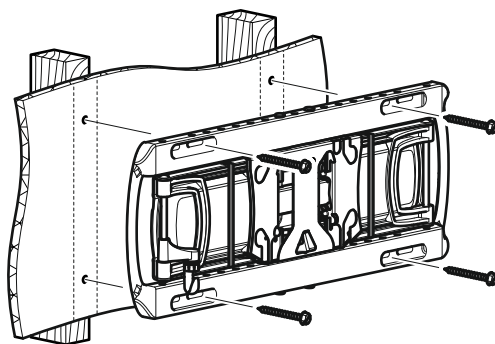

Connect the TV

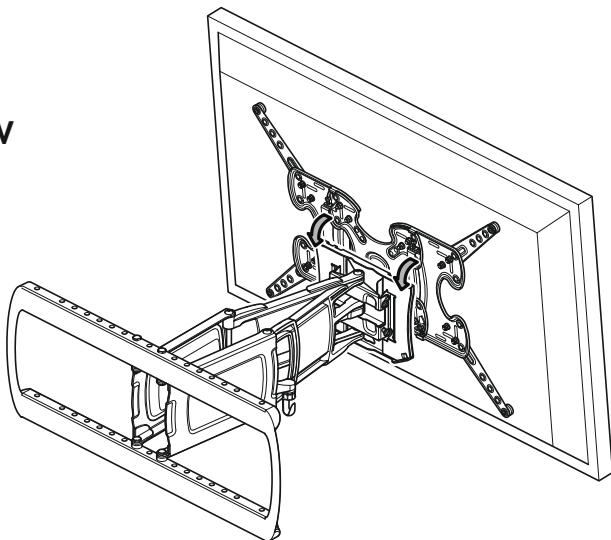

Index

1 Measure the TV fixing holes Width and Height

2 Preparing the Front Adaptor Plate

3 Preparing the TV Mounting Plate

4 Fitting the TV Mounting Plate

5 Fitting the Wall Bracket

6 Fitting the Wall Bracket Covers

7 Connecting the TV

8 Cable Management

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/ Illustrations.


You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.


Tools Recommended

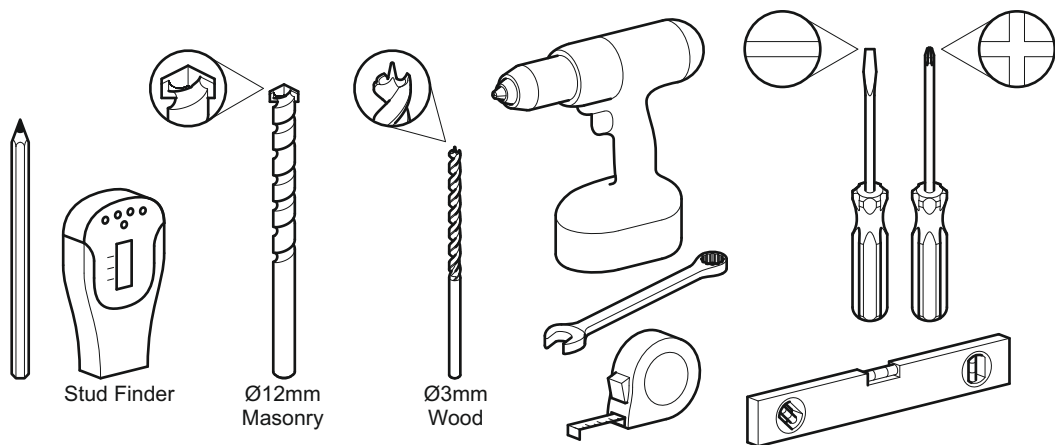

Boxed Parts

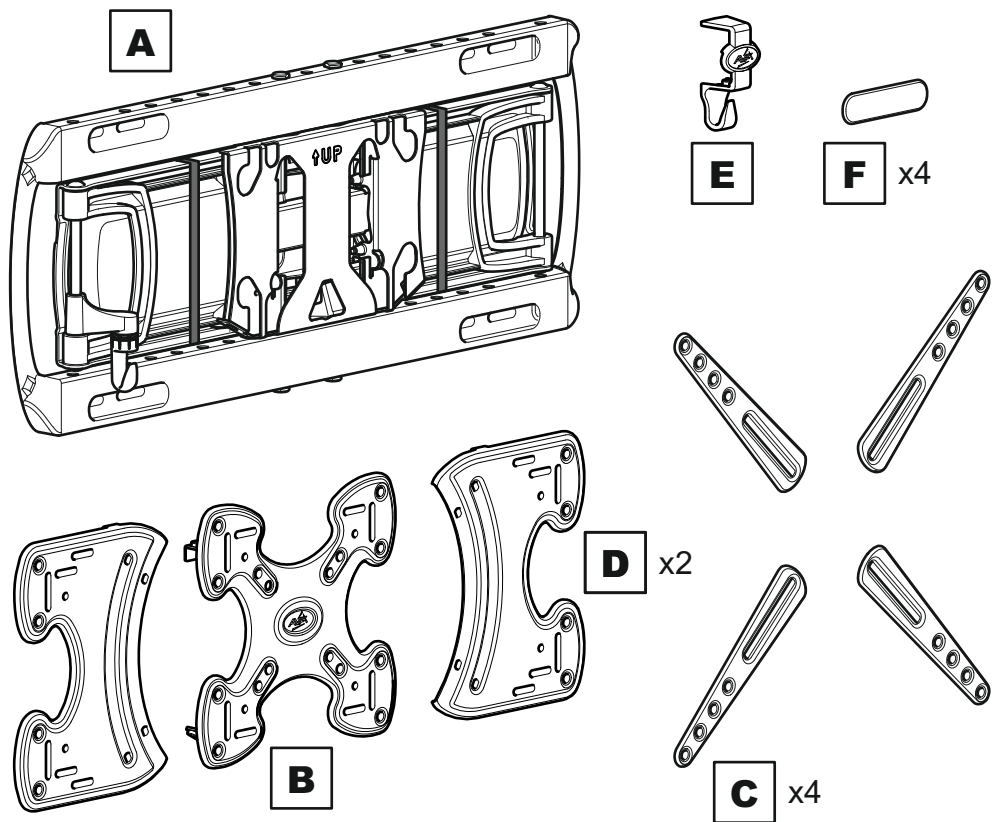


TV Screws, Reducers and Spacers

 


M4

 L1 x4




M4

 L2 x4




M5

 L3 x8




M5

L4 x4

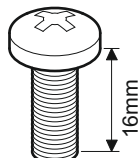


M6

L5 x4

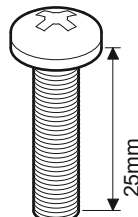


M6

L6 x4

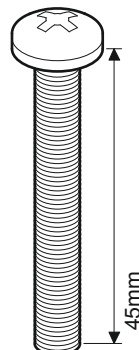


M6

L7 x4

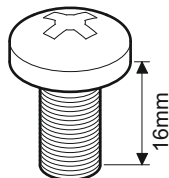


M8

L8 x4

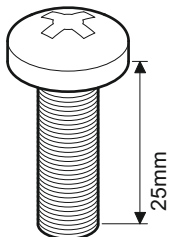

M8

L9 x4

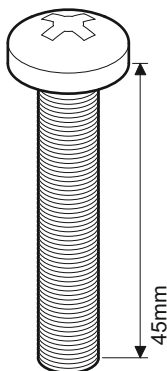

M8

L10 x4



J1 x4



J2 x4



K1 x12



K2 x4



M6

G x16



 
M6

H x16




M6

I x8



M x6

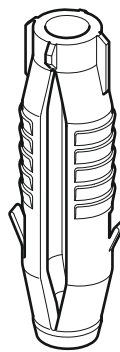

N x6




4mm

O x1



P x16

1 Measure the TV fixing holes Width and Height

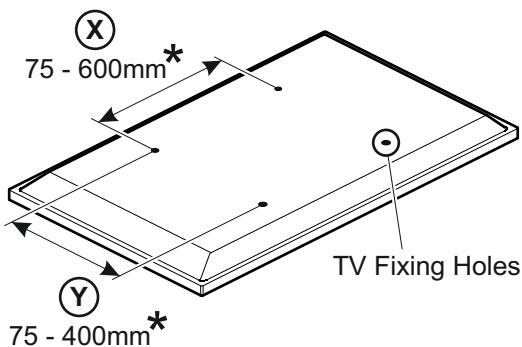


If width (X) is greater than 600mm* or height (Y) greater than 400mm*
STOP installation now and contact the customer help line

*Also fits TV fixing holes

(X) 630mm	(Y) 310mm	(X) 650mm	(Y) 320mm	(X) 660mm	(Y) 320mm
-----------	-----------	-----------	-----------	-----------	-----------

You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 4.

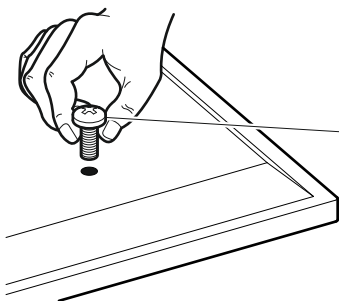

M4 = L1-L2

M5 = L3-L4

 

M6 = L5-L7

M8 = L8-L10





After completing step 4 you will have fittings left over, please keep for future reference

2 Preparing the Front Adaptor Plate

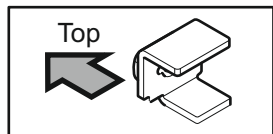

M5

L3 x4

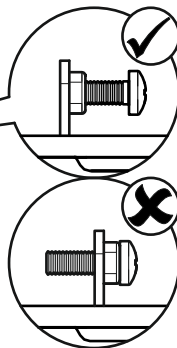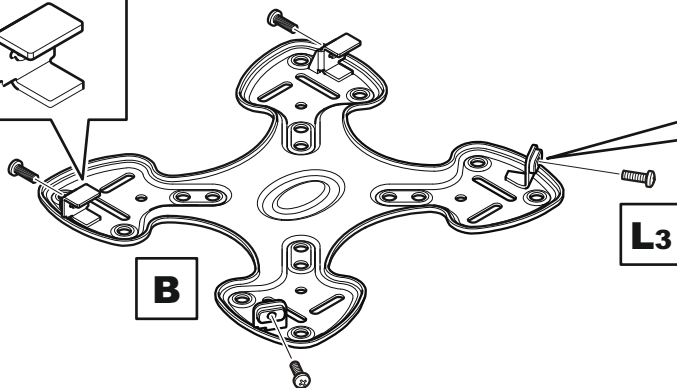

3

Preparing the TV Mounting Plate

Use the option that fits your TV. Do not fully tighten

OPTION 1

- | | |
|-----------|-----------|
| (X) 75mm | (Y) 75mm |
| (X) 100mm | (Y) 100mm |
| (X) 200mm | (Y) 100mm |
| (X) 200mm | (Y) 200mm |

OPTION 2

- | | |
|-----------|-----------|
| (X) 100mm | (Y) 200mm |
|-----------|-----------|

OPTION 3


- | | |
|--------------|--------------|
| (X) 300mm | (Y) 100mm |
| (X) 300mm | (Y) 200mm |
| (X) 300mm | (Y) 300mm |
| (X) 400mm | (Y) 100mm |
| (X) 400mm | (Y) 200mm |
| (X) 400mm | (Y) 300mm |
| (X) 400mm | (Y) 400mm |
| (X) 75-400mm | (Y) 75-400mm |

OPTION 4

- | | |
|---------------|--------------|
| (X) 600mm | (Y) 100mm |
| (X) 600mm | (Y) 200mm |
| (X) 600mm | (Y) 300mm |
| (X) 600mm | (Y) 400mm |
| (X) 400-600mm | (Y) 75-400mm |
| (X) 630mm | (Y) 310mm |
| (X) 650mm | (Y) 320mm |
| (X) 660mm | (Y) 320mm |


If in any doubt please call the customer help line.

OPTION 1

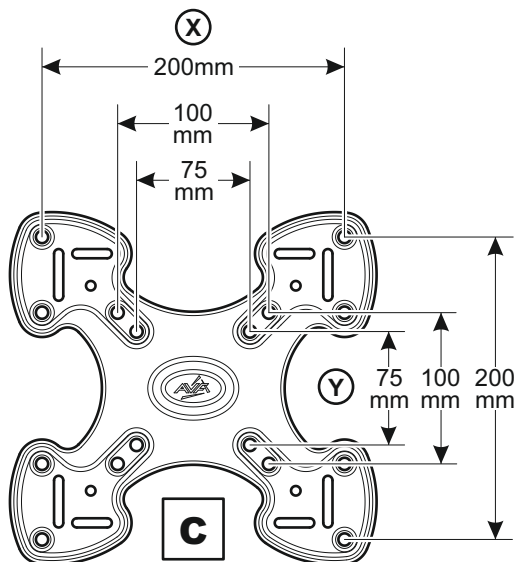

If your TV fixing holes match any of the sizes shown above you will not need to use any adaptors. Please go to step 4.

OPTION 2



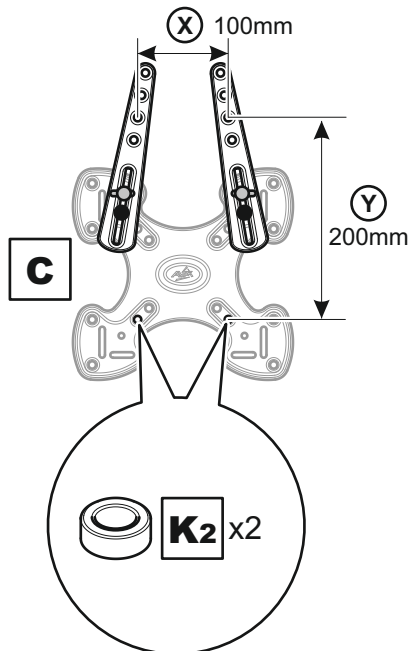


Use spacer **K2** between the bottom two holes of the bracket and your TV.



OPTION 3



When attaching adaptors **C** you must always use **HOLES x4** and either of the **SLOTS**.


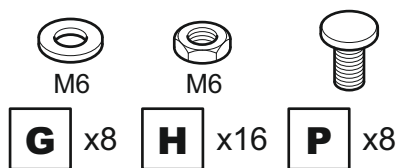
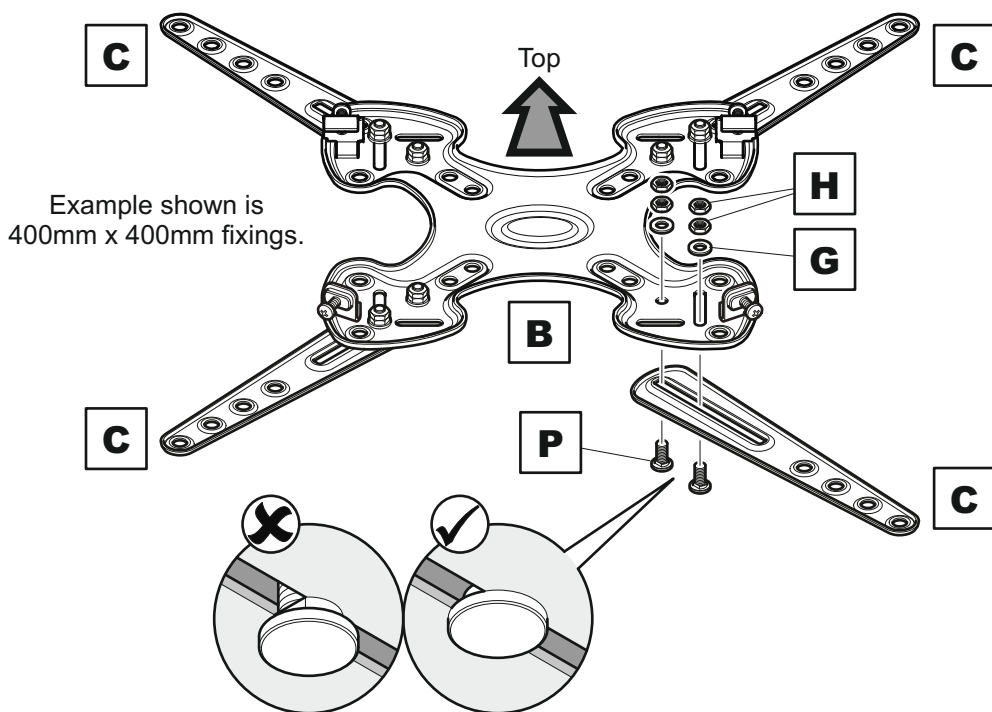
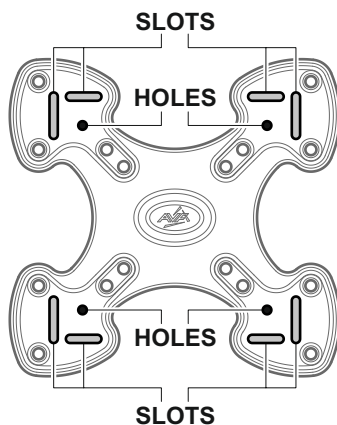


- = HOLES
- = SLOTS

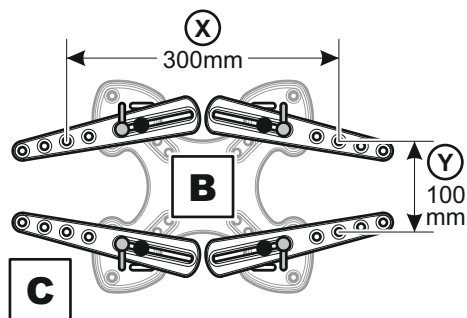
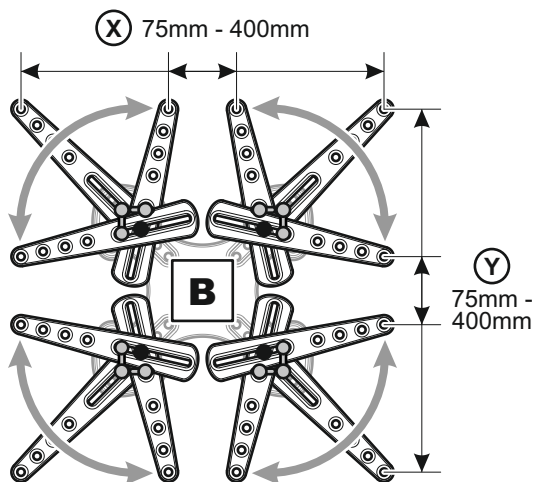


C



Adaptors **C** can be fixed in different positions in the slots on Plate **B** to match your TV fixing holes.

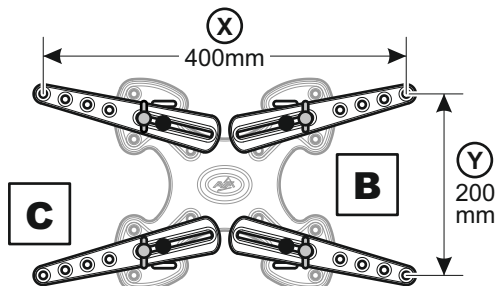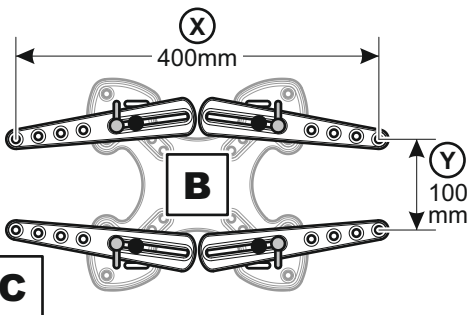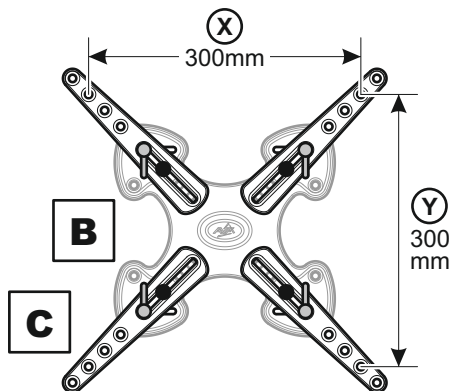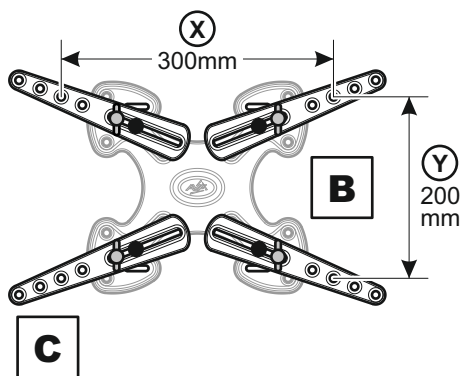

● = HOLES
○ = SLOTS

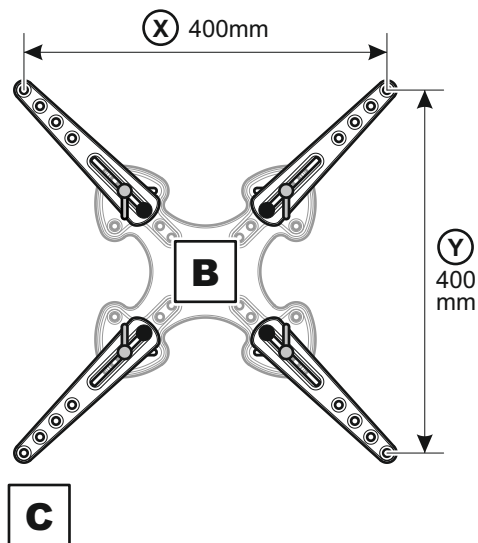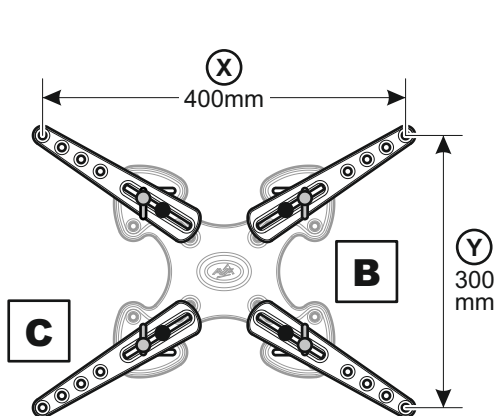

OPTION 4

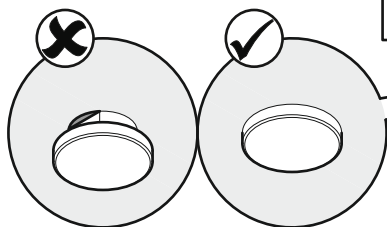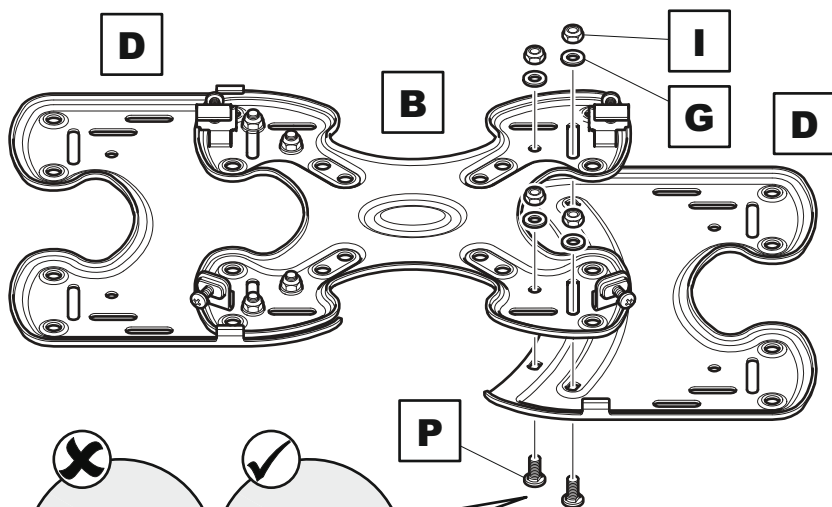

M6




M6




G x8 **I** x8 **P** x8



When attaching adaptors **C** you must always use **HOLES x4** and either of the **SLOTS**.

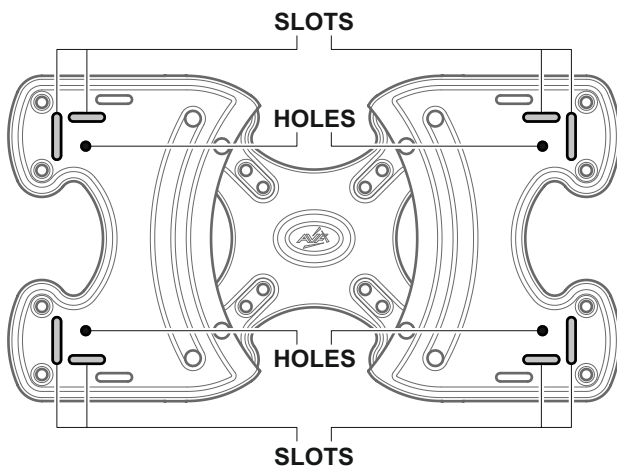

Example shown is 600mm x 400mm fixings.

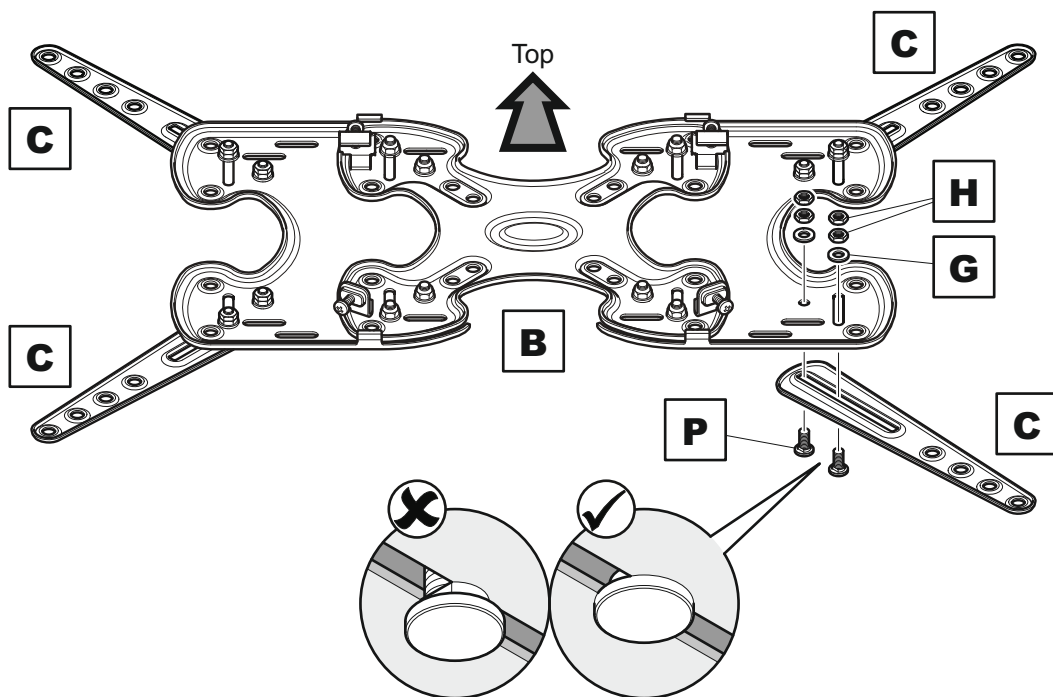

M6




M6



G x8 **H** x16 **P** x8





- = HOLES
- = SLOTS

Adaptors **C** can be fixed in different positions in the slots on Plate **B** to match your TV fixing holes.

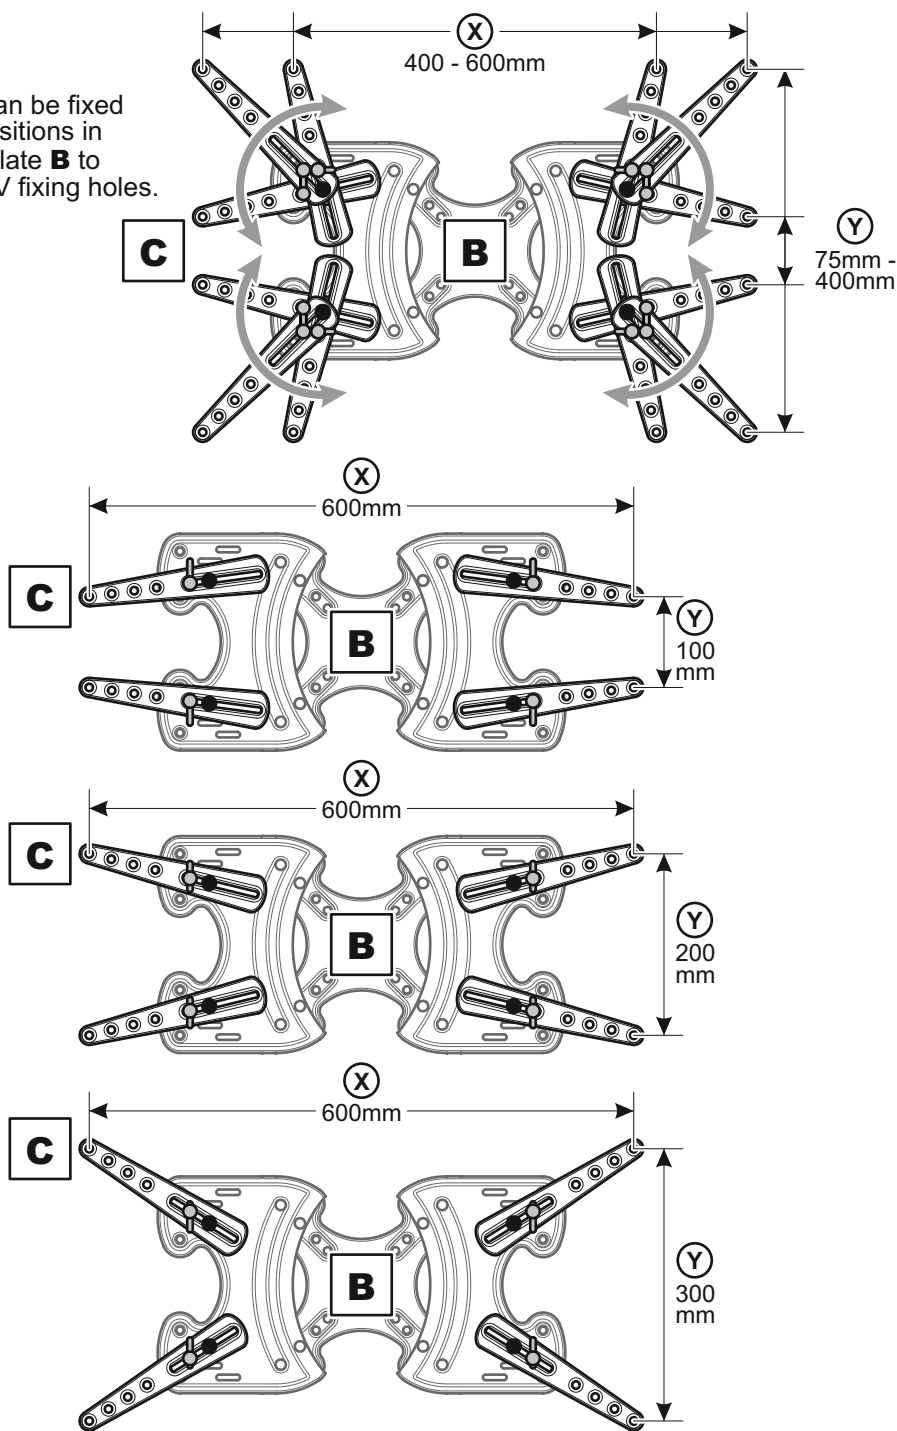


● = HOLES

○ = SLOTS

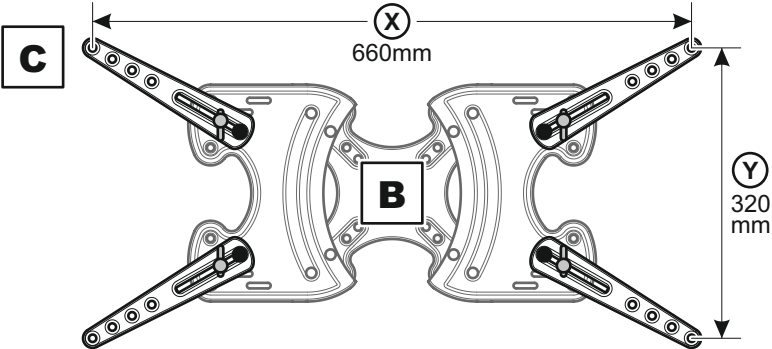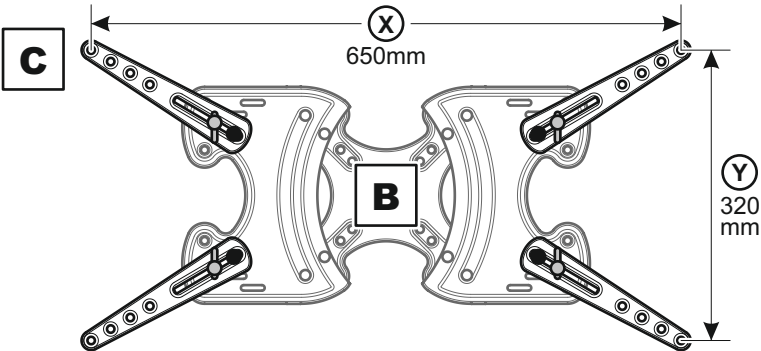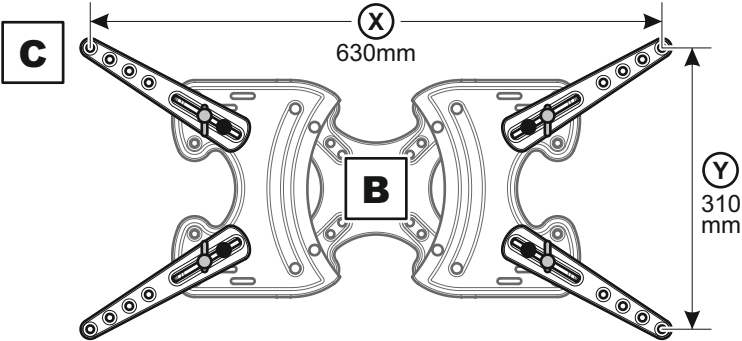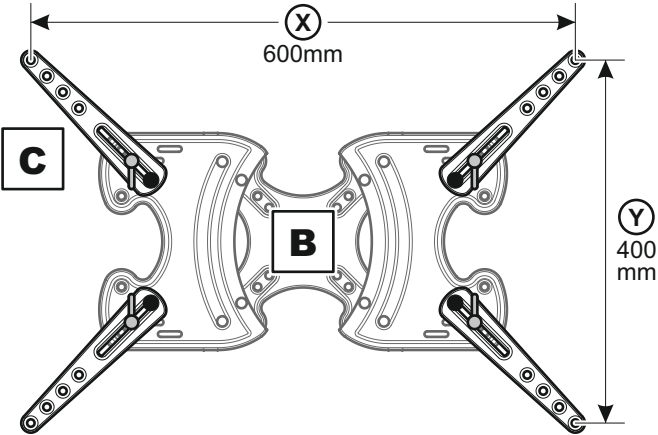


4 Fitting the TV Mounting Plate

Before you fully tighten the TV mounting plate please check that the mounting plate holes line up with the fixing holes on the back of your TV.

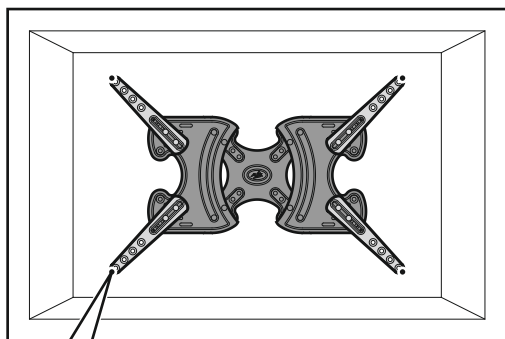


Holes do not line up and small adjustment is required before you fully tighten

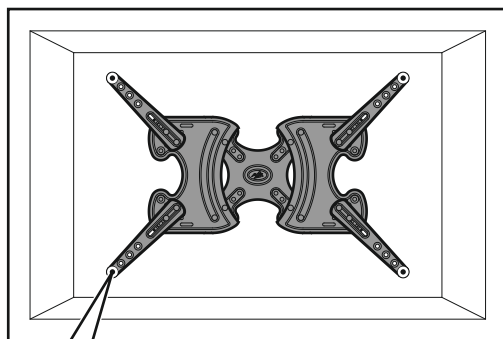

Holes line up and no adjustment is required before you fully tighten


No Spacers

For TVs with flat/unobstructed back




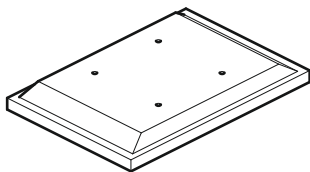



Spacers **K1/K2**

For TVs with irregular/obstructed back

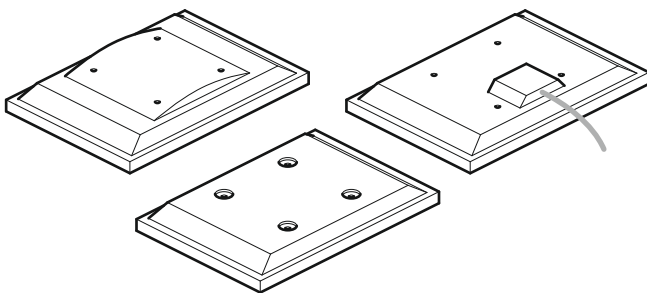



WARNING

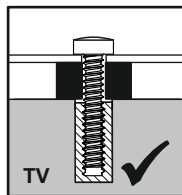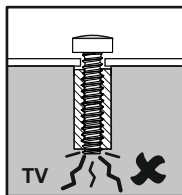
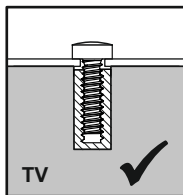
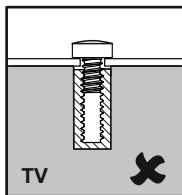


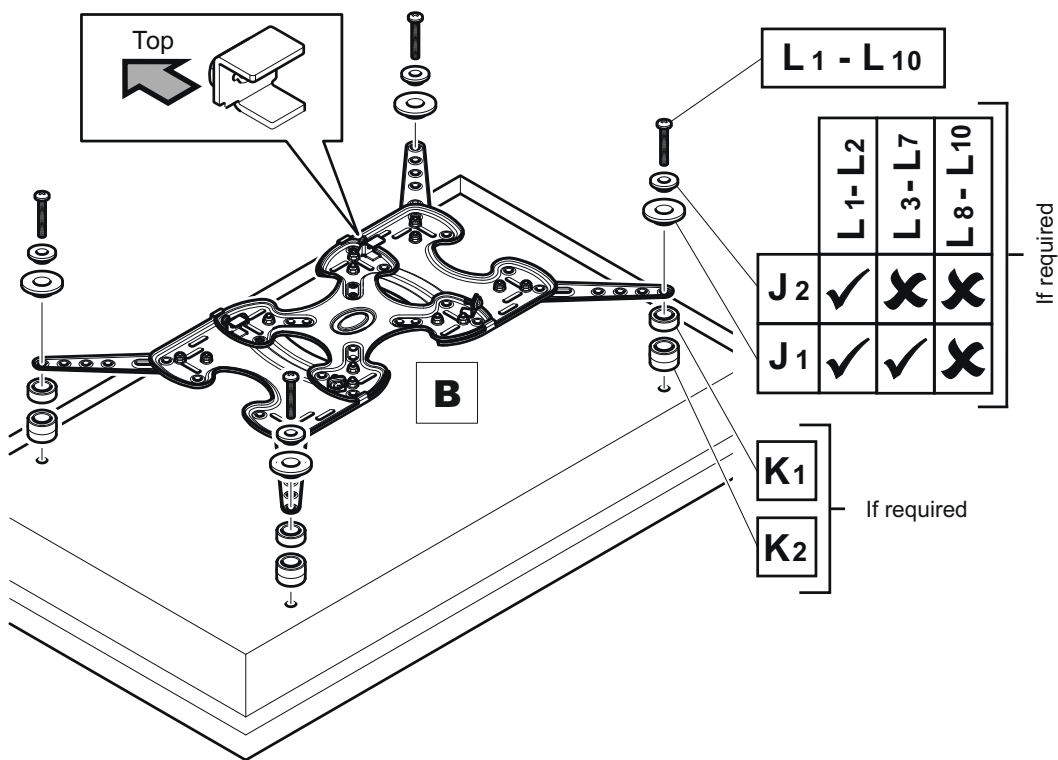


Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.

 5 Fitting the Wall Bracket

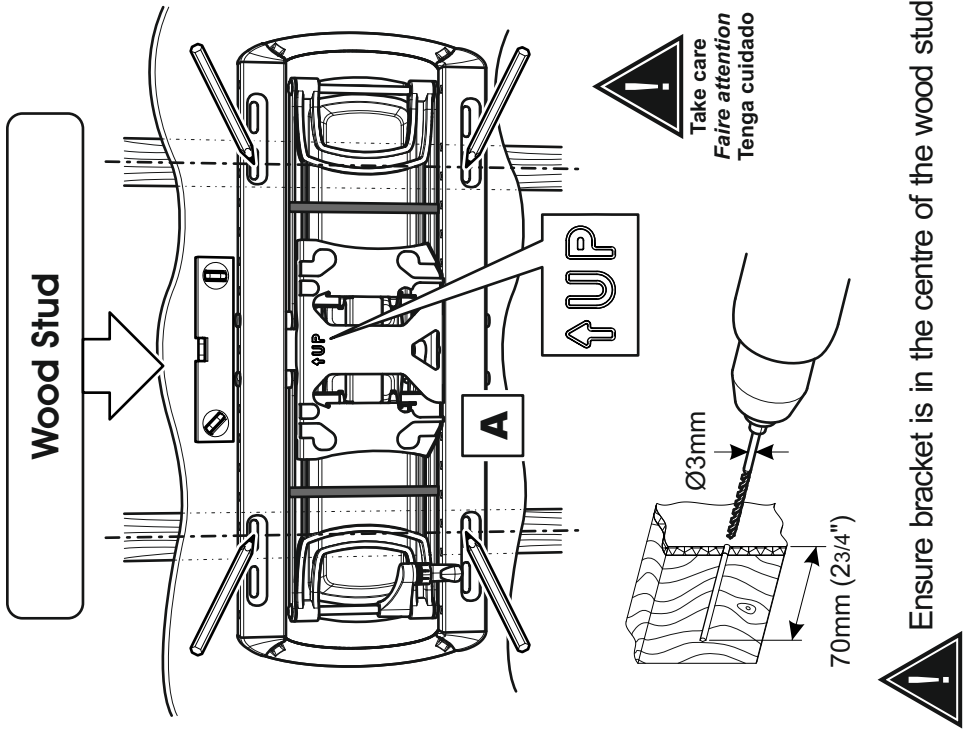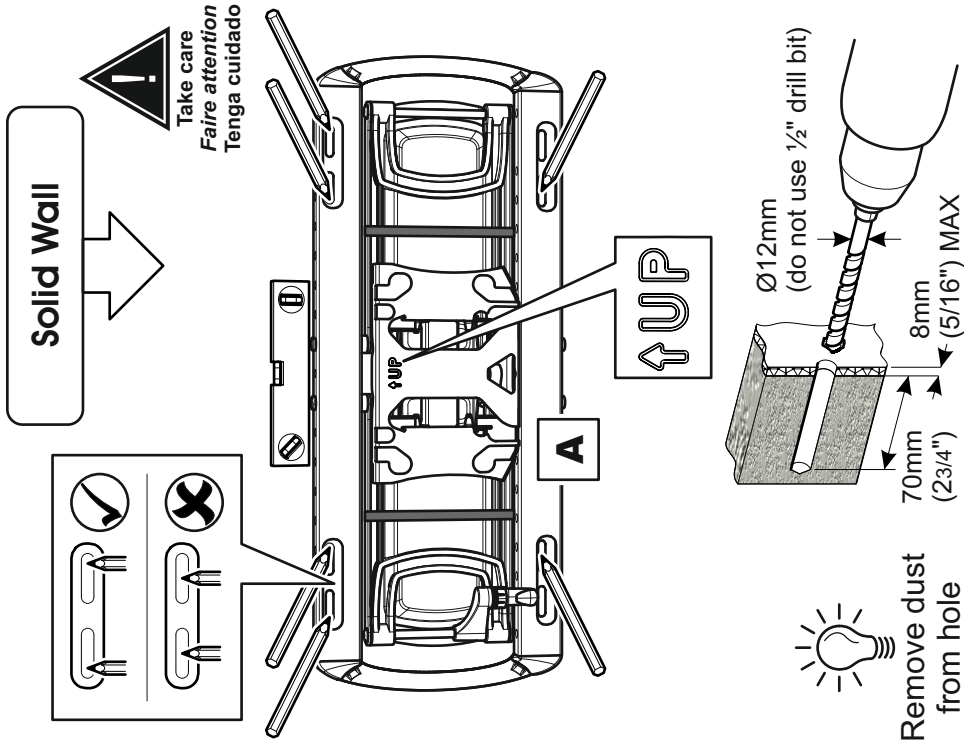


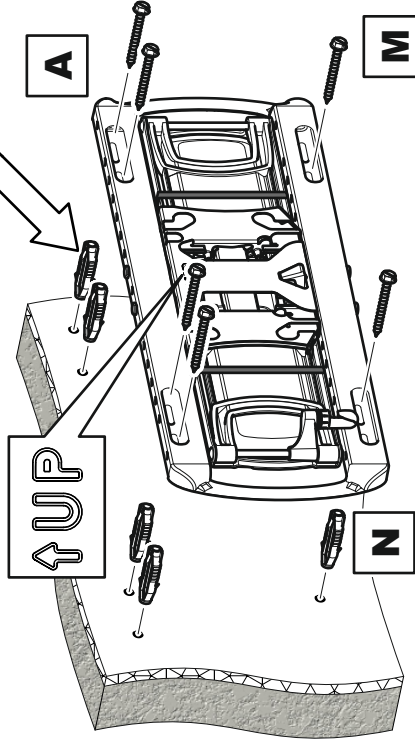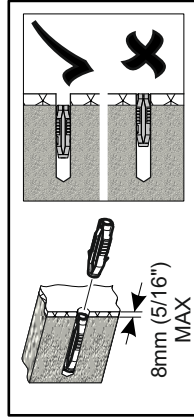

Lubricate screw
thread with soap

 


M x6


 


N x6

 DO NOT over tighten screws
Tighten screws by hand only



Lubricate screw
thread with soap

 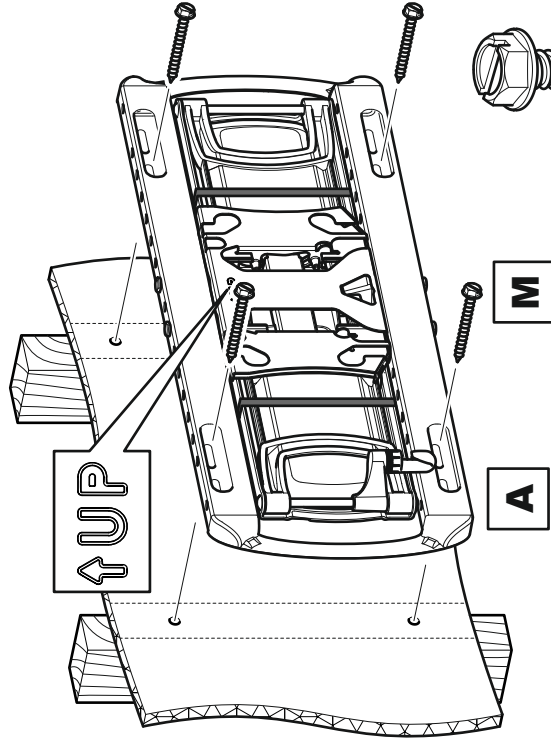


M x4

DO NOT over tighten screws
Tighten screws by hand only




6 Fitting the Wall Bracket Covers

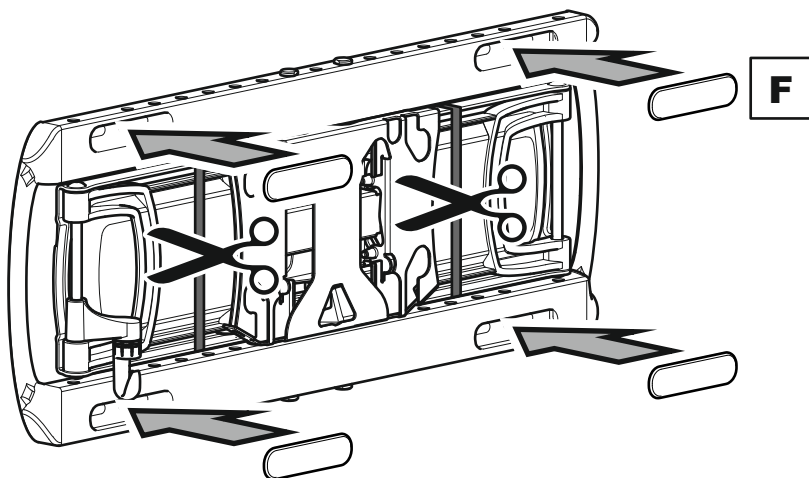


7 Connecting the TV

Attaching and Locking

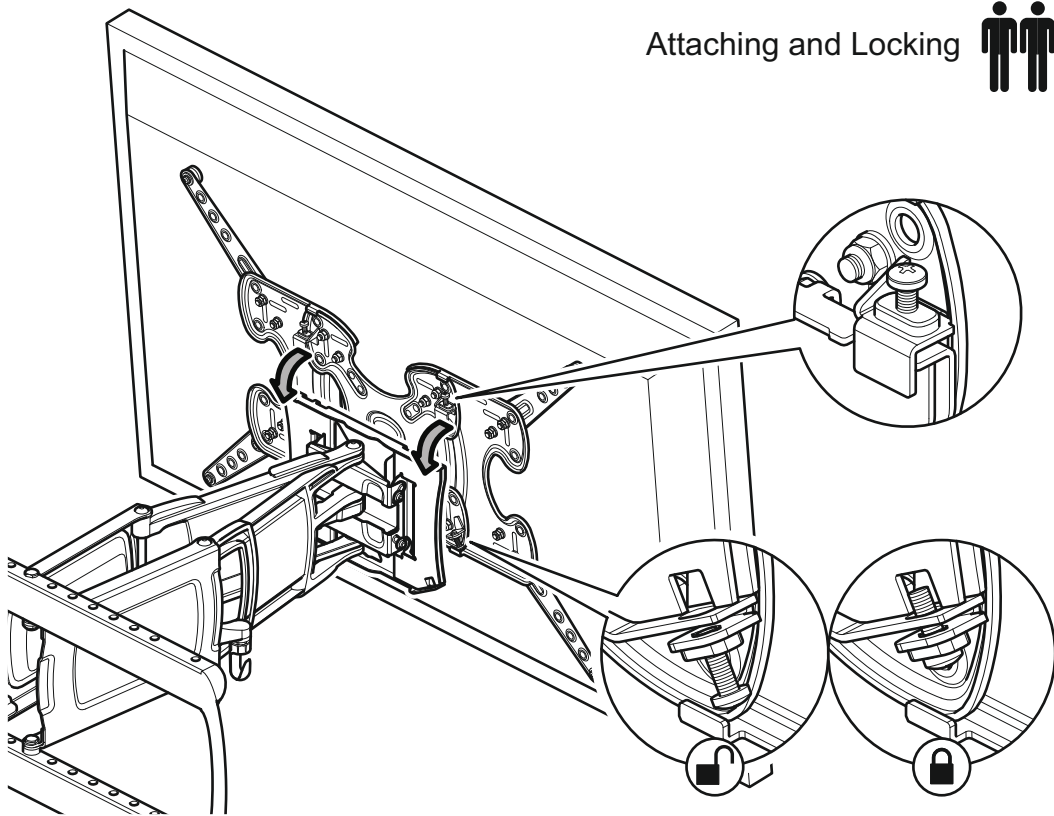

8 Cable Management

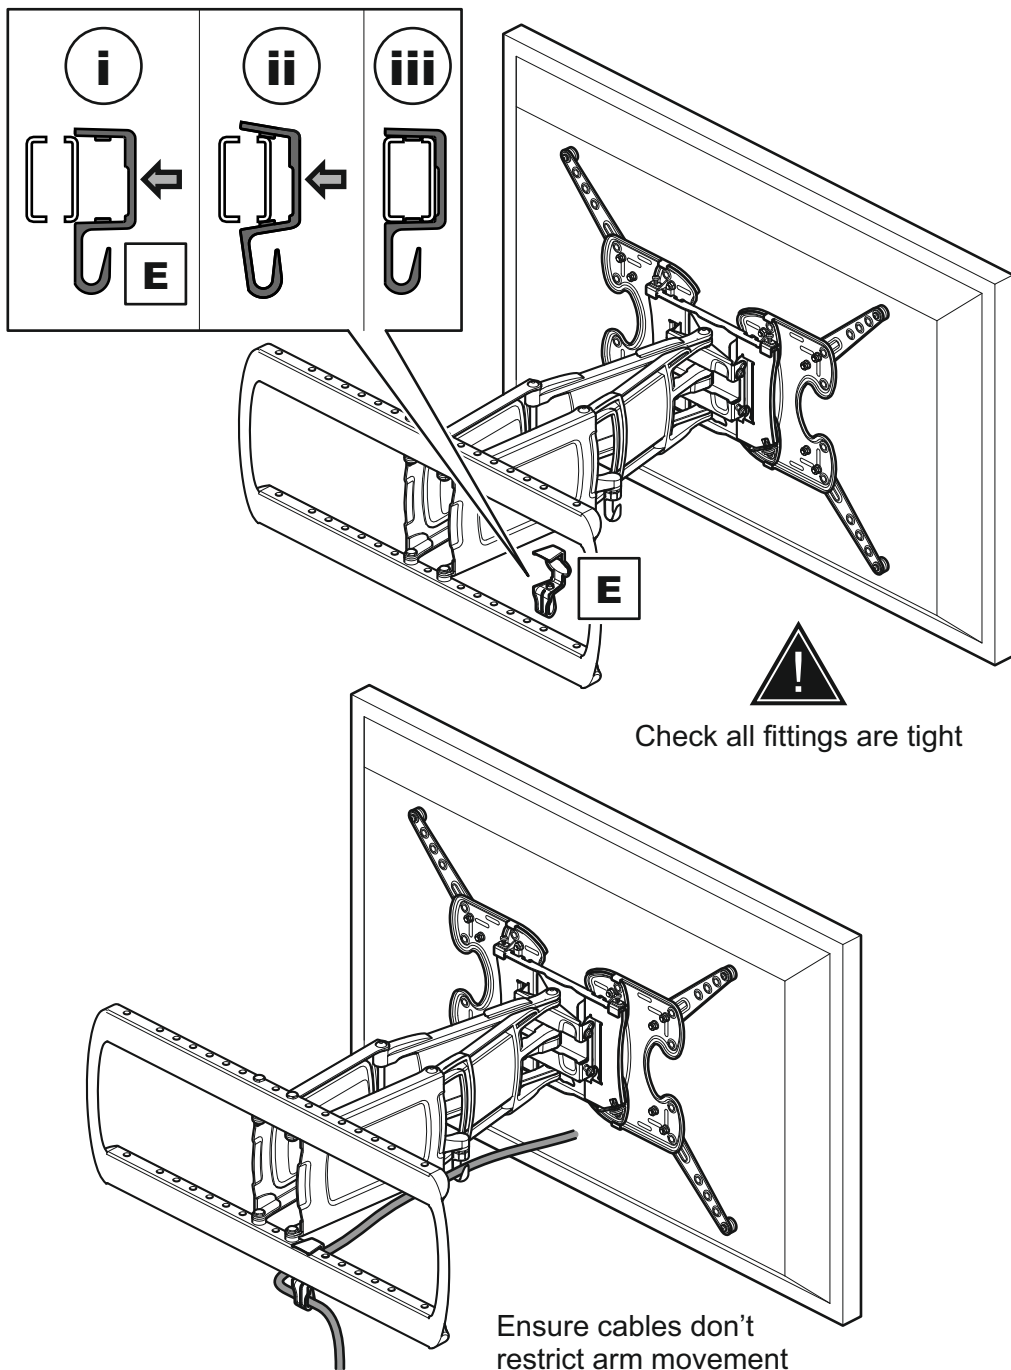


Optional Lateral Shift




WOOD STUD ONLY




i

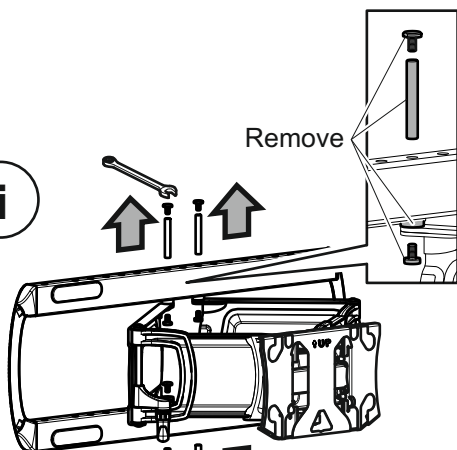


ii

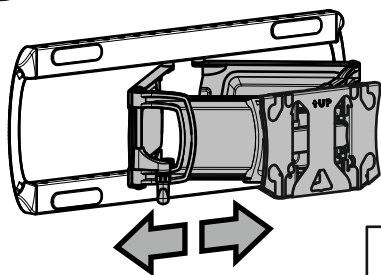

iii

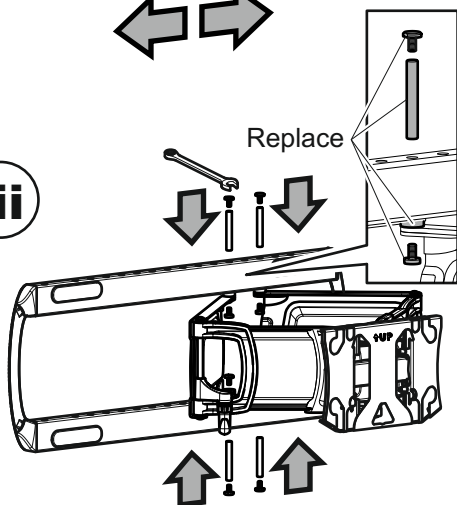

Optional Lock tilt

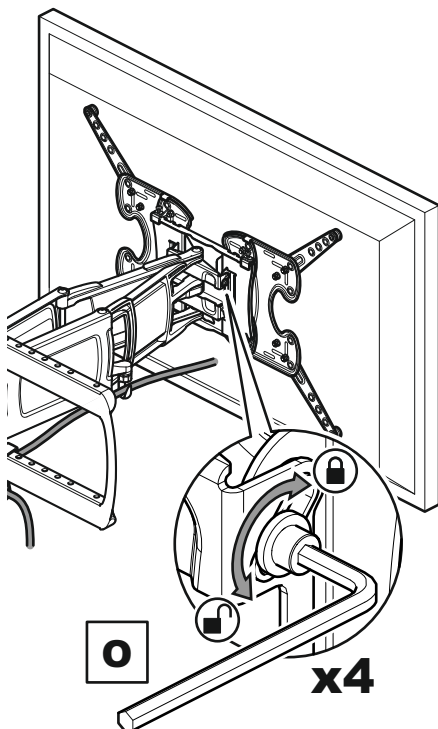

Optional TV Levelling

