
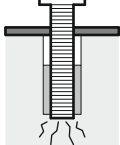



3 Deciding the correct screw and spacer combination



When deciding which screw diameter and length is suitable for your TV it is important to **STOP** immediately as soon as you feel any resistance to prevent damage to your TV




You are provided with 3 diameters of TV fixing screws, **M4**, **M6** and **M8**. Determine the screw diameter that fits and remember for the next step

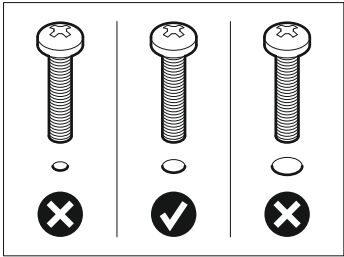


Do I need to use spacers T9 or T10 ?

Spacers are provided so that you can achieve the correct fit between the back of your TV and Mounting Plate, please see below for examples of when spacers are required


No
TV has flat back and flush fixing holes

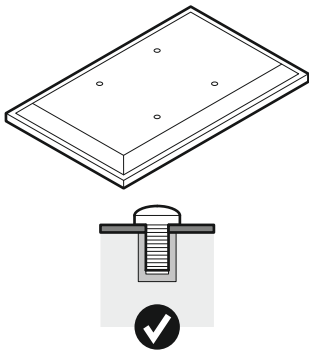


Maybe
TV has flat back with recessed fixing holes

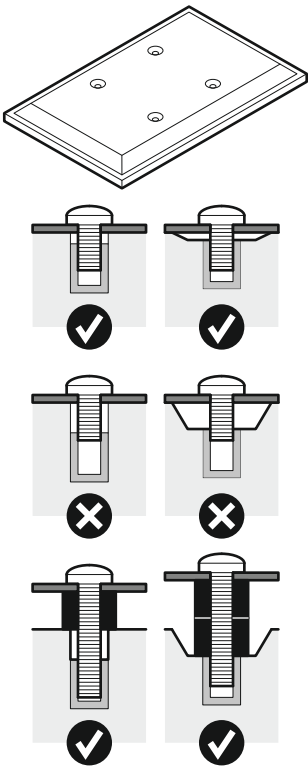

Yes
TV has irregular or obstructed back

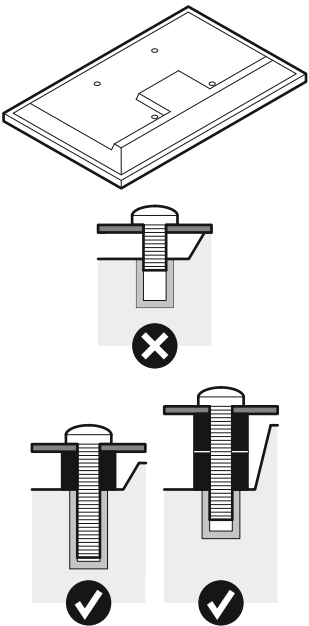


4 Fitting the TV Brackets

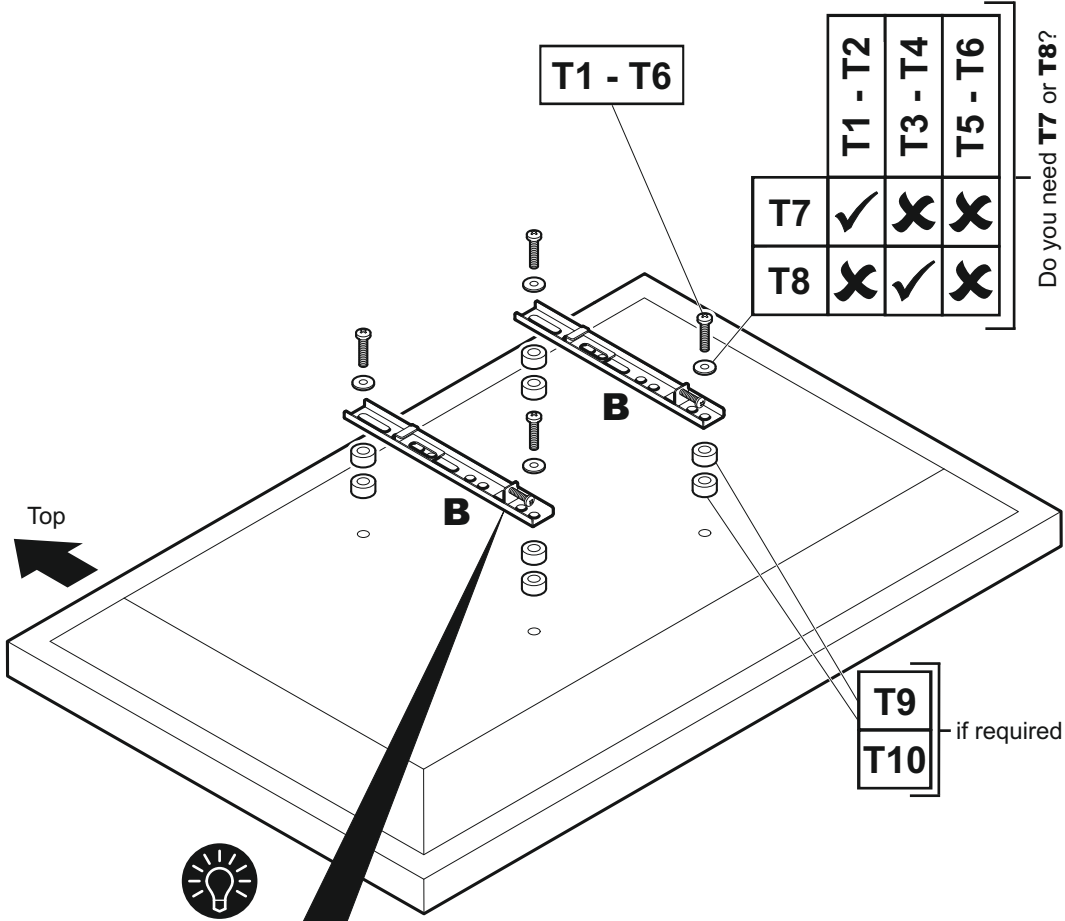



	T1 - T2	T3 - T4	T5 - T6
T7	✓	✗	✗
T8	✗	✓	✗

Do you need **T7** or **T8**?

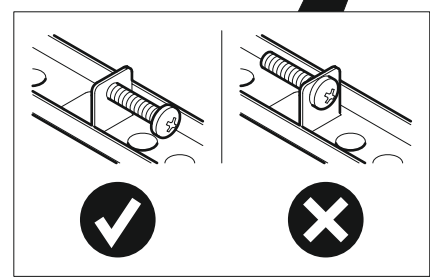T9
T10 - if required




- 


Attach the bracket to the back of your TV using a suitable combination of screw, washer and spacer combinations. **DO NOT OVERTIGHTEN!**
- 


After completing step 4 you will have fittings left over, please keep in a safe place for future reference


5 Solid Wall




Get it right with our easy to use online TV Height Calculator at myTVMount.com

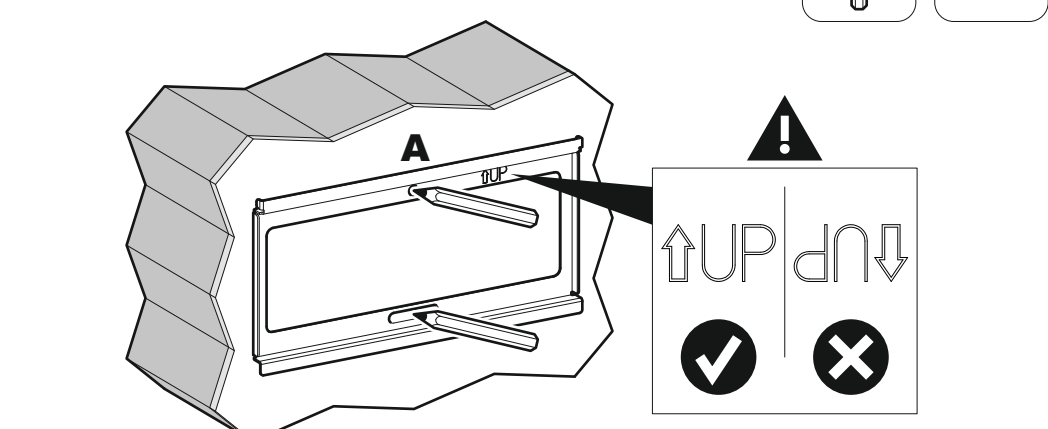

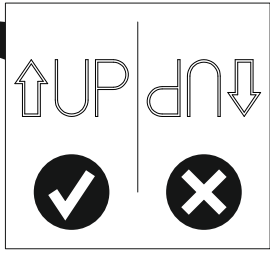

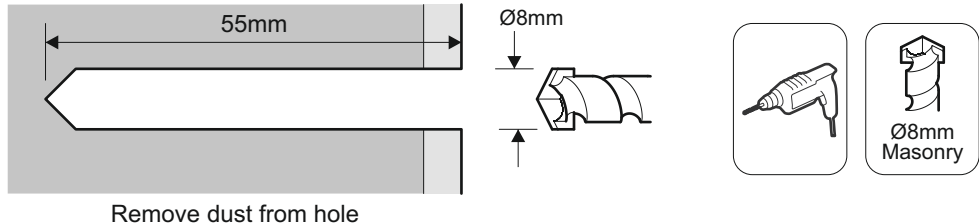

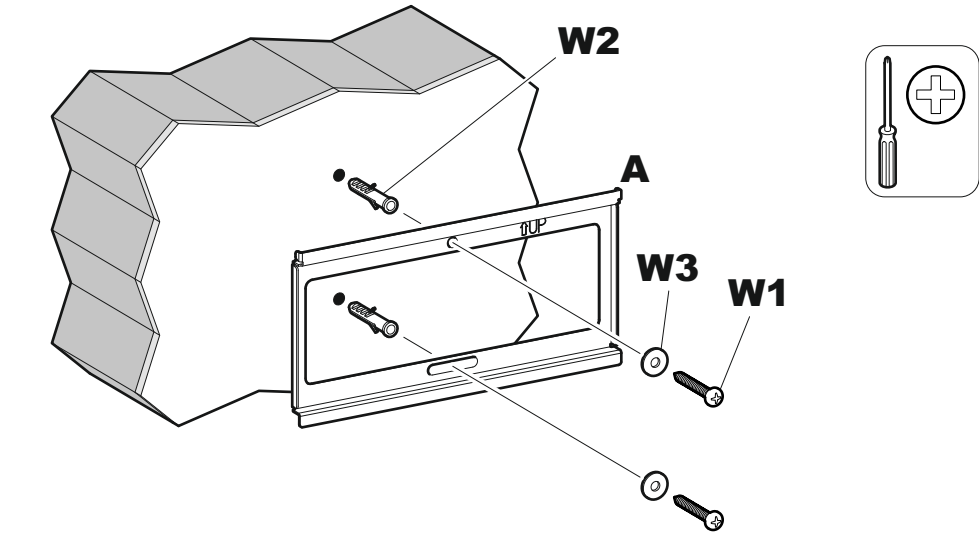

Remove dust from hole






Tighten with hand tools only





Lubricate screw thread with soap


5 Wood Stud




Get it right with our easy to use online TV Height Calculator at myTVMount.com

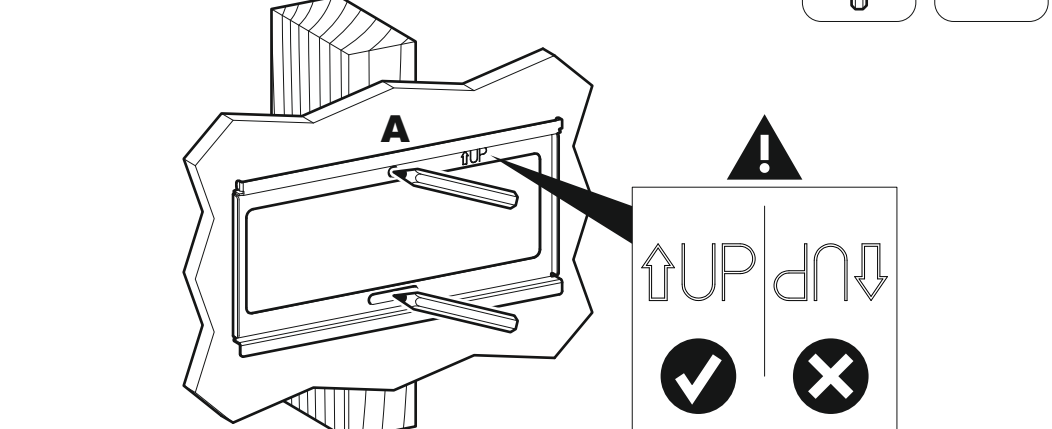

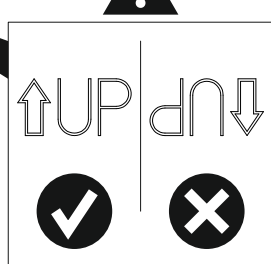

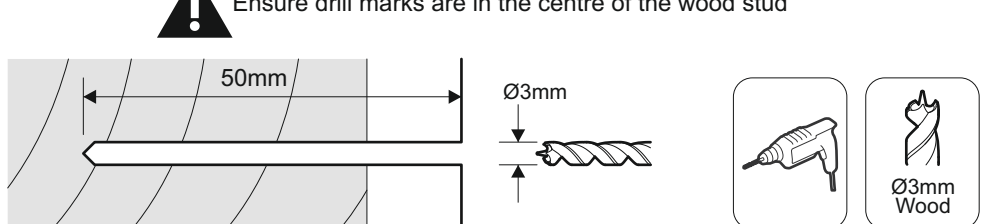

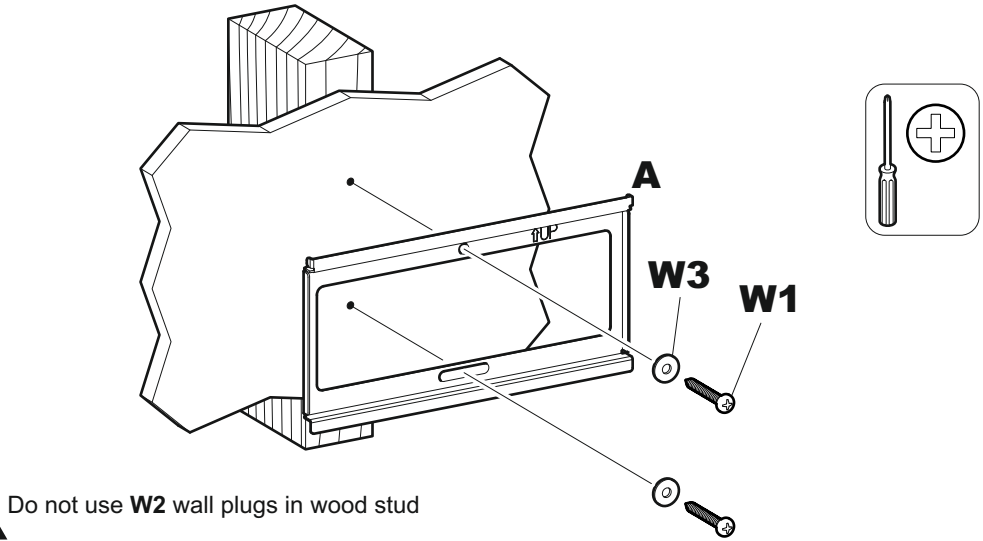

Ensure drill marks are in the centre of the wood stud






Do not use **W2** wall plugs in wood stud



Tighten with hand tools only



Lubricate screw thread with soap