

④



## Tools Recommended












**IF YOU ARE IN ANY DOUBT, CONSULT A QUALIFIED CONTRACTOR**


Retain all packaging in case the bracket needs to be returned.  
Contents may vary from photograph/illustrations.  
You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.  
This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.  
This product is sold as a home DIY product and as such, it is the responsibility of the installer to ensure the product is correctly installed.  
The responsibility of the installer to ensure that the mounting wall is of a suitable standard and avoid of any services (eg gas, electricity, water etc).  
TESCO accept no responsibility for any damage or loss caused by installing this product in a substandard wall.  
Periodically check all nuts and bolts are tight.




B1

V

	<b>C1</b> x4	M4 12mm
	<b>C2</b> x4	M4 30mm
	<b>C3</b> x4	M6 12mm
	<b>C4</b> x4	M6 30mm
	<b>C5</b> x4	M8 12mm
	<b>D</b> x8	
	<b>E1</b> x4	M5
	<b>E2</b> x4	M6
	<b>F</b> x2	
	<b>G</b> x2	M6
	<b>H</b>	(for solid x



**F** x2



8x D



M4 12mm

M4 30mm

M6 12mm

M6 30mm

M8 12mm

18 30mm

5x4 6x4

t

4

4

●

C1 x4

**466321 rev00**


A technical line drawing of a TV mounting bracket. It consists of a main vertical plate with multiple mounting holes and a horizontal adjustable arm. The arm has two positions: 'UP' (tilted upwards) and 'DOWN' (tilted downwards). The drawing shows the arm in the 'UP' position. The main plate has a large oval cutout at the top and several circular holes below. The arm has a central circular hole and a slot for a locking pin. The 'UP' and 'DOWN' labels are printed on the arm.

**STOP**



Read the operating instructions and keep them in a safe place.  
If you have any questions about this product or issues with installation  
contact the help line before returning this product to the store.

**Help Line: 0333 320 8027**

 Monday - Thursday 08:30 - 17:00 Friday 08:30 - 16:00  
Calls charged at local rate

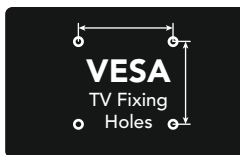


  50 x 50mm, 75 x 75mm,  
100 x 100mm, 100 x 200mm,  
200 x 100mm, 200 x 200mm

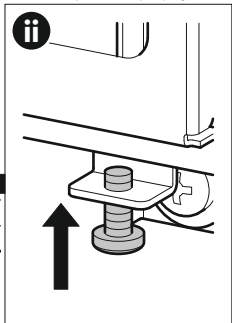


## Optional

 You can slide your TV horizontally by small amounts if required

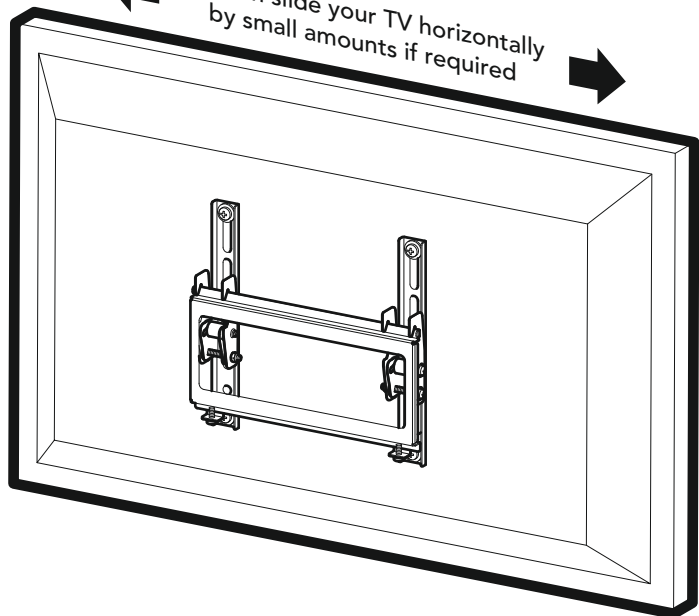


Lock tilt

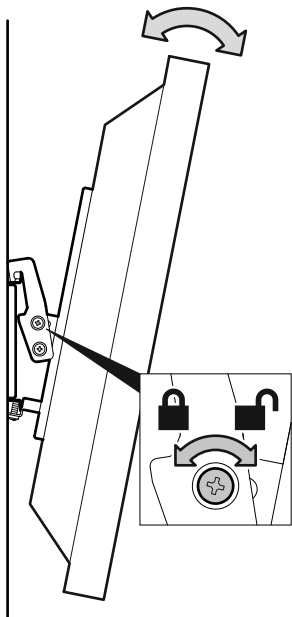 



2 Deciding the correct screw and spacer combination



 When deciding which screw diameter and length is suitable for your TV it is important to **STOP** immediately as soon as you feel any resistance to prevent damage to your TV

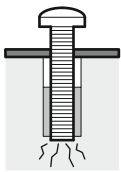

  
You are provided with 3 diameters of TV fixing screws, **M4**, **M6** and **M8**. Determine the screw diameter that fits and remember for the next step

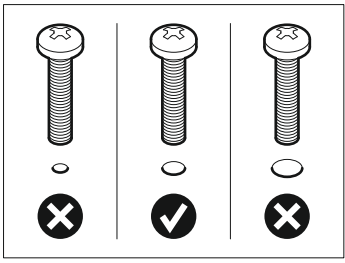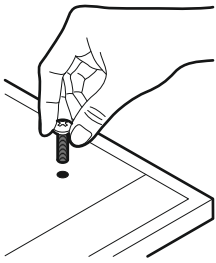


Do I need to use spacers **D**?

Spacers are provided so that you can achieve the correct fit between the back of your TV and Mounting Plate, please see below for examples of when spacers are required

 
**No**  
TV has flat back and flush fixing holes

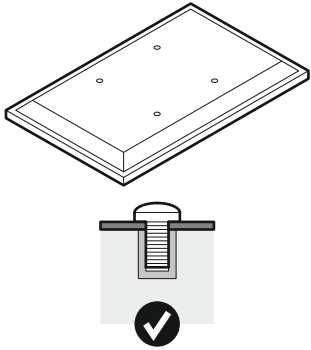


 
**Maybe**  
TV has flat back with recessed fixing holes

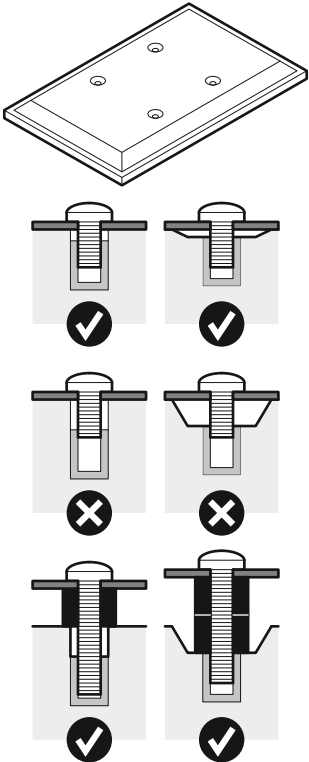

 **Yes**  
TV has irregular or obstructed back

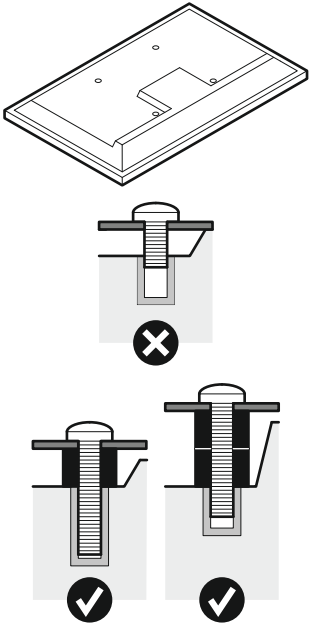





3 Fitting the TV Brackets

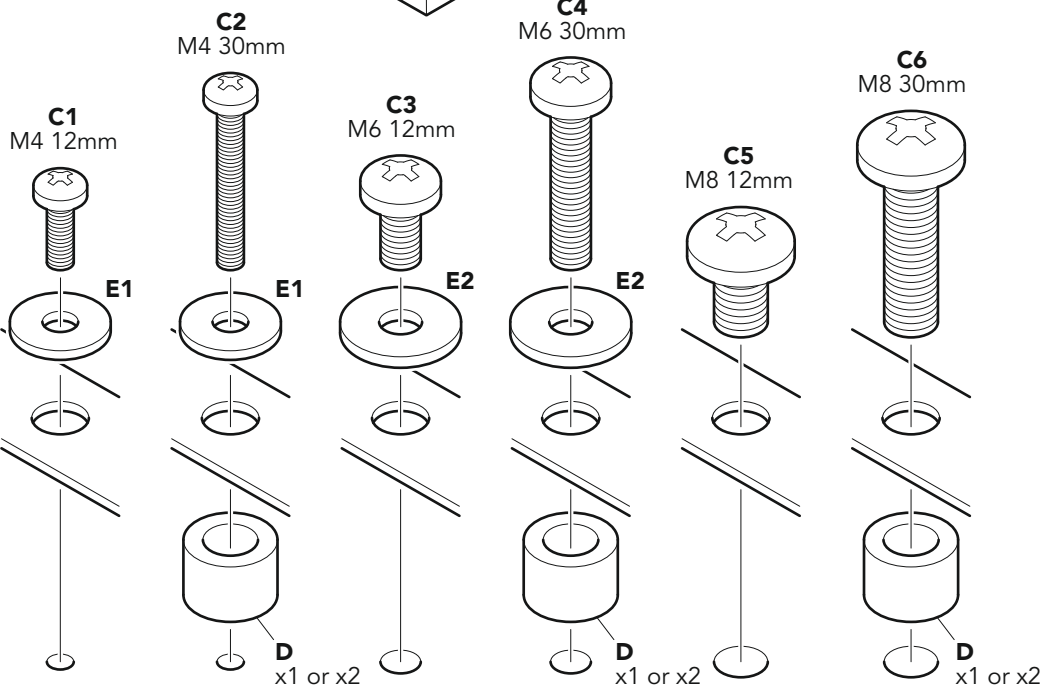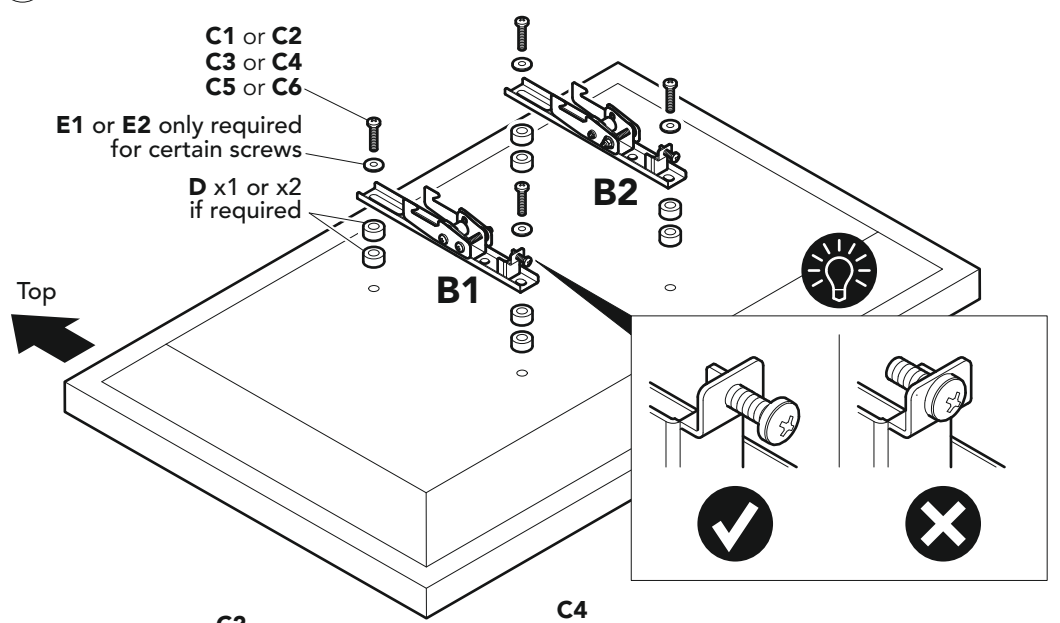  





Attach the bracket to the back of your TV using a suitable combination of screw, washer and spacer combinations. **DO NOT OVERTIGHTEN!**

After completing step 3 you will have fittings left over, please keep in a safe place for future reference

    4 Solid Wall

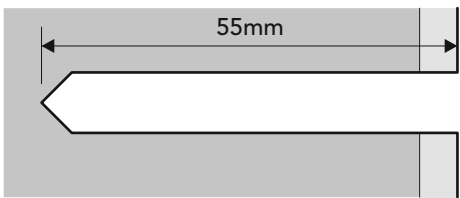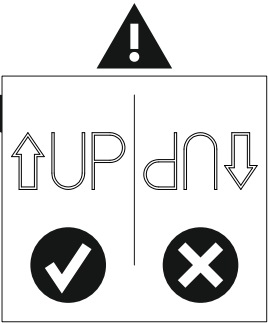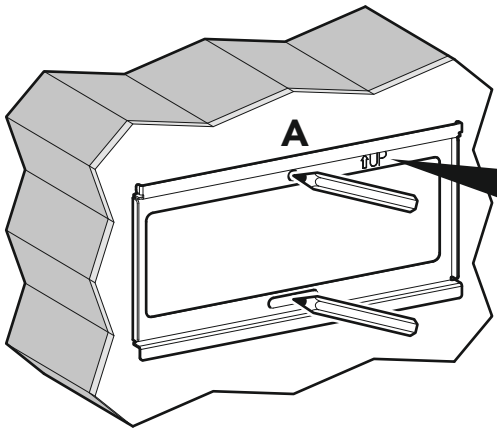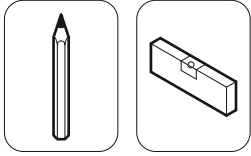

Remove dust from hole

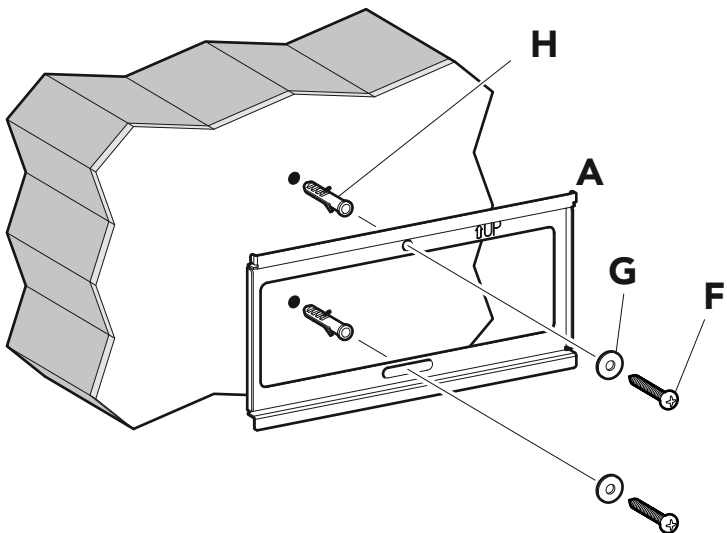  
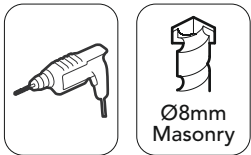 
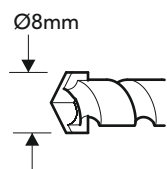 


Tighten with hand tools only







Lubricate screw thread with soap

   4 Wood Stud

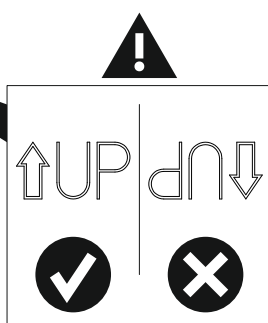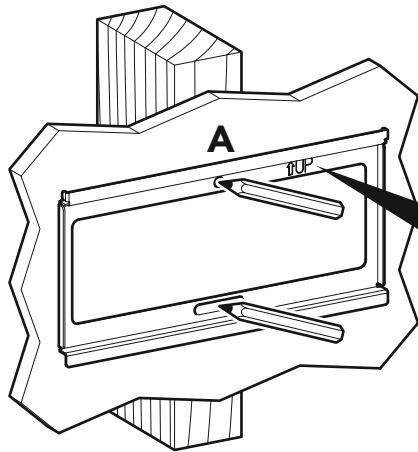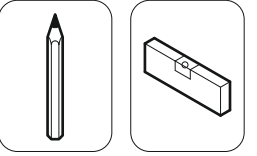

    Ensure drill marks are in the centre of the wood stud

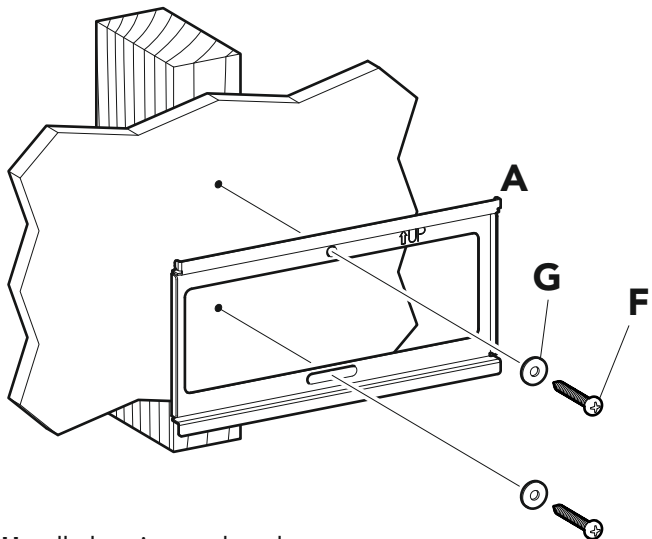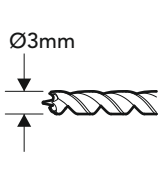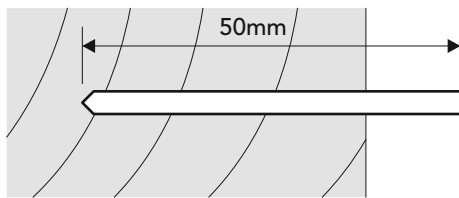

Do not use **H** wall plugs in wood stud

Tighten with hand tools only



Lubricate screw thread with soap