
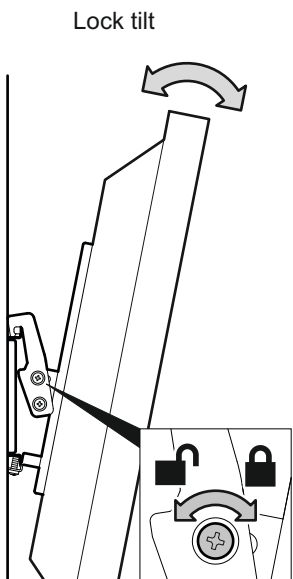
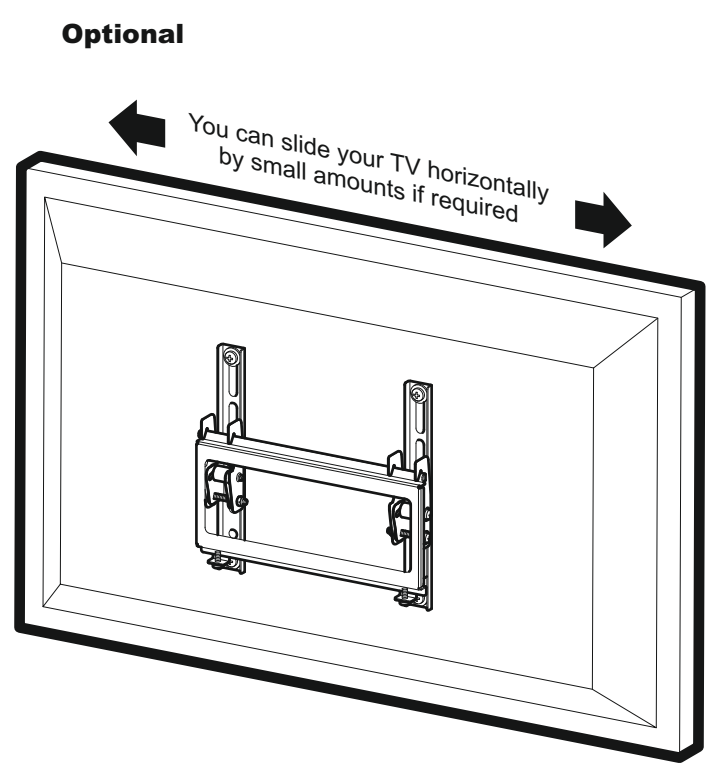



5 Connect TV

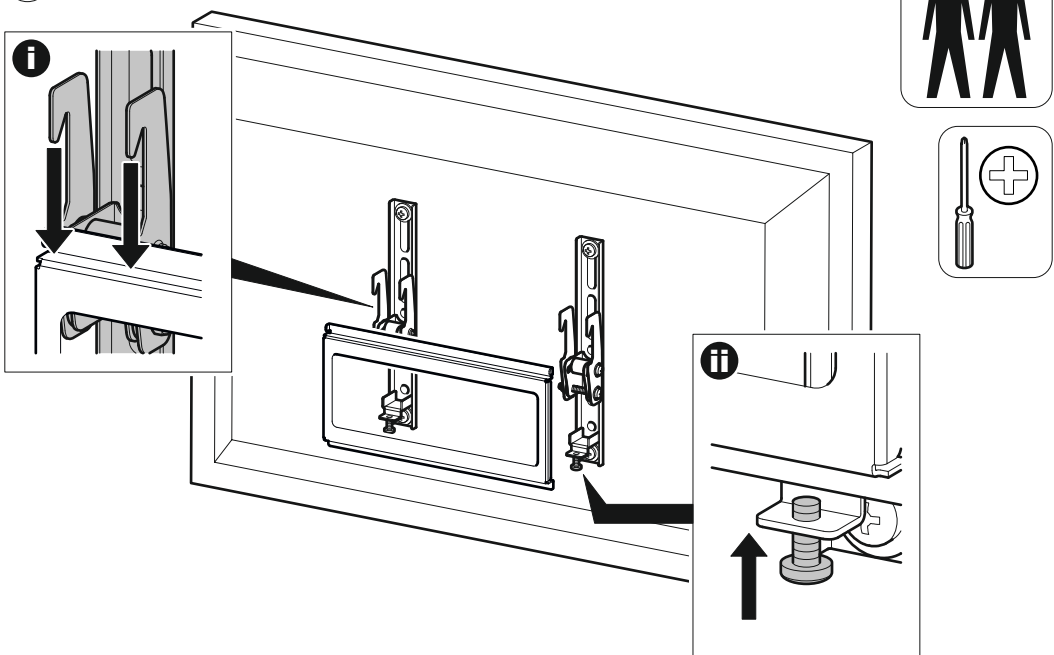

TC2

466321 rev03

TESCO

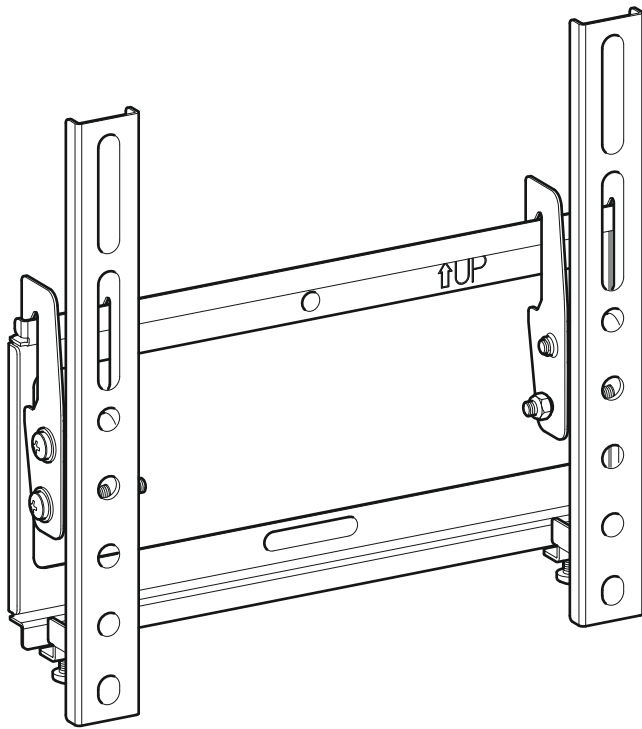

STOP

Read the operating instructions and keep them in a safe place. If you have any questions about this product or issues with installation contact the help line before returning this product to the store.

Installation video guide and TV Height Calculator tool at myTVmount.com

Help Line: **0333 320 8027**

Monday - Thursday 08:30 - 17:00 Friday 08:30 - 16:00
Calls charged at local rate



50 x 50mm, 75 x 75mm,
100 x 100mm, 100 x 200mm,
200 x 100mm, 200 x 200mm





Retain all packaging in case the bracket needs to be returned.
Contents may vary from photography/illustrations.
You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.
This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.
This product is sold as a home DIY product and as such, it is the responsibility of the installer to ensure the product is correctly installed.
It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).
TESCO accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.
Periodically check all nuts and bolts are tight.

IF YOU ARE IN ANY DOUBT, CONSULT A QUALIFIED CONTRACTOR

Tools Recommended



Box Contents

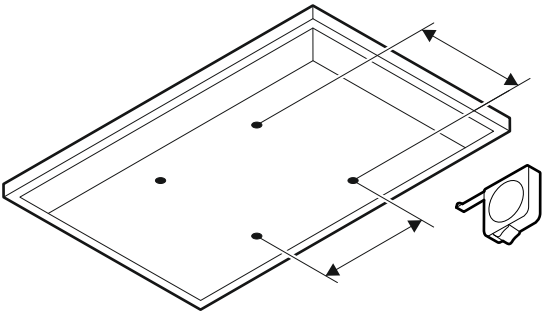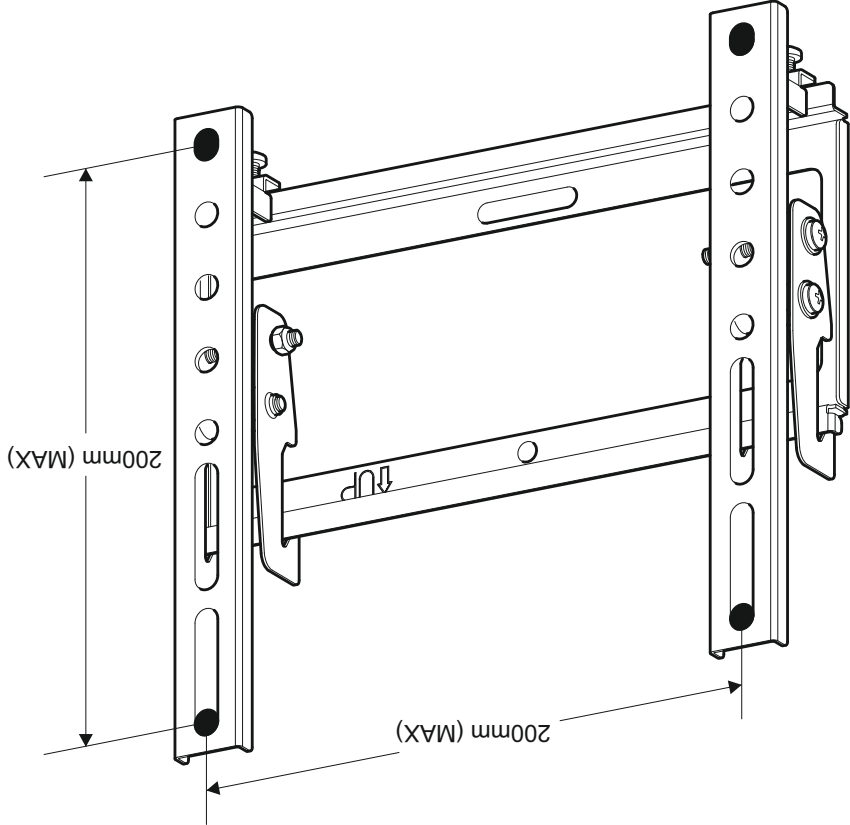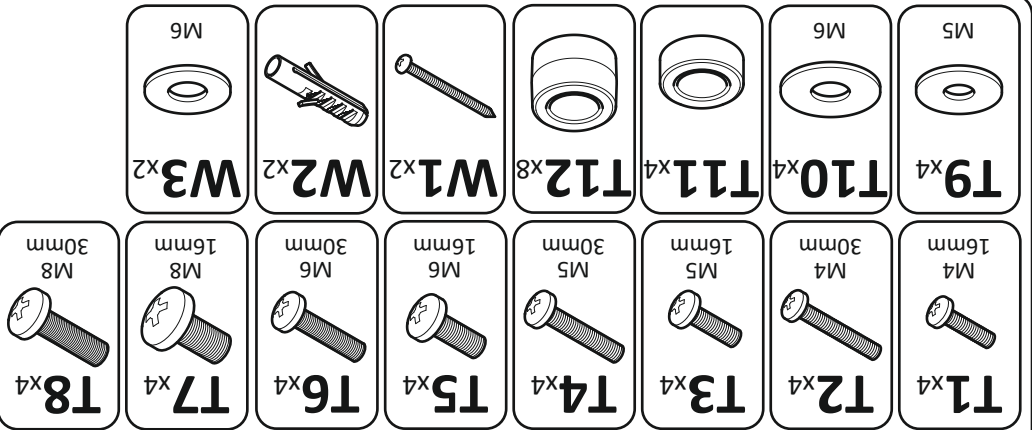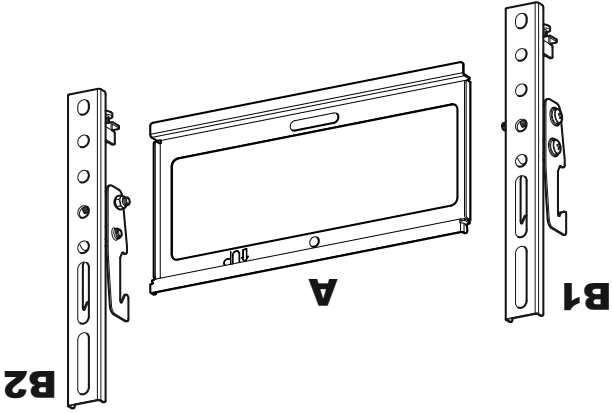

1 Measure the TV fixing holes


Your TV mount fits the following TV fixing sizes

50 x 50mm, 75 x 75mm,
100 x 100mm, 100 x 200mm,
200 x 100mm, 200 x 200mm



2 Deciding the correct screw and spacer combination



When deciding which screw diameter and length is suitable for your TV it is important to **STOP** immediately as soon as you feel any resistance to prevent damage to your TV

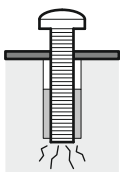



You are provided with 4 diameters of TV fixing screws, **M4, M5, M6** and **M8**. Determine the screw diameter that fits and remember for the next step

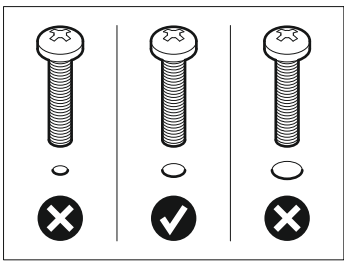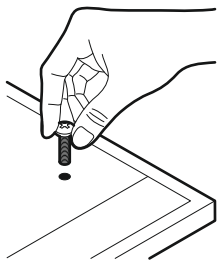





Do I need to use spacers T11 or T12 ?

Spacers are provided so that you can achieve the correct fit between the back of your TV and Mounting Plate, please see below for examples of when spacers are required




No
TV has flat back and flush fixing holes

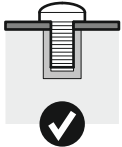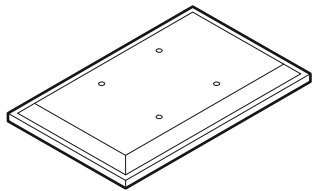

Maybe
TV has flat back with recessed fixing holes

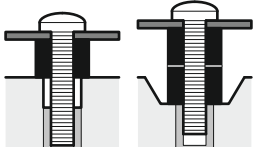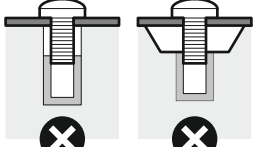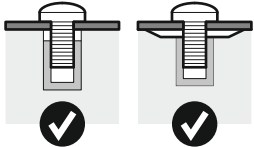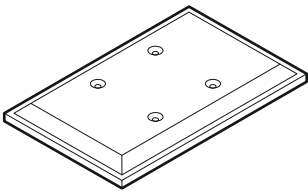







Yes
TV has irregular or obstructed back

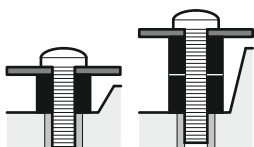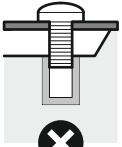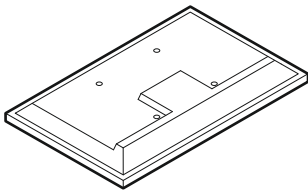



4 Solid Wall



Get it right with our easy to use online TV Height Calculator at myTVMount.com

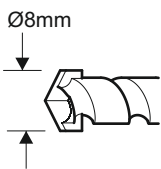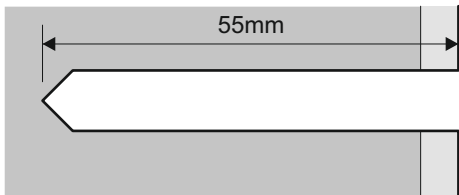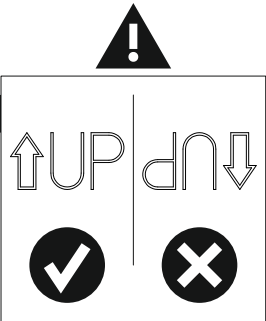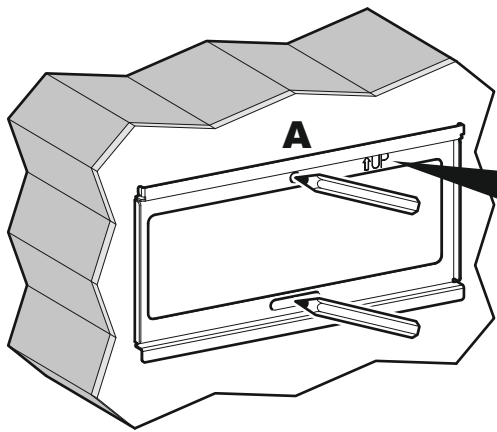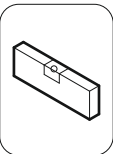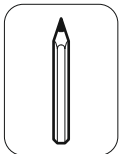

Remove dust from hole

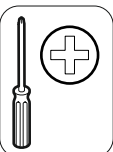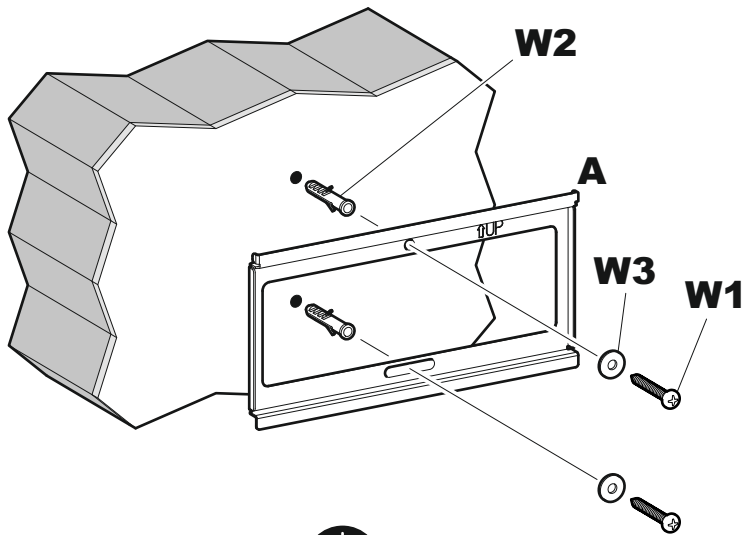

Tighten with hand tools only




Lubricate screw thread with soap

3 Fitting the TV Brackets




Get it right with our easy to use online TV Height Calculator at myTVMount.com

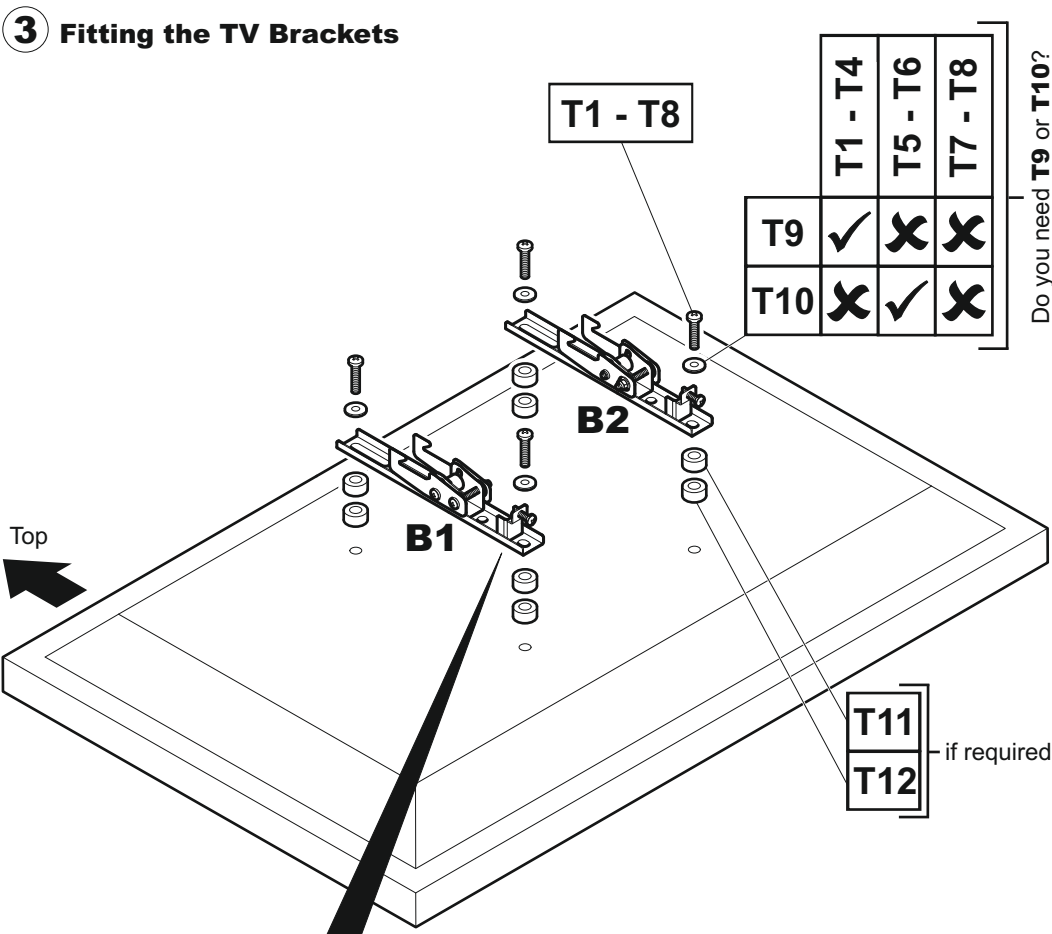

	T1 - T4	T5 - T6	T7 - T8
T9	✓	✗	✗
T10	✗	✓	✗

Do you need T9 or T10?

T11
T12
if required

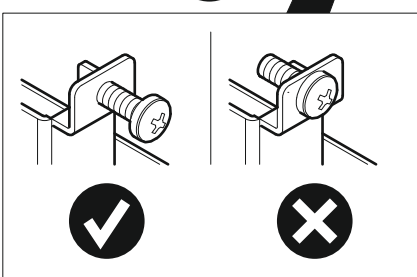

Attach the bracket to the back of your TV using a suitable combination of screw, washer and spacer combinations. **DO NOT OVERTIGHTEN!**







After completing step 3 you will have fittings left over, please keep in a safe place for future reference





4 Wood Stud



Get it right with our easy to use online TV Height Calculator at myTVMount.com

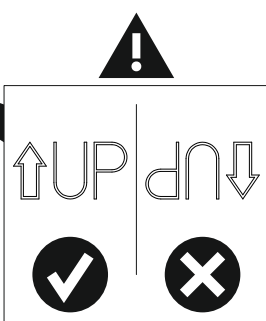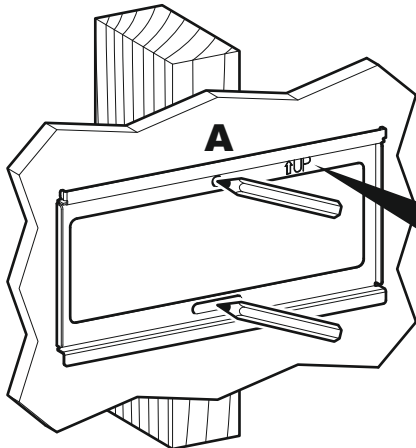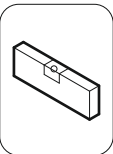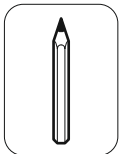

Ensure drill marks are in the centre of the wood stud

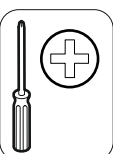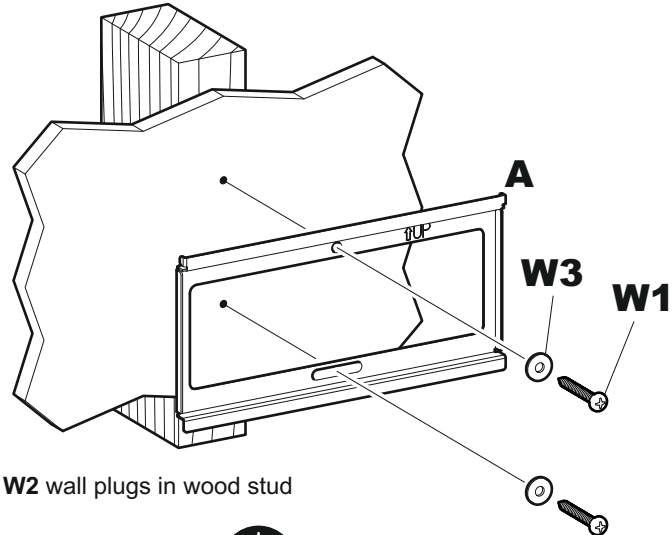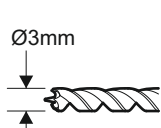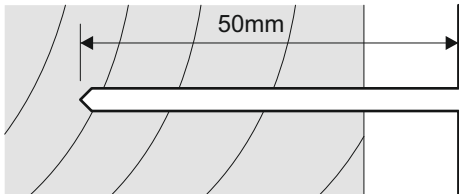

Do not use W2 wall plugs in wood stud



Tighten with hand tools only



Lubricate screw thread with soap