 


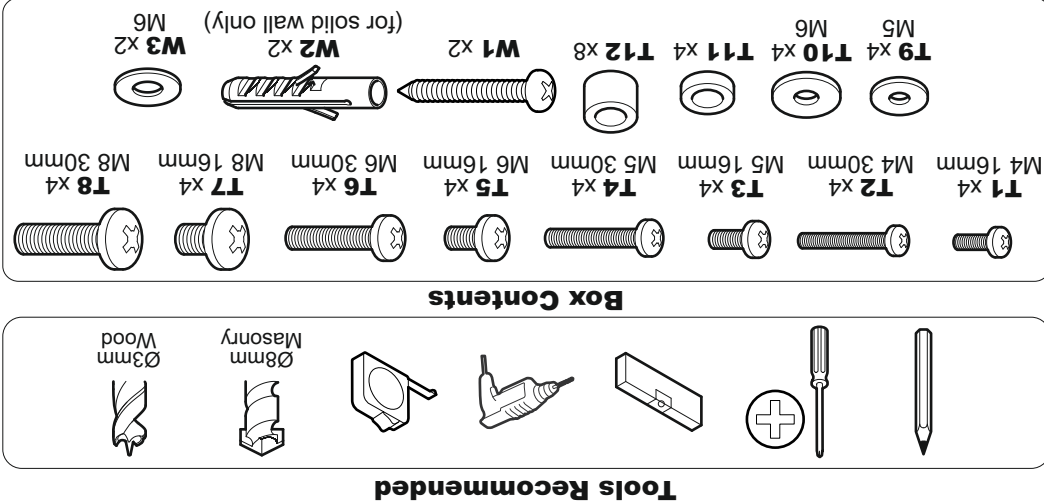


6 Connect TV

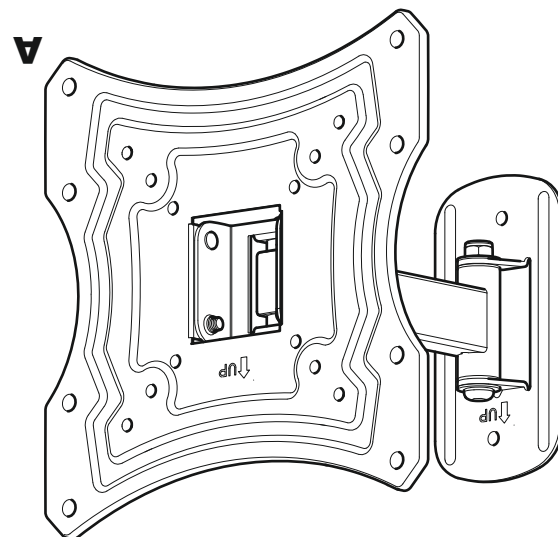

Lock tilt

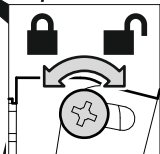


IF YOU ARE IN ANY DOUBT, CONSULT A QUALIFIED CONTRACTOR

Retain all packaging in case the bracket needs to be returned.
Contents may vary from photograph/illustrations.
You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.
This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.
This product is sold as a home DIY product and as such, it is the responsibility of the installer to ensure the product is correctly installed.
It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).
TESCO accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.
Periodically check all nuts and bolts are tight.

TC3

466323 rev03

TESCO

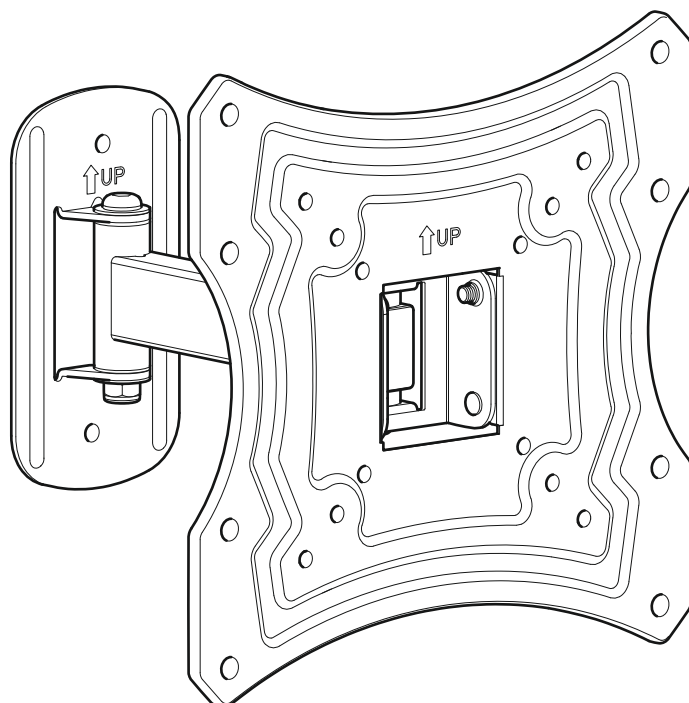

STOP


Read the operating instructions and keep them in a safe place.
If you have any questions about this product or issues with installation
contact the help line before returning this product to the store.

Help Line: **0333 320 8027**

Monday - Thursday 08:30 - 17:00 Friday 08:30 - 16:00
Calls charged at local rate




39" MAX

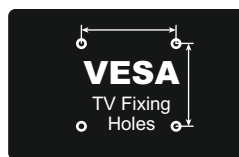

75 x 75mm
100 x 100mm
200 x 100mm
200 x 200mm


3 Deciding the correct screw and spacer combination

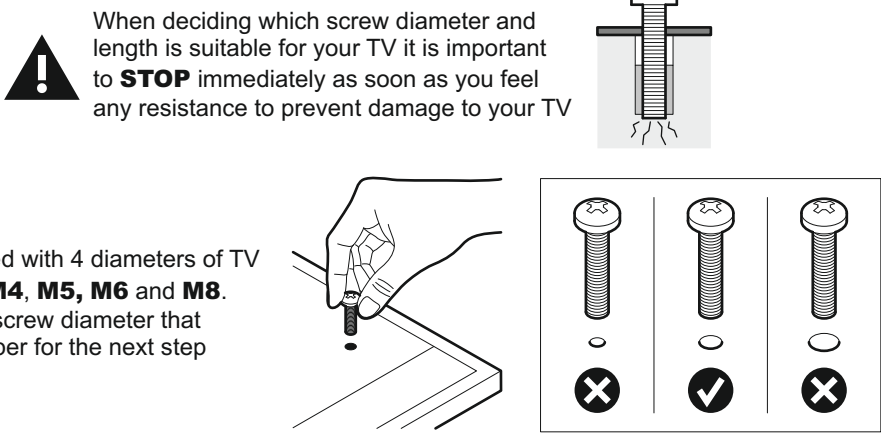




You are provided with 4 diameters of TV fixing screws, **M4, M5, M6** and **M8**. Determine the screw diameter that fits and remember for the next step

Do I need to use spacers **T11** or **T12** ?


Spacers are provided so that you can achieve the correct fit between the back of your TV and Mounting Plate, please see below for examples of when spacers are required

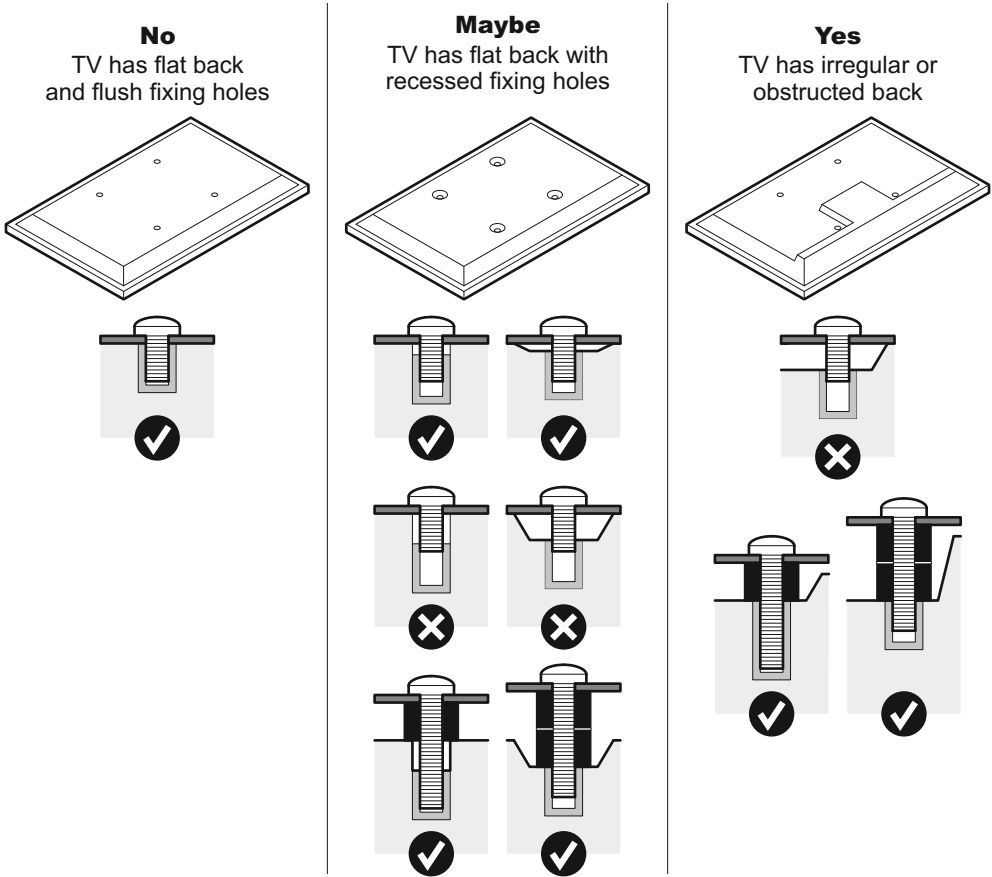

4 Fitting the TV Mounting Plate

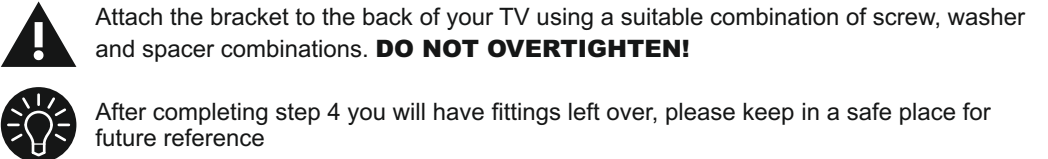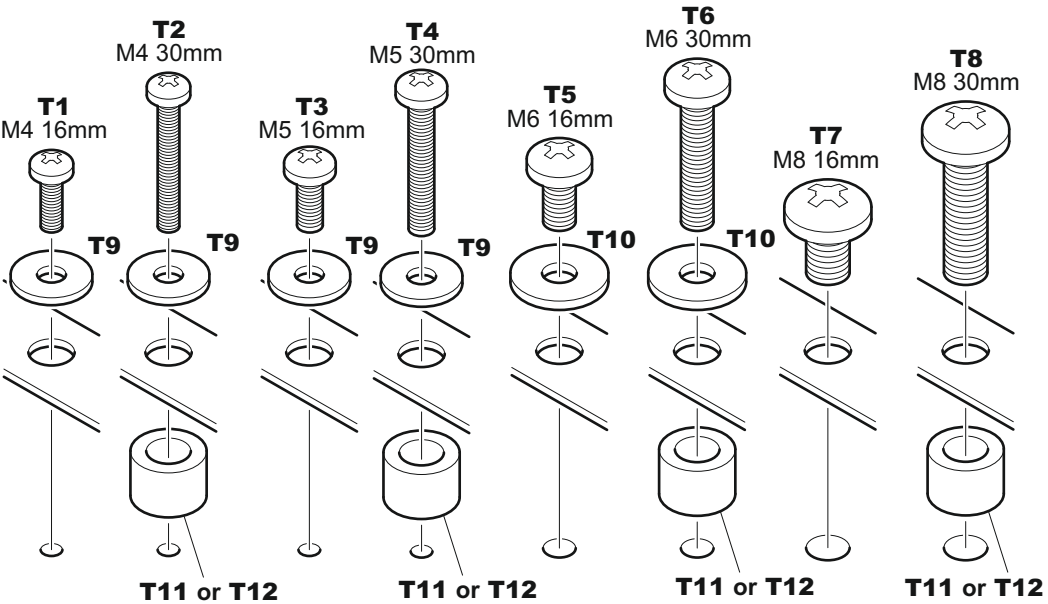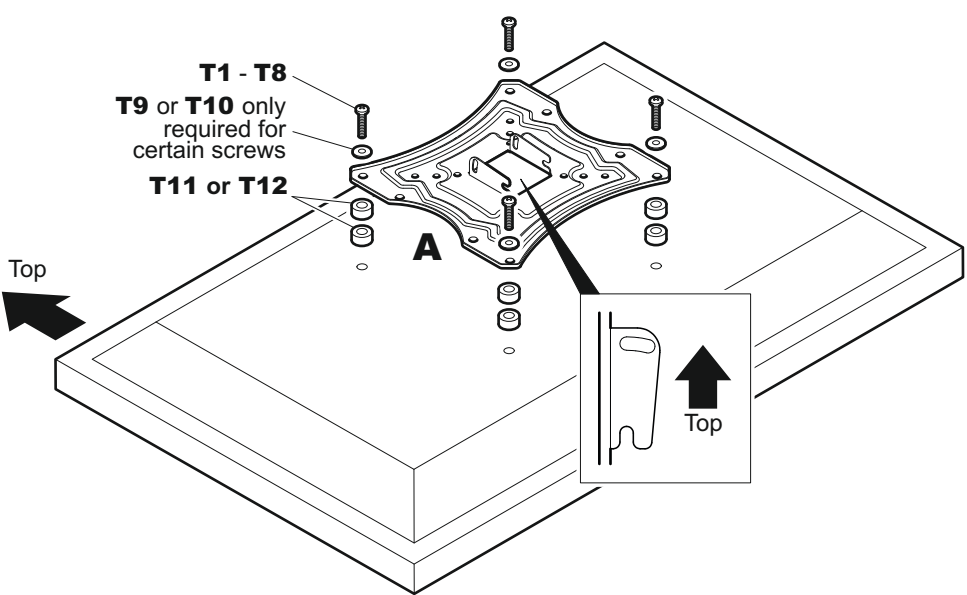

5 Solid Wall

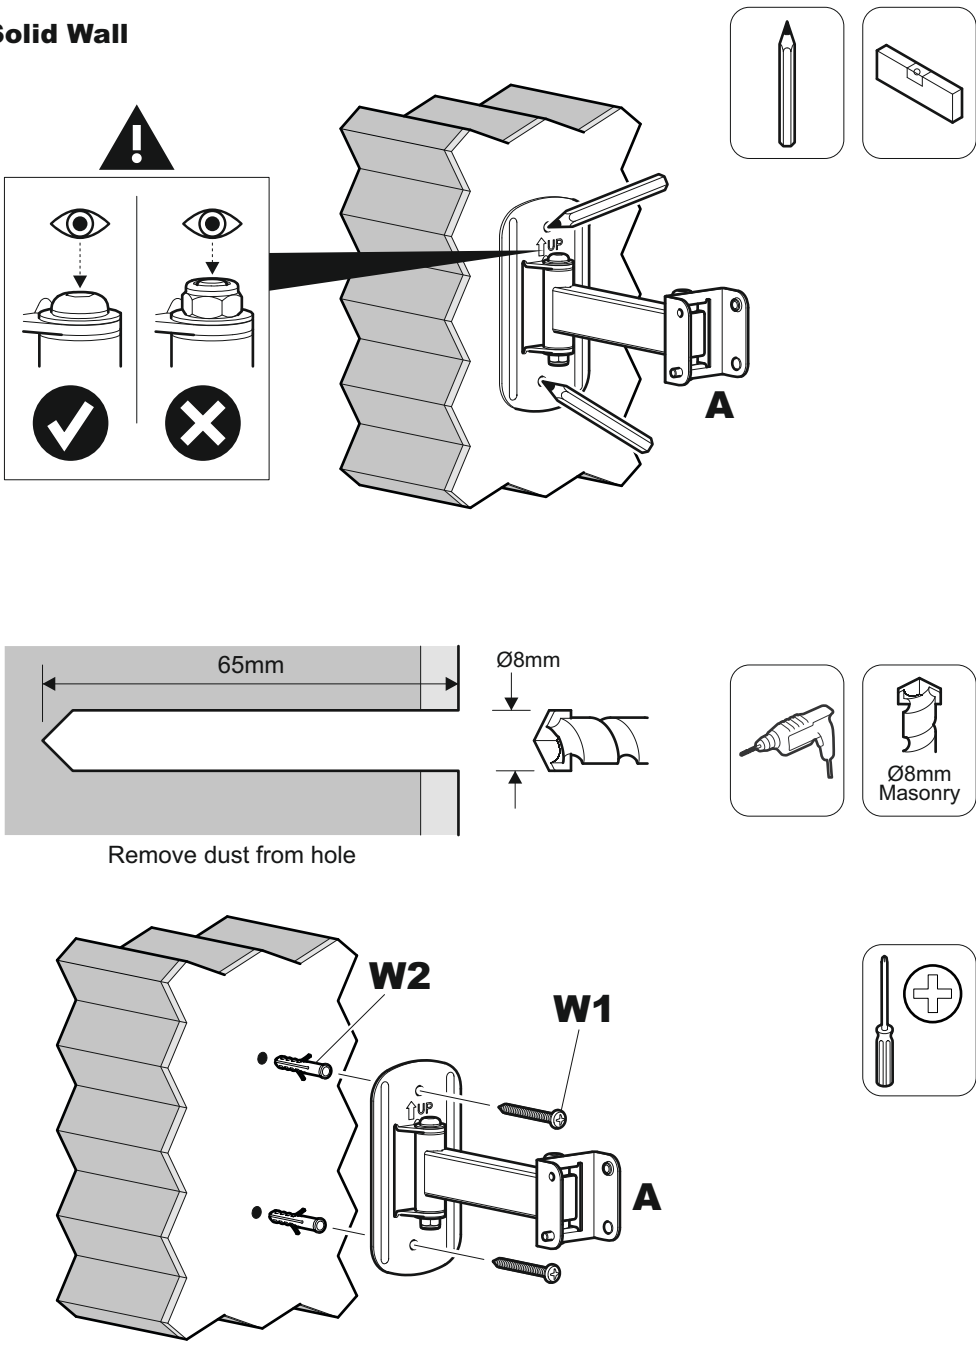

5 Wood Stud

