

466324 rev01

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/ Illustrations.

You will not need all these parts, so expect there to be some left over depending upon the

This product is intended for indoor use only. Use of this product outdoors could lead to failure and specification of your TV.

personal injury.

This product is sold as a home DIY product and as such, it is the responsibility of the installer to

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and ensure the product is correctly installed.

void of any services (eg gas, electricity, water etc).

TESCO accept no responsibility for any damage or loss caused by installing this product in a sub

standard wall.

15


00

Periodically check all nuts and bolts are tight.

۱۱

15

Tools Recommended ΙΕ ΥΟυ ΑRE ΙΝ ΑΝΥ DOUBT, CONSULT Α QUALIFIED CONTRACTOR

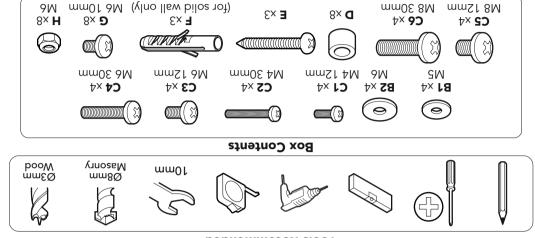

keep for step 5

Remove and

Ð

Ð


keep for step 3

(1) Prepare TV Bracket

рив эчотэЯ

⋓

0

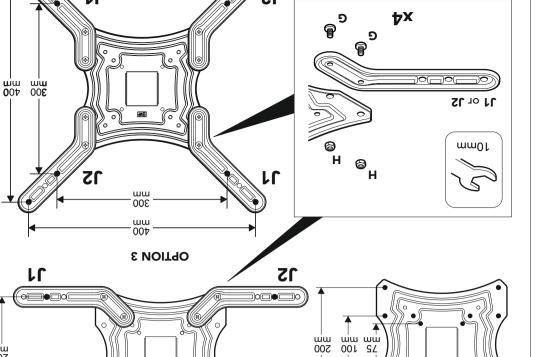

۱۱

Use the option that fits your TV fixing sizes

15

۱۱


4ni)

աա 1007

2 NOIT90

աա Տ00

15

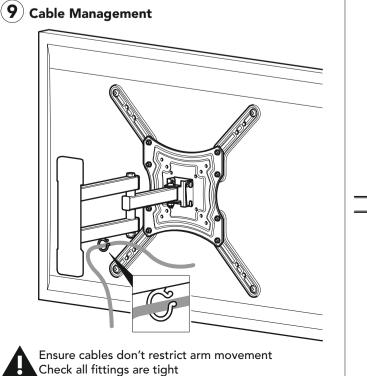

Lock tilt

4n.l

աա ՏՀ

աա

100

աա Տ00

۲ NOIT9O

mm004 × 004 ,mm005 × 005

mm005 x 002 ,mm001 x 005 ,mm001 x 001 ,mm27 x 27

S NOIT90

2 NOIT90

1 NOIT90

TC6

mm005 x 004

(3) Prepare the TV mounting plate

Your TV mount fits the following TV tixing sizes

(2) Measure the TV fixing holes

Read the operating instructions and keep them in a safe place. If you have any questions about this product or issues with installation contact the help line before returning this product to the store.

Help Line: 0333 320 8027

Monday - Thursday 08:30 - 17:00 Friday 08:30 - 16:00 Calls charged at local rate



VESA TV Fixing Holes

75 x 75mm 100 x 100mm, 200 x 100mm 200 x 200mm, 300 x 300mm 400 x 200mm, 400 x 400mm

