 


jl.avfgroup.com

466525 rev03

JNL202

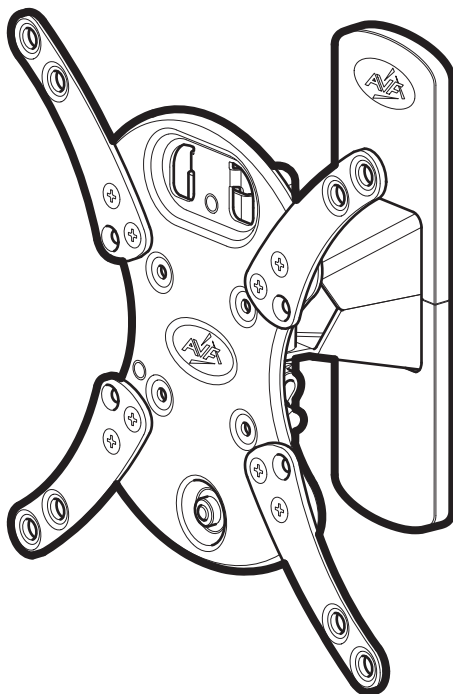

20 kg
44 lb

STOP

Read through **ALL** instructions before commencing installation.

 
If you have any questions about this product or issues with installation, contact the customer services helpline before returning this product to the store.

CUSTOMER SERVICES HELP LINE NUMBER: 0333 320 0463


AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England

Assembly Overview


Fit the TV Mounting Plate

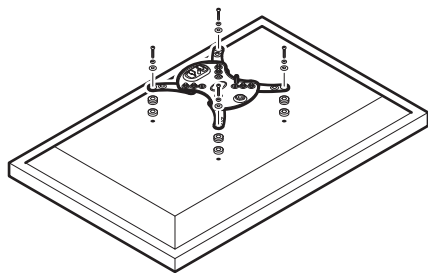


Fit the Wall Bracket

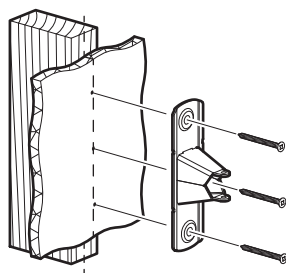 

Connect the TV

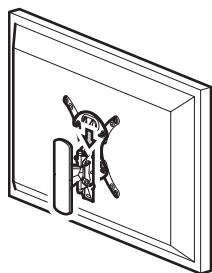 

Suitable Wall Types

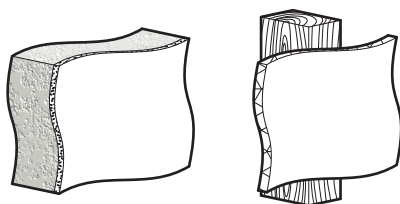 


Tools Recommended








Stud Finder



 Ø10mm (25/64")
Masonry

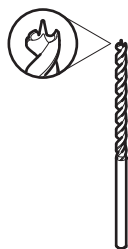

Ø3mm (1/8")
Wood

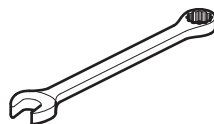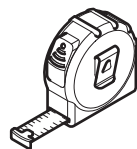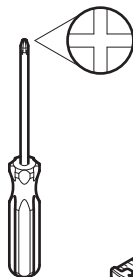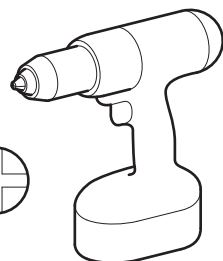     

Index

1 Measure the TV fixing holes Width and Height

2 Preparing the TV Mounting Plate

3 Fitting the TV Mounting Plate

4 Fitting the Wall Bracket

5 Assemble the Bracket

6 Fitting the Wall Covers

7 Connecting the TV

Retain all packaging in case the product needs to be returned.

Contents may vary from photography / illustrations.

 
You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a substandard wall.


Boxed Parts

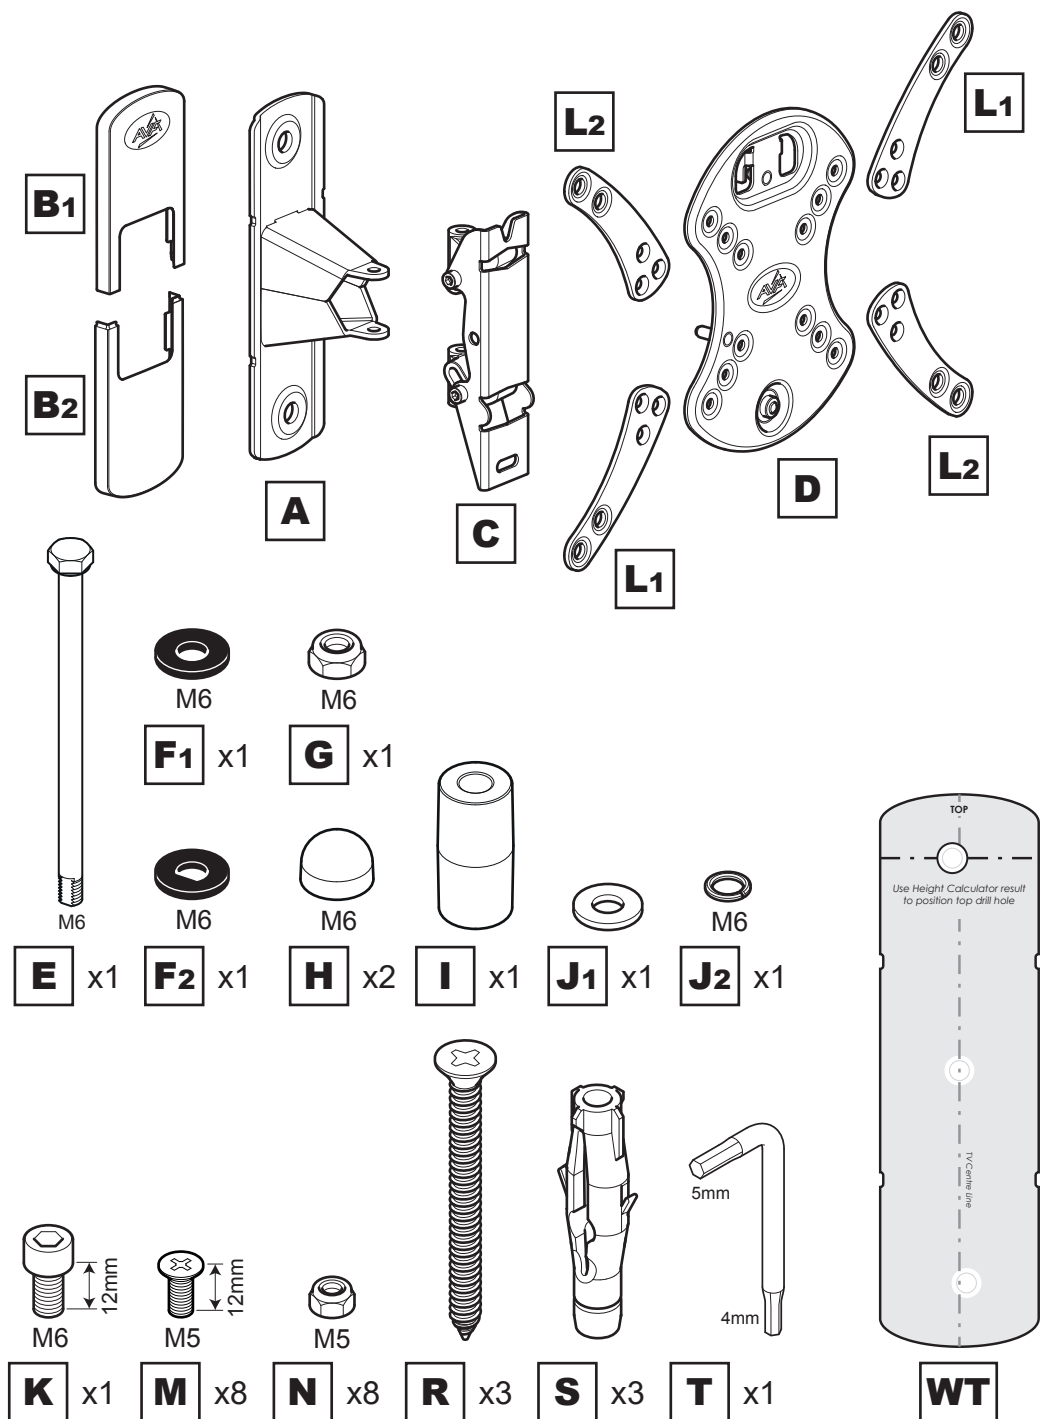


TV Screws, Reducers and Spacers



 O1 x4 **O2** x4 **P1** x4 **P2** x4




M4

 


M4



 
M5




M5

 


M6

 

M6

 


M8

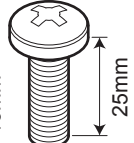 


M8

Q1 x4 **Q2** x4 **Q3** x4 **Q4** x4 **Q5** x4 **Q6** x4 **Q7** x4 **Q8** x4

 1 Measure the TV fixing holes Width and Height

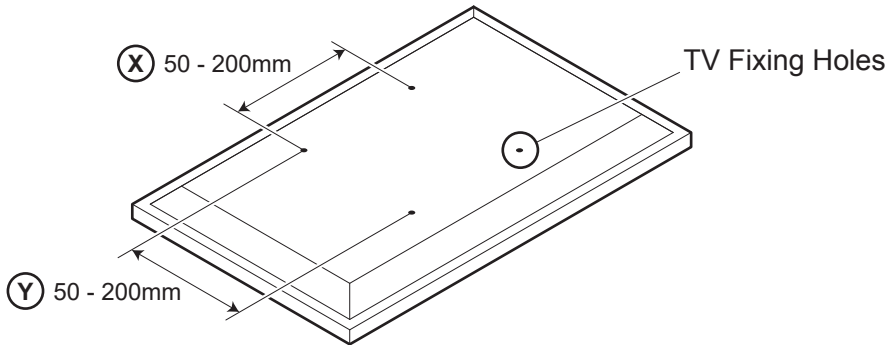

 If width (X) is greater than 200mm or height (Y) greater than 200mm
STOP installation now and contact the customer help line.

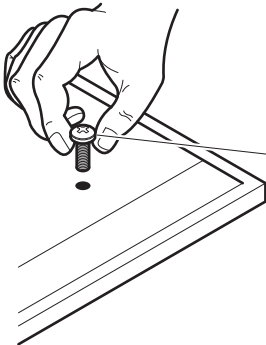

M4 = Q1/Q2

M5 = Q3/Q4

M6 = Q5/Q6

M8 = Q7/Q8

You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**.
Determine the screw diameter that fits and remember for step 3

2 Preparing the TV Mounting Plate

Use the option that fits your TV

OPTION 1

- (X) 50mm x (Y) 50mm
- (X) 75mm x (Y) 75mm
- (X) 100mm x (Y) 100mm

OPTION 2


- (X) 100mm x (Y) 200mm
- (X) 200mm x (Y) 100mm

OPTION 3

- (X) 200mm x (Y) 200mm



If in any doubt please call the customer helpline

 OPTION 1

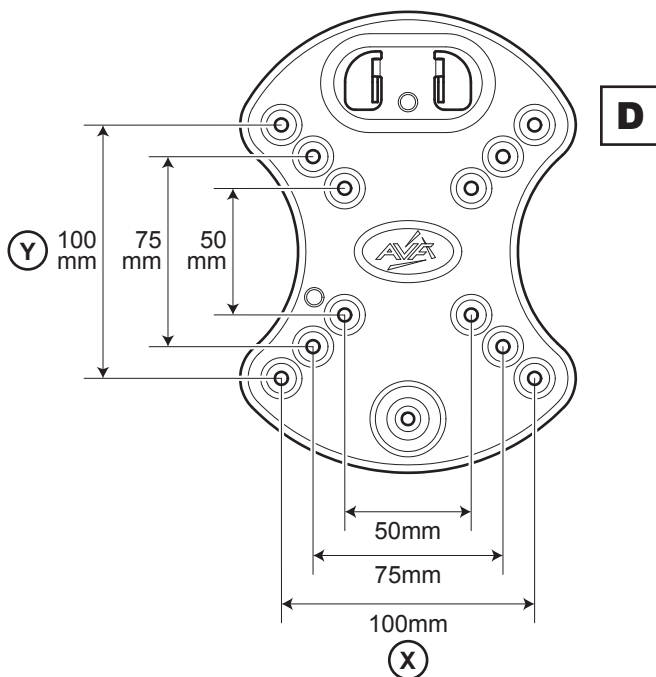


If your TV fixing holes match any of the sizes shown above you will not need to use any adaptors. Please go to step 3.

  OPTION 2

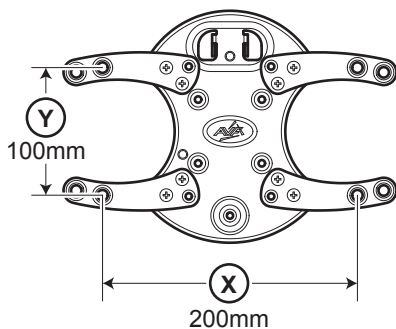
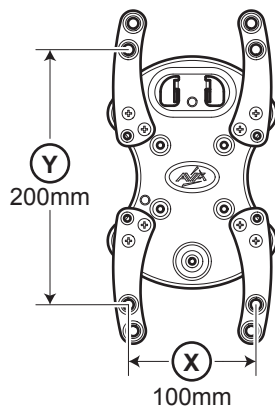


OPTION 3

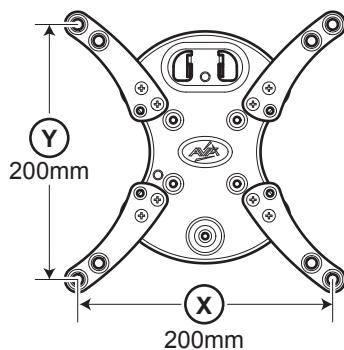 

Example shown is 200 x 200 fixings

  Top

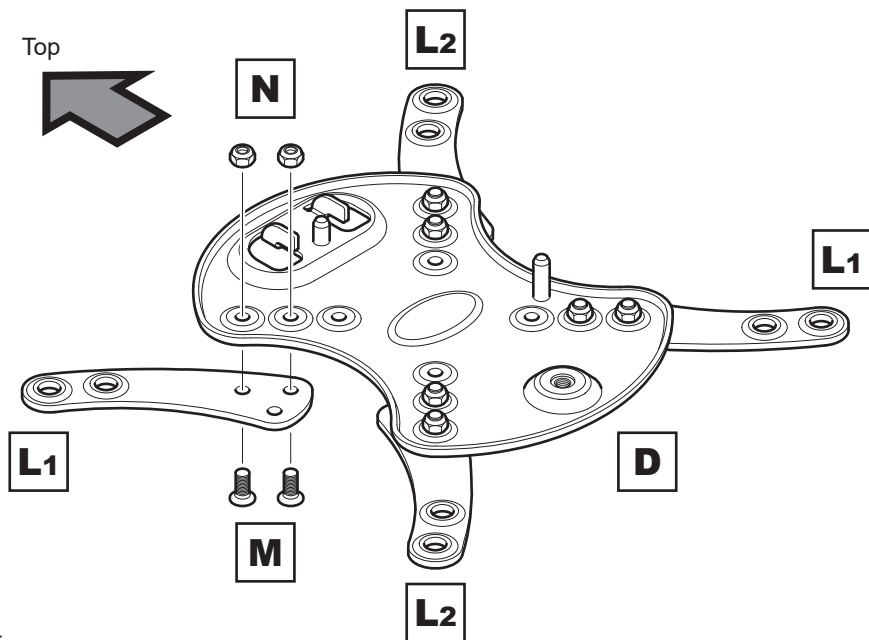


M x8 **N** x8

3 Fitting the TV Mounting Plate


No Spacers

 For TVs with flat / unobstructed back.




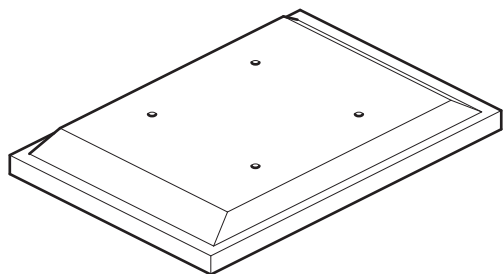


Spacers **P1/P2**

 For TVs with irregular / obstructed back.

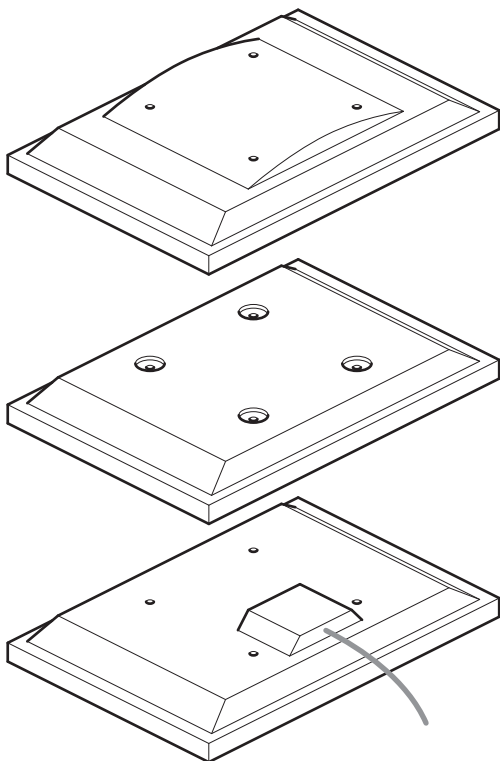


WARNING

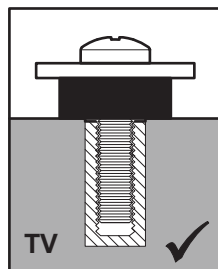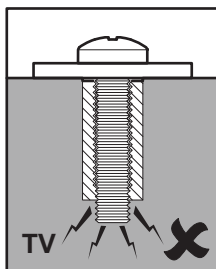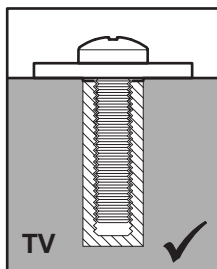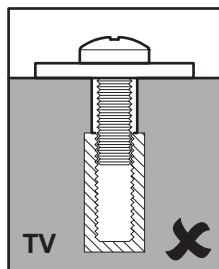    


After completing step3 you will have fixings left over, please keep for future reference

 OPTION 1


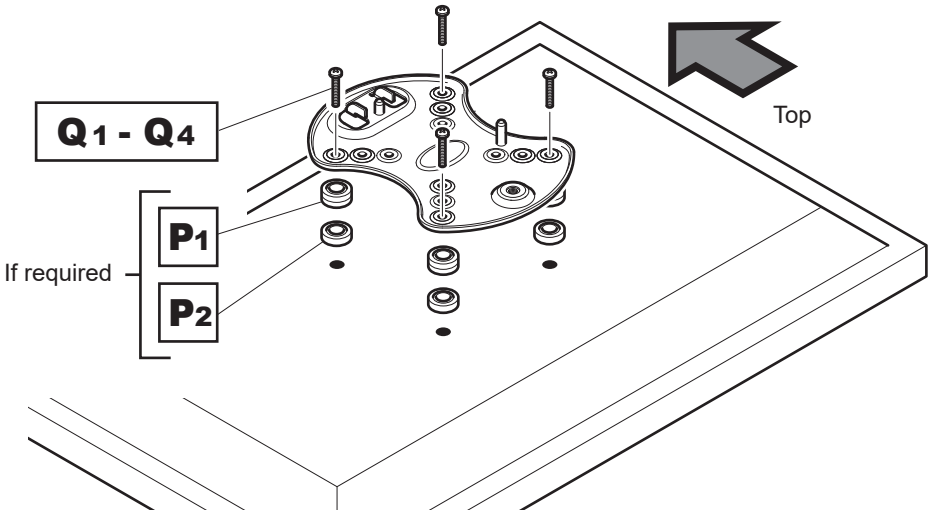


OPTION 2 & 3

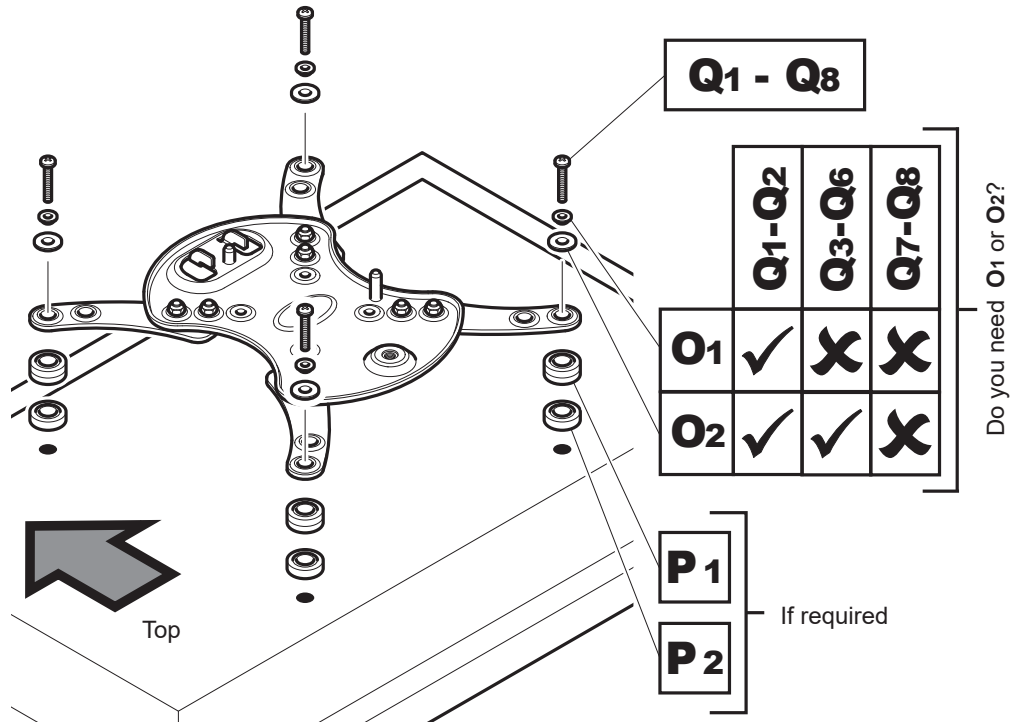 




4 Fitting the Wall Bracket

  Solid Wall

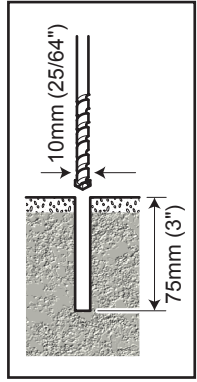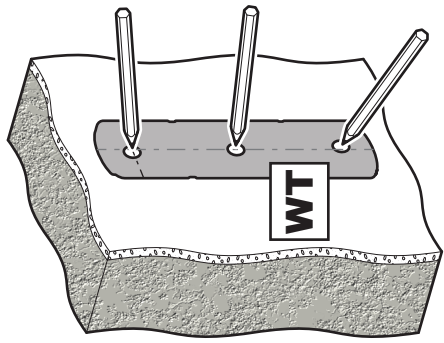



Remove Dust from Hole.

   Wood Stud

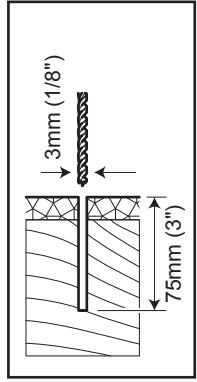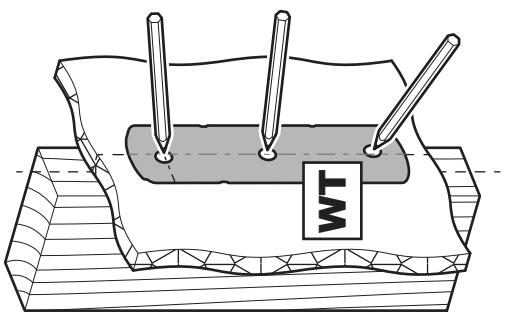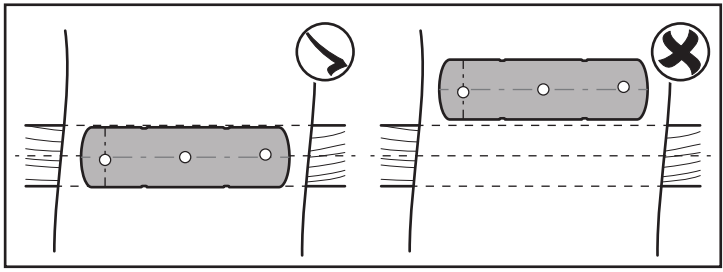


  Ensure bracket is in the centre of the wood stud



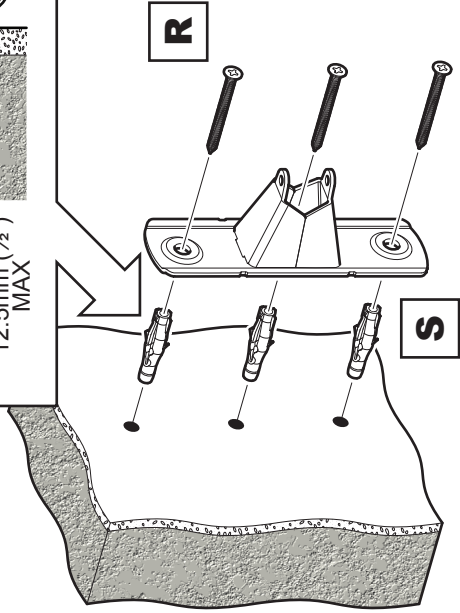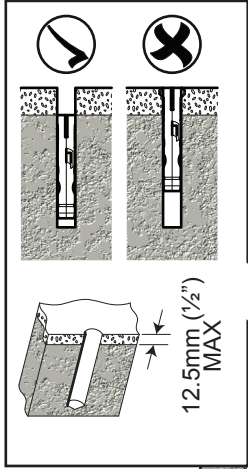

R x3

 


S x3



Lubricate screw thread with soap.



 DO NOT overtighten screws.
Tighten screws by hand only.

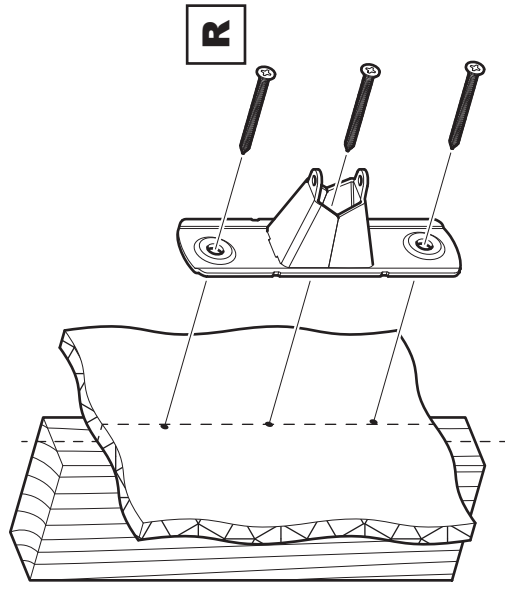

R x3

 
 


Lubricate screw thread with soap.




DO NOT overtighten screws.
Tighten screws by hand only.

5 Assemble the Bracket

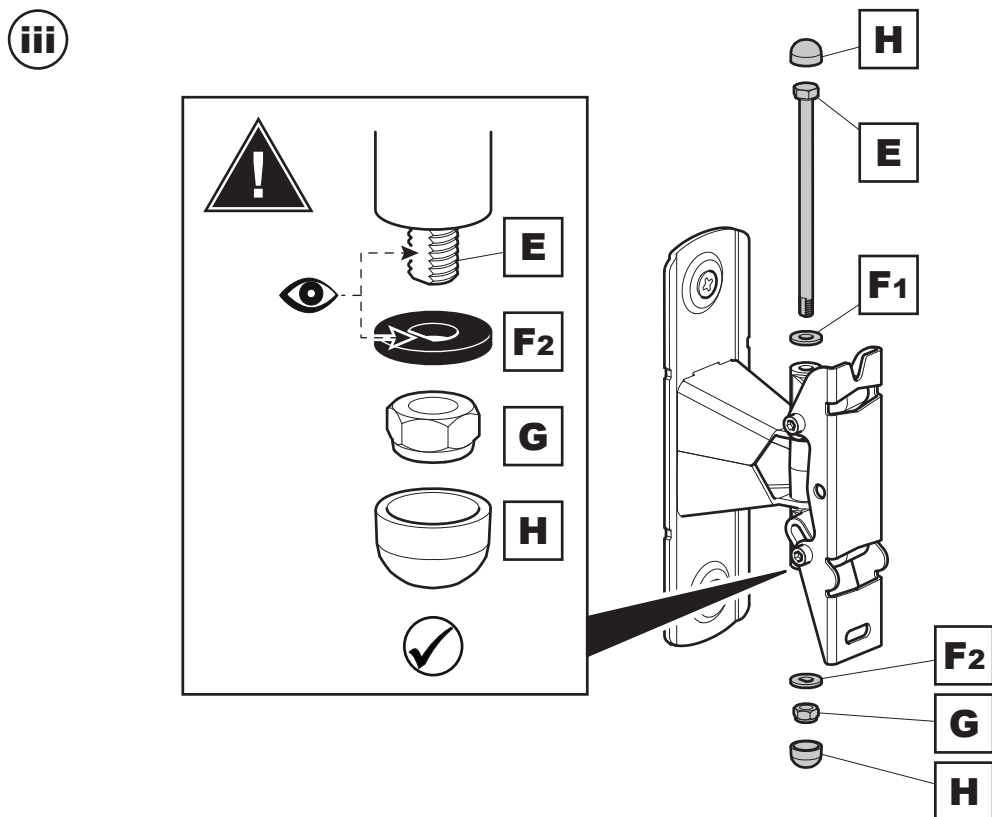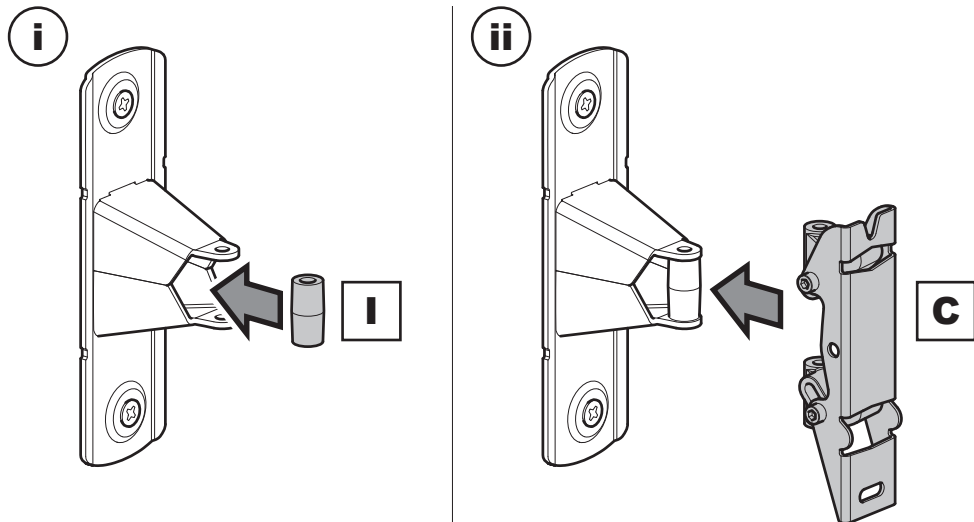


6 Fitting the Wall Covers

 i

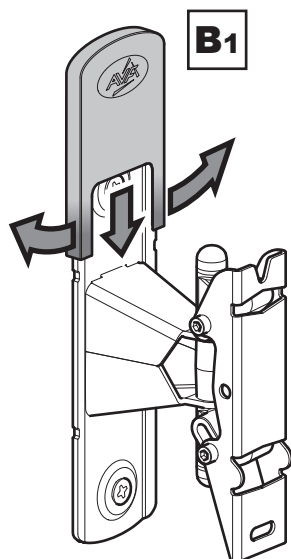


ii

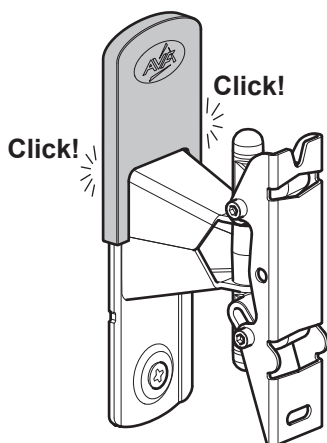 


Carefully bend apart the 2 highlighted sections shown above and then slide into position

 iii

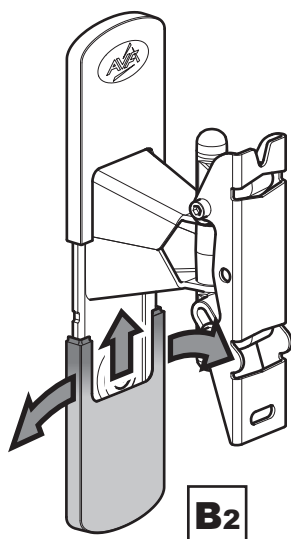


iv

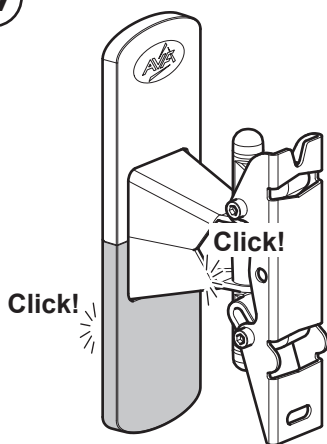 




Carefully bend apart the 2 highlighted sections shown above and then slide into position

7 Connecting the TV

 Attach TV

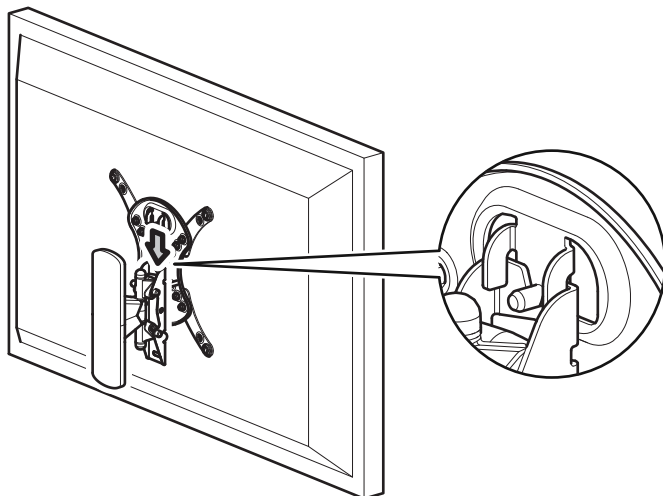


TV Locking

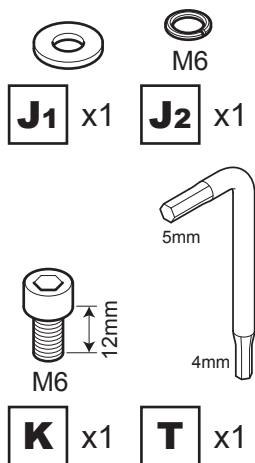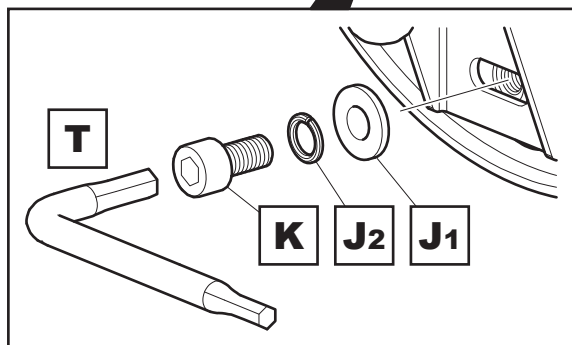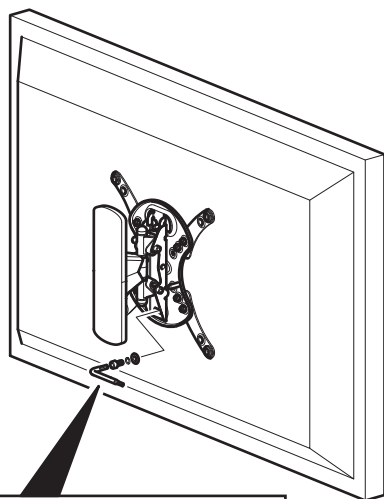   


Optional

 Lock tilt

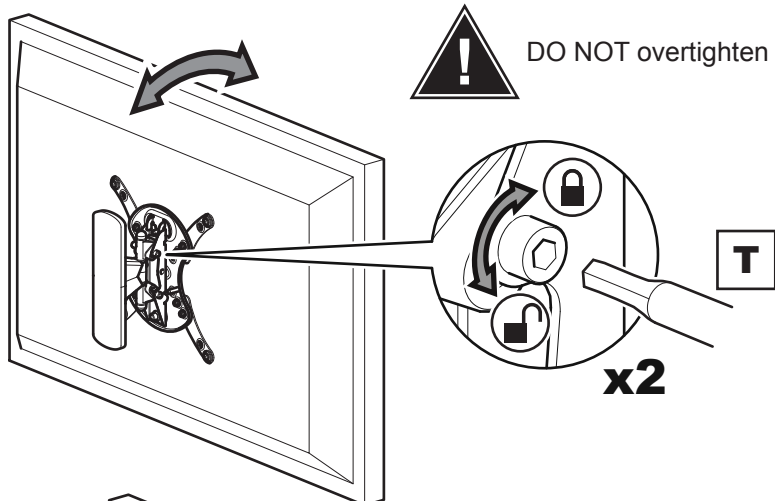

TV Levelling

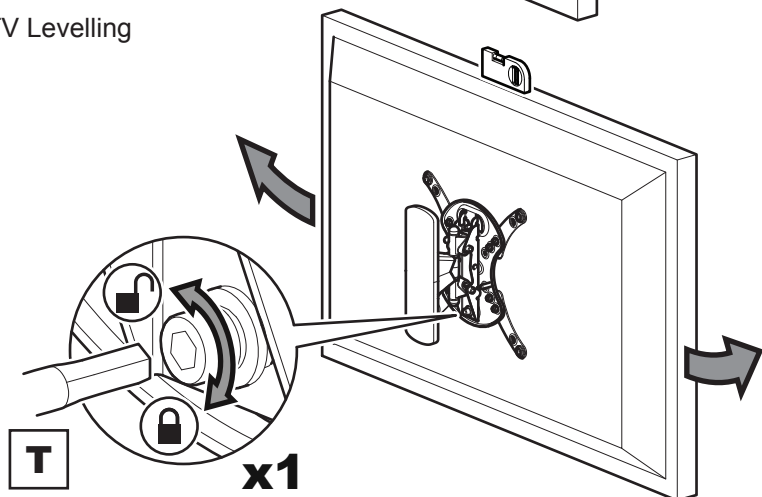 

Storing the Allen Key

