 


jl.avfgroup.com

466527 rev02

JAK101

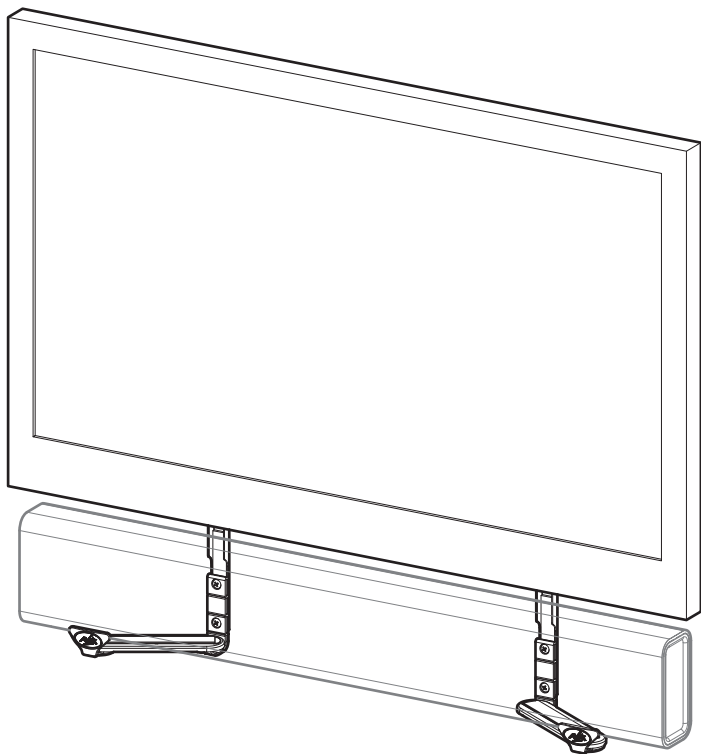

13.6kg  
30lbs



 
 





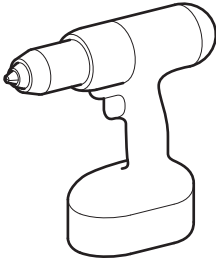 
Read through **ALL** instructions before commencing installation.

If you have any questions about this product or issues with installation, contact the customer services helpline before returning this product to the store.

**CUSTOMER SERVICES HELP LINE NUMBER: 0333 320 0463**

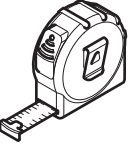AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England

Retain all packaging in case the product needs to be returned.  
Contents may vary from photography / illustrations.  
You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.  
This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.  
It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).  
AVF accept no responsibility for any damage or loss caused by installing this product in a substandard wall.

 


### Tools Recommended


Ø8mm (5/16")  
Masonry

Ø3mm (1/8")  
Wood

Stud Finder

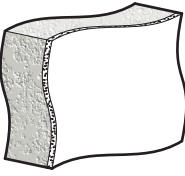




Solid Wall

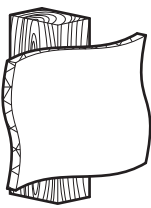 


Wood Stud

### Boxed Parts

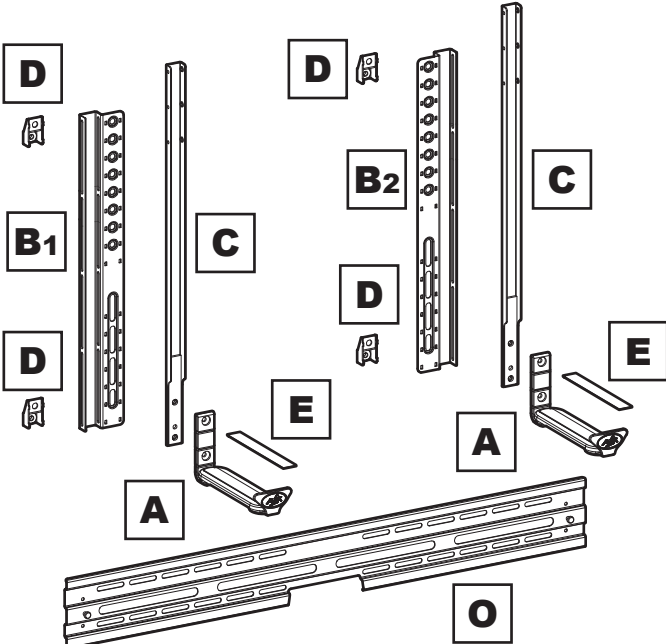 


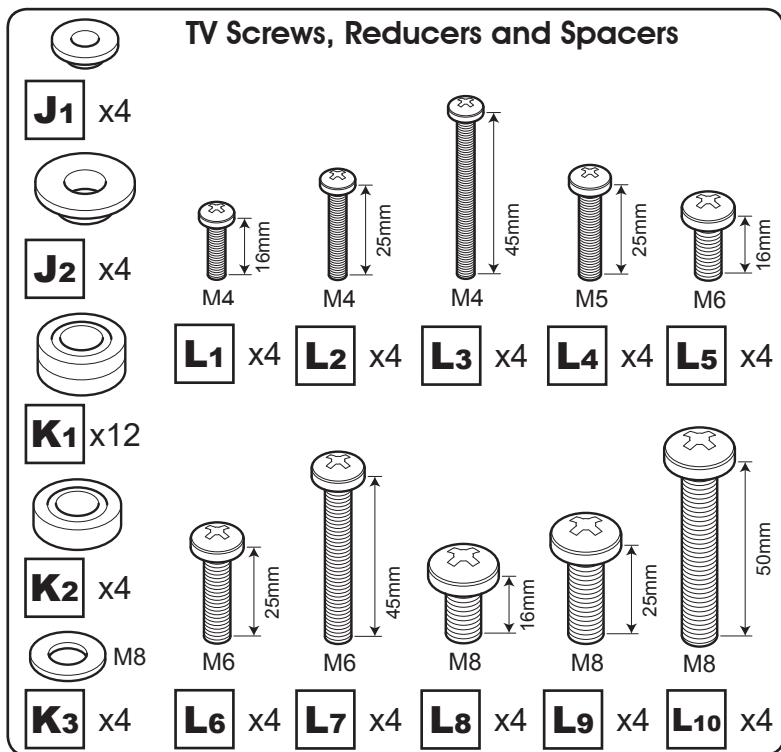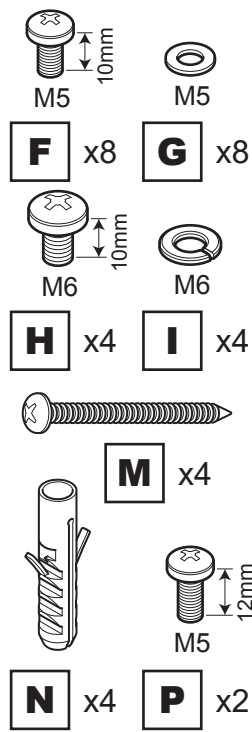  

## 1 Measure the TV fixing holes Width and Height

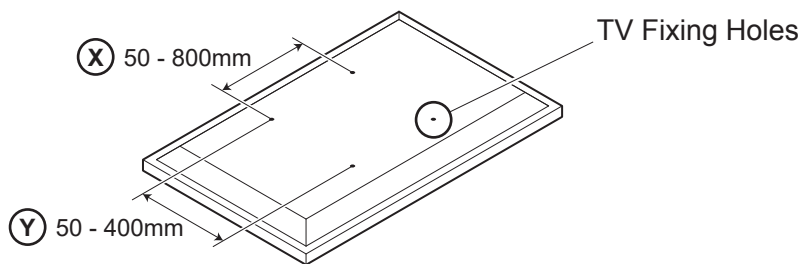 

 If width **(X)** is greater than 800mm or height **(Y)** greater than 400mm  
STOP installation now and contact the customer help line.

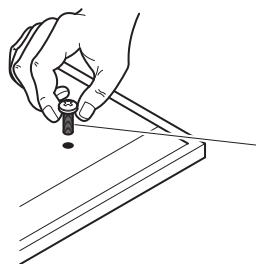

**M4** = **L1-L3**

**M5** = **L4**

**M6** = **L5-L7**

 
 
**M8** = **L8-L10**

You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 3 or 10.



# Mounting Your Soundbar

Please use the illustration below to decide which steps you will need to use to Mount your Soundbar. For example, if you are mounting your Soundbar on a TV Bracket below your TV you would use steps **9, 10, 11, 12** and **13**.

## Soundbar

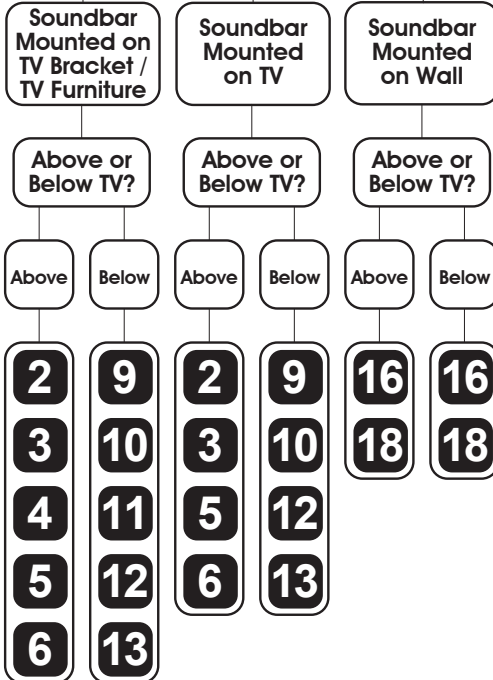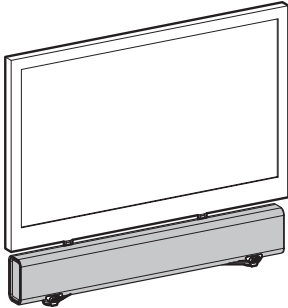


## SONOS Playbar

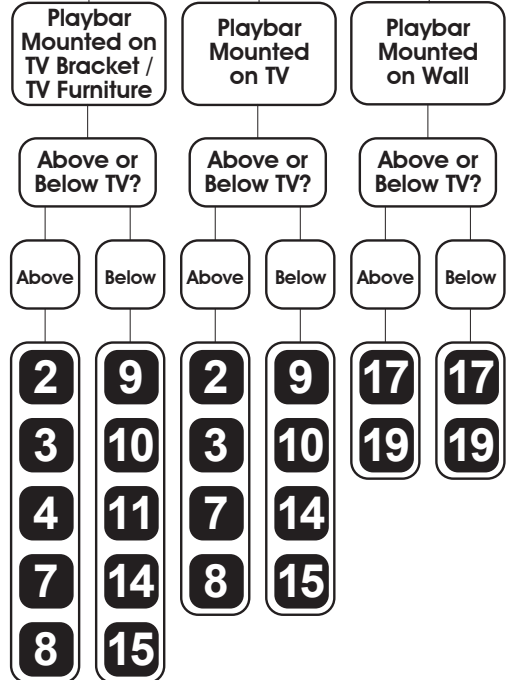 
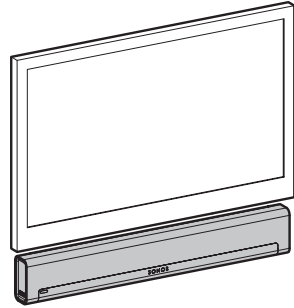 




i

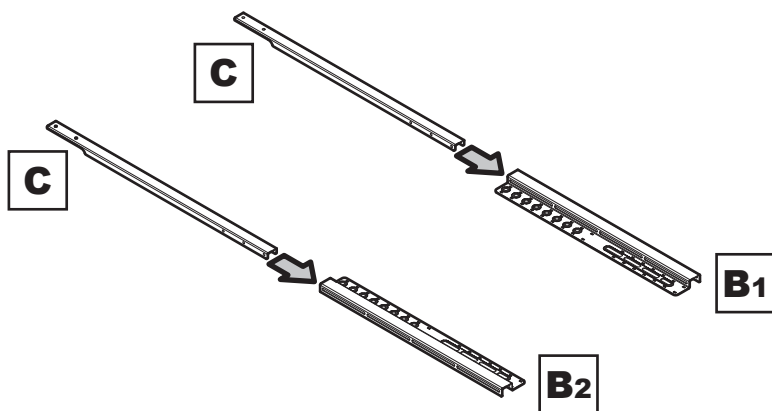 


ii

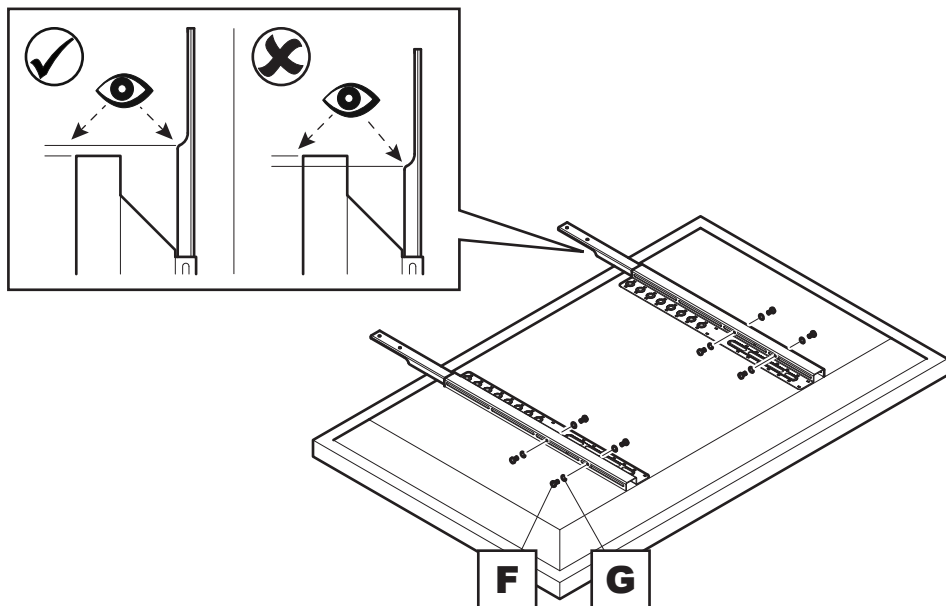  
**F** x8**G** x8

## No Spacers




 
For TVs with flat / unobstructed back.

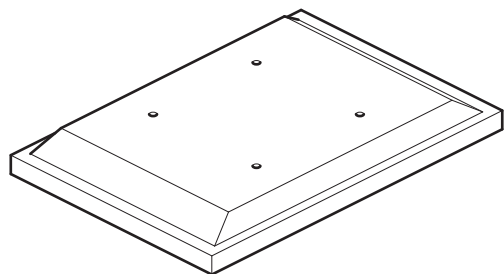Spacers **K1/K2**

 For TVs with irregular / obstructed back.

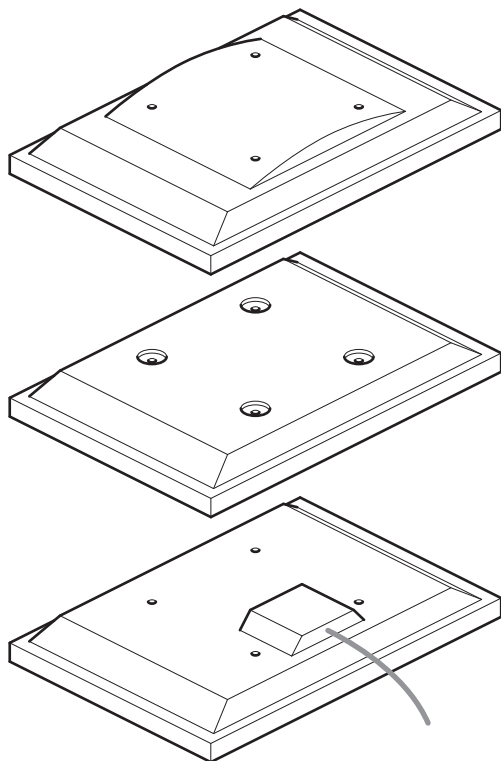


## WARNING

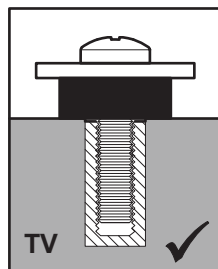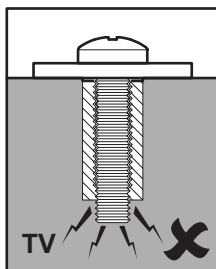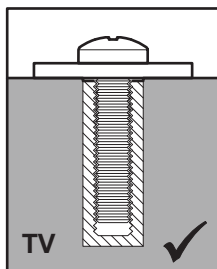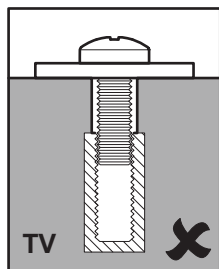    


After completing step 3 you will have fittings left over, please keep for future reference.

 Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.

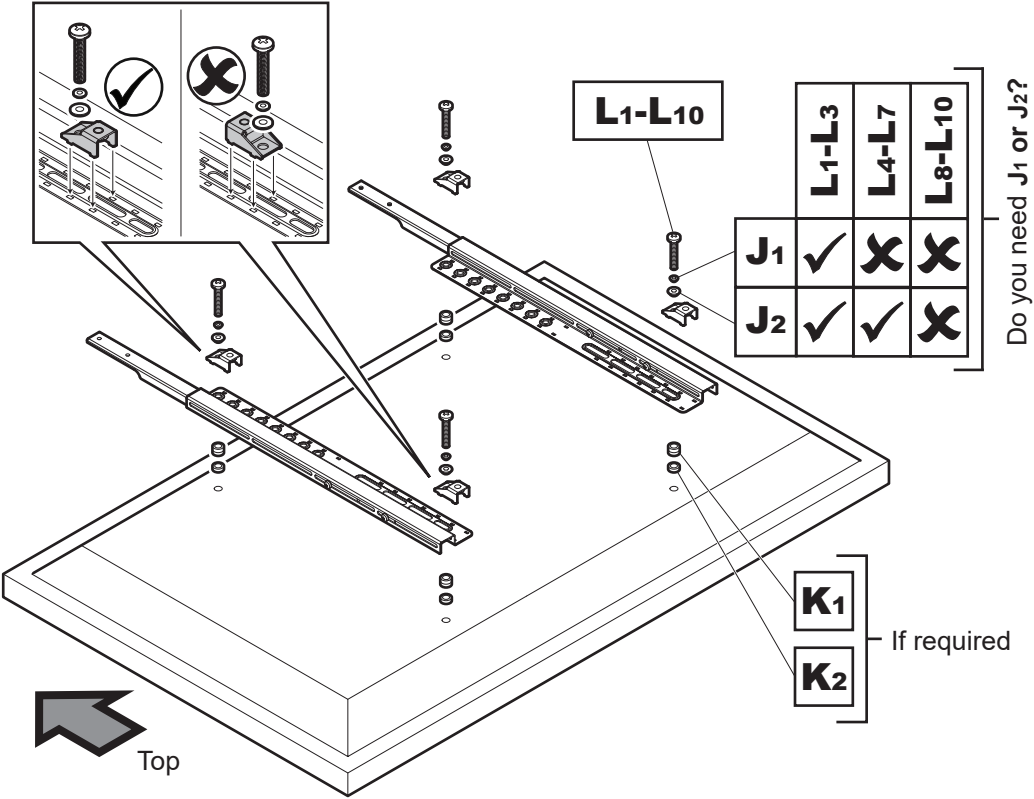

 
If you have a Samsung TV with Samsung Wall Mount Adapters you will have to use Screw **L10**. You may need to use Washer **K3** to ensure Brackets **B1/B2** are fitted securely.

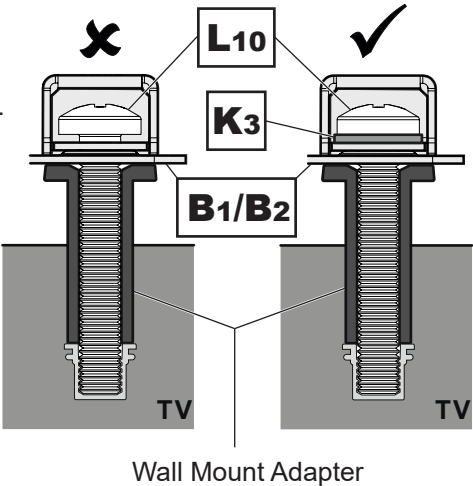

## 4 Attaching TV Mount

Mounting Above


 
Attach your TV Bracket to the 4 fixing points you created in step 3

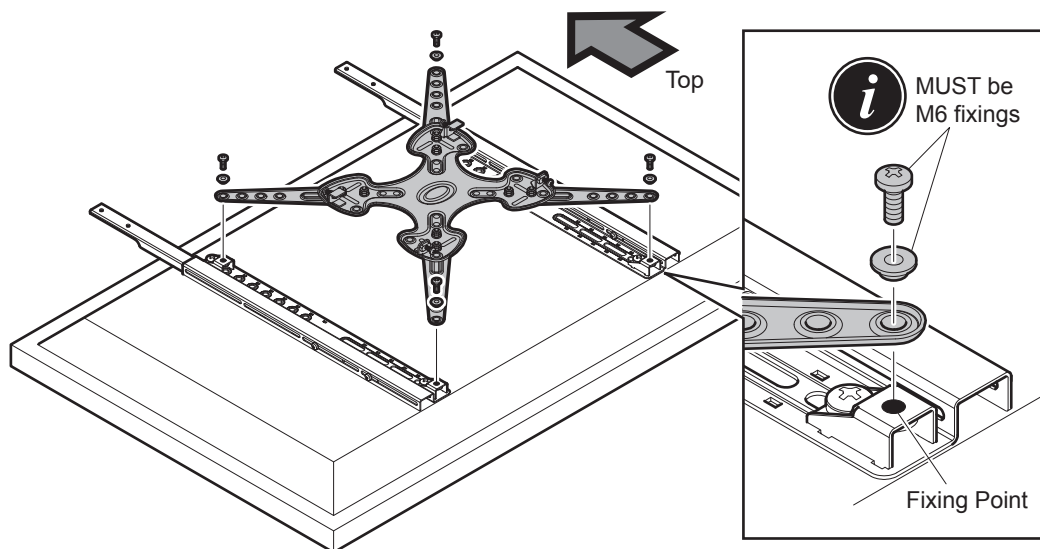

The brackets and screws etc shown in grey are only an example. These are supplied by the TV wall bracket manufacturer.

## 5 Attaching Shelf Brackets

 
 
Mounting Above

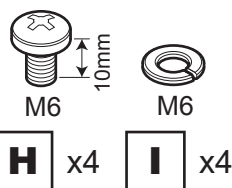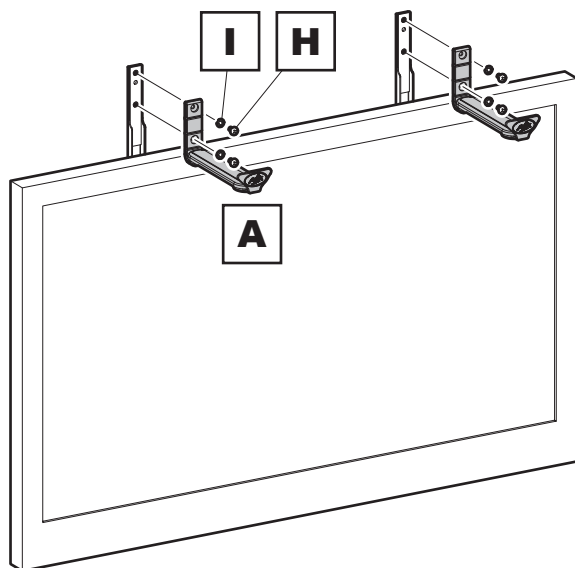


## 6 Attaching Soundbar

Mounting Above

  
- i Adjust part **A** to the depth of your Soundbar

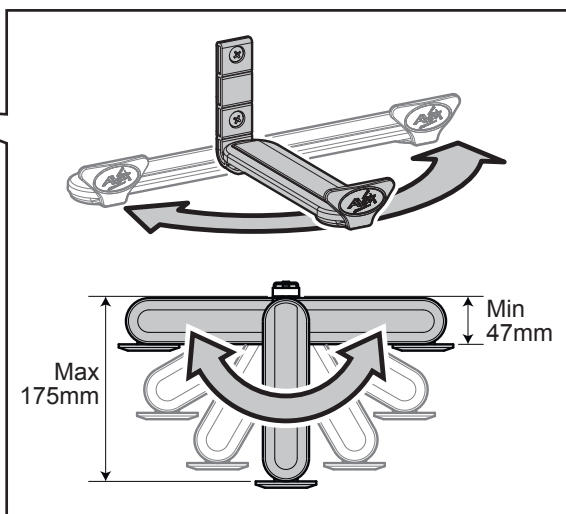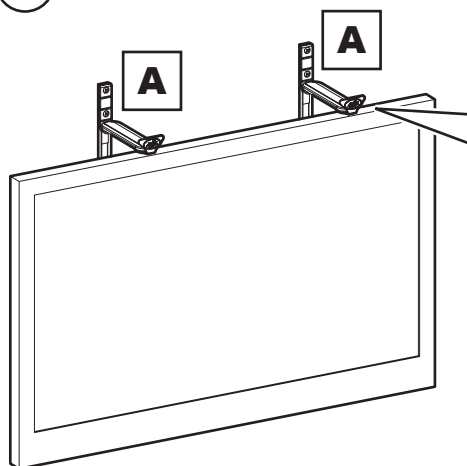

 - ii Attach part **E** and then remove backing paper

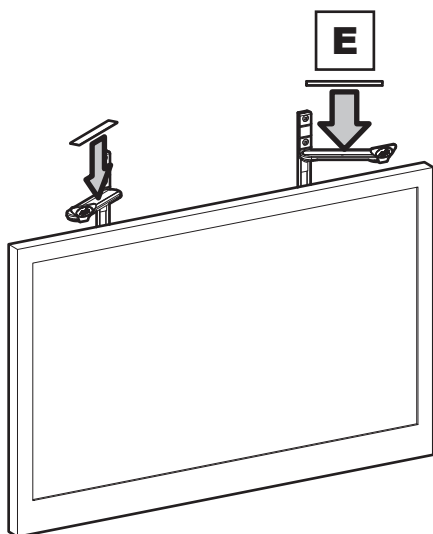


- iii

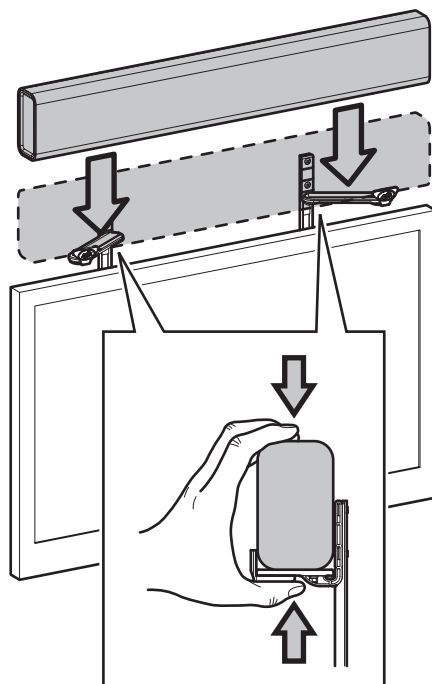 






## 7 Attaching SONOS playbar adaptor

 Mounting Above

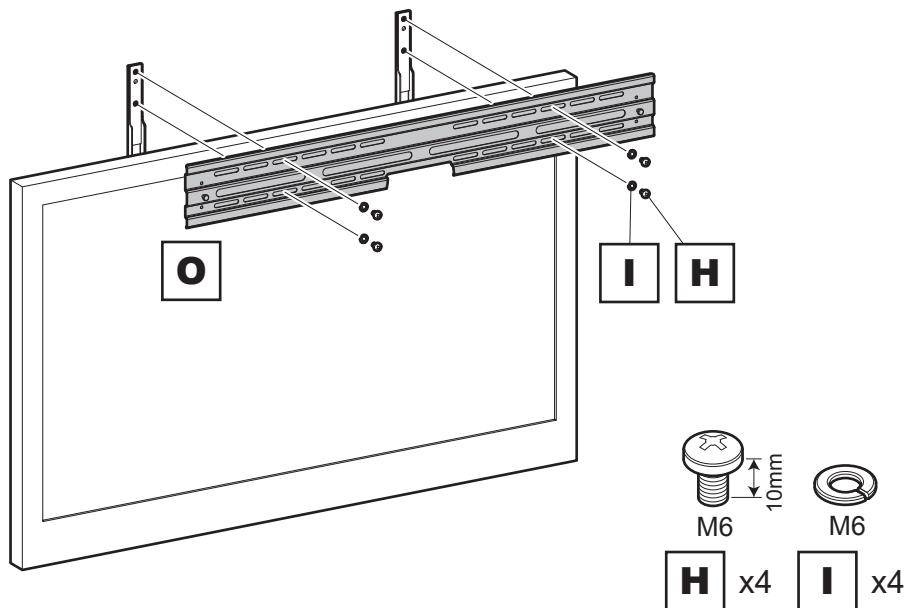


## 8 Attaching SONOS playbar

     Mounting Above

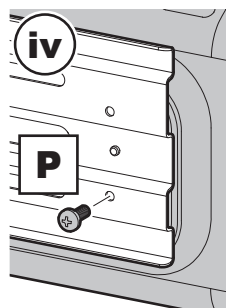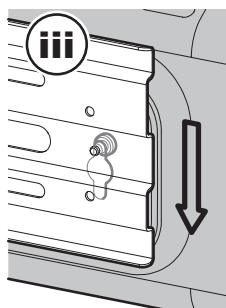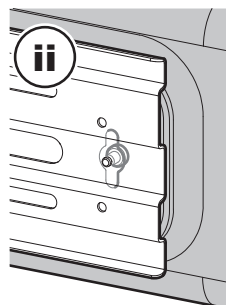
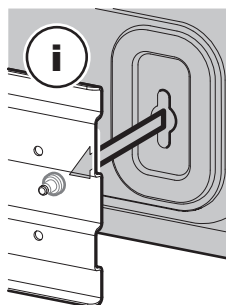
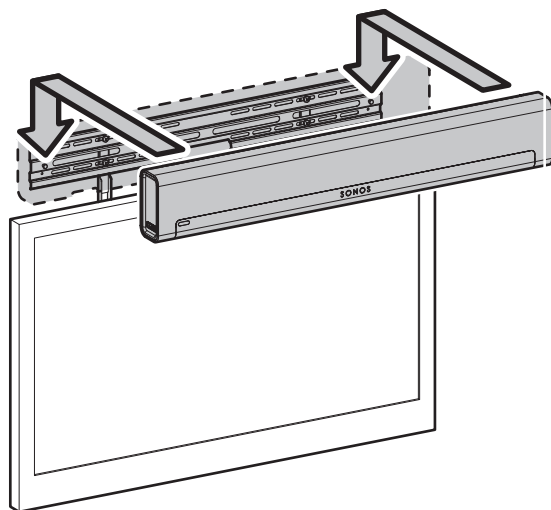


You must use locking screw **P**x2

 i

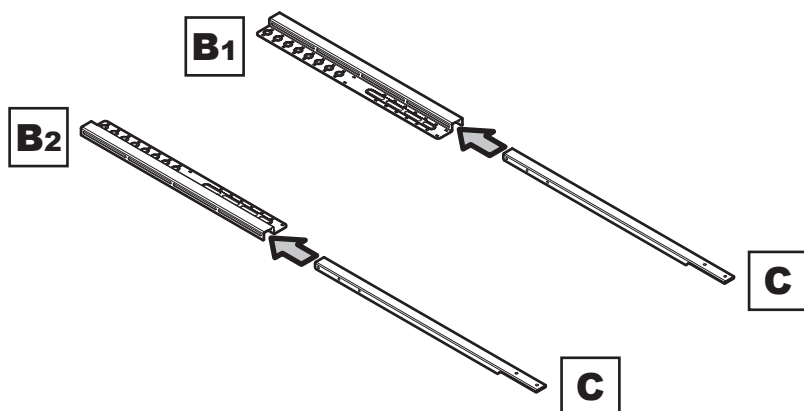

ii

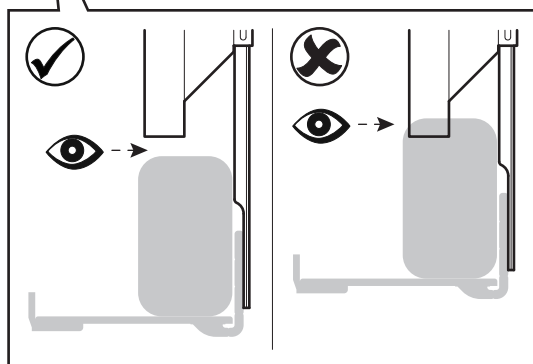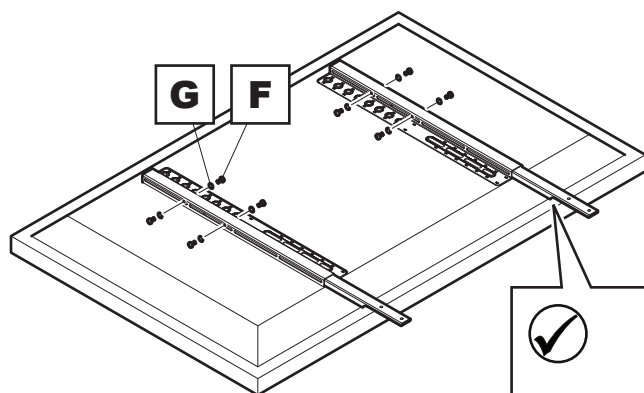   
**F** x8**G** x8

# 10 Fitting the TV Brackets
 
## Mounting Below


### No Spacers

For TVs with flat / unobstructed back.




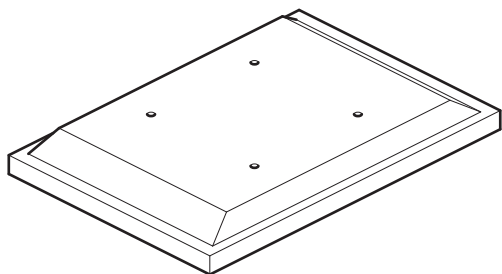


### Spacers **K1/K2**

 For TVs with irregular / obstructed back.

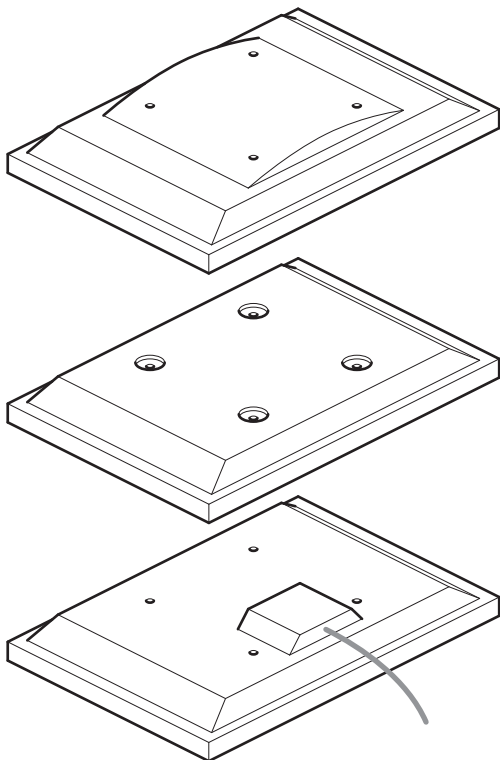


### WARNING

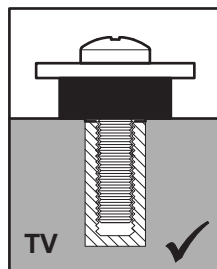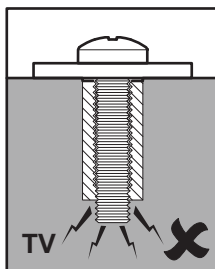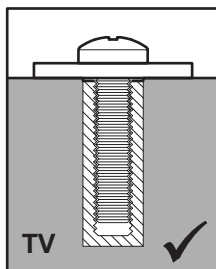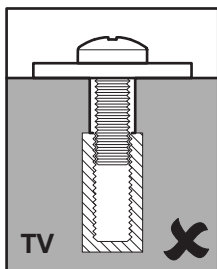    


After completing step 10 you will have fittings left over, please keep for future reference



 Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.

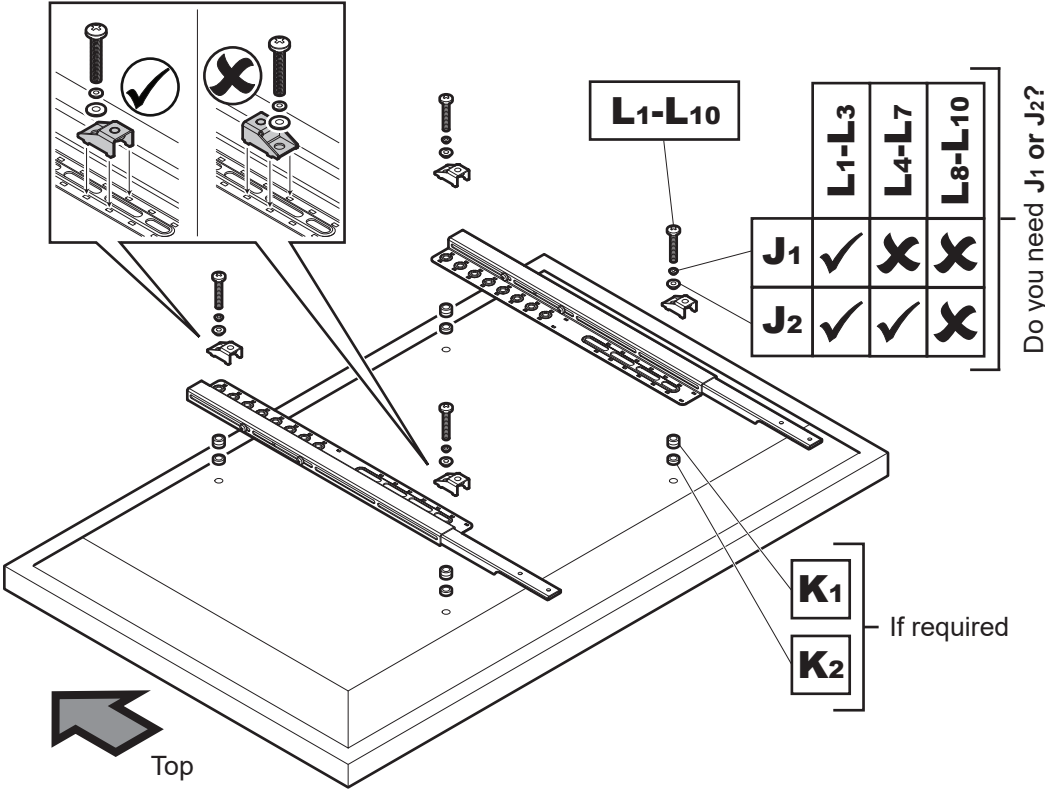

 
If you have a Samsung TV with Samsung Wall Mount Adapters you will have to use Screw **L10**. You may need to use Washer **K3** to ensure Brackets **B1/B2** are fitted securely.

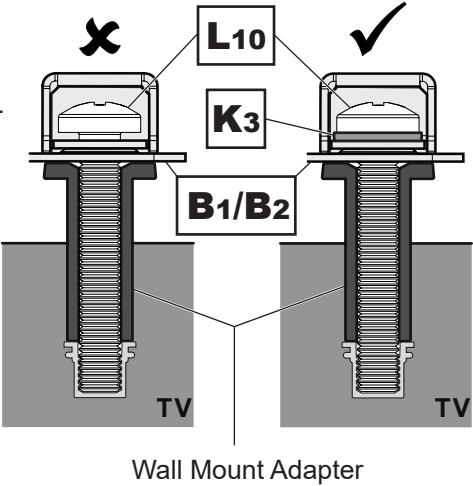

## 11 Attaching TV Mount

Mounting Below

 
Attach your TV Bracket to the 4 fixing points you created in step 10

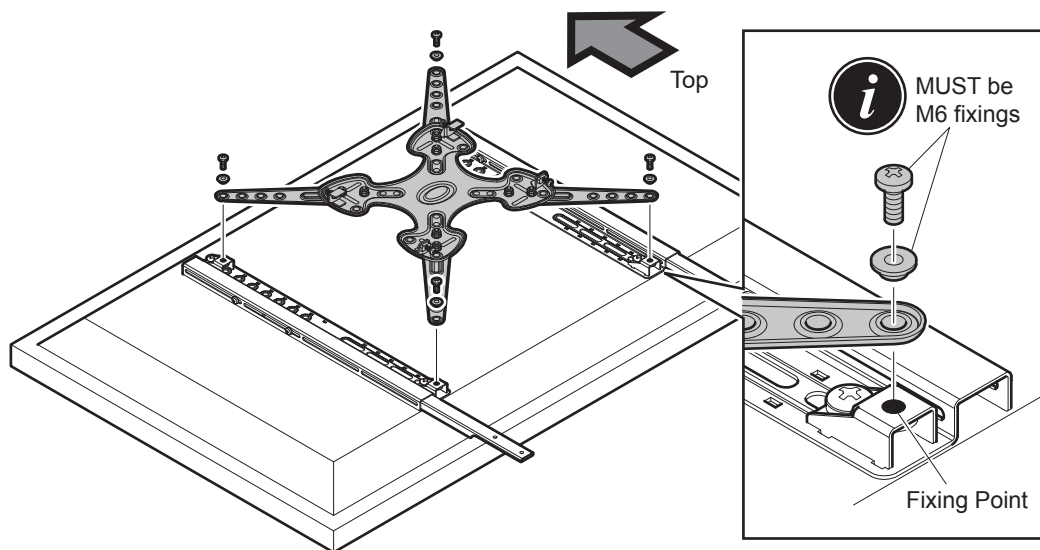

The brackets and screws etc shown in grey are only an example. These are supplied by the TV wall bracket manufacturer.

## 12 Attaching Shelf Brackets


 
Mounting Below

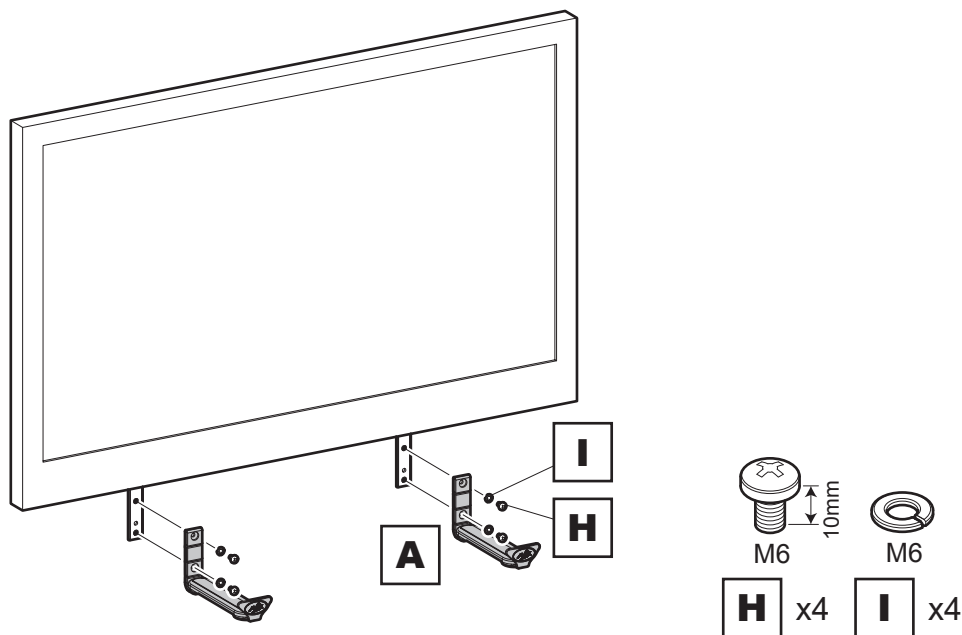


# 13 Attaching Soundbar

Mounting Below

  
i Adjust part **A** to the depth of your Soundbar

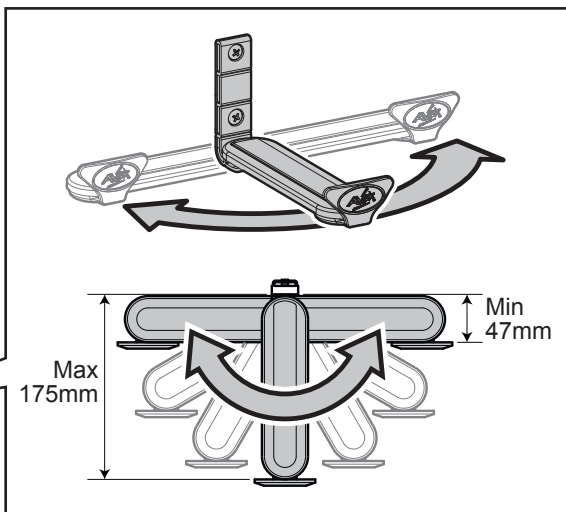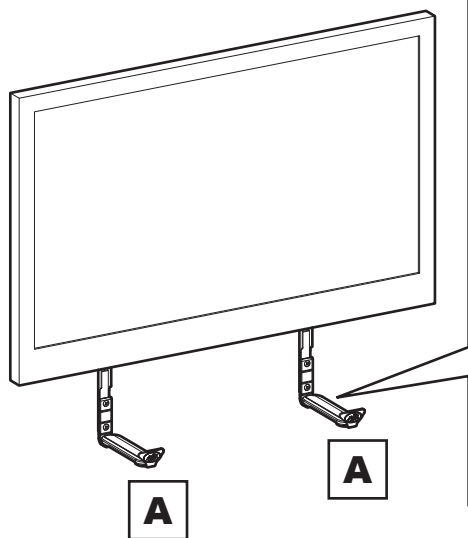

 ii Attach part **E** and then remove backing paper


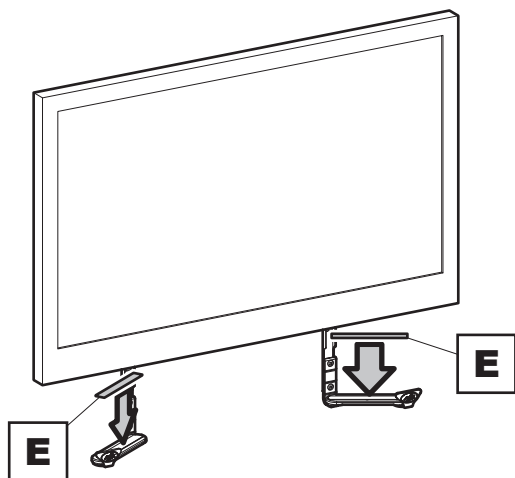


iii





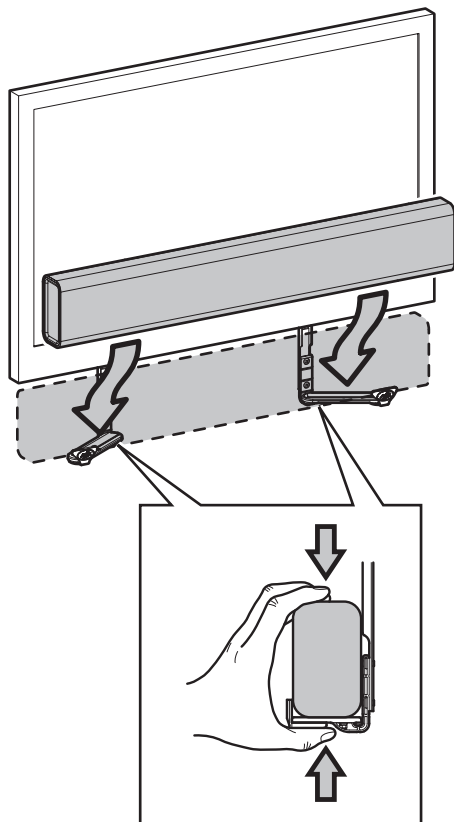 


# 14 Attaching SONOS playbar adaptor

  Mounting Below


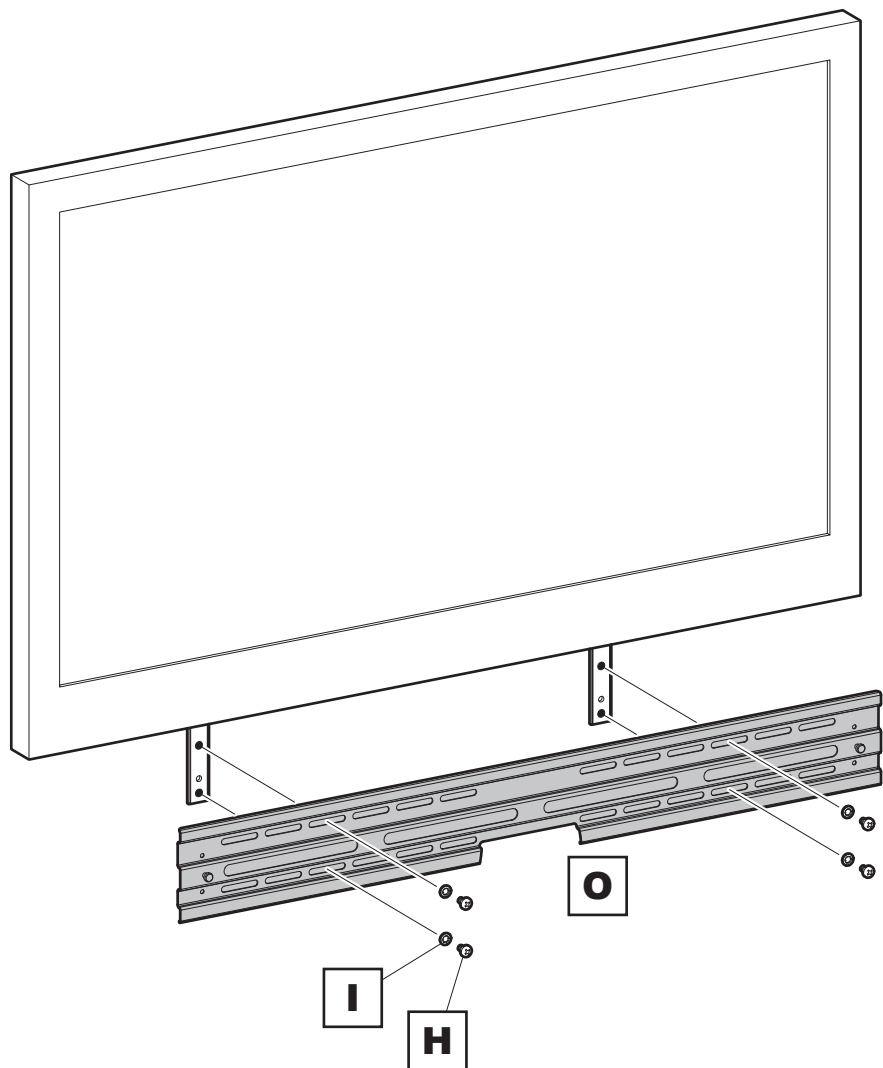


**H** x4    **I** x4

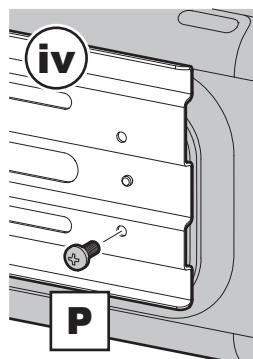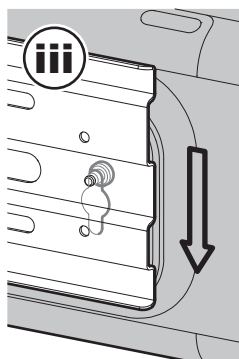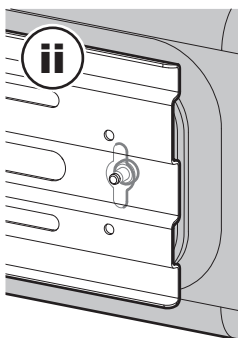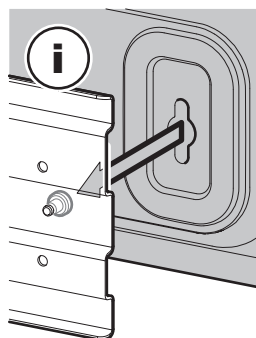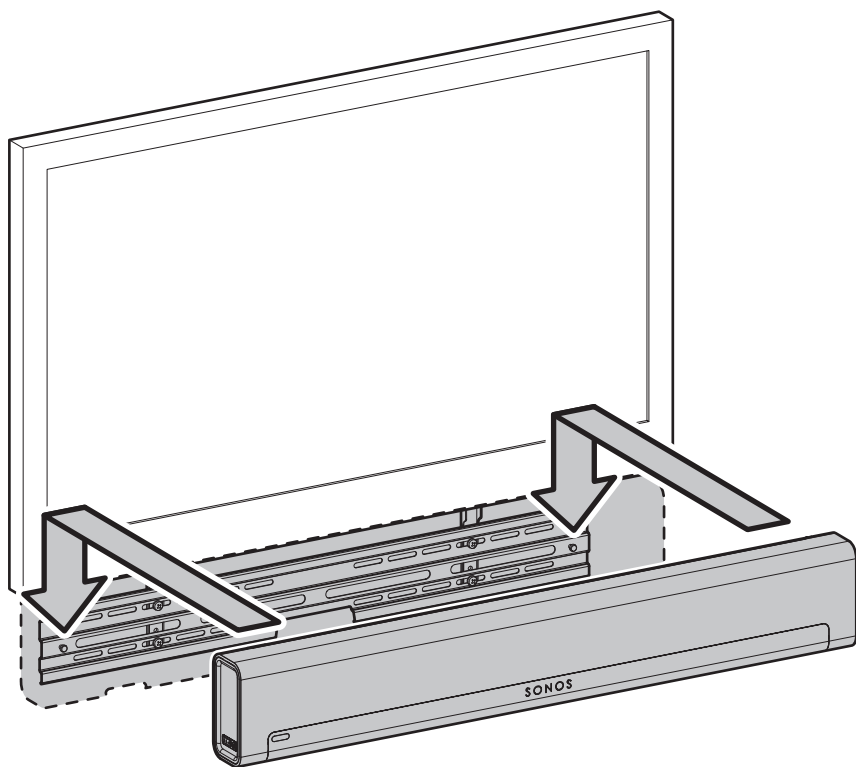     




You must use locking screw **Px2**

### Solid Wall


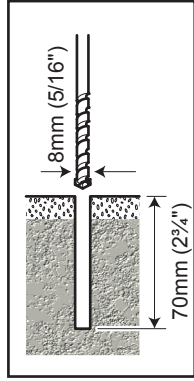 
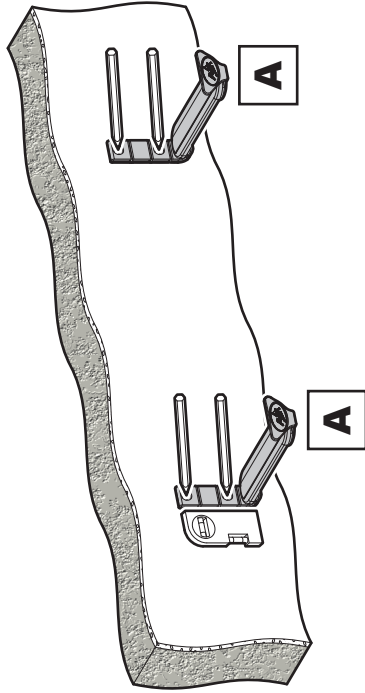 


Remove Dust from Hole.

### Wood Stud

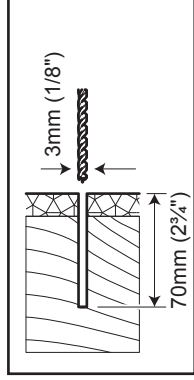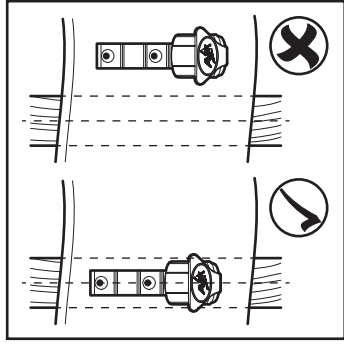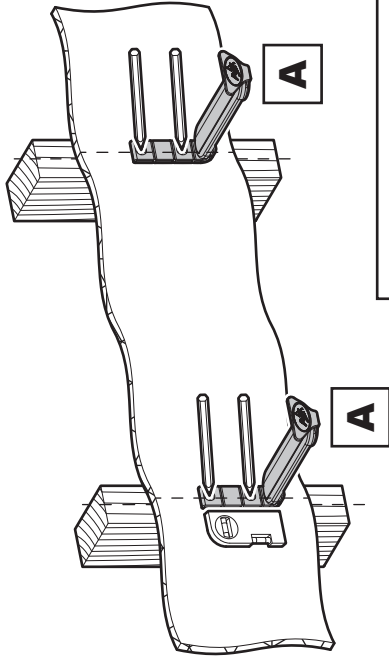   

   Ensure drill marks are in the centre of the wood stud.

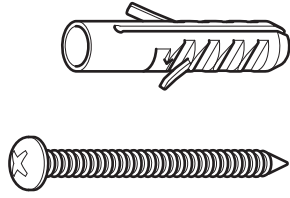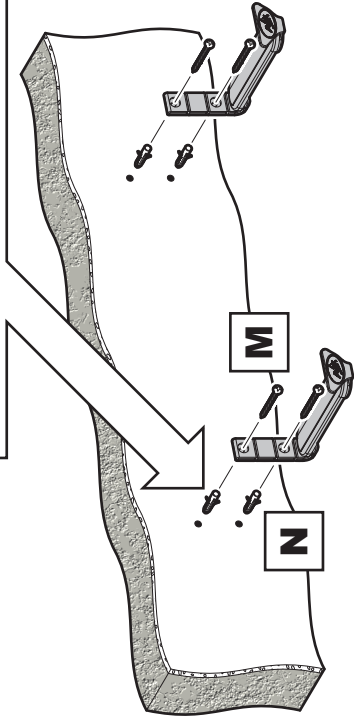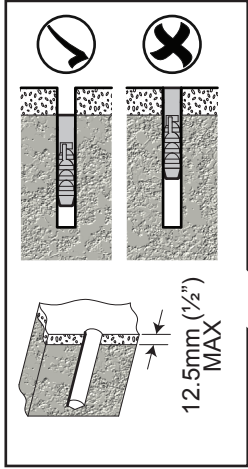

Lubricate screw thread with soap.




DO NOT overtighten screws.  
Tighten screws by hand only.

**M**

 x4

**N**

x4

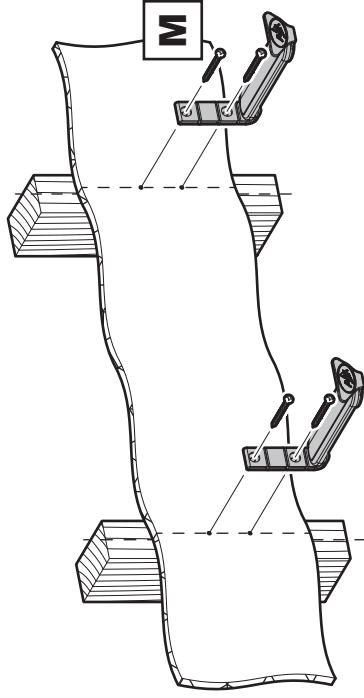

Lubricate screw thread with soap.





DO NOT overtighten screws.  
Tighten screws by hand only.

**M**

 
 
x4

## Solid Wall

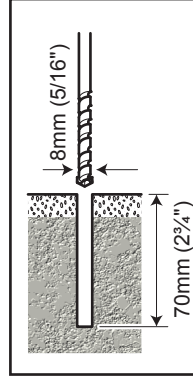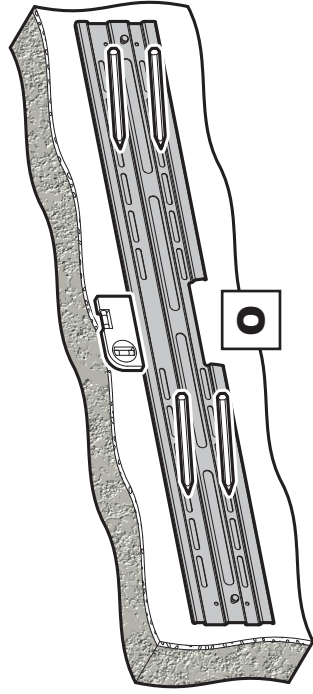




Remove Dust from Hole.

## Wood Stud

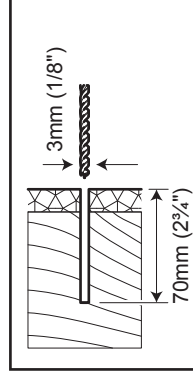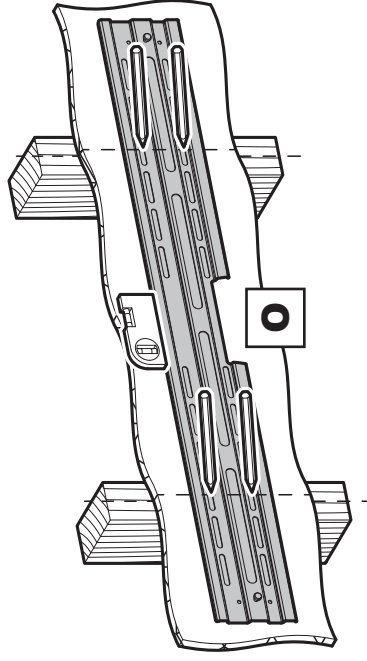  

  
 
Ensure drill marks are in the centre of the wood stud.



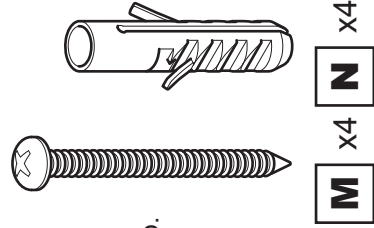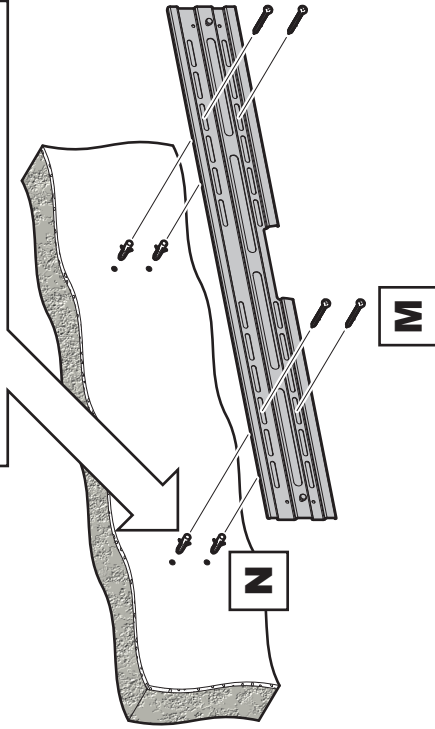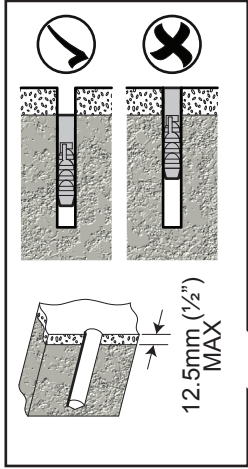

Lubricate screw thread with soap.

  DO NOT overtighten screws.  
Tighten screws by hand only.

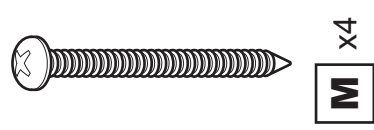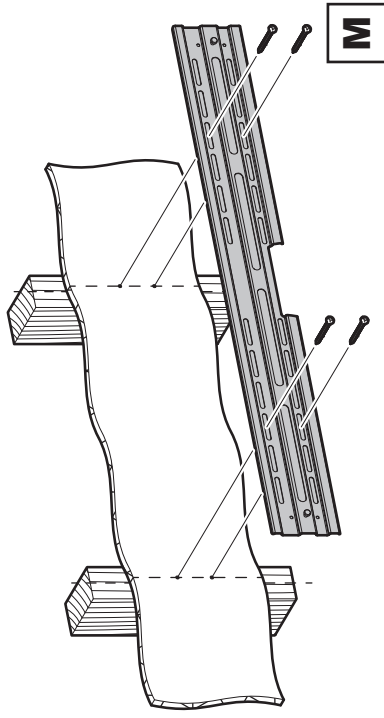

Lubricate screw thread with soap.


DO NOT overtighten screws.  
Tighten screws by hand only.




# 18 Attaching Soundbar

 Mounting Above or Below


- i Adjust part **A** to the depth of your Soundbar

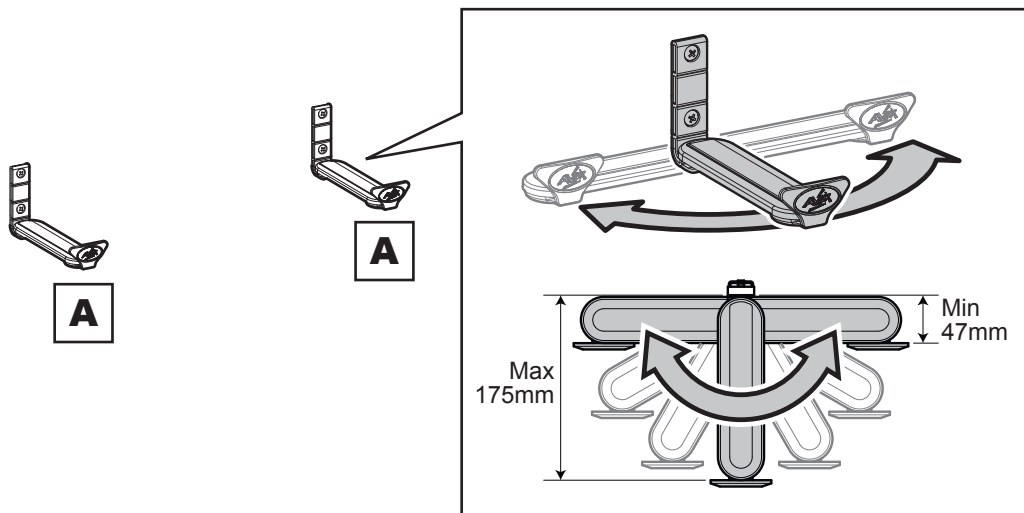

 - ii Attach part **E** and then remove backing paper

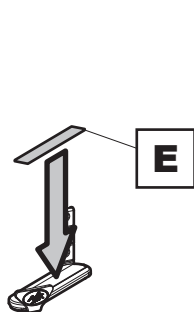

- iii

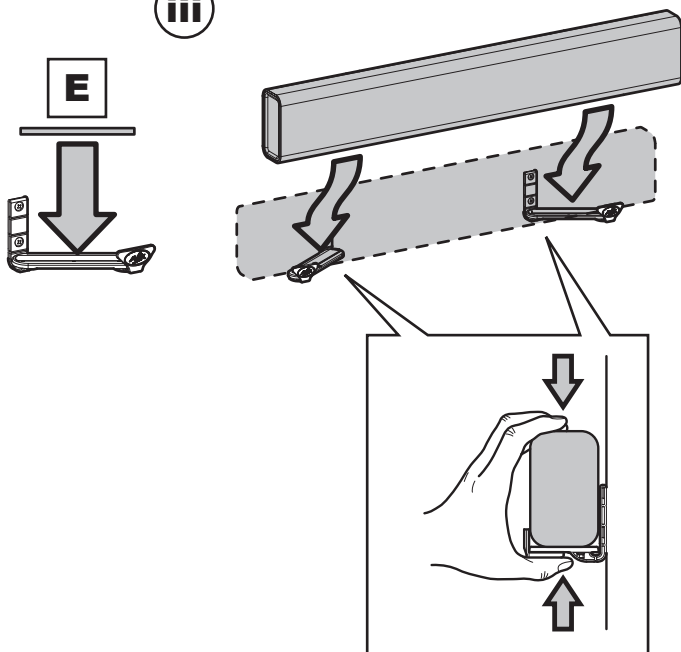 

# 19 Attaching SONOS playbar

Mounting Above or Below

