



1

Top

+

Select fixings for your TV

C1/C2/C3/C4/C5/C6

If Required

E1

E2

D

TV Top

M4

C1/C2

E1

D

M6

C3/C4

E2

D

M8

C5/C6

D

If required

TV

TV

TV

TV

+

+

+

3

Solid Wall

Top

i

65mm (2 9/16")

ii

Remove dust from hole

iii

Lubricate screw thread with soap

+

Gx4

M6

Hx4

Fx4

2

Wood Stud

Top

i

50mm (2")

ii

Ensure bracket is in the centre of the wood stud

iii

Lubricate screw thread with soap

+

Gx4

M6

Fx4

3

i

ii

Click!

3

Solid Wall

Top

i

65mm (2 9/16")

ii

Remove dust from hole

iii

Lubricate screw thread with soap

+

Gx4

M6

Hx4

Fx4

3

i

ii

Click!

3

i

ii

Click!