


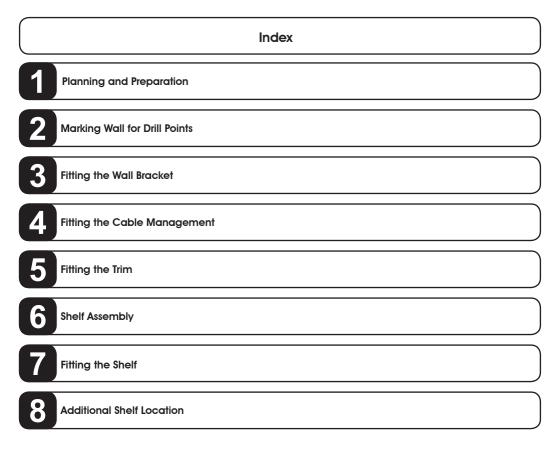

Read through <u>ALL</u> instructions before commencing installation.

If you have any questions about this product or issues with installation, contact the customer services help line before returning this product to the store.

## CUSTOMER SERVICES HELP LINE NUMBER: 0333 320 0463 (UK)




Retain all packaging in case the product needs to be returned.


Contents may vary from photography / illustrations.

You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

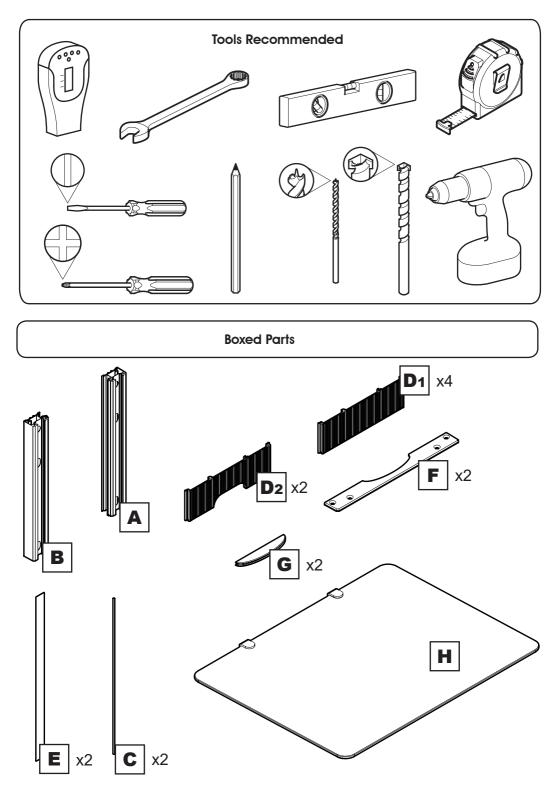


## **Boxed Parts**

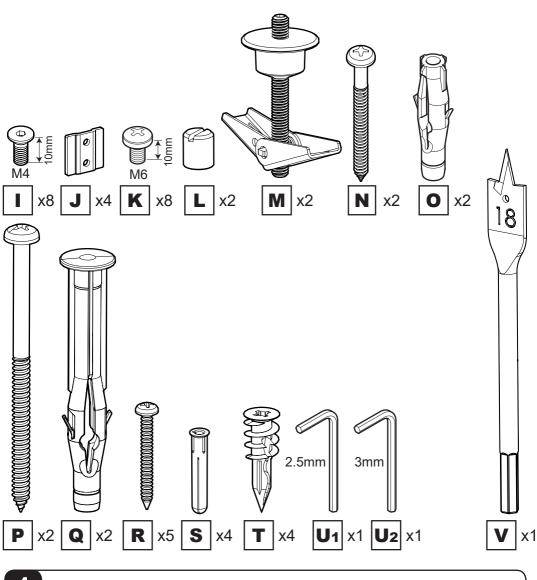


Planning and Preparation


Determine the wall type that you have (i.e. Brick/Stud/Plasterboard/Sheetrock). Ensure the drilling area is free from mains services (Gas/Electric/Water). Drill three 3mm pilot holes to verify the wall type and select the appropriate fixings.

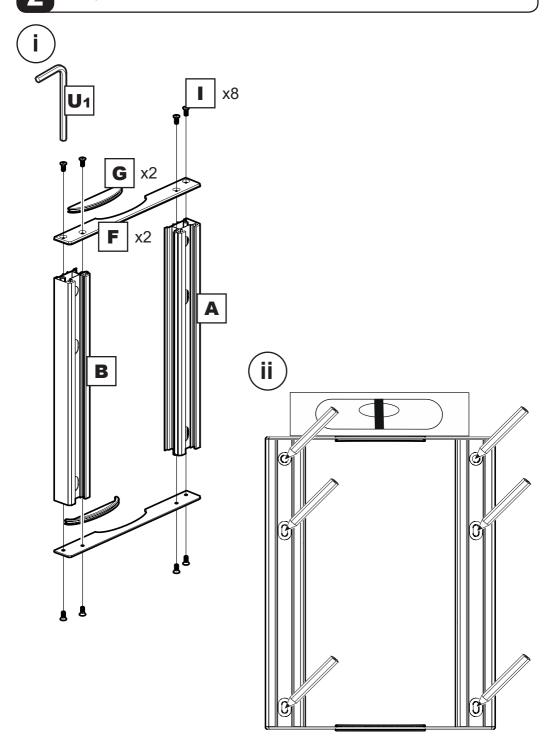



2


Use the correct fixings for your wall type. Mixing fixing types may be required for installations that span different wall types. DO NOT OVER TIGHTEN SCREWS.

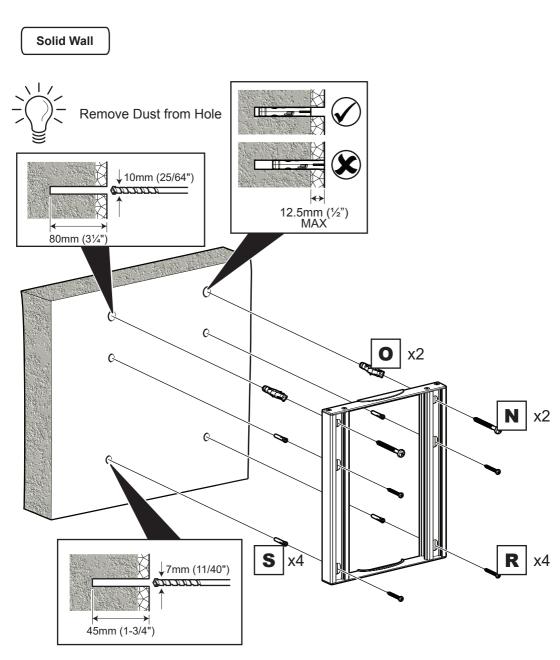


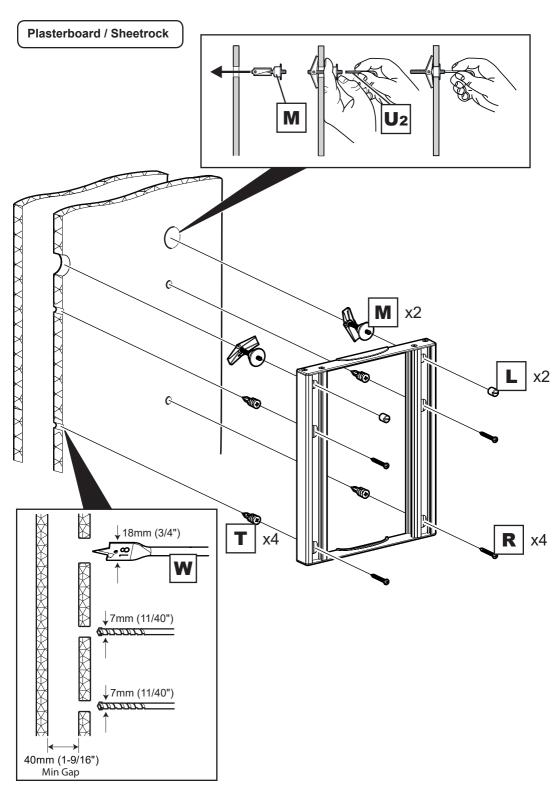


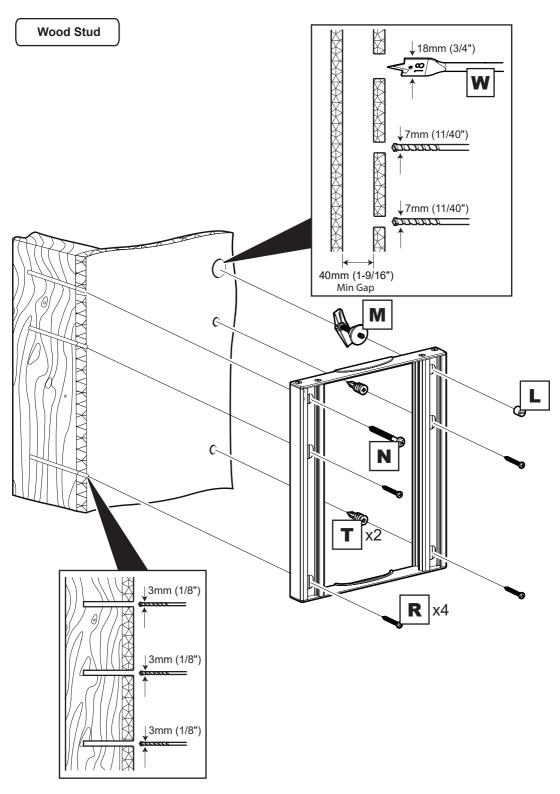


 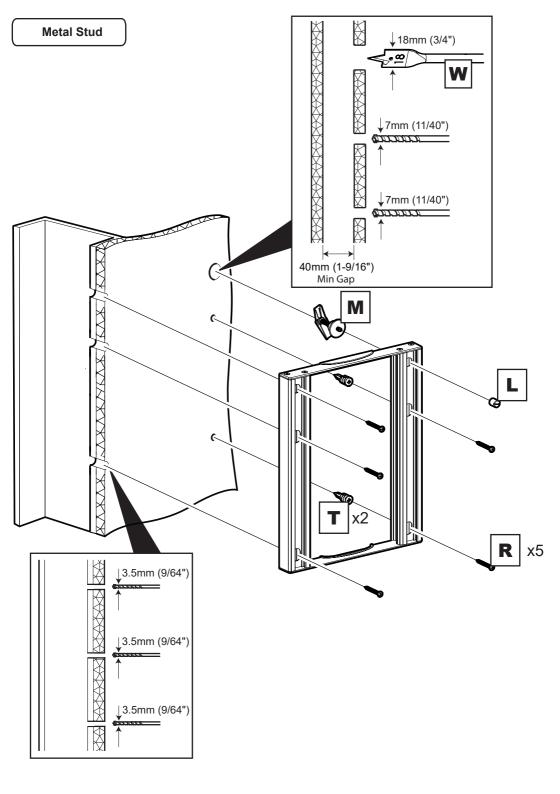


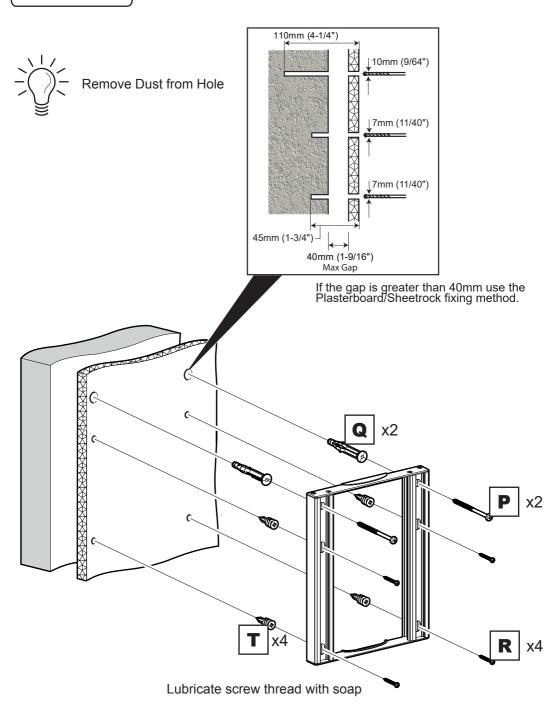


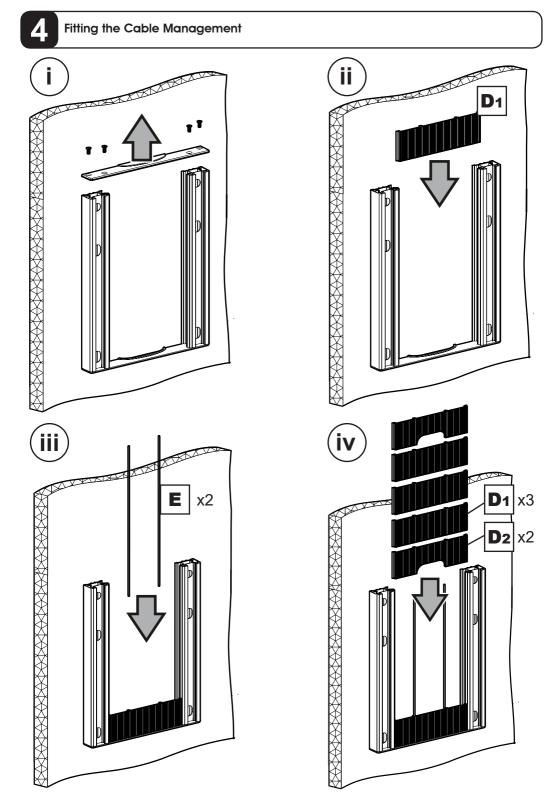

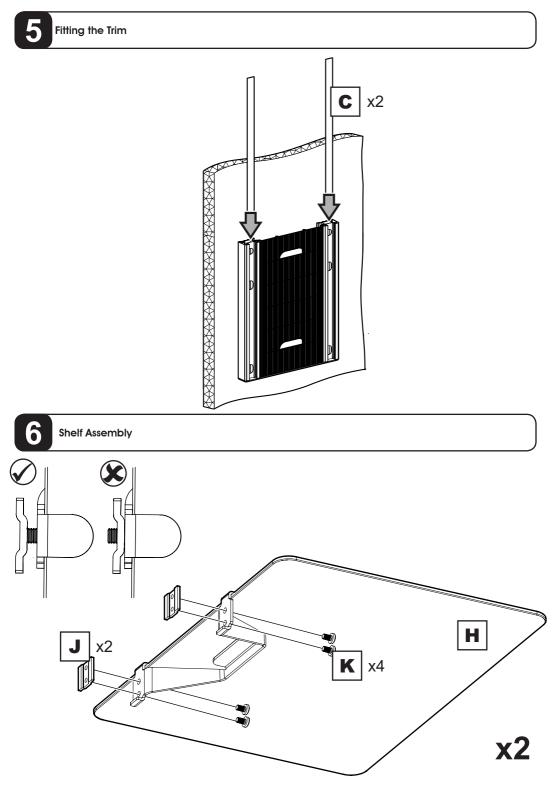

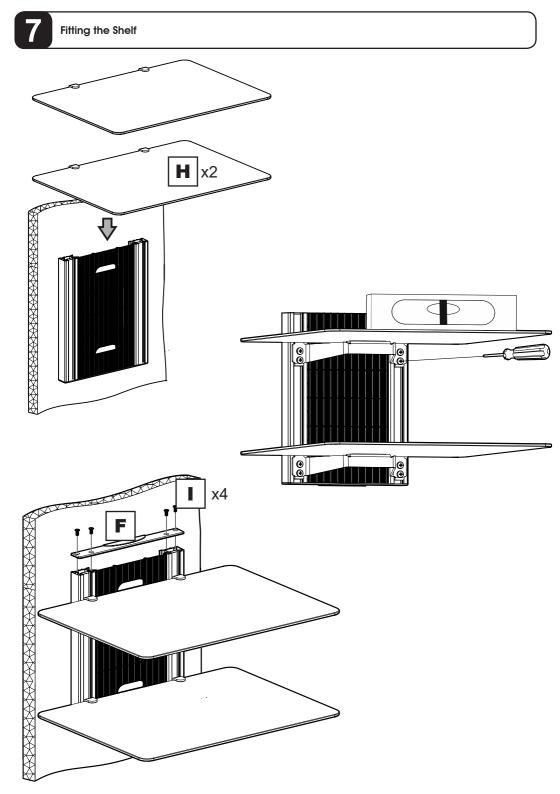



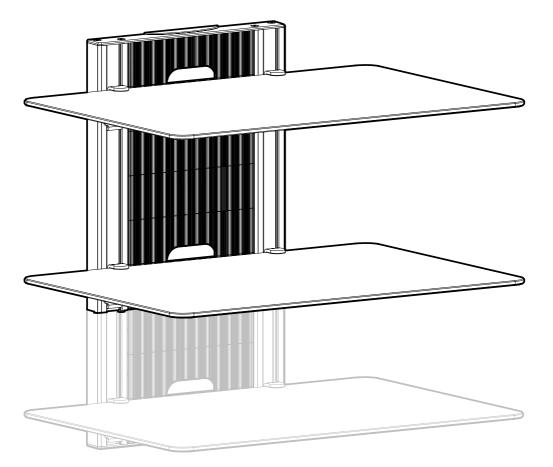

Additional shelf units can be purchased separately.