


Universal Table Top Stand/Base

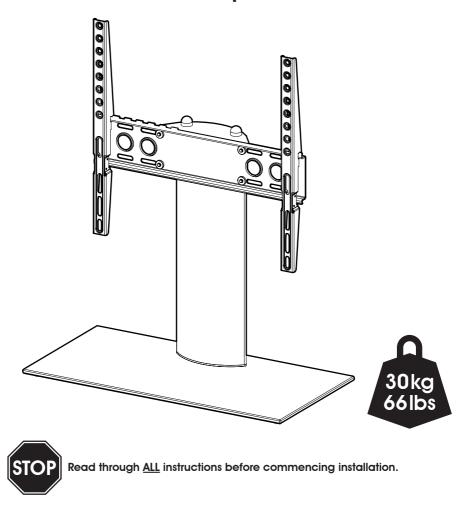



Retain all packaging in case the product needs to be returned.

Contents may vary from photography / illustrations.


You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

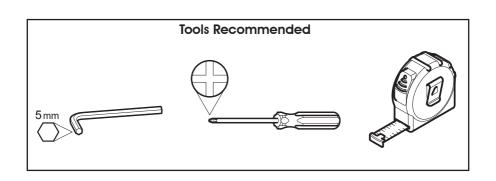

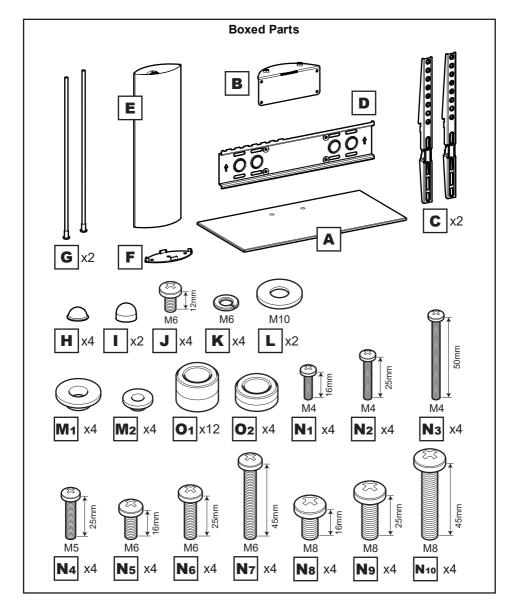


Measure the TV fixing holes Width and Height

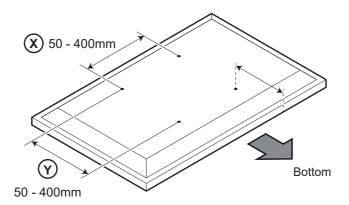



If width (X) is greater than 400 mm or height (Y) greater than 400 mm, **OR** if the distance from the bottom fixing holes to the bottom of your TV is more than 400 mm, **STOP** installation now and contact the customer helpline.

You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 3.

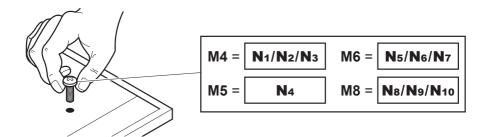

Fitting the TV Mounting Plate


No Spacers


For TVs with flat / unobstructed back

Spacers


01/02


For TVs with irregular / obstructed back

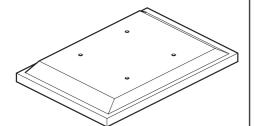


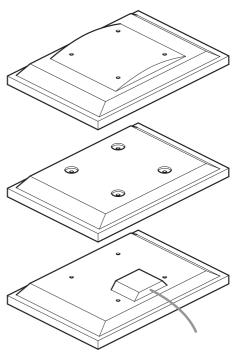


WARNING

 

 

 

 





After completing step 2 you will have fittings left over, please keep for future reference


Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations **N**1 - **N**10 Do you need M2 or M1? If required


Attach the feet to the bottom of the glass base

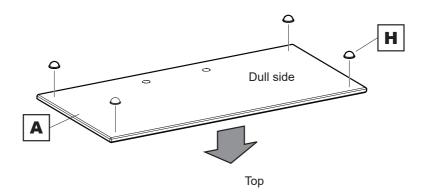


Attach the horizontal plate

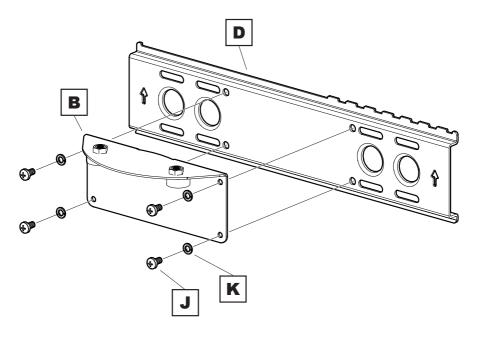

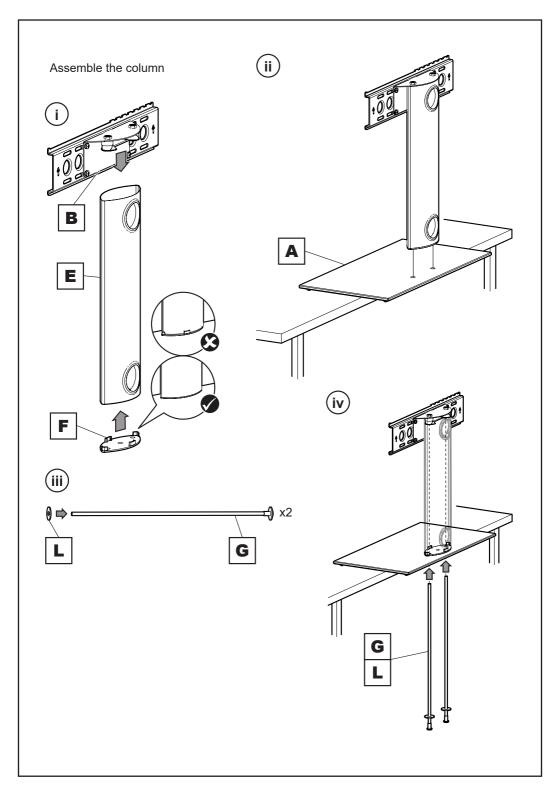


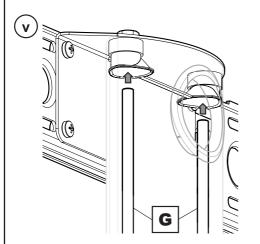


Push your fingers through the cable management hole and use them to guide ${\bf G}$ into position.

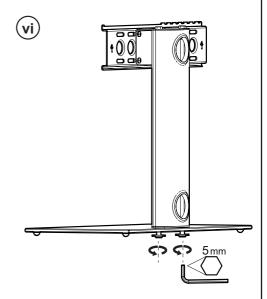

Attach the nut covers

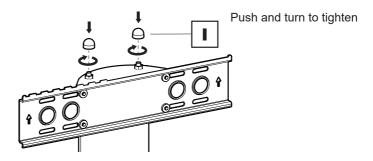

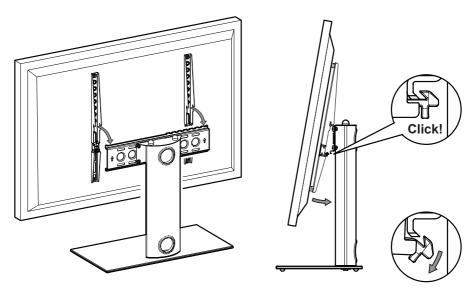

To remove TV

Manage cables through the column

