


Wheeled TV Cart with MDF Base Model: PLSWTC2

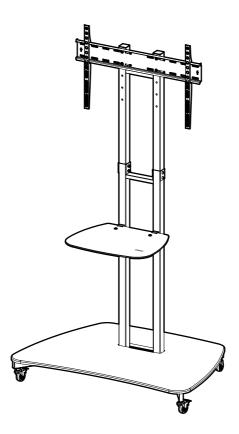

www.pulse-audio.co.uk



Read through <u>ALL</u> instructions before commencing installation.

IMPORTANT INFORMATION!

We advise that before starting the assembly of this product that you familiarise yourself with the instructions and the parts list in this leaflet.

Do not's

Do not over tighten any part of this assembly.

Do not place hot or cold objects on to or close next to any glass surface unless the object is sufficiently insulated to prevent contact.

Do not strike the glass with hard or pointed items.

Do not sit or stand upon horizontal glass surfaces.


Do not use washing powders or other substances containing abrasives when cleaning the glass.

Do's

Do use a damp cloth with diluted washing up liquid for cleaning the glass surfaces. Check all nuts and bolts from time to time.


Maximum TV weight and shelf capacities

WARNING: Wherever possible distribute weight evenly.

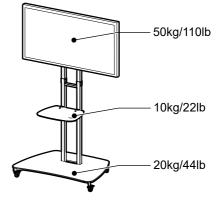

WARNING



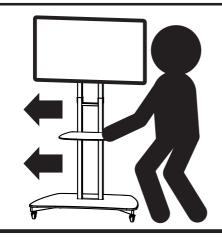



Only adults (16+) should move the cart


Always push the side of the cart

Never push top of cart - always push near middle

Push, don't pull

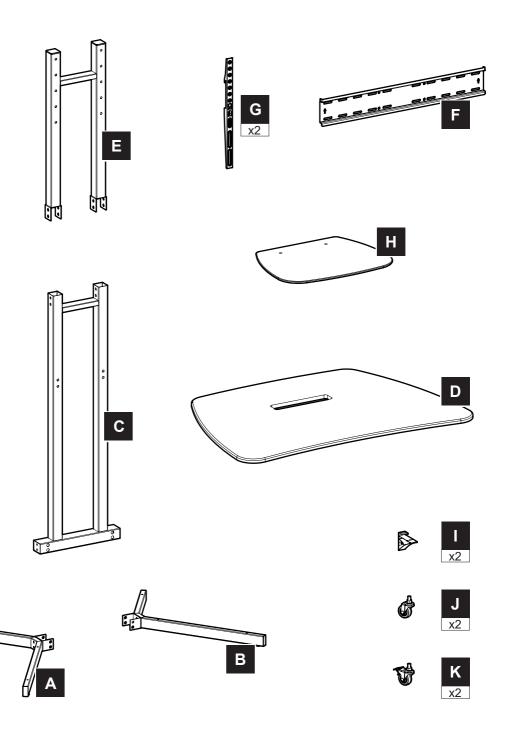


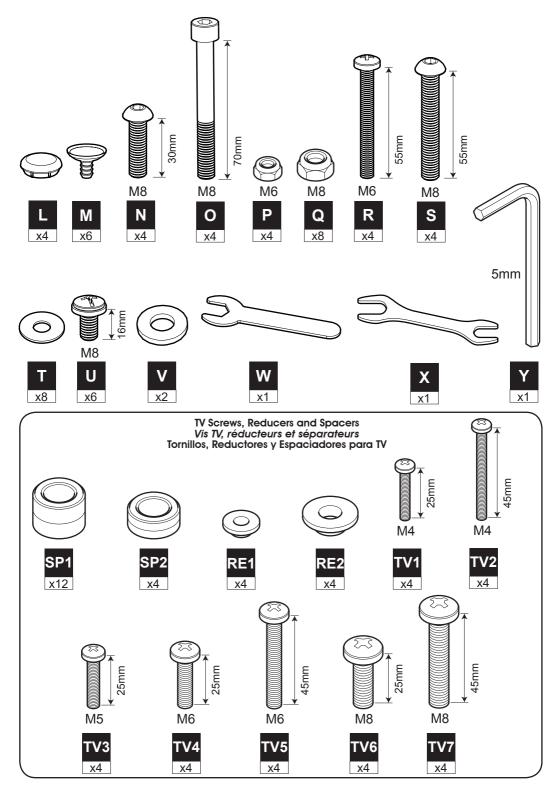

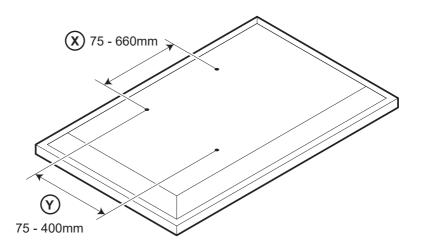






If width \bigotimes is greater than 660 mm or height \bigotimes greater than 400 mm STOP installation now and contact the customer help line

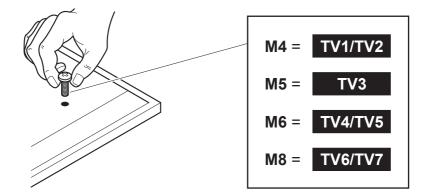



You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 9.

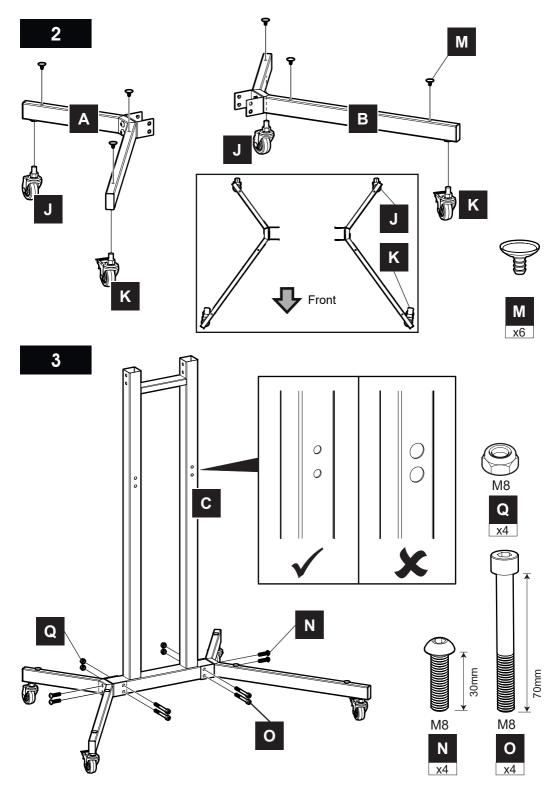


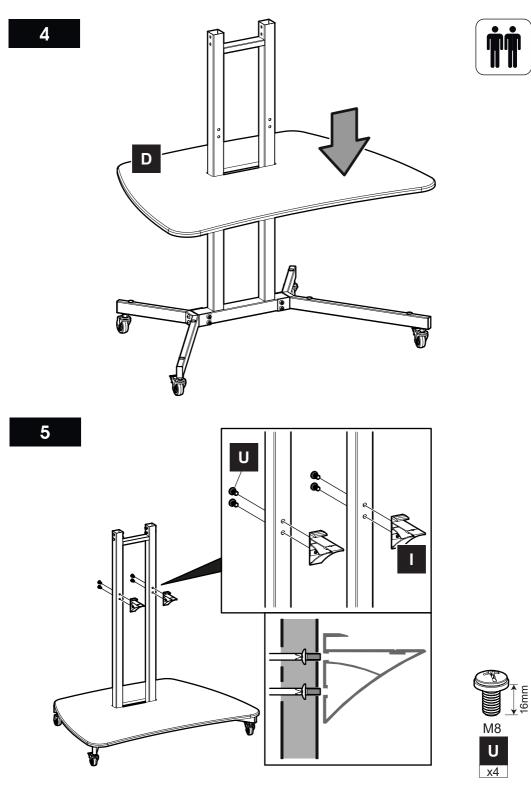

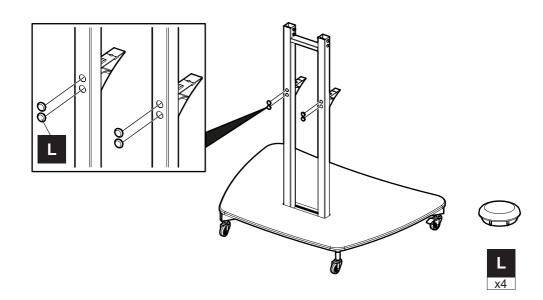

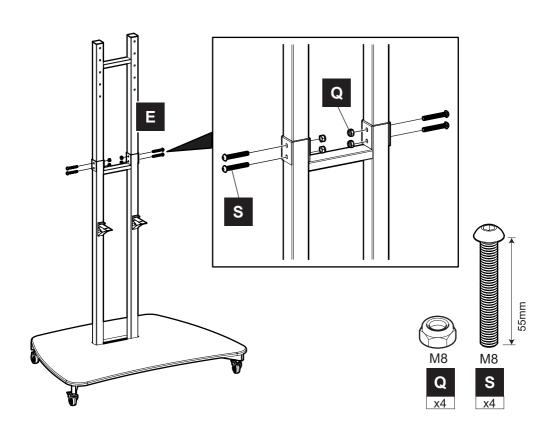

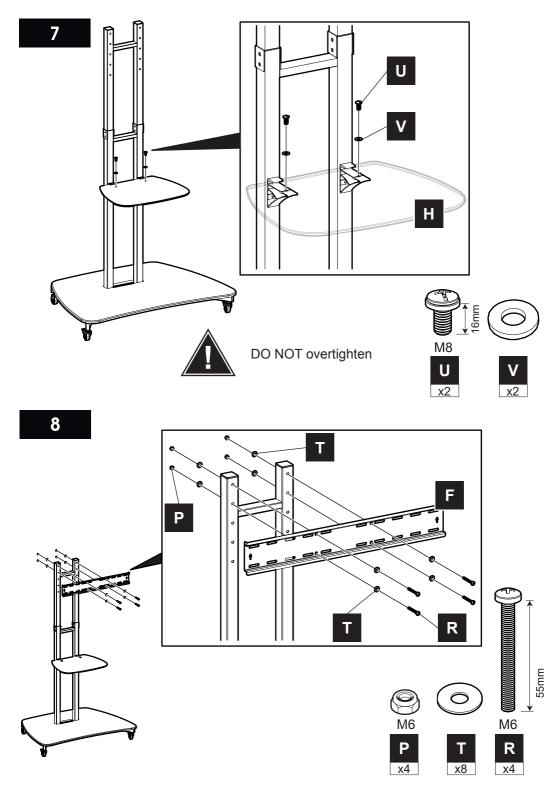

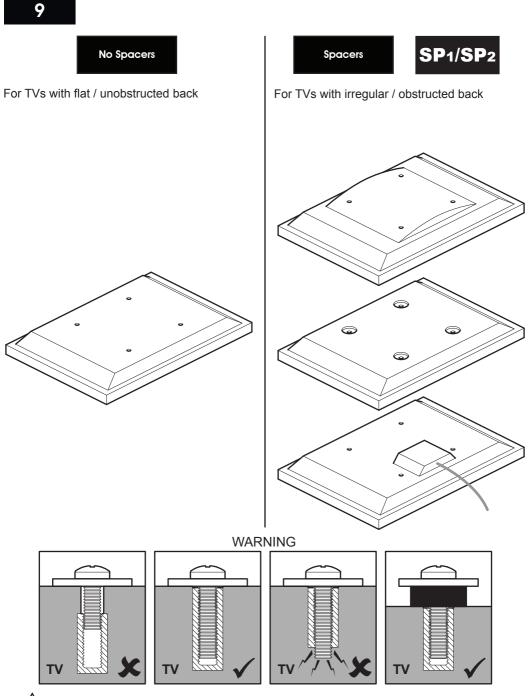

After completing step 9 you will have fittings left over, please keep for future reference

Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations

