


PULSE

TV Wall Mount Flat To Wall 37" to 80"
Model: PLS610

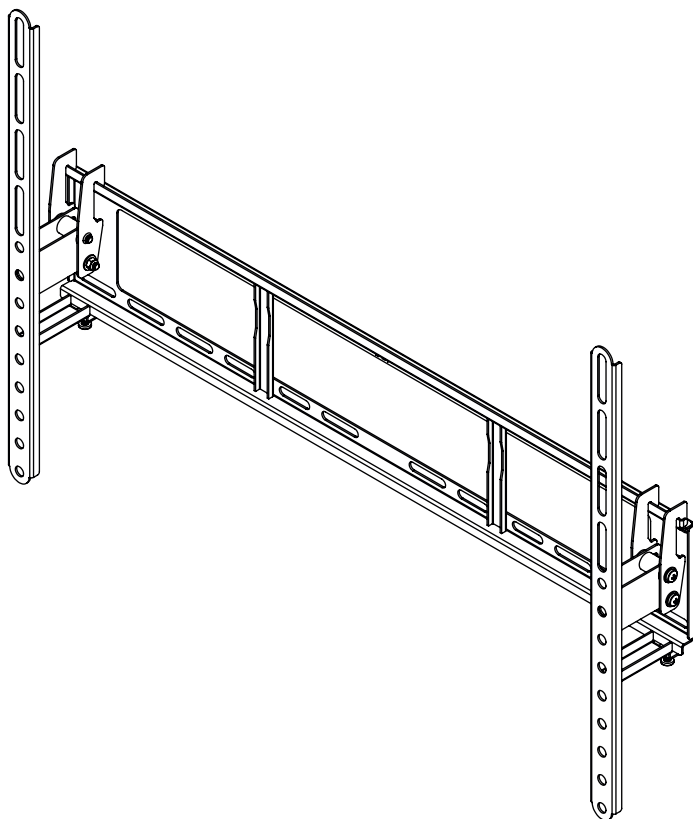


www.pulse-audio.co.uk





Read through ALL instructions before commencing installation.


Retain all packaging in case the bracket needs to be returned.
Contents may vary from photography/illustrations.
You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.
This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.
It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

Tools Recommended







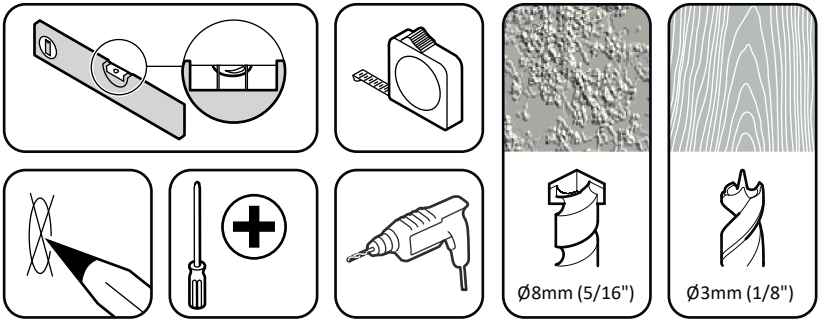


Boxed Parts


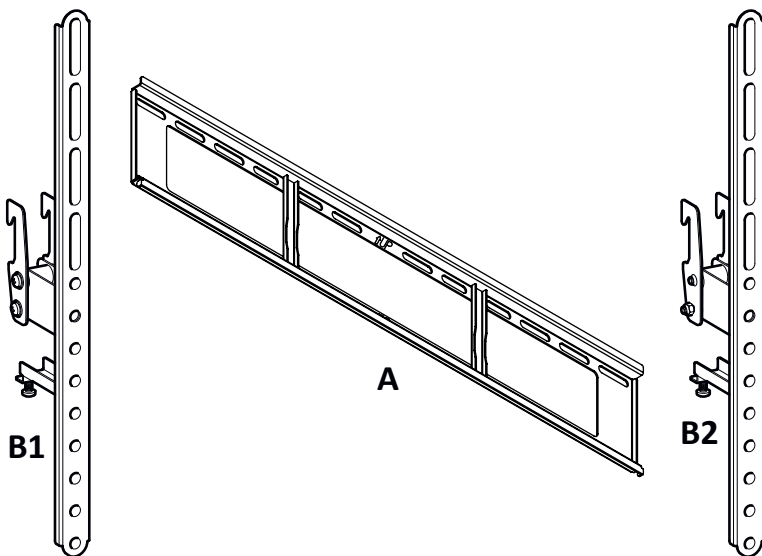
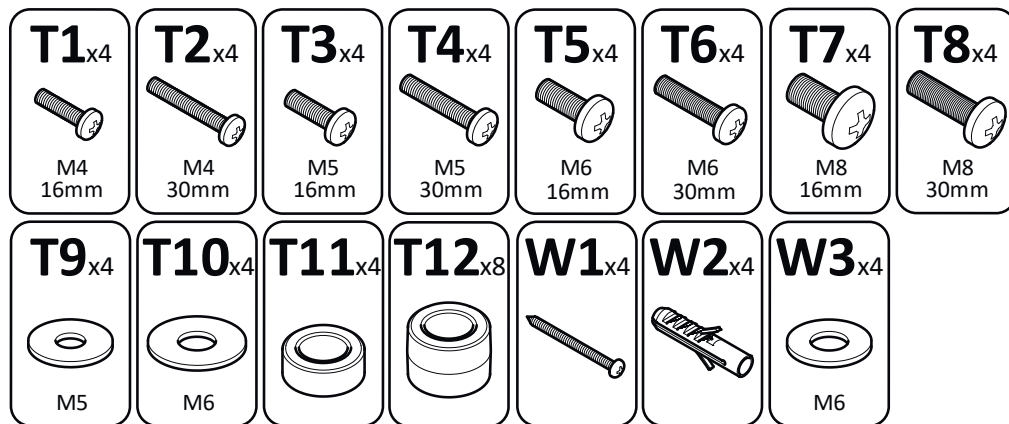


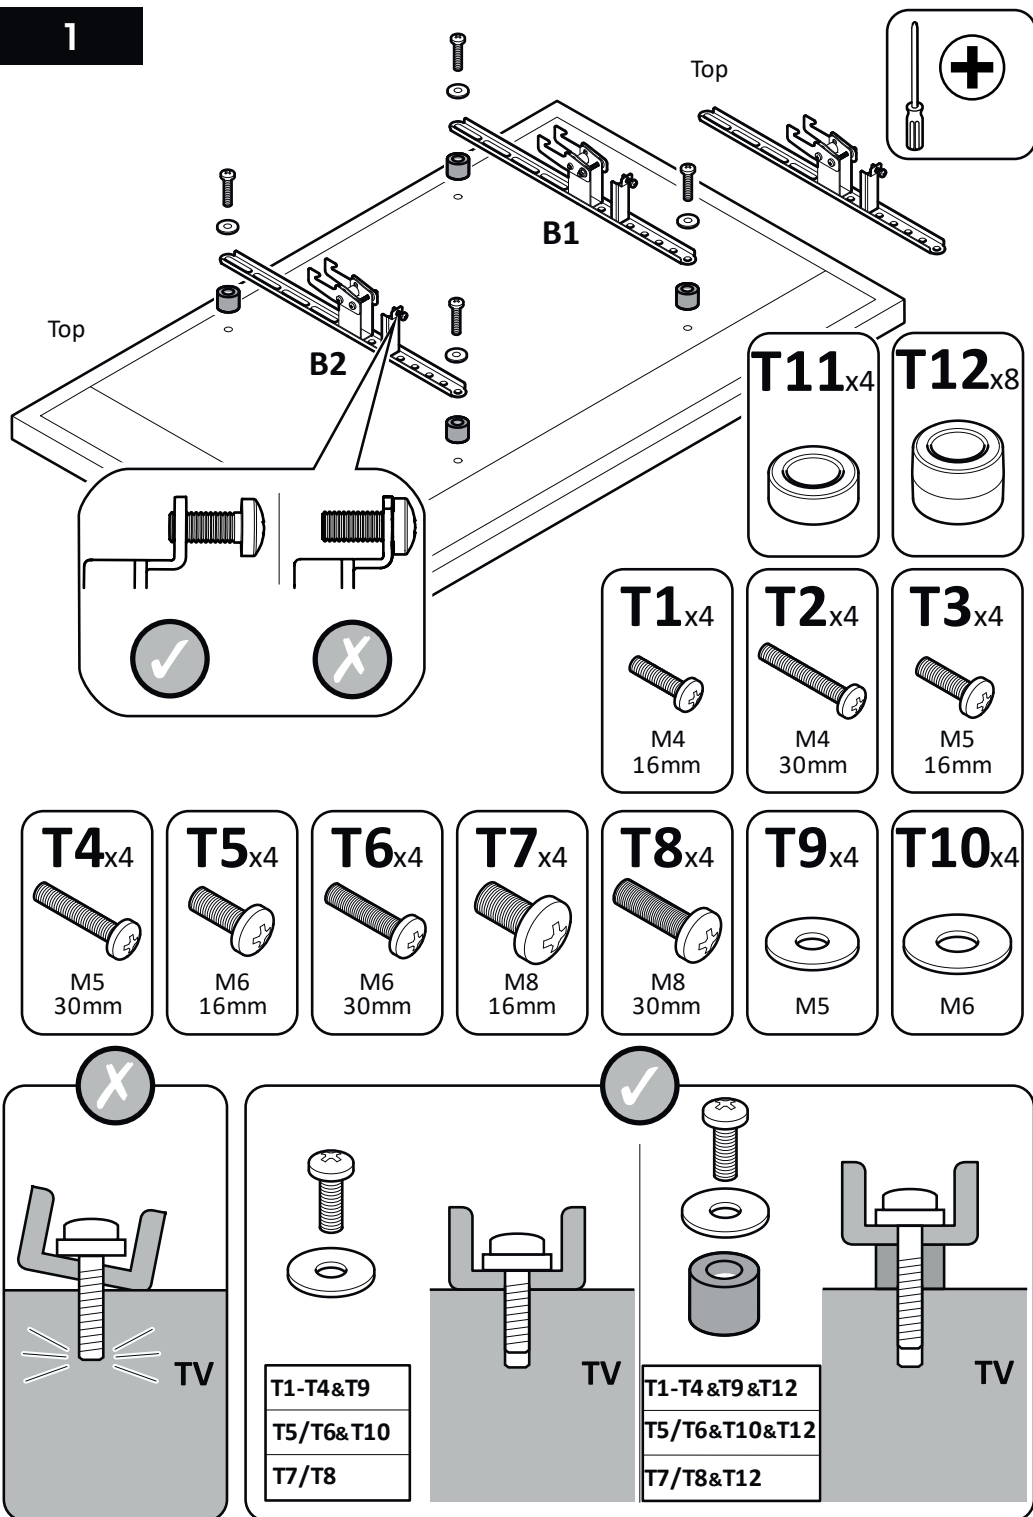


2

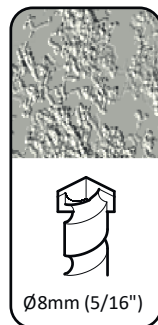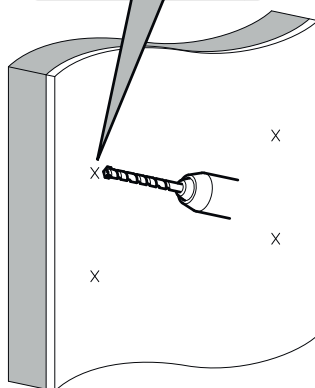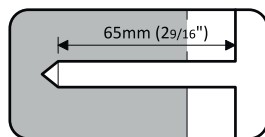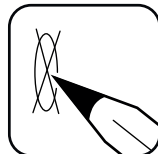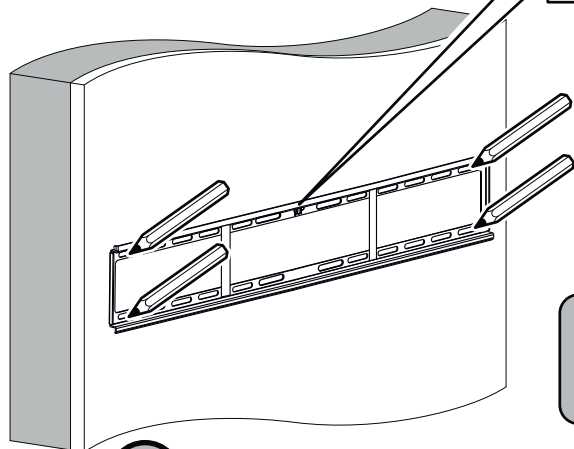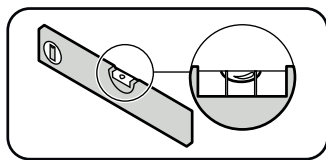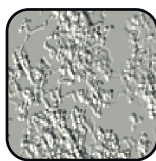

Ø8mm (5/16")

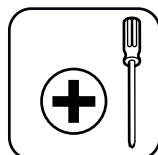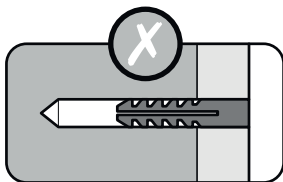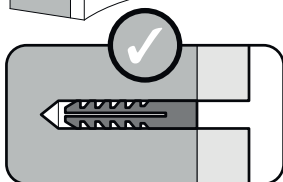

Remove dust from hole

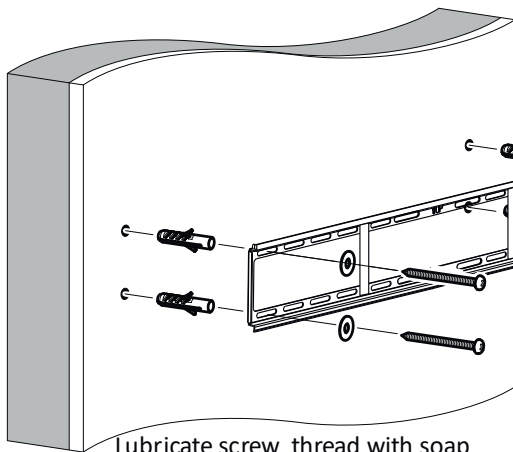

Lubricate screw thread with soap

W3 x4




M6


W2 x4











W1 x4

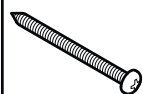




2

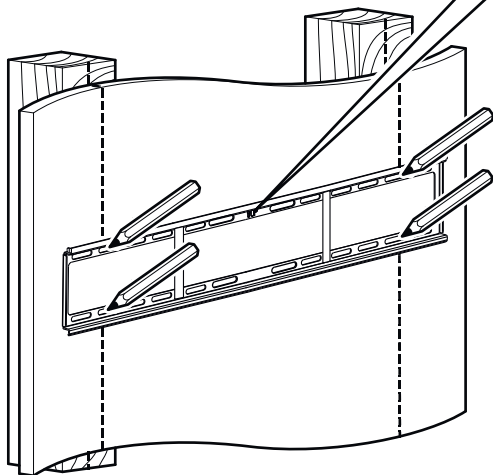

Ensure bracket is in the centre of the wood stud

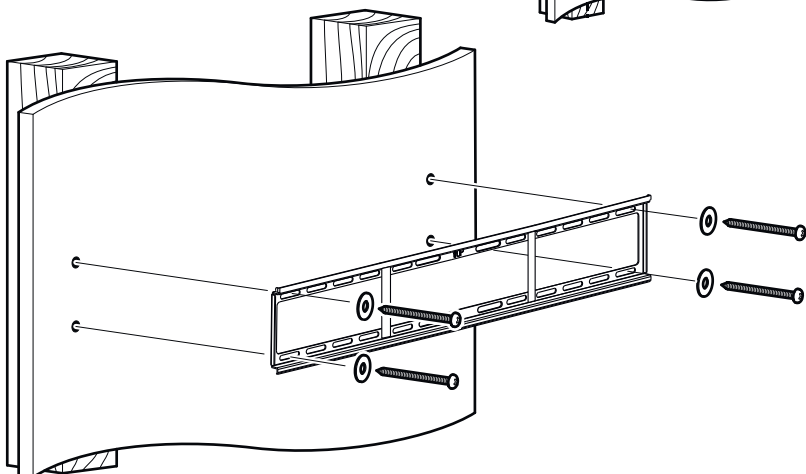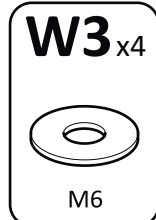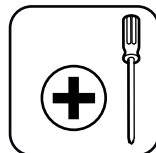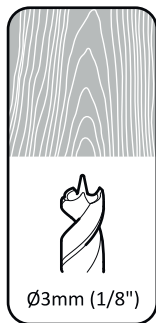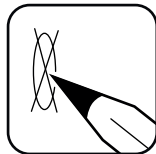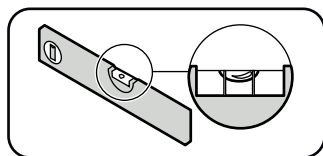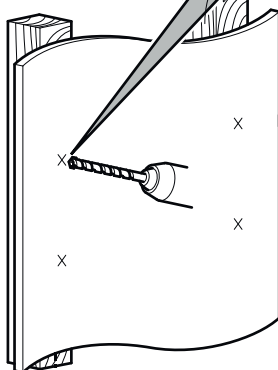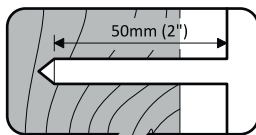


Lubricate screw thread with soap

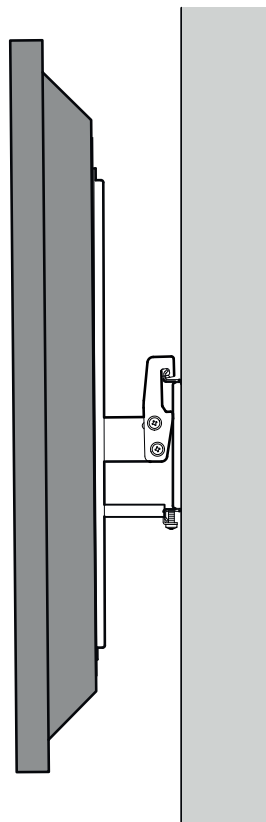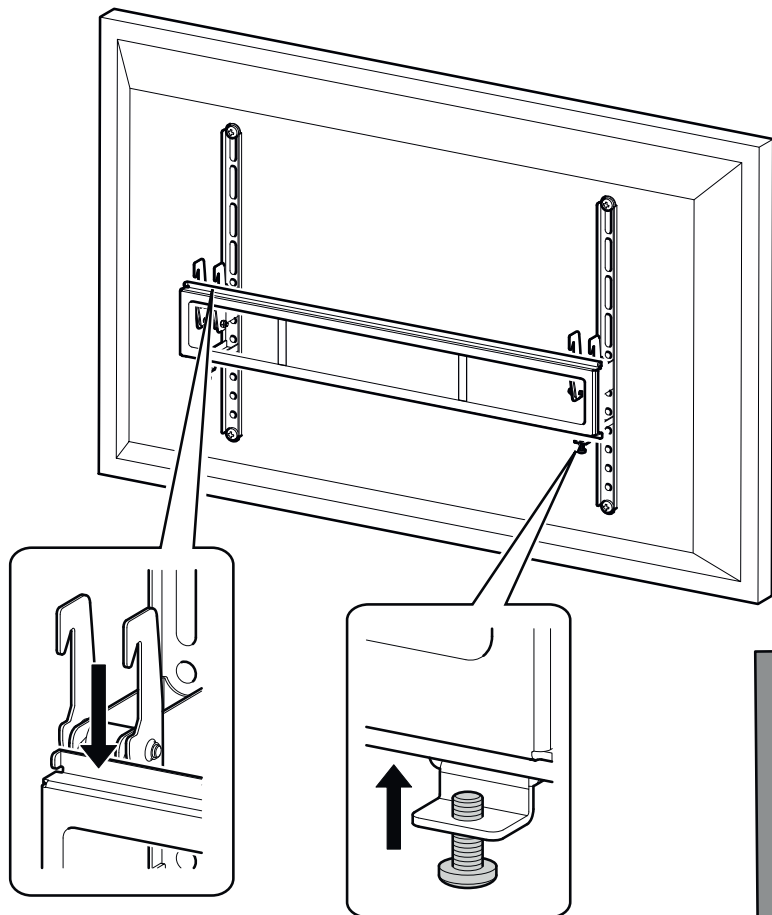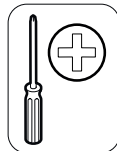

4**Optional**

You can slide your TV horizontally by small amounts if required

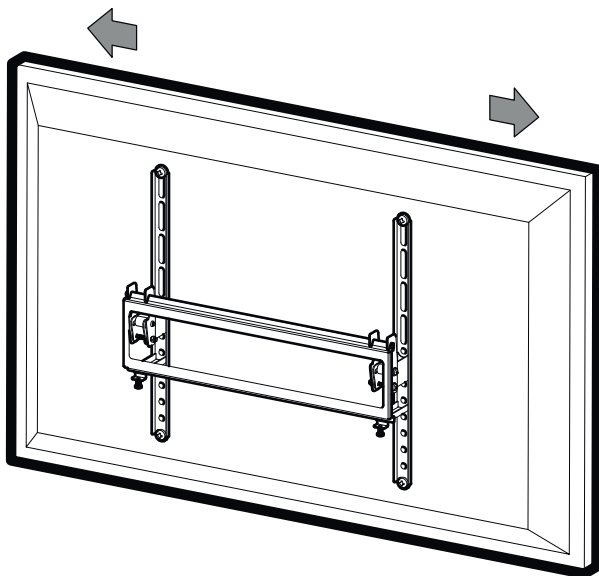**5****Lock tilt**