

Boxed Parts

T1 x4
M4
16mm

T9 x4

T2 x4
M4
30mm

T10 x4

T3 x4
M6
16mm

W1 x2

T4 x4
M6
30mm

W2 x2

T5 x4
M8
25mm

W3 x2

T6 x4
M8
45mm

B x1

T7 x4
M5


T8 x4

T8 x4
M6


T8 x4

5

Optional - Lock Tilt

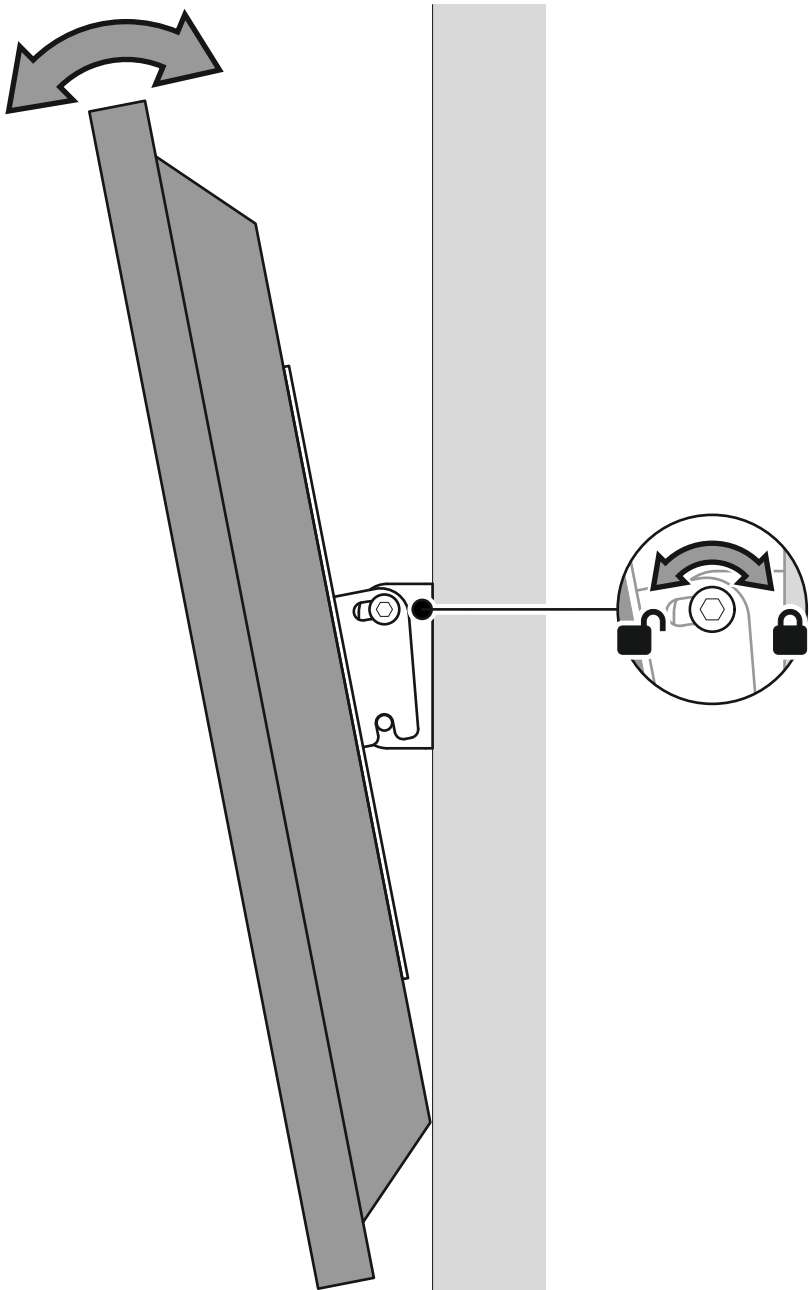

468362 rev00

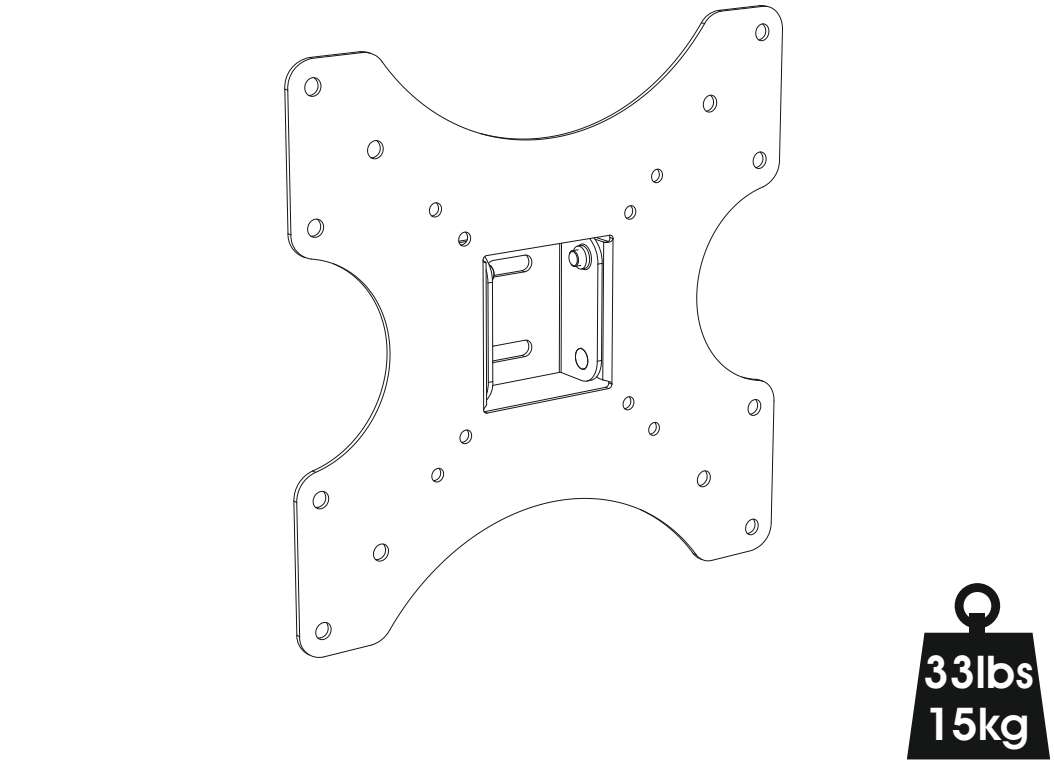

STOP Read through ALL instructions before commencing installation.

Please don't return me to the store

If you are unsure or need advice please contact our support team:

0333 320 0463 or **avfgroup.com**

Phone lines open Mon-Fri during AVF office hours

2

Fitting the TV Bracket

Top

Top

T9x4

T10x4

T1x4

T2x4

T3x4

T4x4

T5x4

T6x4

T7x4

T8x4

M4 16mm

M4 30mm

M6 16mm

M6 30mm

M8 25mm

M8 45mm

M5

M6

X

✓

TV

TV

TV

T1/T2+T7

T3/T4+T8

T5/T6

T1/T2+T7+T9/T10

T3/T4+T8+T9/T10

T5/T6+T9/T10

3

Fitting the Wall Bracket to a Solid Wall

Concrete

55mm (2 1/8")

12.5mm (1/2") Max

Remove dust from hole

✓

X

Lubricate screw thread with soap

W1x2

W2x2

3

Fitting the Wall Bracket to a Wood Stud Wall

12.5mm (1/2") Min

50mm (2")

Ensure bracket is in the centre of the wood stud

W1x2

4

Connecting the TV

Bx1