
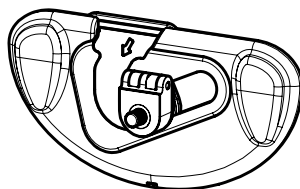


jl.avfgroup.com

469016 rev03

JML8650

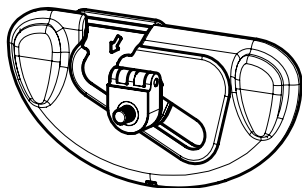

55kg  
120lb

STOP

Read through **ALL** instructions before commencing installation.


If you have any questions about this product or issues with installation, contact the customer services helpline before returning this product to the store.

**CUSTOMER SERVICES HELP LINE NUMBER: 0333 320 0463**


AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England

## Assembly Overview


### Fit Screen Hangers to TV

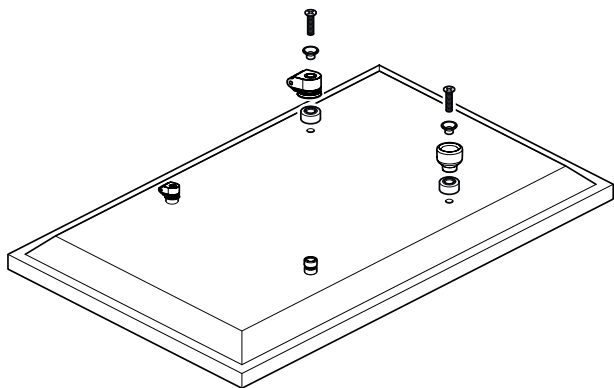

### Fitting the Wall Bracket

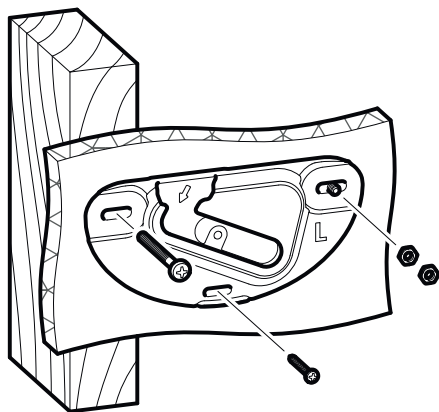

### Hanging the TV

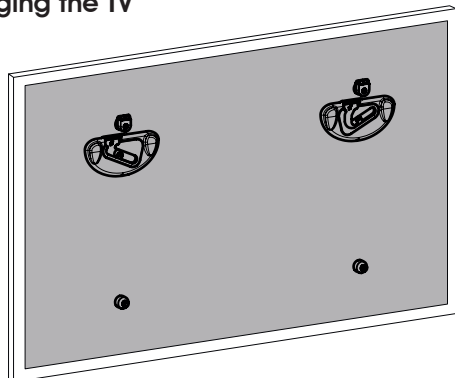

## Tools Recommended



Stud Finder



Ø5.5mm (7/32") Masonry








Ø10mm (25/64") Masonry



Ø3.5mm (9/64") Metal



Ø3mm (1/8") Wood

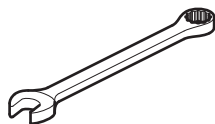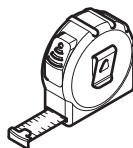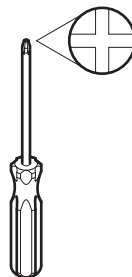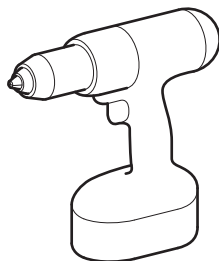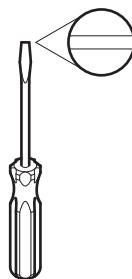

## Index

**1** Measure the TV fixing holes Width and Height

**2** Fit Screen Hangers to TV

**3** Marking Wall for Drill Points

**4** Fitting the Wall Bracket

**5** Fitting the Wall Bracket Covers

**6** Hanging the TV

Retain all packaging in case the product needs to be returned.

Contents may vary from photography / illustrations.


You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a substandard wall.


## Boxed Parts

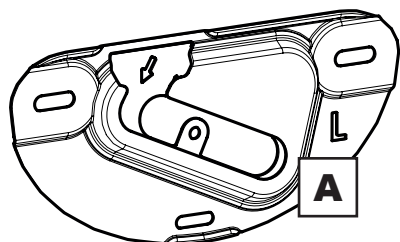


**A**

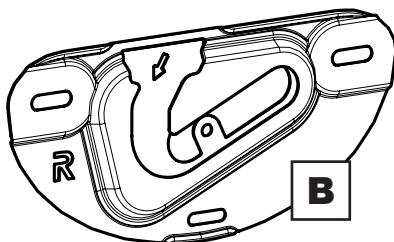


**B**

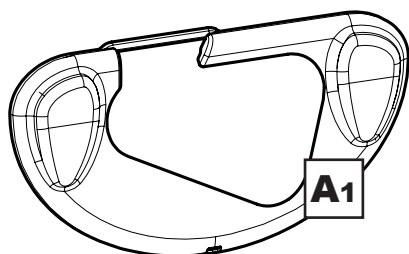


**A1**

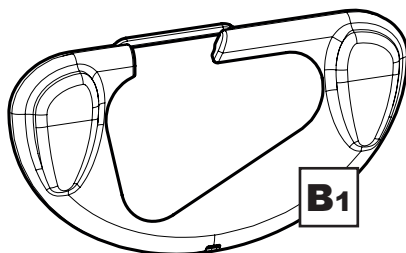

**B1**

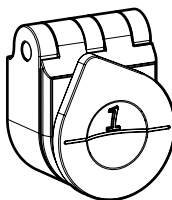

**C1** x1

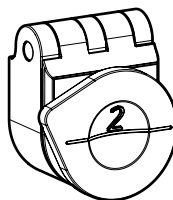

**C2** x1



**D** x2

## TV Screws, Reducers and Spacers



**E1** x12



 
**E2** x4



**F1** x4




**F2** x4




M4

 **G1** x4




M4

 **G2** x4




M6

 **G3** x4




M6

 **G4** x4




M6

 **G5** x4




M8

**G6** x4

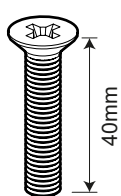

M8

**G7** x4

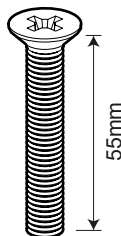


M8


**G8** x4



 
**J** x8



**I** x4

 


**K** x4

 


**L** x2



 
**M** x4




**N** x4

 

**R**

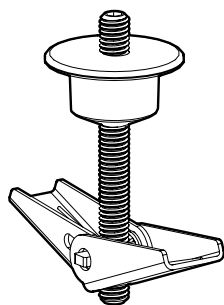

**H** x4

 

**O** x2




**P** x2




**Q** x2



**S**

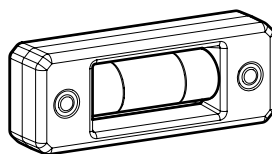

**T**

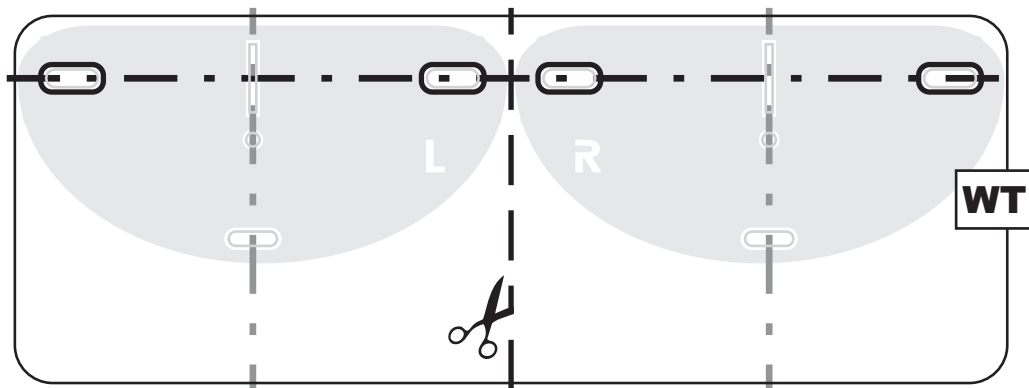


## Remove the Wall Bracket Covers and keep for step 7

Wall bracket covers **A1** and **B1** are removed in the same way.


i




ii

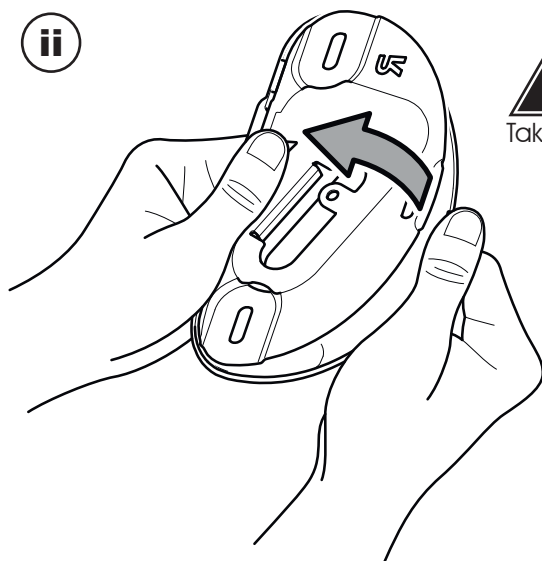

# 1 Measure the TV fixing holes Width and Height

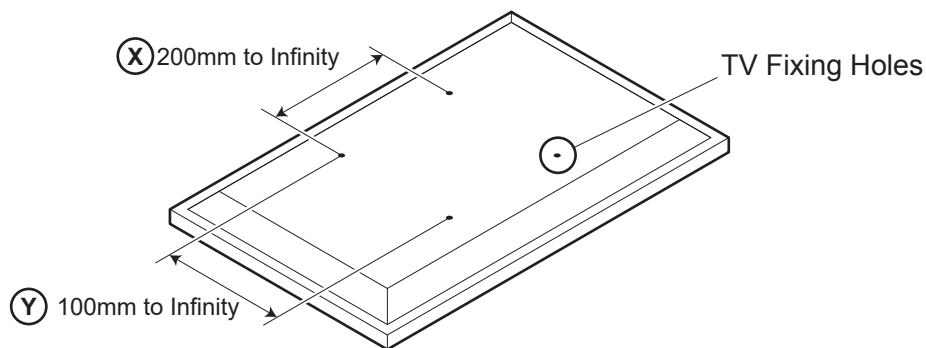

If width (X) is less than 200mm or height (Y) less than 200mm  
STOP installation now and contact the customer help line.

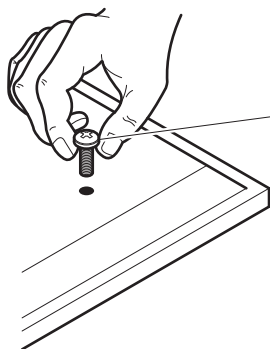

M4 =	G1/G2
M6 =	G3/G4/G5
M8 =	G6/G7/G8

You are provided with 3 diameters of TV fixing screws, **M4**, **M6** and **M8**.  
Determine the screw diameter that fits  
and remember for step 2




After completing step 2 you will have fittings left over, please keep for  
future reference.

## 2 Fit Screen Hangers to TV

Once you have established which screw diameter you need for your TV you will need to choose which wall spacing you require. Check the back of your TV and use the **OPTION** that fits your TV. Please see page opposite for more details.

### OPTION 1


25mm Wall Space

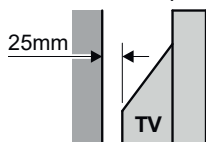

Suitable for TVs with a flat back and no obstructions

### OPTION 2


35mm Wall Space

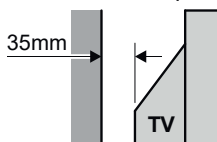

Suitable for TVs with small to medium obstructions eg power supply, mouldings etc

### OPTION 3

55mm Wall Space

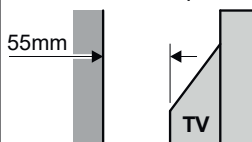

Suitable for TVs with large obstructions eg power supply, mouldings etc

### Top Fixings

**G1-G8**

If required **F1-F2**

**C2**

\* If required **E1**

**C1**

Top

Close after assembly




### Bottom Fixings

**G1-G8**


**F1-F2** If required

**D**

**E1** If required \*

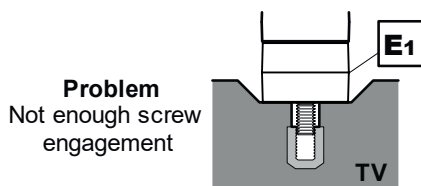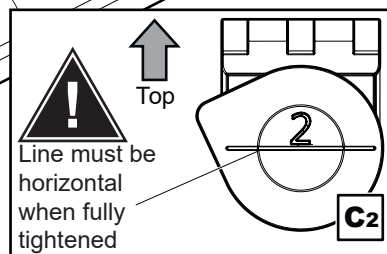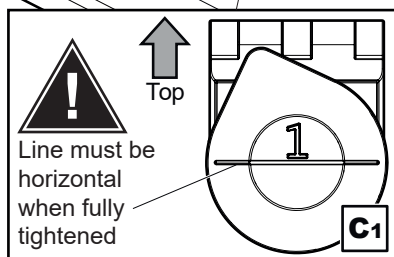

**Solution**  
Red spacer **E2**  
has replaced  
spacer **E1**

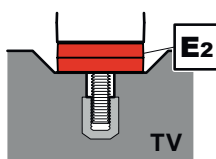

In certain circumstances it may be necessary to use red spacer **E2** as either a replacement or addition to spacer **E1**.

When is it necessary to use red spacers **E2**?


It is recommended that when fitting Hangers **C1/C2** and Stand-offs **D** to your TV you have at least 5-10mm of screw engagement. In certain circumstances you may need to use red spacers **E2** as either a replacement, or together with spacers **E1** to achieve this. Whenever you use red spacers **E2** you must use all 4 provided.




## OPTION 1

25mm Wall Space

### Top Fixings

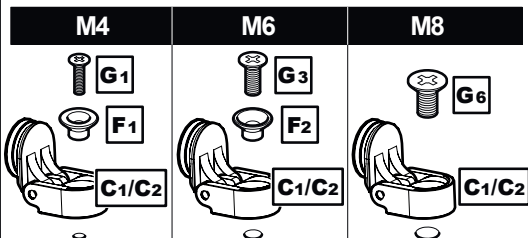


### Bottom Fixings

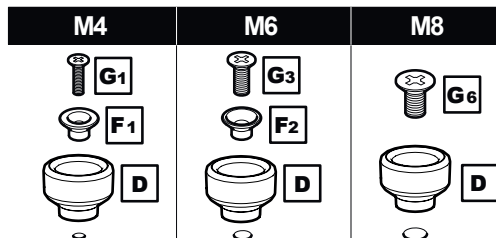


## OPTION 2

35mm Wall Space

### Top Fixings

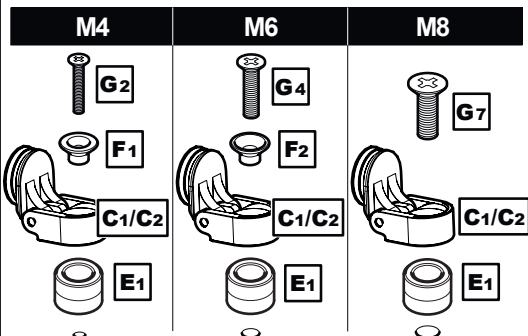


### Bottom Fixings

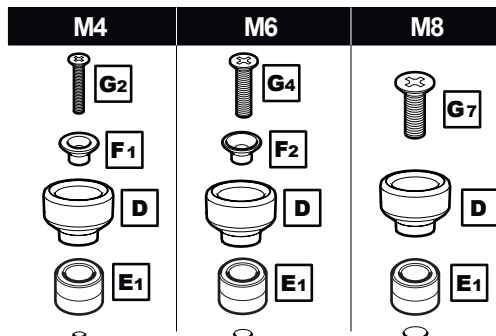


## OPTION 3

55mm Wall Space

### Top Fixings

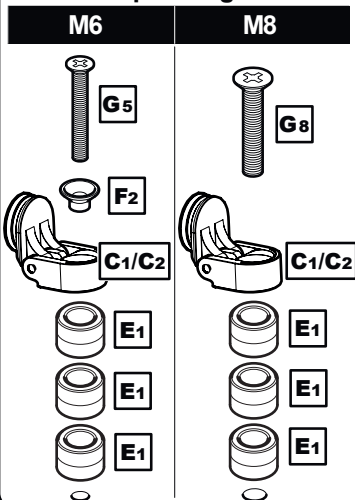

### Bottom Fixings

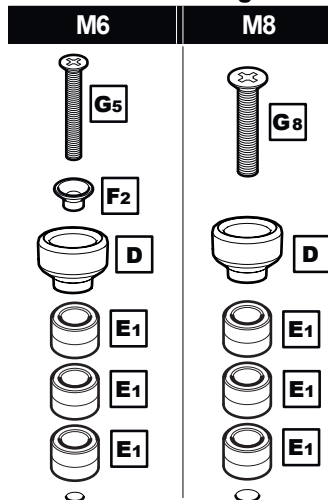


3

## Marking Wall for Drill Points



For this step you will need your Wall Marking Template **WT**.

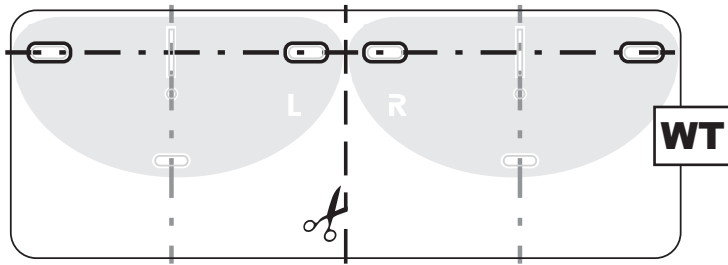

Use the Height Calculator app to achieve your desired TV height. Follow the link to the app shown on your Wall Marking Template.




Before marking the wall, determine the wall type that you have (i.e. Solid Wall/ Dot & Dab/Plasterboard/Wood Stud/Metal Stud). Ensure the drilling area is free from mains services (Gas/Electric/Water).



The Height Calculator app will give you the correct height to mark a horizontal line on your wall.





Mark a vertical line on the wall where you want the centre of your TV to be.

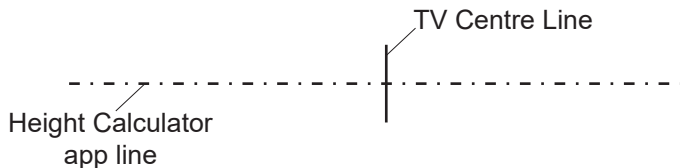



Measure the distance between the top two fixing holes on the back of your TV. Halve this number and mark a vertical line, this distance, either side of the TV Centre line on your wall (e.g. if the fixing holes are 400mm apart, measure 200mm either side of the TV Centre line).

e.g. 400mm

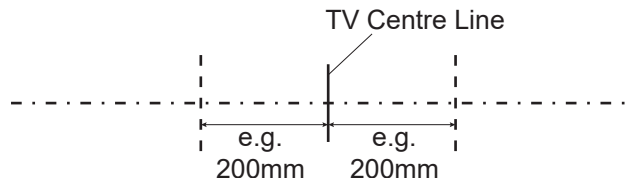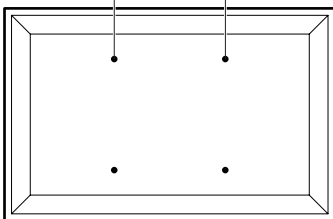

iv

Cut your Wall Marking Template along the dotted centre line. Place each half on the wall so the lines on the template match the lines marked on your wall. Mark the drill points as shown.

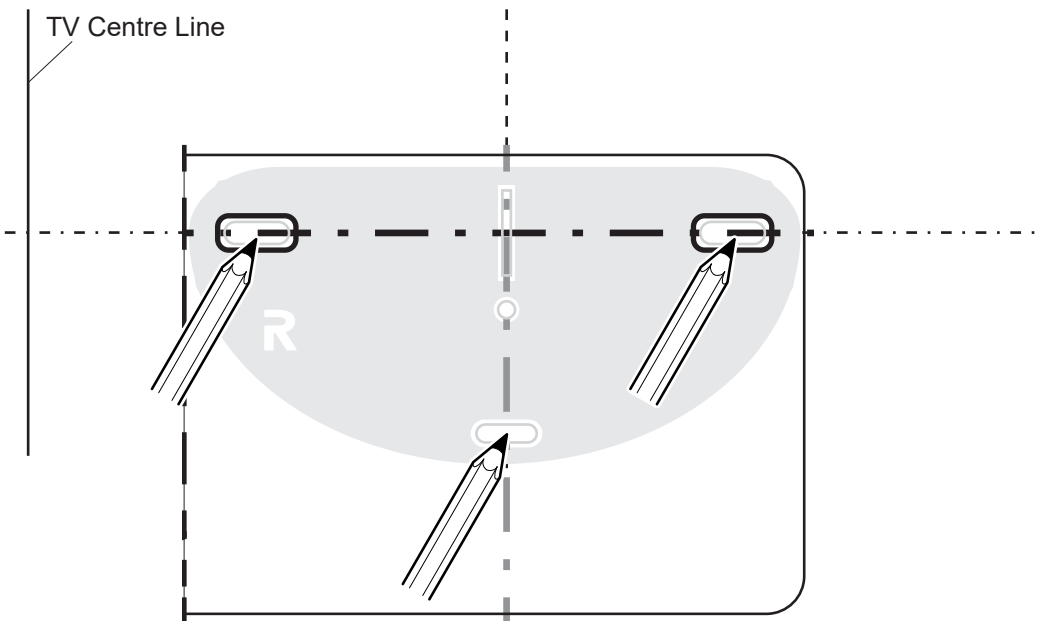
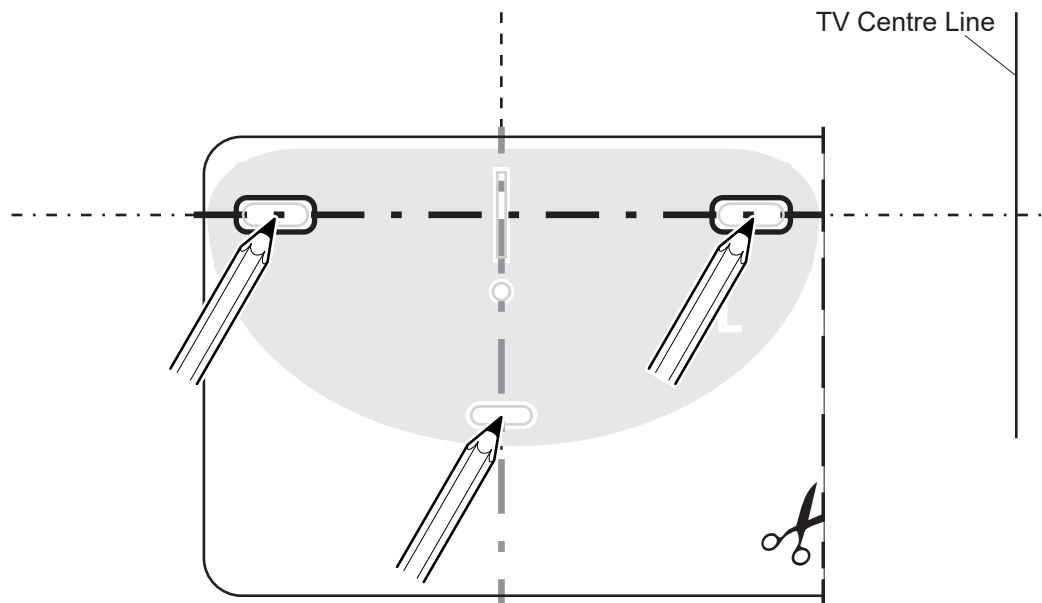


Before you drill make sure you are happy with the position and ensure all markings are correct and level.





# 4 Fitting the Wall Bracket

Use the correct fixings for your wall type. Mixing fixing types may be required for installations that span different wall types. **DO NOT OVER TIGHTEN SCREWS.**

## Solid Wall

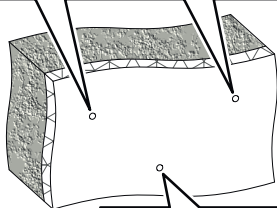
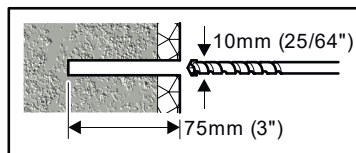


Remove dust from holes

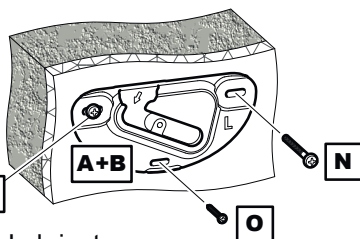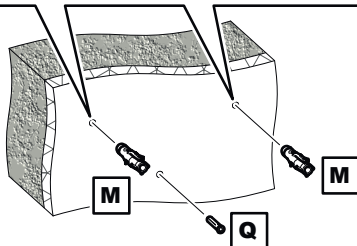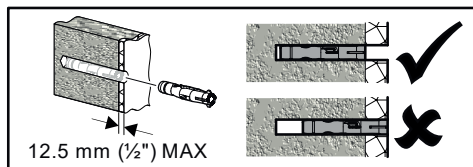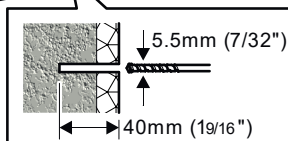

Lubricate screw thread with soap

## Dot & Dab

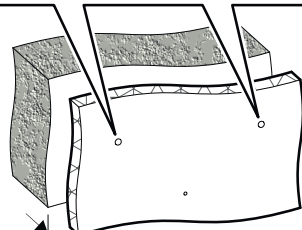
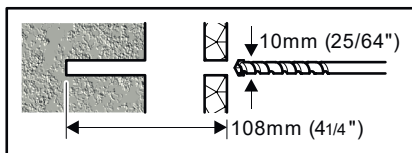


\* 40mm (1 9/16") MAX gap

\* If gap is above 40mm (1 9/16) use plasterboard fixing method









Remove dust from holes

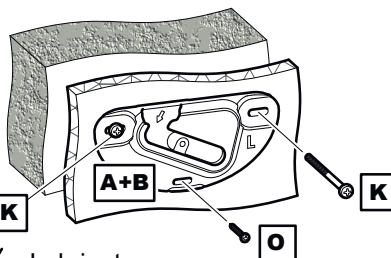
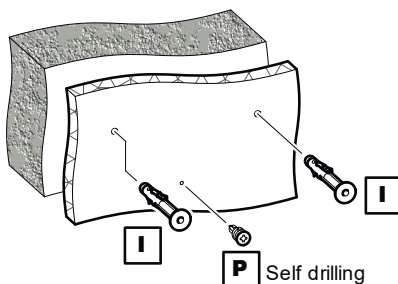


Lubricate screw thread with soap




## Plasterboard

 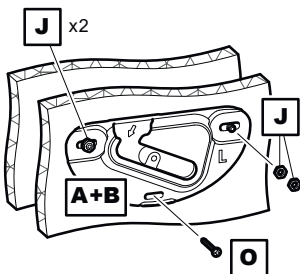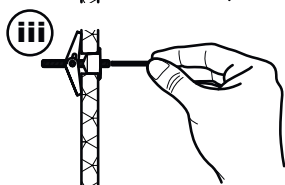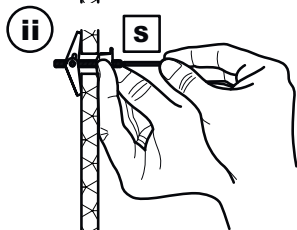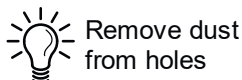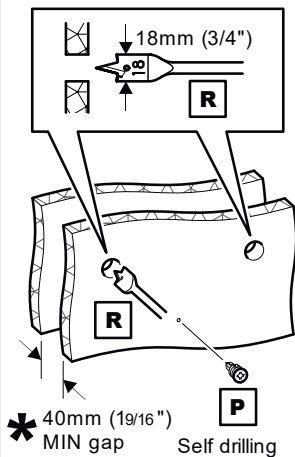

## Wood Stud

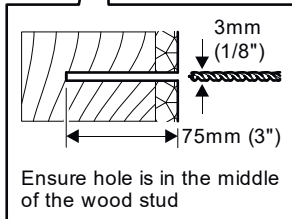
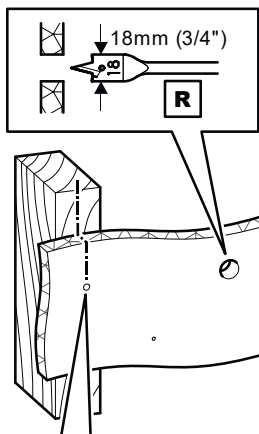


### Use Plasterboard Fixing H

 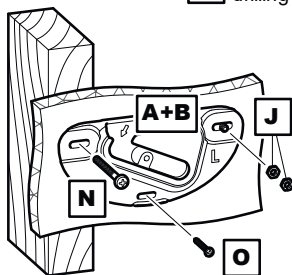
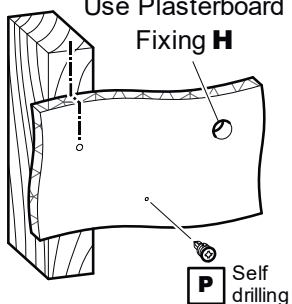


Only one fixing will be in the wood stud. The other fixings will be in plasterboard (see above)

## Metal Stud

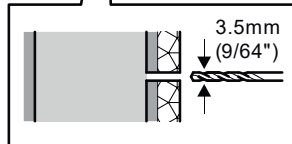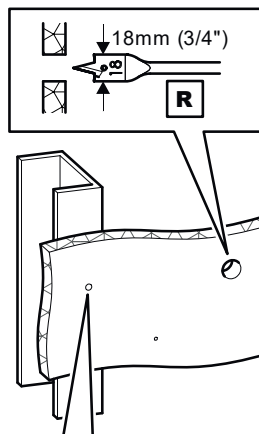


### Use Plasterboard Fixing H

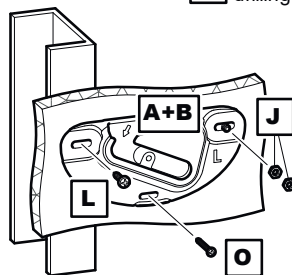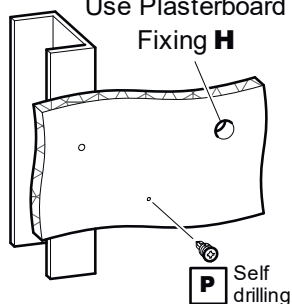

Only one fixing will be in the metal stud. The other fixings will be in plasterboard (see above)


## 5 Fitting the Wall Bracket Covers

On wall bracket covers **A1** & **B1** are 3 retaining tabs. These locate onto 3 retaining lips on wall brackets **A** & **B** and lock the wall bracket covers in position.

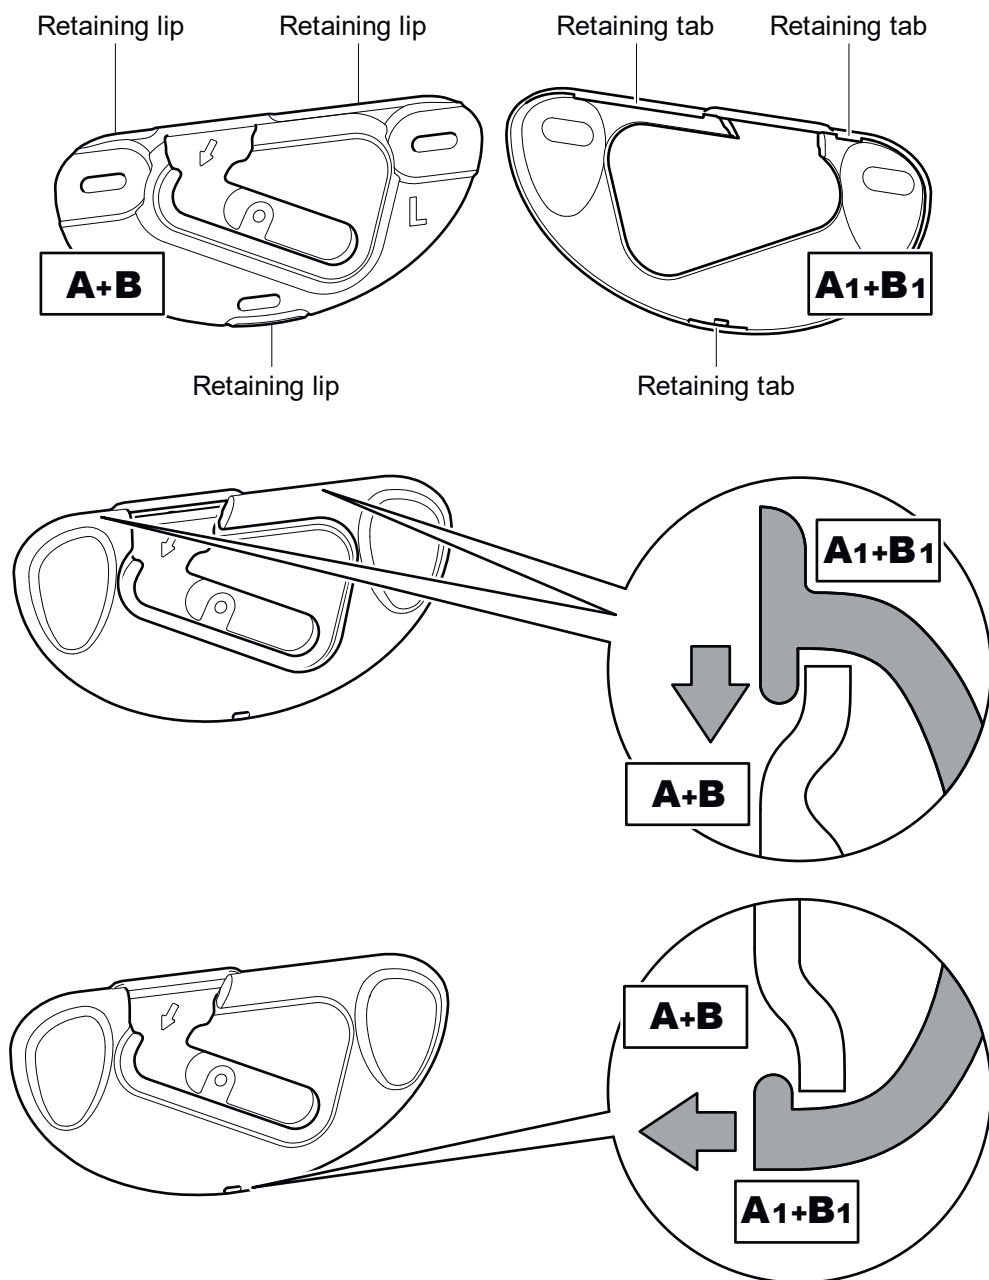

## 6 Hanging the TV

Present hangers **C1/C2** (on the back of the TV) to the opening on brackets **A & B**. Slide down and across into place. Ensure both hangers are fully engaged. If cables from the TV prevent the TV resting against the wall then an alternative hanger configuration will be required (see section 2). TV must be parallel to wall. Use spacers / stand-offs as shown in section 2.

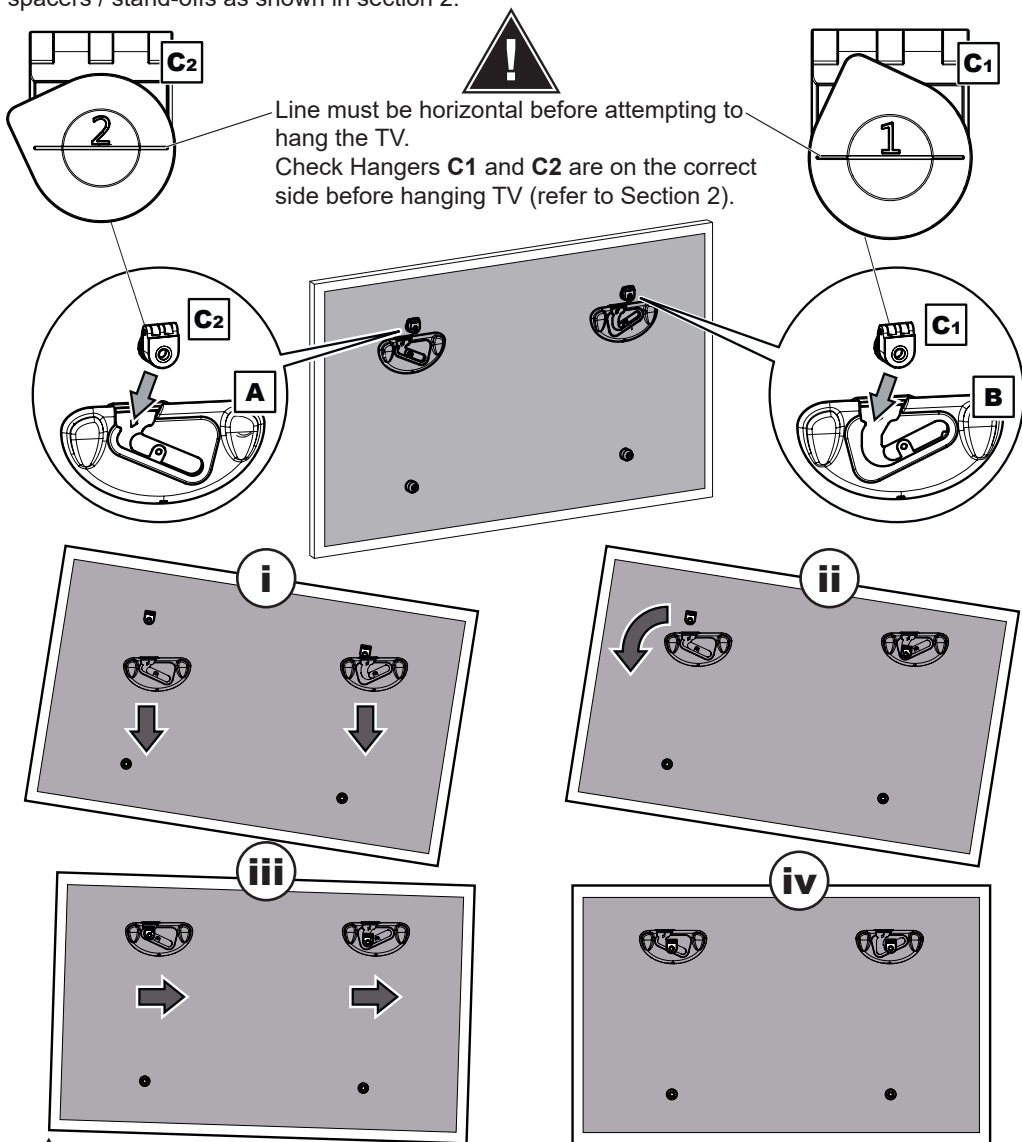

**DO NOT** release TV until it is secure and level.






### Removing the TV

To remove the TV reverse the movements as shown above.

## Removing the Wall Bracket Covers


Should you want to remove the wall bracket covers please follow the steps below.

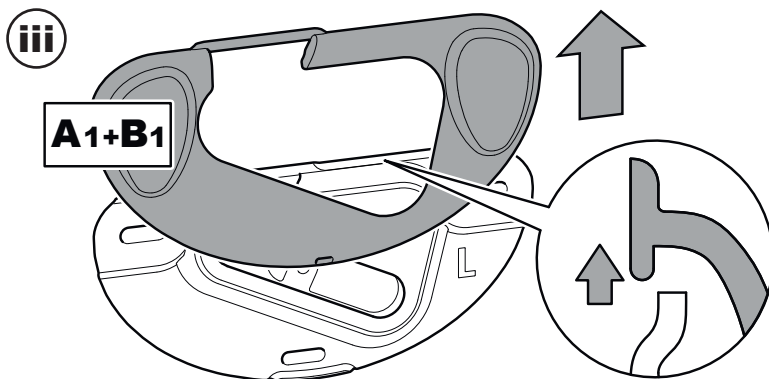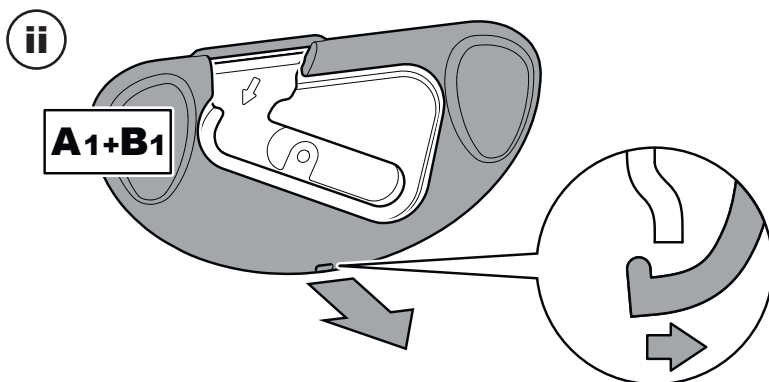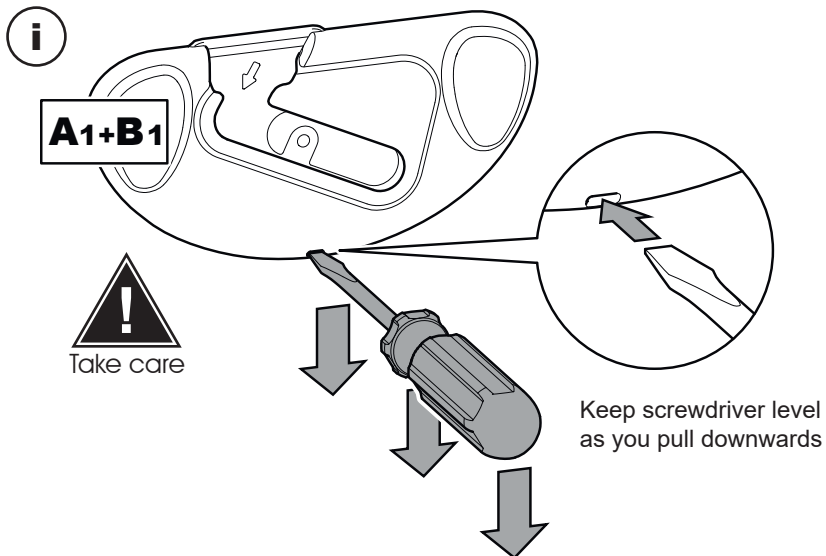



## Cable Access

For easy cable access, gently pull the bottom of the TV away from the wall using two hands. Hold the TV in position while accessing cables. When finished gently lower the TV back against the wall.

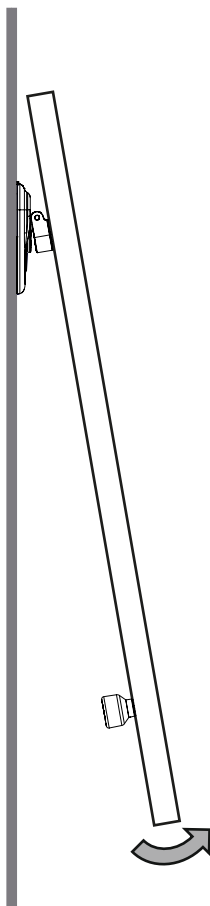

**Stop** before the top of the TV touches the wall.

