

25kg
55lbs



Read through ALL instructions before commencing installation.

If you have any questions about this product or issues with installation, contact the customer services helpline before returning this product to the store.

 


This TV Wall Mount is intended for use with televisions weighing **Maximum 25kg (55lbs)**. Use with products heavier than maximum weights may result in instability causing possible injury.


CUSTOMER SERVICES HELPLINE NUMBER: 0333 320 0463 (UK)

Assembly Overview


Fit the TV Mounting Plate

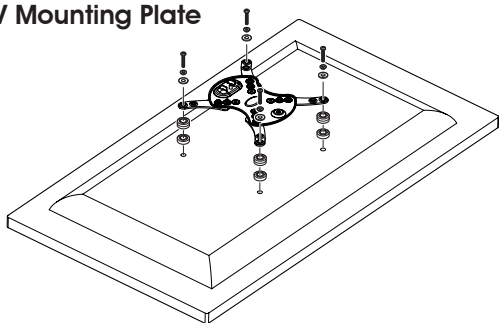


Fit the Wall Bracket

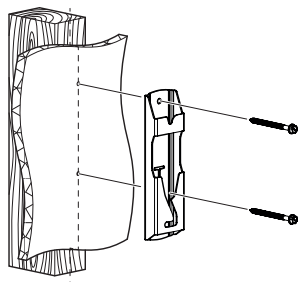 

Hang the TV

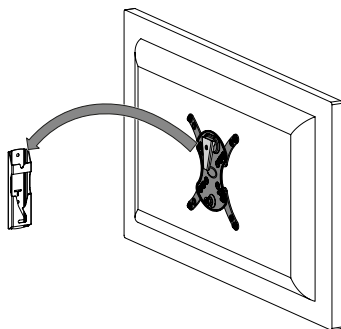 

Suitable Wall Types

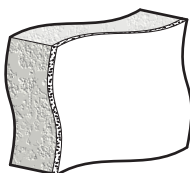 

Solid Wall

 


Wood Stud


Tools Recommended








Stud Finder

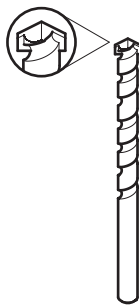

Ø10mm (25/64")
Masonry

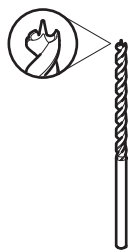 

Ø3mm (1/8")
Wood

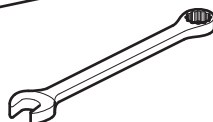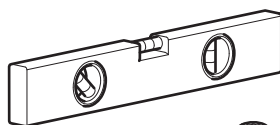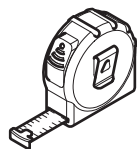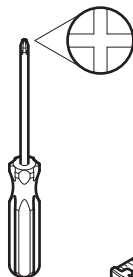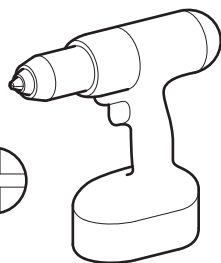     

Index

1 Measure the TV fixing holes Width and Height

2 Preparing the TV Mounting Plate

3 Fitting the TV Mounting Plate

4 Fitting the Wall Bracket

5 Hanging the TV

Retain all packaging in case the product needs to be returned.

Contents may vary from photography / illustrations.

 
 
 
 
You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a substandard wall.

Boxed Parts

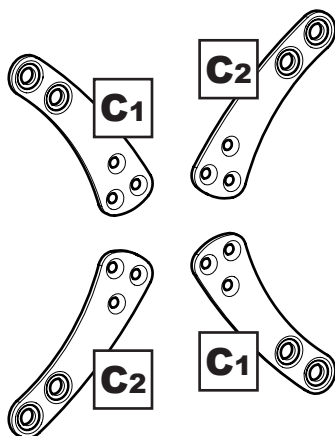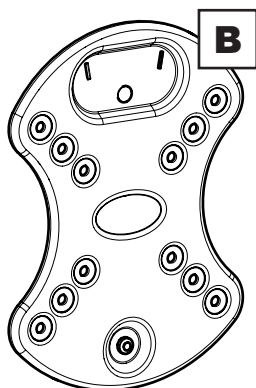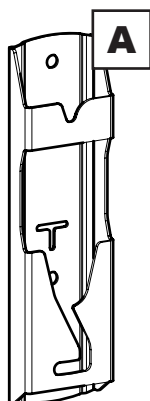

H x8

J x8

N x2

O x2

TV Screws, Reducers and Spacers



L1 x4



L2 x4



 
M1 x4




M2 x4




K1 x4




K2 x4

 


K3 x4

 


K4 x4

 


K5 x4

 


K6 x4

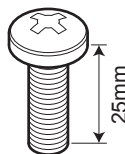 

K7 x4

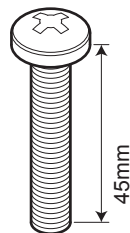 


K8 x4

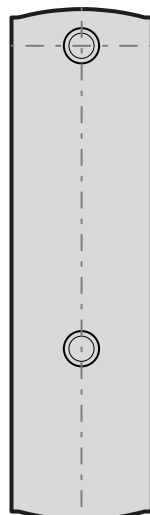 


WT

 1 Measure the TV fixing holes Width and Height

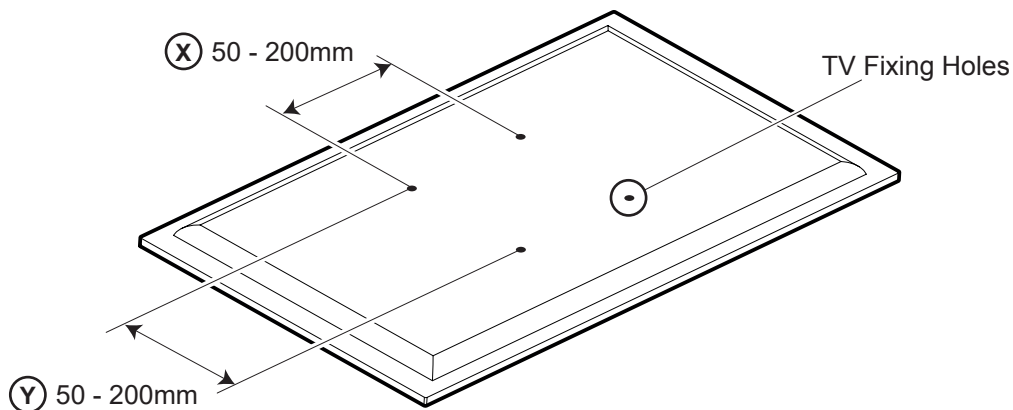

 If width (X) is greater than 200mm or height (Y) greater than 200mm
STOP installation now and contact the customer help line.

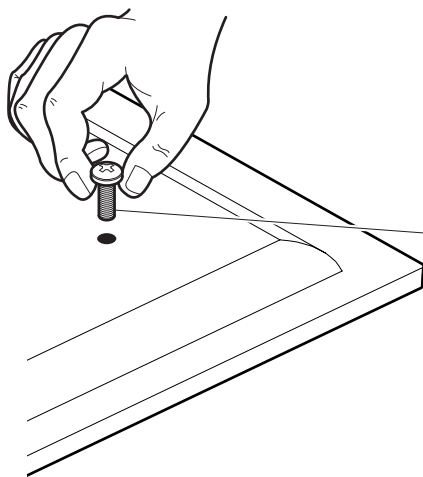

M4 = K1-K3

M6 = K4-K5

M8 = K6-K8

You are provided with 3 diameters of TV fixing screws **M4**, **M6** and **M8**.
Determine the screw diameter that fits and remember for step 3.

2 Preparing the TV Mounting Plate

Use the option that fits your TV

OPTION 1

- (X) 50mm x (Y) 50mm
- (X) 75mm x (Y) 75mm
- (X) 100mm x (Y) 100mm

OPTION 2


- (X) 100mm x (Y) 200mm
- (X) 200mm x (Y) 100mm

OPTION 3



- (X) 200mm x (Y) 200mm

If in any doubt please call the customer helpline

 
OPTION 1

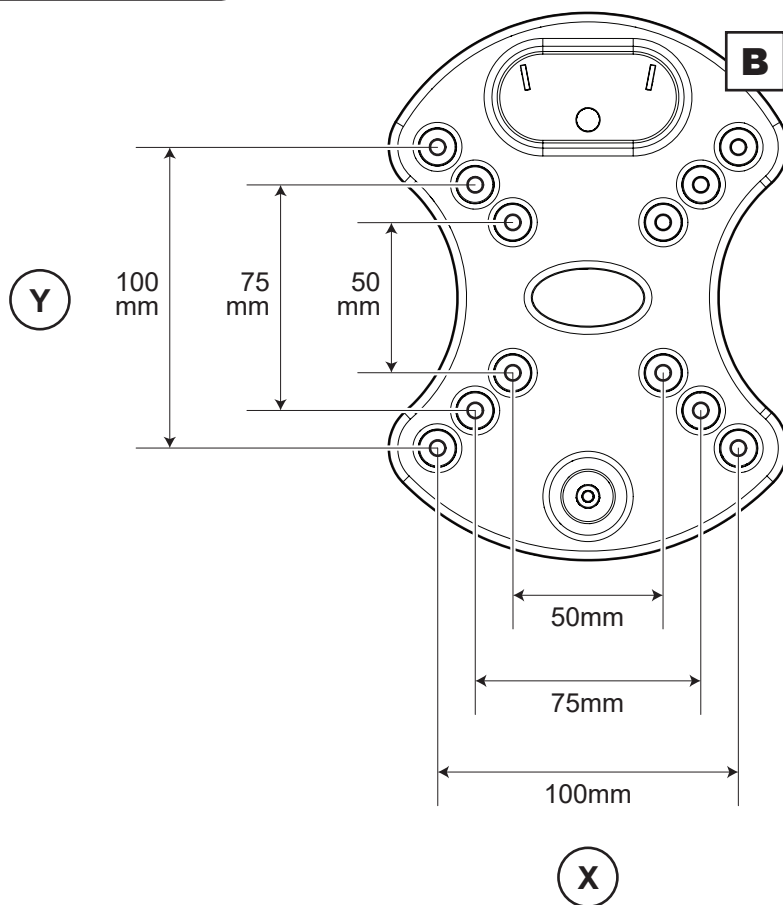

OPTION 2

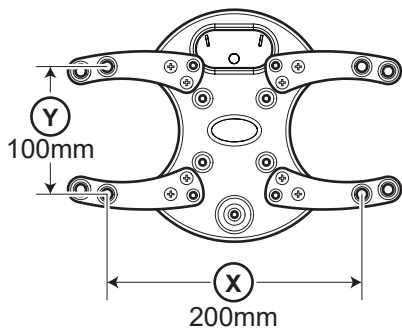 
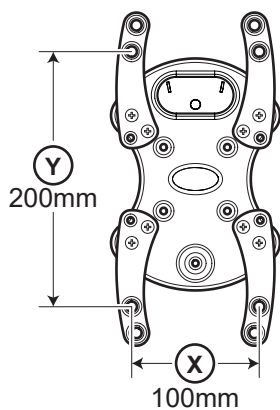 


OPTION 3

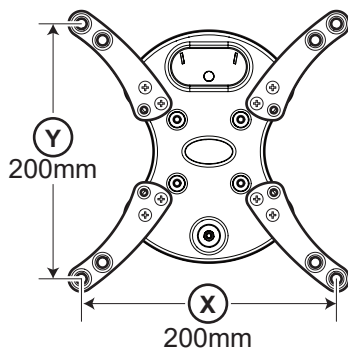 

Example shown is 200 x 200 fixings

  Top

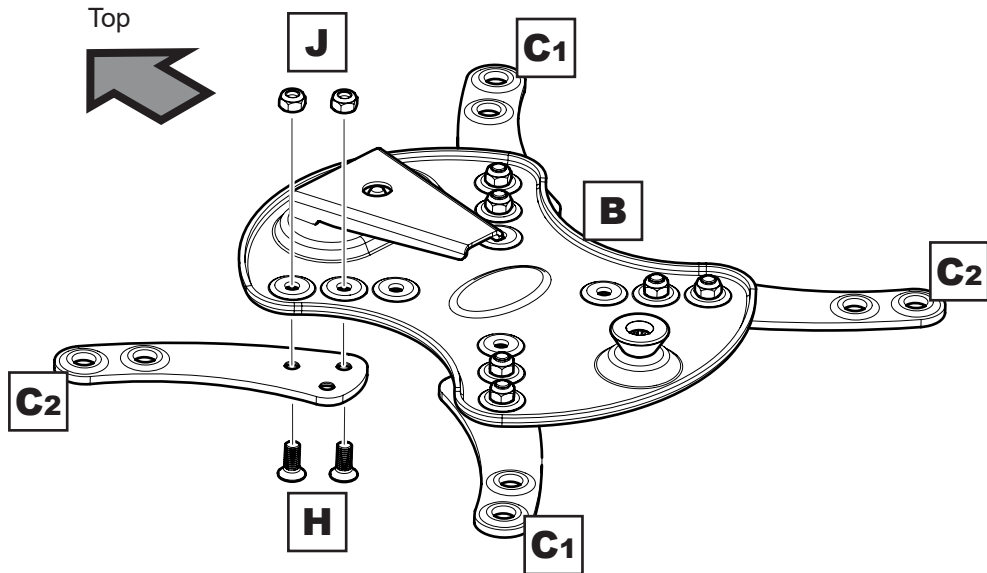


H x8 **J** x8

3 Fitting the TV Mounting Plate

No Spacers

 
For TVs with flat / unobstructed back.

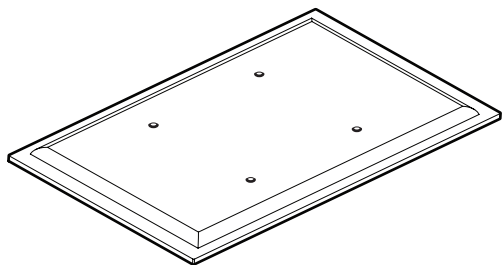


Spacers

M1/M2

 For TVs with irregular / obstructed back.

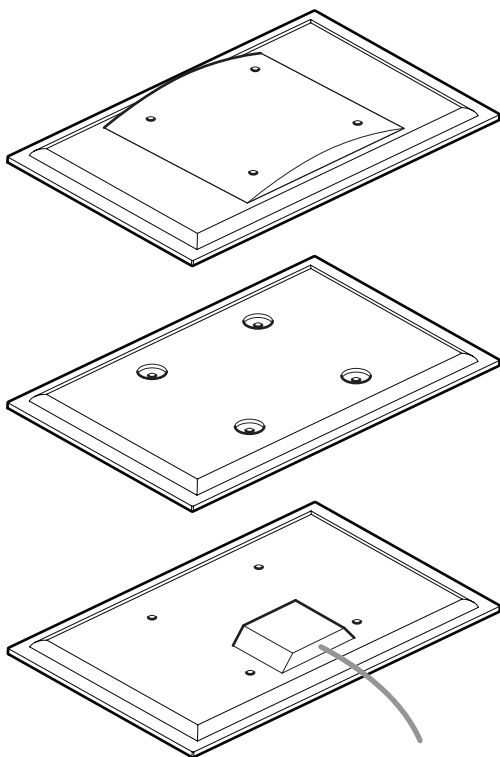


WARNING

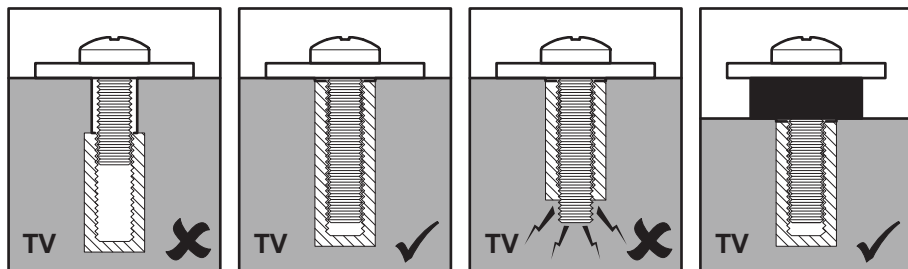 


After completing step 3 you will have fittings left over, please keep for future reference.

Attach the TV Mounting Plate to the back of your TV using suitable screw, reducer and spacer combinations.

 OPTION 1


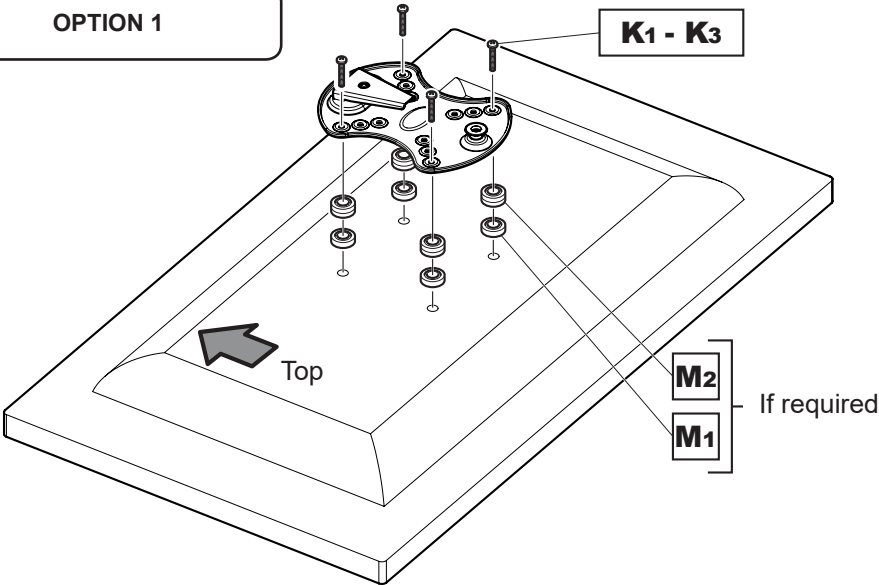


OPTION 2 & 3

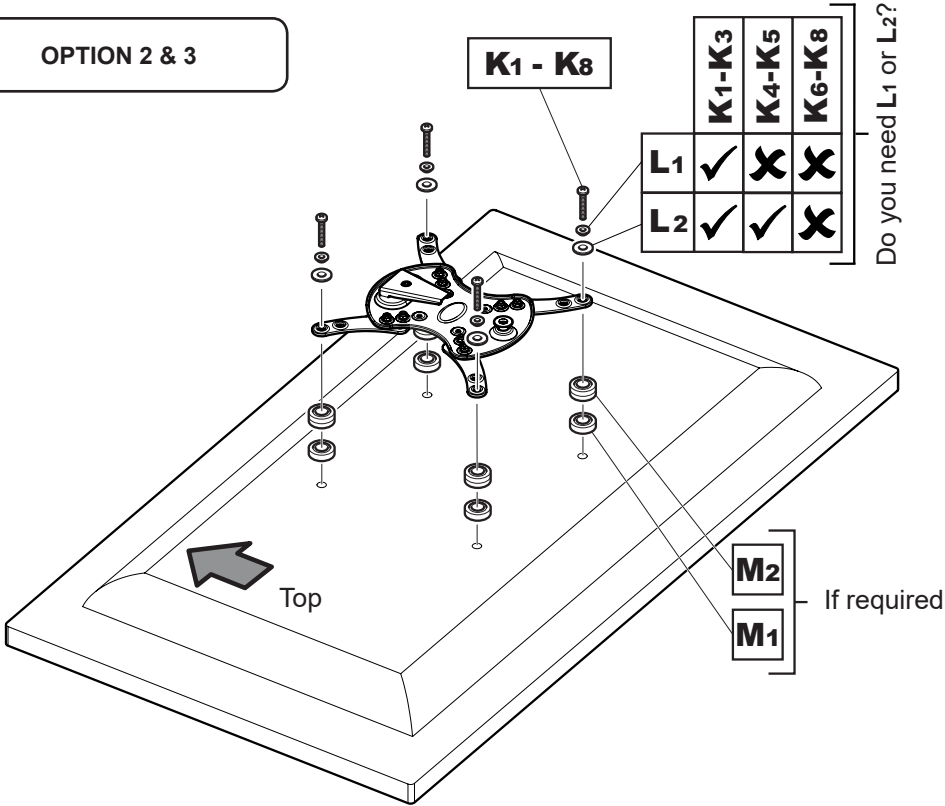 



4 Fitting the Wall Bracket

  Solid Wall

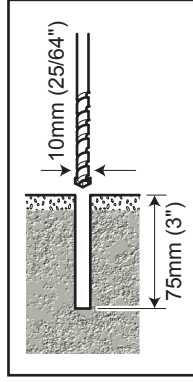
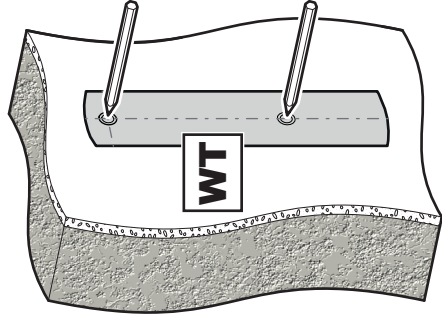


Remove Dust from Hole.

  
Wood Stud

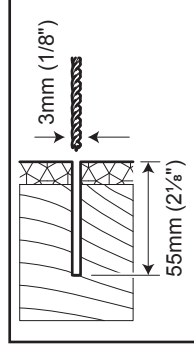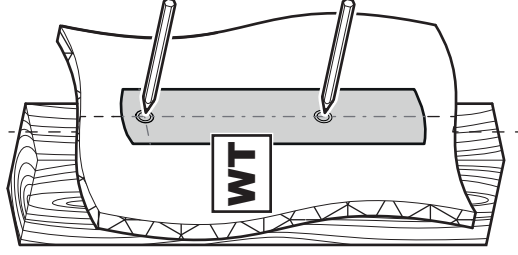

  Ensure bracket is in the centre of the wood stud

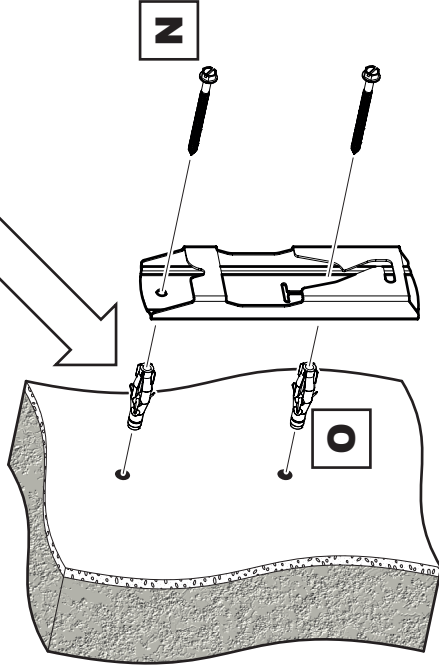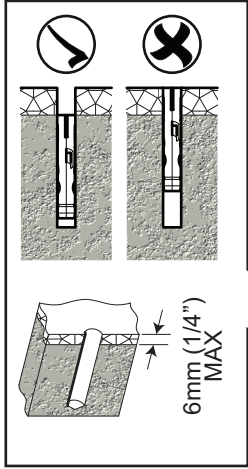

N x2

 


O x2



Lubricate screw thread with soap.



 DO NOT overtighten screws.
Tighten screws by hand only.

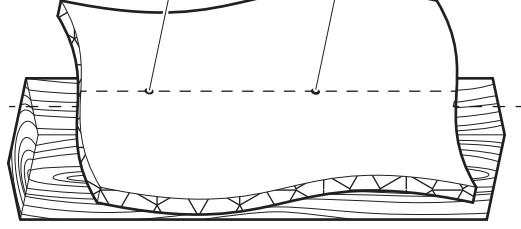

N x2

 


Lubricate screw thread with soap.



DO NOT overtighten screws.
Tighten screws by hand only.

5 Hanging the TV

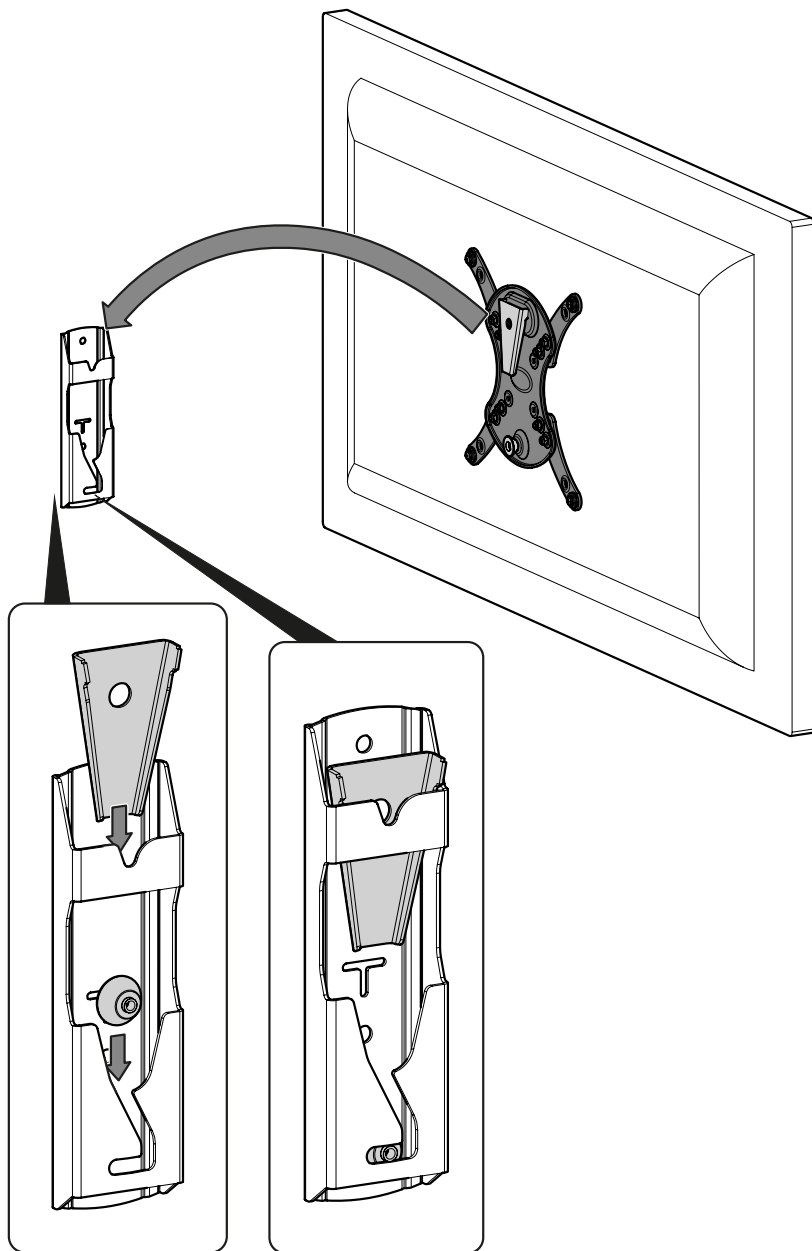

Hold the TV parallel to the wall. Offer the white bush towards the centre of the wall bracket and lower into position. Ensure both the white bush and locating plate securely engage with the wall bracket. When the white bush is in the horizontal slot your TV is secured.

To remove the TV, rotate TV counter clockwise as far as possible and then lift vertically.

TV Levelling (optional)

Adjust the levelling resistance, if necessary, by tightening or loosening the screw in the white bush.



Gently adjust in small increments. DO NOT overtighten.

