

**35kg
77lbs**



Read through ALL instructions before commencing installation.

If you have any questions about this product or issues with installation, contact the customer services helpline before returning this product to the store.

 


This TV Wall Mount is intended for use with televisions weighing **Maximum 35kg (77lbs)**. Use with products heavier than maximum weights may result in instability causing possible injury.


CUSTOMER SERVICES HELPLINE NUMBER: 0333 320 0463 (UK)

Assembly Overview


Fit the TV Mounting Plate

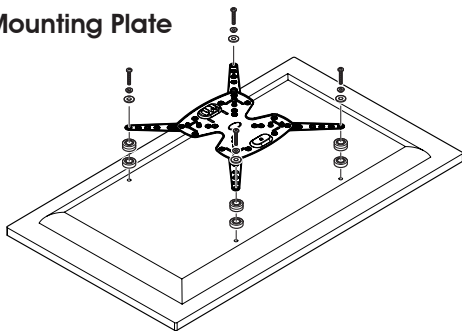


Fit the Wall Bracket

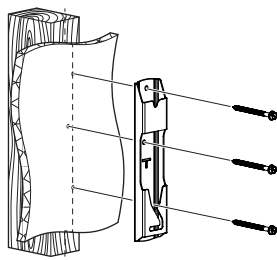 

Hang the TV

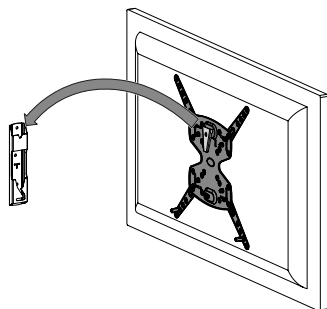 

Suitable Wall Types

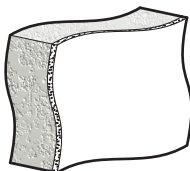 

Solid Wall



Wood Stud

 
Tools Recommended








Stud Finder



**Ø10mm (25/64")
Masonry**

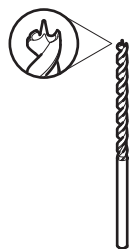

**Ø3mm (1/8")
Wood**

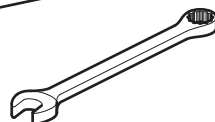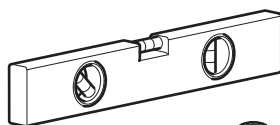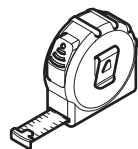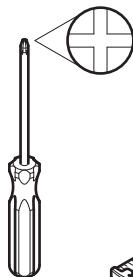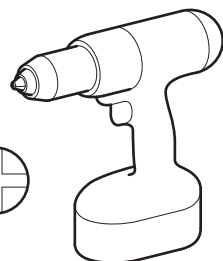     

Index

1 Measure the TV fixing holes Width and Height

2 Preparing the TV Mounting Plate

3 Fitting the TV Mounting Plate

4 Fitting the Wall Bracket

5 Hanging the TV

Retain all packaging in case the product needs to be returned.

Contents may vary from photography / illustrations.

 
You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a substandard wall.


Boxed Parts

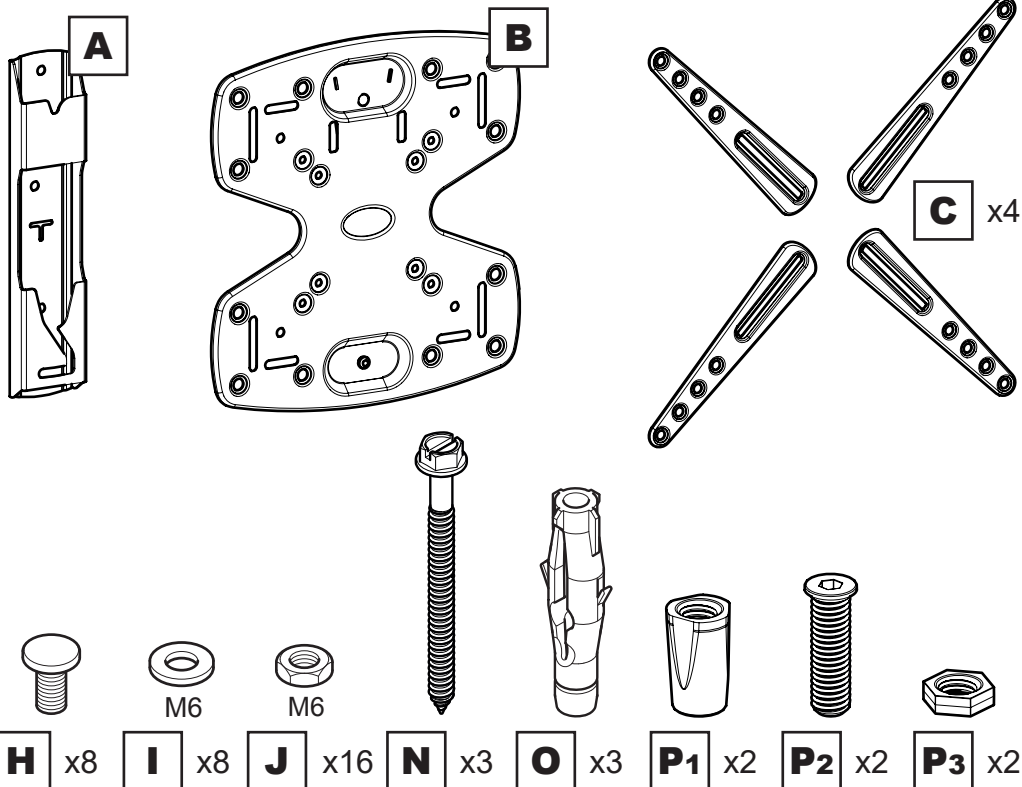


TV Screws, Reducers and Spacers

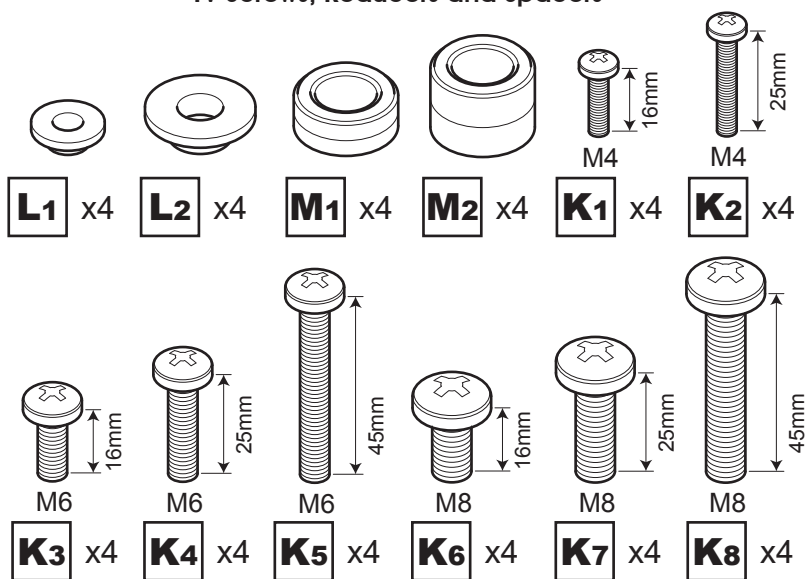 

 1 Measure the TV fixing holes Width and Height

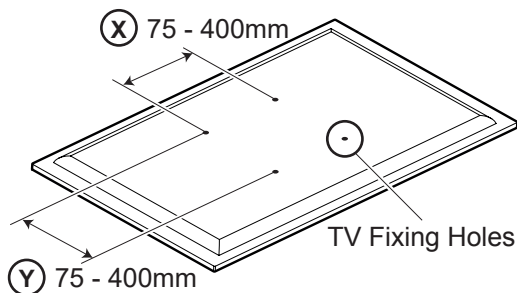

 ! If width (X) is greater than 400mm or height (Y) greater than 400mm **STOP** installation now and contact the customer help line.

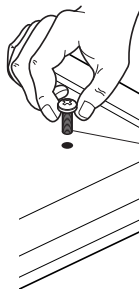

M4 = K1-K2

M6 = K3-K5

M8 = K6-K8

You are provided with 3 diameters of TV fixing screws **M4**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 3.

2 Preparing the TV Mounting Plate

Use the option that fits your TV


OPTION 1

- (X) 75mm x (Y) 75mm
- (X) 100mm x (Y) 100mm
- (X) 100mm x (Y) 200mm
- (X) 200mm x (Y) 100mm
- (X) 200mm x (Y) 200mm

OPTION 2

- (X) 75mm - 400mm (Y) 75mm - 400mm

 When attaching adaptors **C** you must always use **HOLES x4** and either of the **SLOTS**.

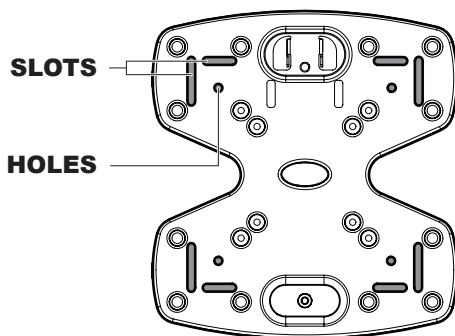

Before you fully tighten the TV mounting plate check that the mounting plate holes line up with the fixing holes on the back of your TV.

OPTION 1

Y

200 mm

100 mm

75 mm

75mm

 
100mm

200mm

X

B

Top

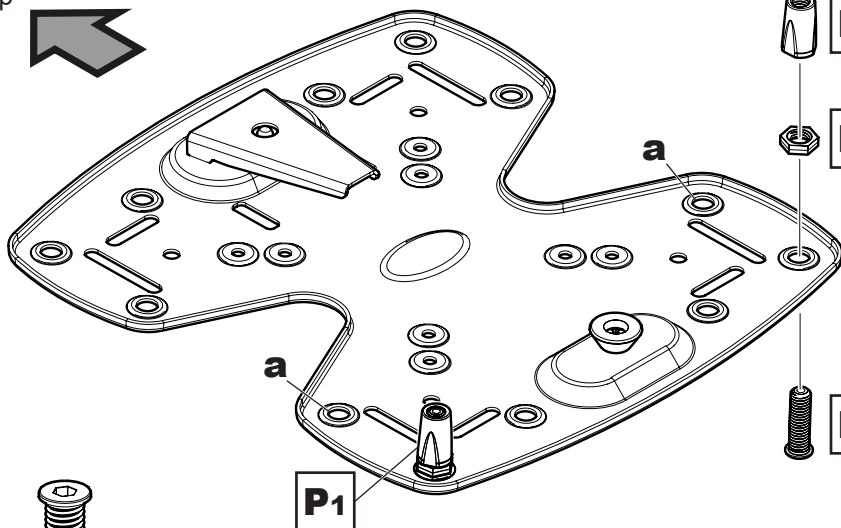

P1

 
P3

P2

P1

a

a








P1 x2 P2 x2 P3 x2

Attach Standoffs **P1** in the holes shown.
If using those holes to attach the plate to your TV, then fix Standoffs in holes **a**.

OPTION 2

     
Adaptors **C** can be fixed in different positions in the slots on Plate **B** to match your TV fixing holes.

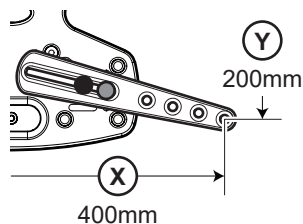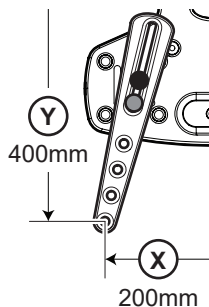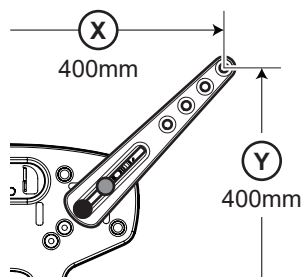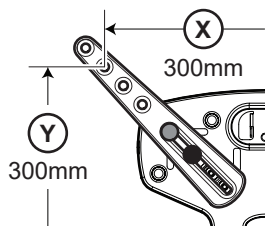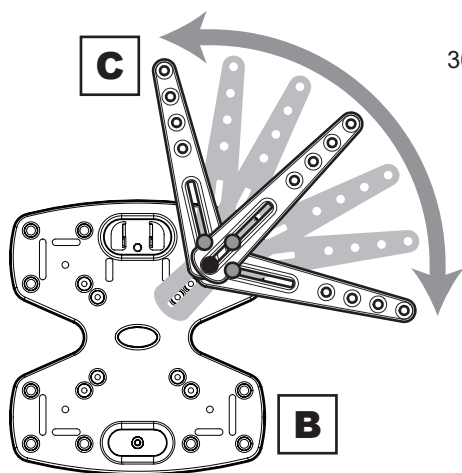



Top



 Example shown is 400 x 400 fixings

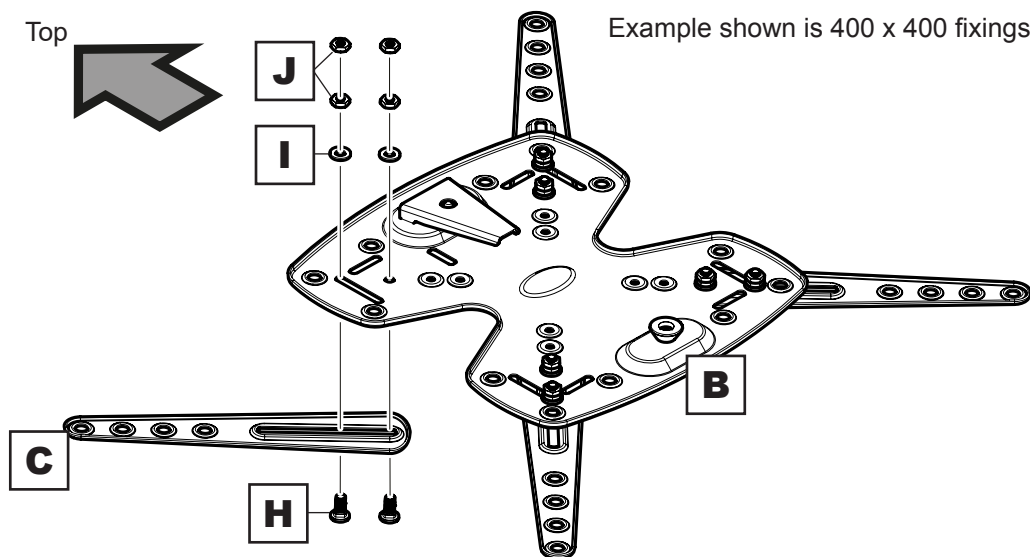

H x8 **I** x8 **J** x16

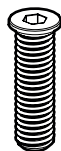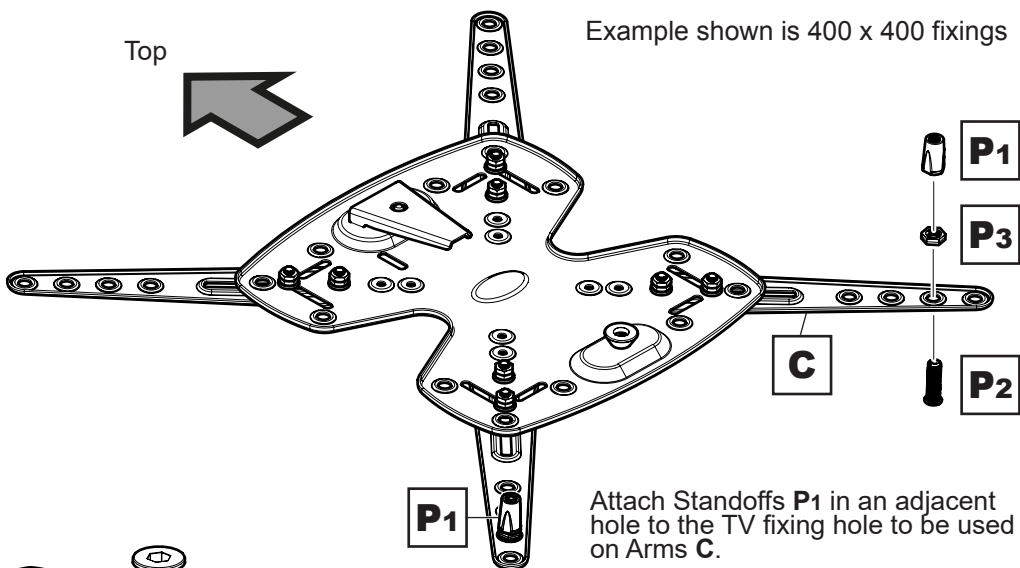  


P1 x2 **P2** x2 **P3** x2

3 Fitting the TV Mounting Plate


No Spacers

 For TVs with flat / unobstructed back.

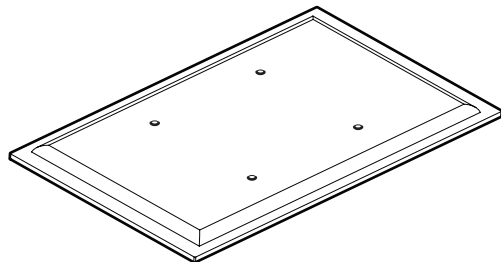


Spacers **M1/M2**

 
For TVs with irregular / obstructed back.

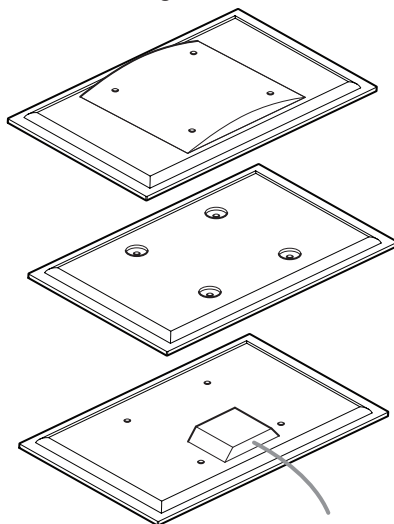

WARNING

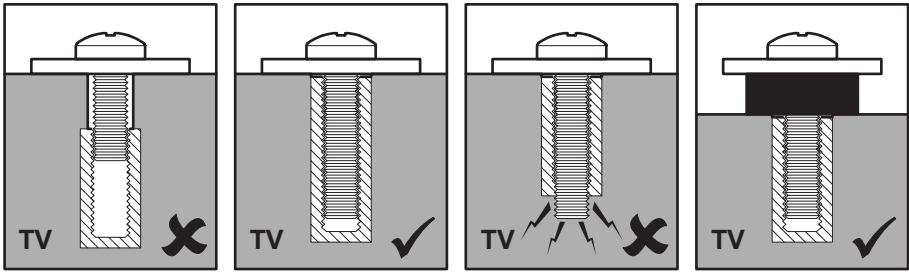 


 
After completing step 3 you will have fittings left over, please keep for future reference.

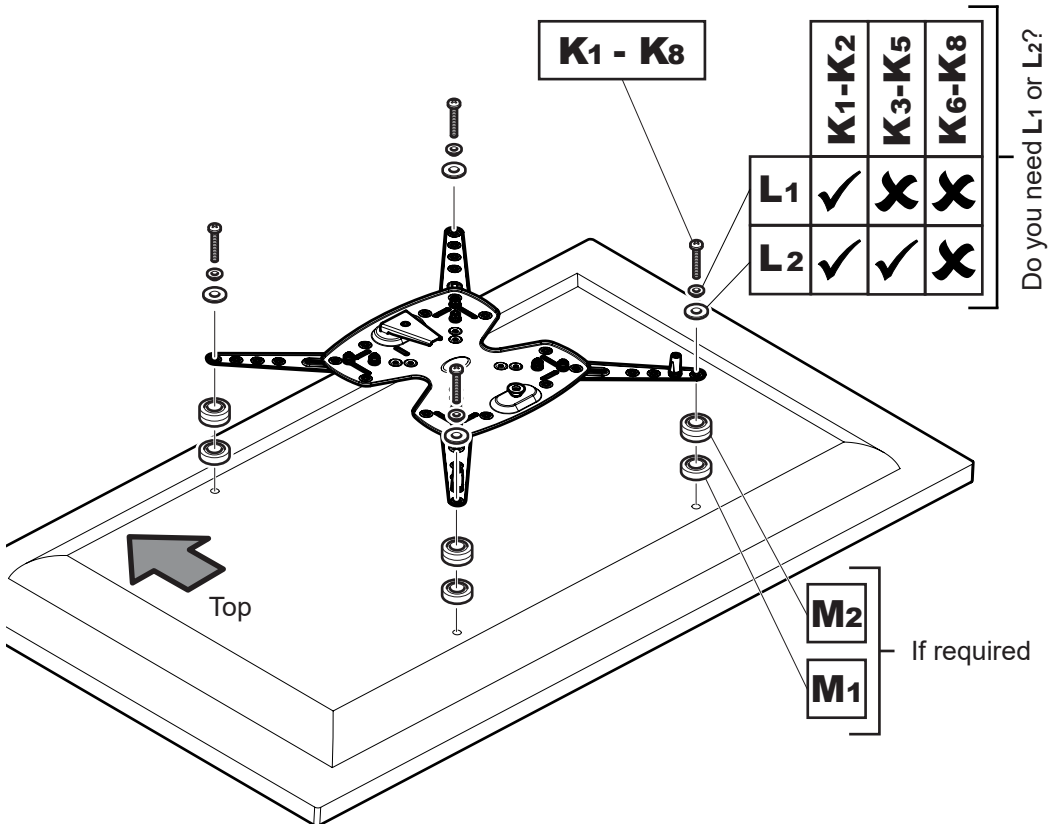

Attach the TV Mounting Plate to the back of your TV using suitable screw, reducer and spacer combinations.



4 Fitting the Wall Bracket

  Solid Wall

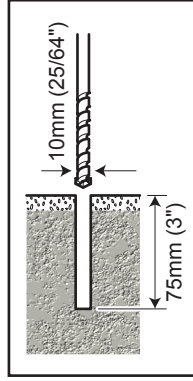
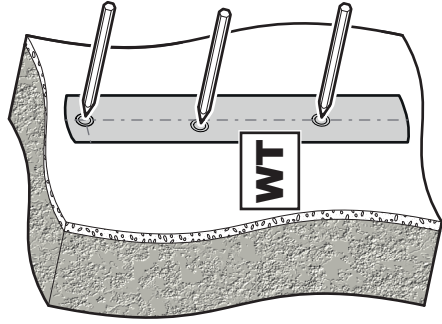


Remove Dust from Hole.

  Wood Stud

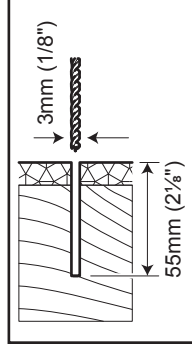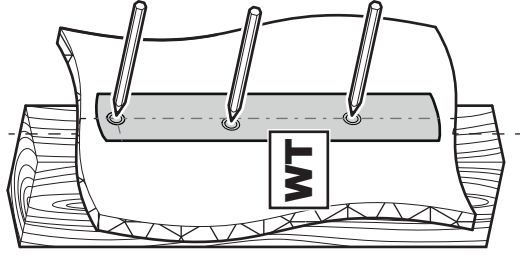

  Ensure bracket is in the centre of the wood stud

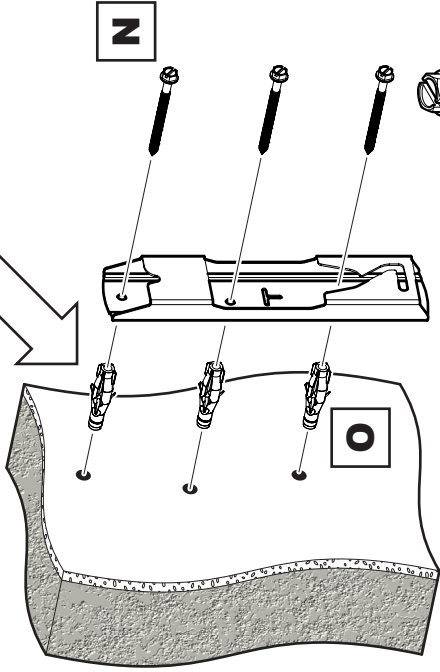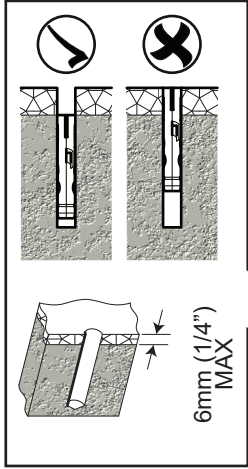


Lubricate screw thread with soap.




DO NOT overtighten screws.
Tighten screws by hand only.



 N x3

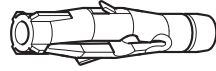

O x3

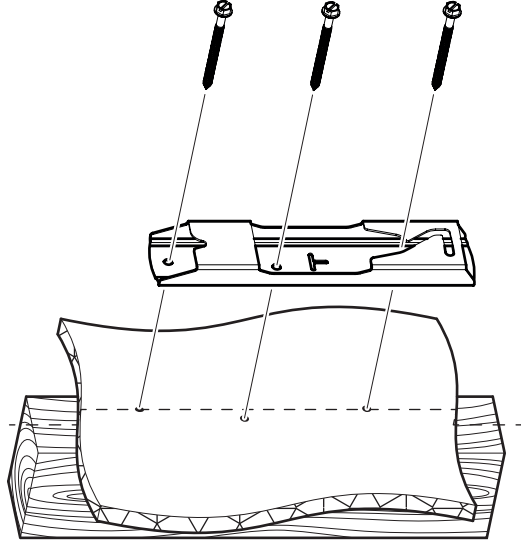 

Lubricate screw thread with soap.

 


DO NOT overtighten screws.
Tighten screws by hand only.



N x3


5 Hanging the TV

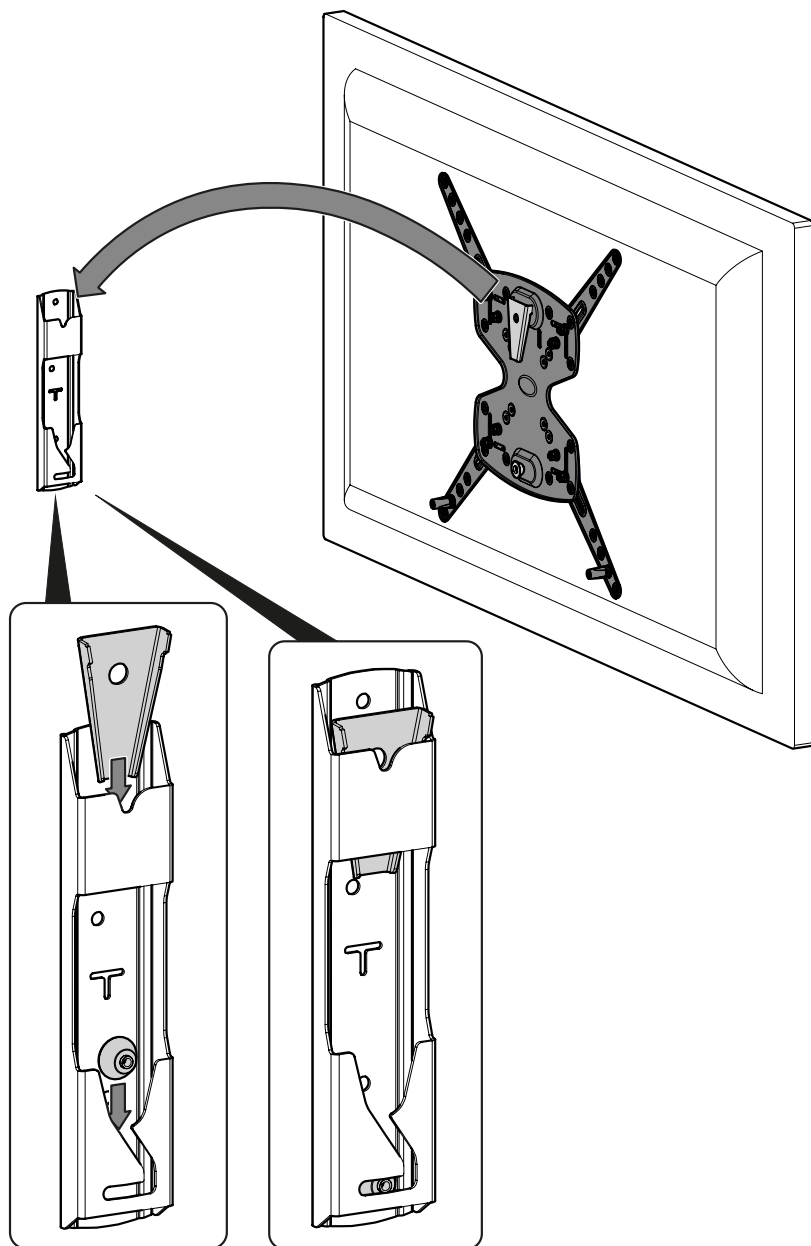

Hold the TV parallel to the wall. Offer the white bush towards the centre of the wall bracket and lower into position. Ensure both the white bush and locating plate securely engage with the wall bracket. When the white bush is in the horizontal slot your TV is secured.

To remove the TV, rotate TV counter clockwise as far as possible and then lift vertically.

 Standoff Adjustment (optional)

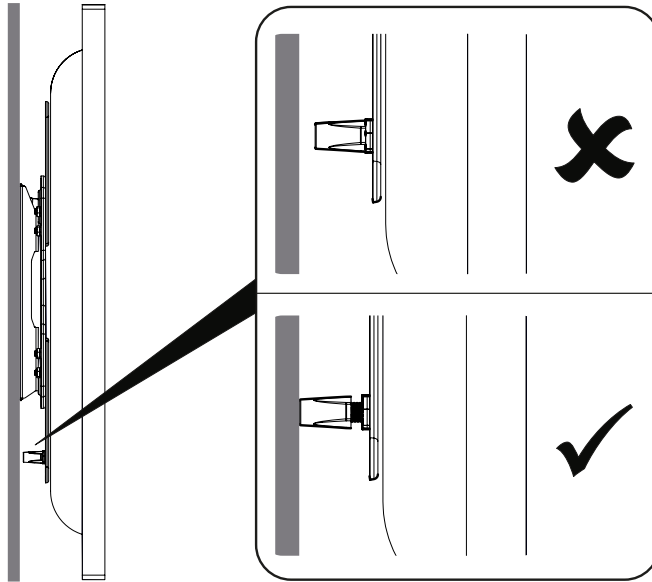

When you have hung your TV, the standoffs should touch the wall. You can adjust the standoffs simply by unscrewing or tightening as required.

TV Levelling (optional)

Adjust the levelling resistance, if necessary, by tightening or loosening the screw in the white bush.



Gently adjust in small increments. DO NOT overtighten.

