

35kg
77lb

STOP

Read through **ALL** instructions before commencing installation.

If you have any questions about this product or issues with installation, contact the customer services helpline before returning this product to the store.

 


This TV Wall Mount is intended for use with televisions weighing **Maximum 35kg (77lbs)**. Use with products heavier than maximum weight may result in instability causing possible injury.


CUSTOMER SERVICES HELPLINE NUMBER: **0333 320 0463 (UK)**

Assembly Overview


Fit the TV Mounting Plate

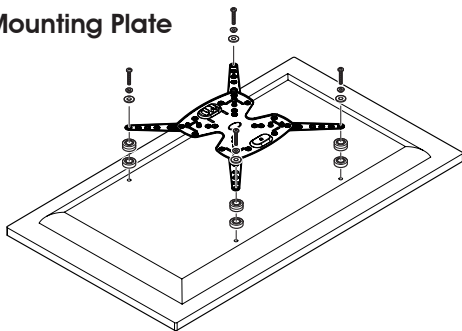


Fit the Wall Bracket

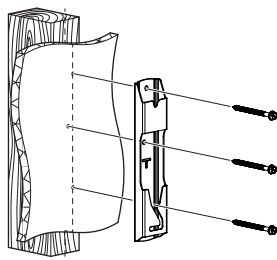 

Hang the TV

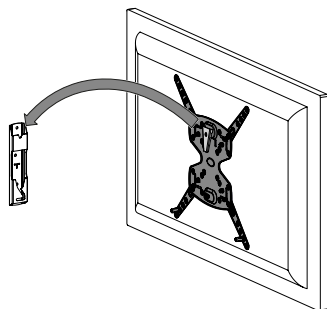 

Suitable Wall Types

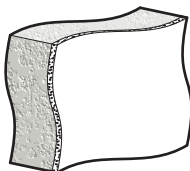 

Solid Wall

 


Wood Stud


Tools Recommended








Stud Finder

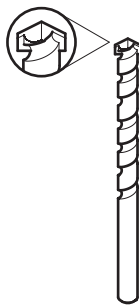

Ø10mm (25/64")
Masonry

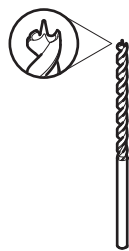 

Ø3mm (1/8")
Wood

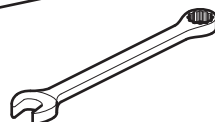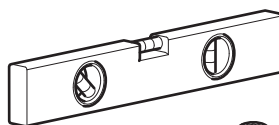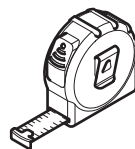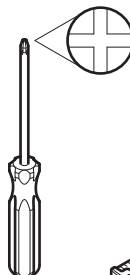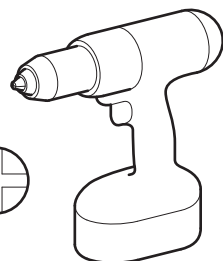     

Index

1 Measure the TV fixing holes Width and Height

2 Preparing the TV Mounting Plate

3 Fitting the TV Mounting Plate

4 Fitting the Wall Bracket

5 Hanging the TV

Retain all packaging in case the product needs to be returned.

Contents may vary from photography / illustrations.

 
You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a substandard wall.


Boxed Parts

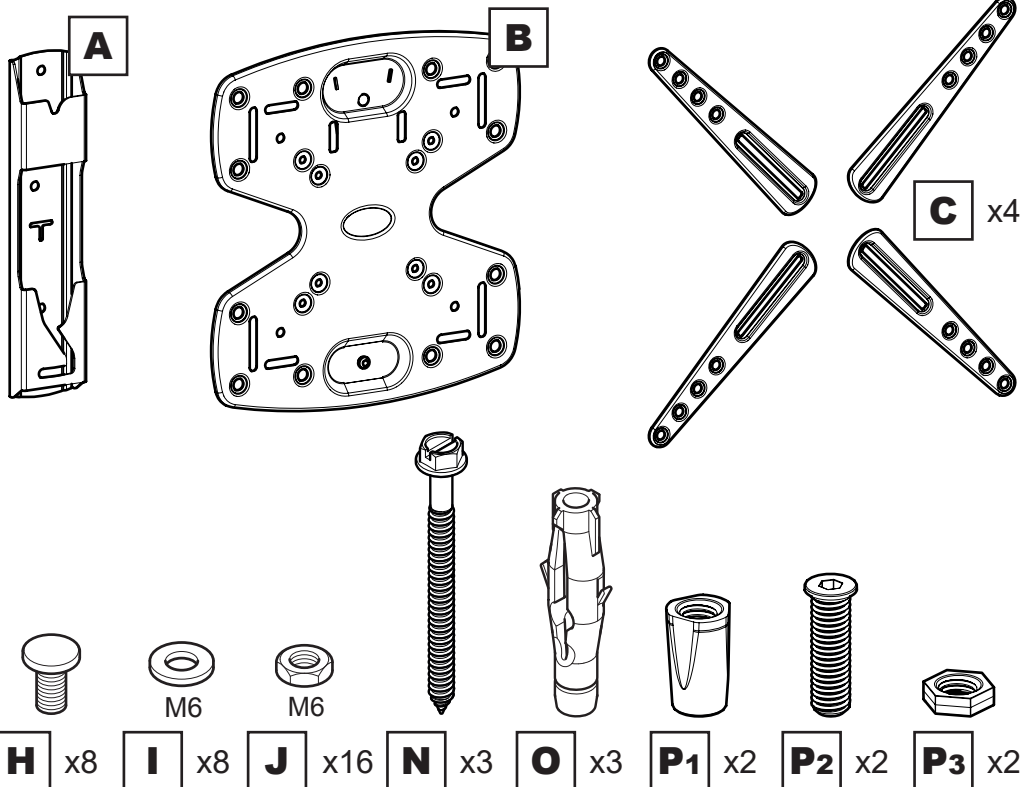


TV Screws, Reducers and Spacers

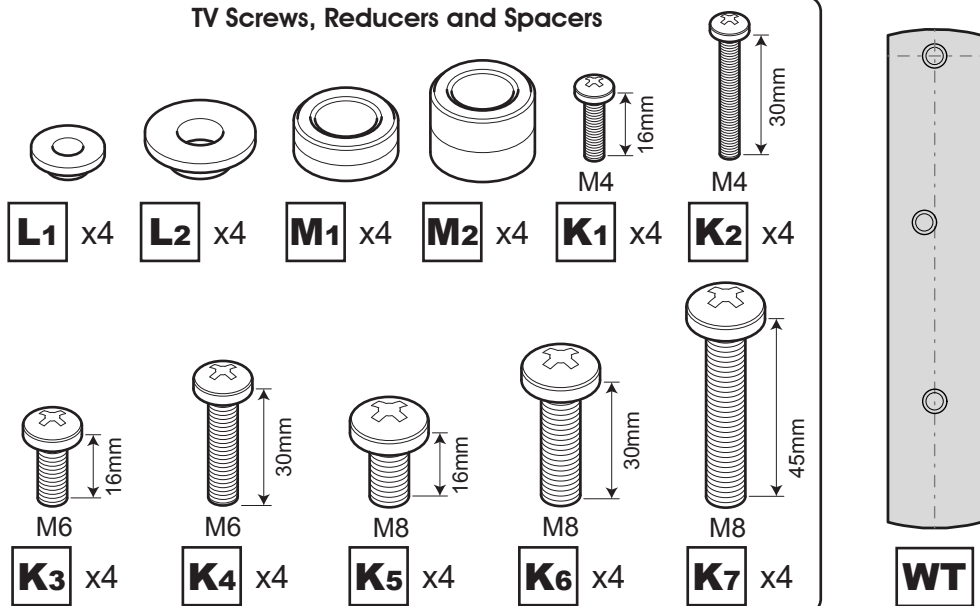 

 1 Measure the TV fixing holes Width and Height

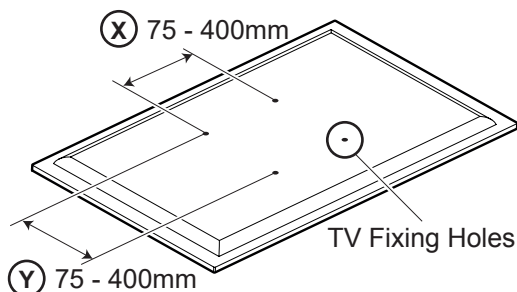

 ! If width (X) is greater than 400mm or height (Y) greater than 400mm **STOP** installation now and contact the customer help line.

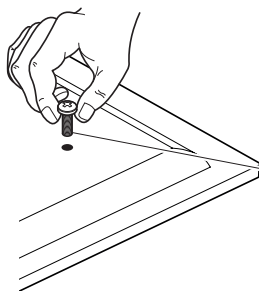

M4 = **K1-K2**

M6 = **K3-K4**

M8 = **K5-K7**

You are provided with 3 diameters of TV fixing screws **M4**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 3.

2 Preparing the TV Mounting Plate

Use the option that fits your TV.


OPTION 1

- (X) 75mm x (Y) 75mm
- (X) 100mm x (Y) 100mm
- (X) 100mm x (Y) 200mm
- (X) 200mm x (Y) 100mm
- (X) 200mm x (Y) 200mm

OPTION 2

- (X) 75mm - 400mm (Y) 75mm - 400mm

 When attaching adaptors **C** you must always use **HOLES x4** and either of the **SLOTS**.

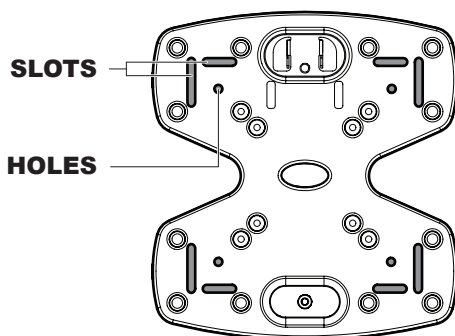

Before you fully tighten the TV mounting plate check that the mounting plate holes line up with the fixing holes on the back of your TV.

OPTION 1

Y

200 mm

100 mm

75 mm

75mm

 
100mm

200mm

X

B

Top

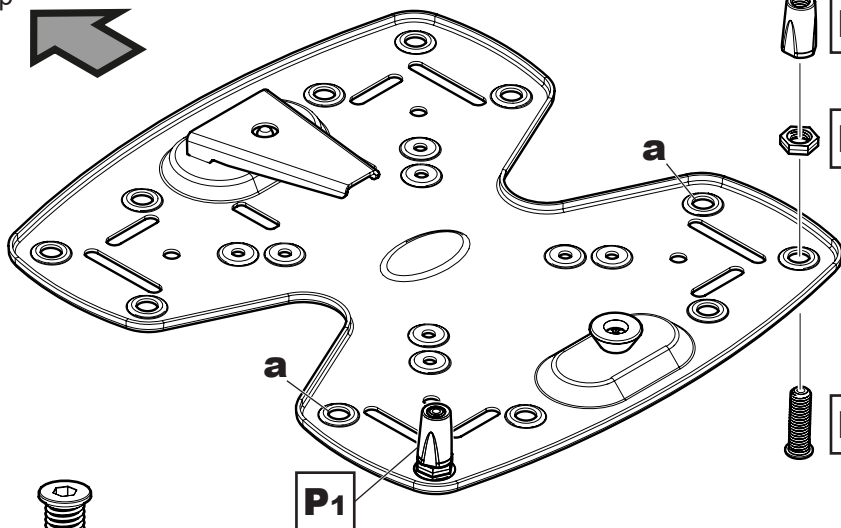

P1



P3



P2

 


P1



P1

x2



P2

x2








P3

x2

Attach Standoffs **P1** in the holes shown.
If using those holes to attach the plate to your TV, then fix Standoffs in holes **a**.

OPTION 2

     
Adaptors **C** can be fixed in different positions in the slots on Plate **B** to match your TV fixing holes.

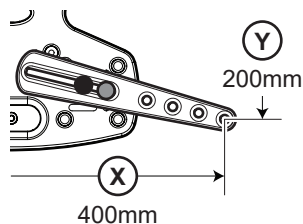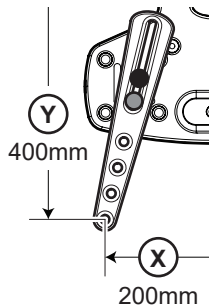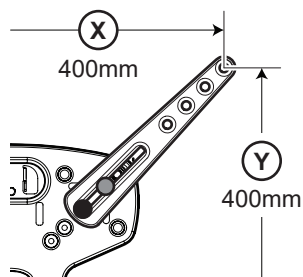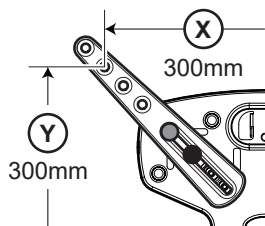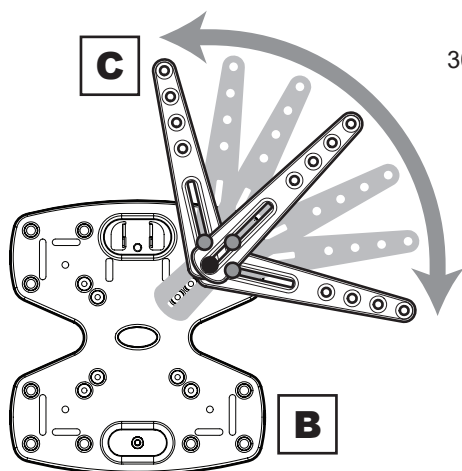

Top




 
Example shown is 400 x 400 fixings

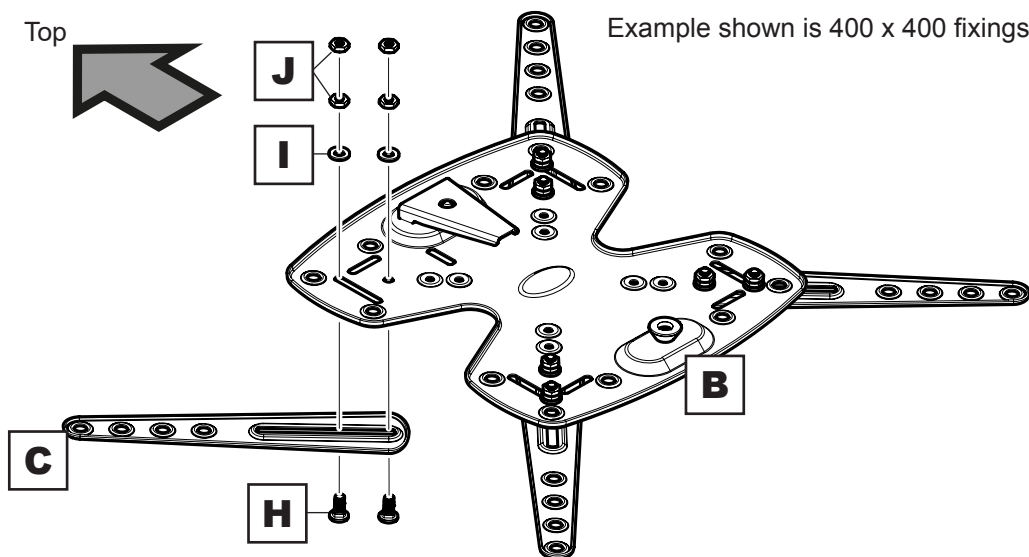

M6

M6

  
H x8 **I** x8 **J** x16

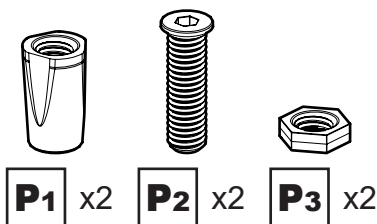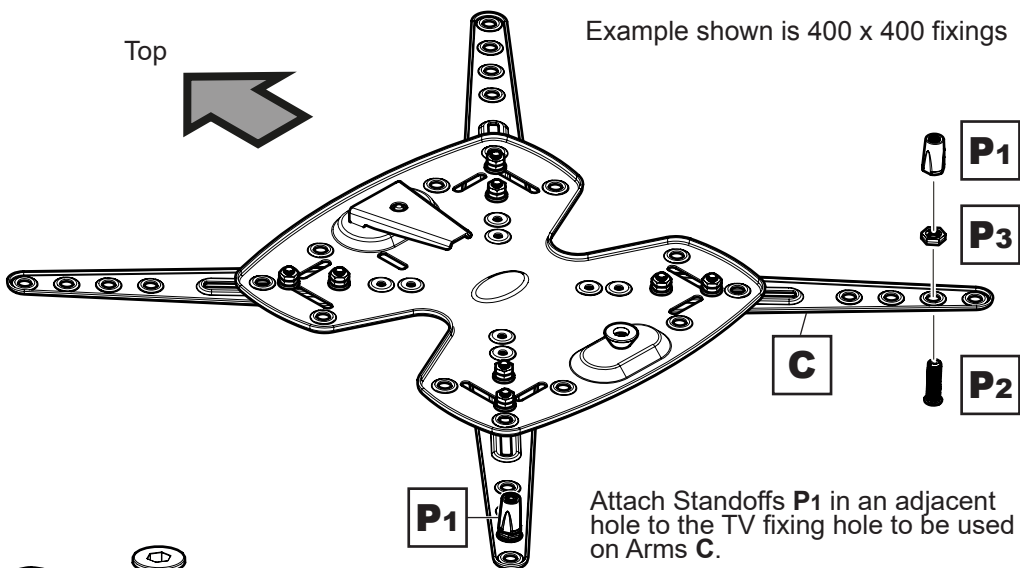

3 Fitting the TV Mounting Plate


No Spacers

 For TVs with flat / unobstructed back.

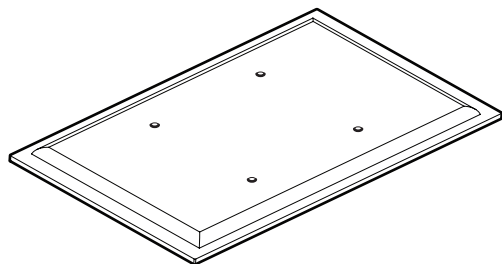


Spacers **M1/M2**

 
For TVs with irregular / obstructed back.

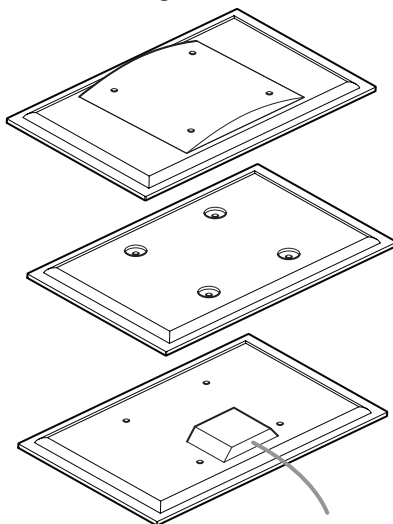

WARNING

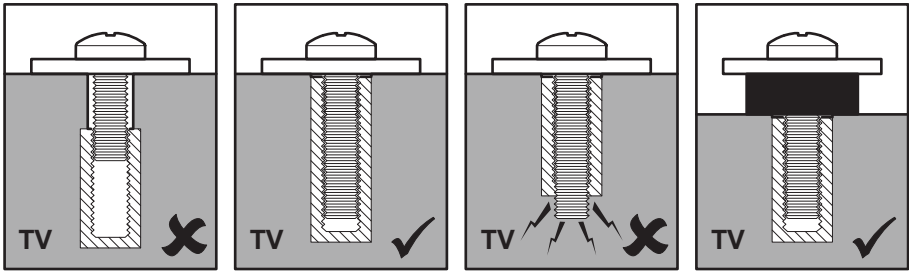 


 
After completing step 3 you will have fittings left over, please keep for future reference.

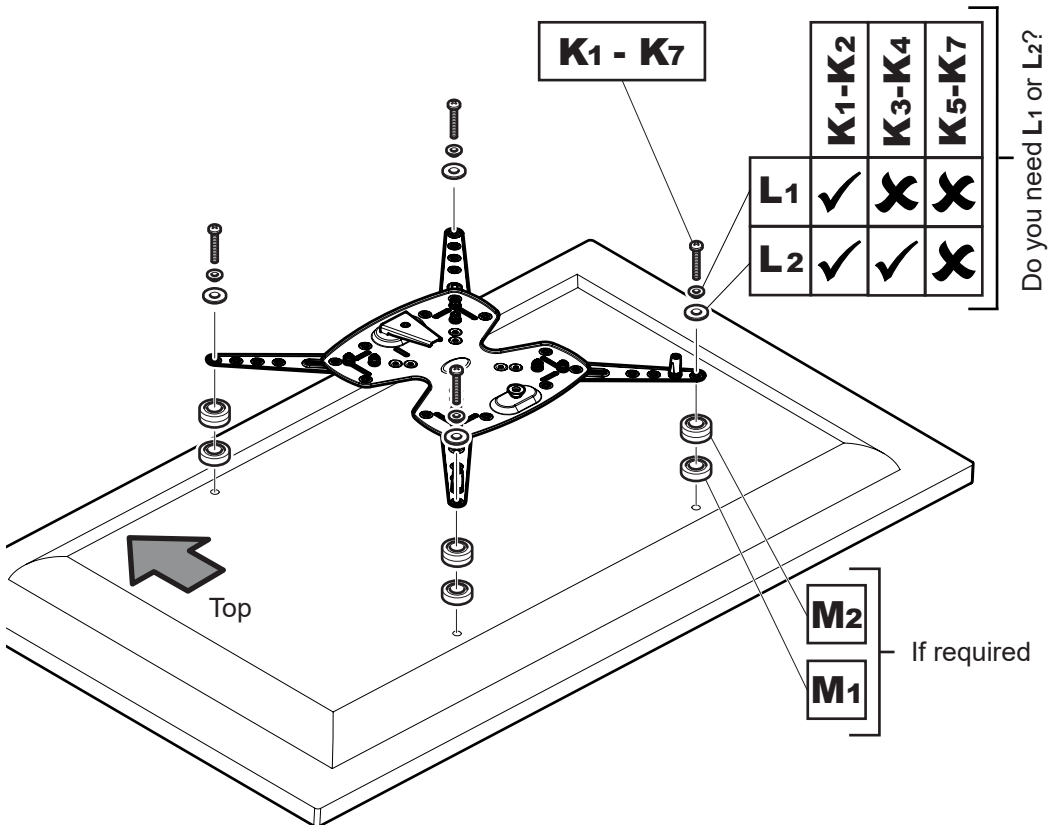

Attach the TV Mounting Plate to the back of your TV using suitable screw, reducer and spacer combinations.

4 Fitting the Wall Bracket

 
 
Solid Wall

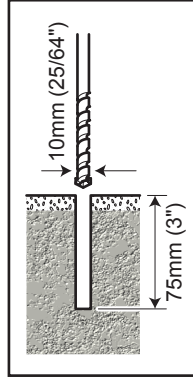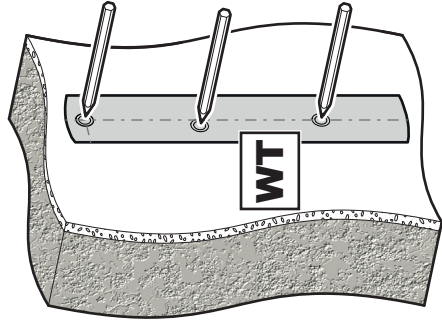

Remove Dust from Hole.





  Wood Stud

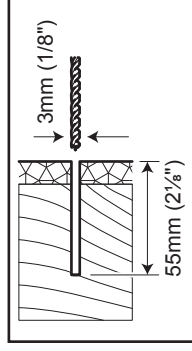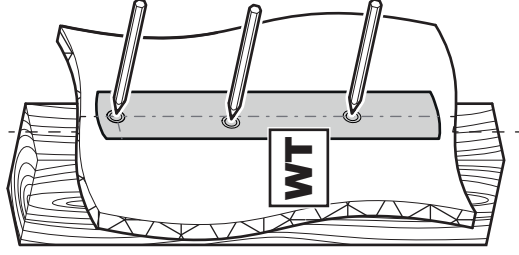

  Ensure bracket is in the centre of the wood stud



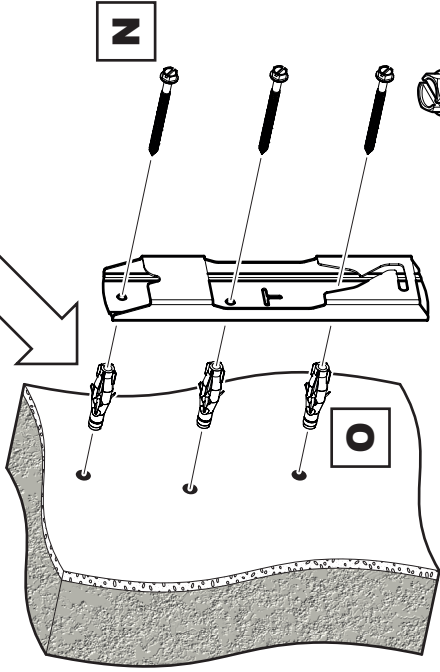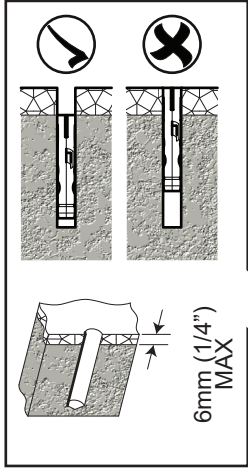


Lubricate screw thread with soap.




DO NOT overtighten screws.
Tighten screws by hand only.



 N x3



O x3

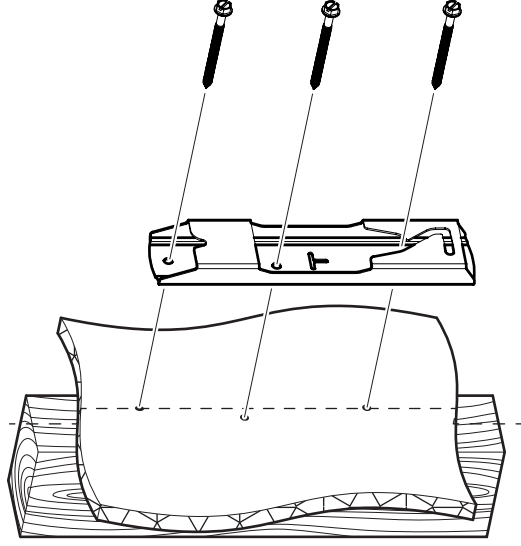 

Lubricate screw thread with soap.

 


DO NOT overtighten screws.
Tighten screws by hand only.



N x3


5 Hanging the TV

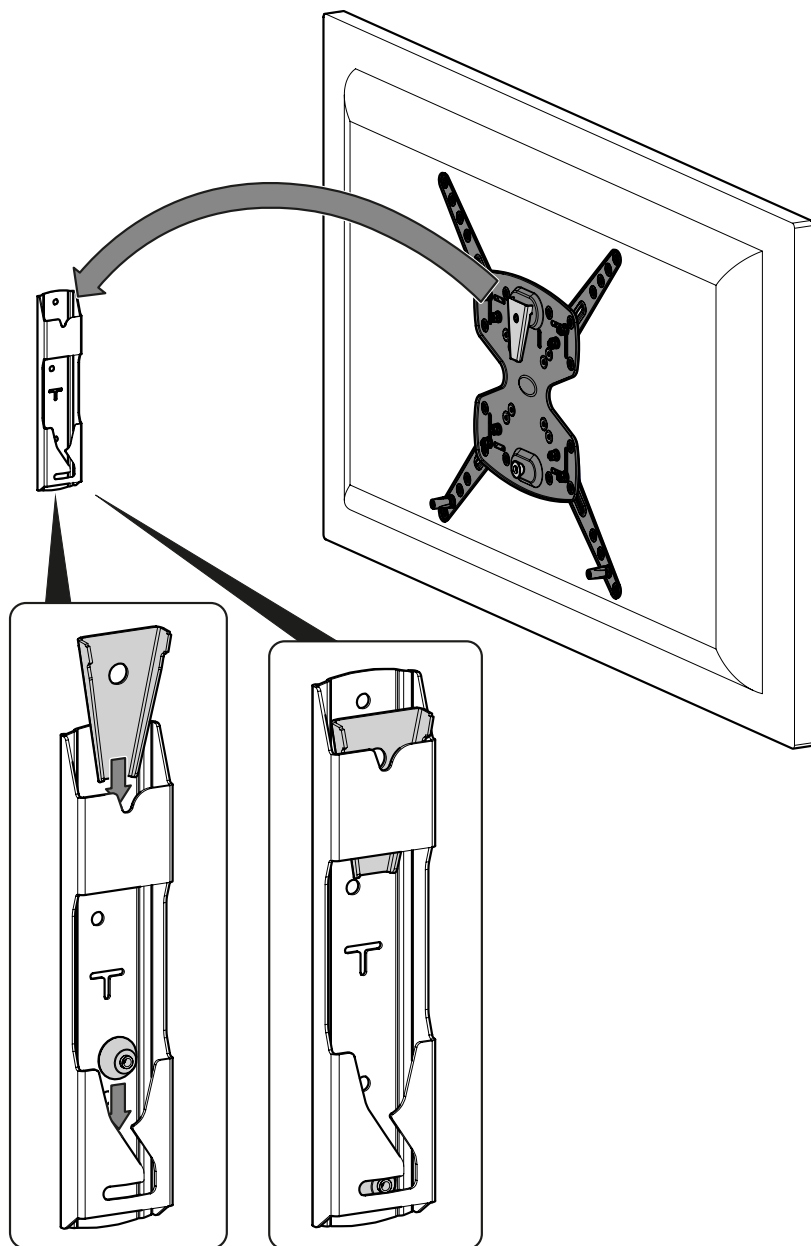

Hold the TV parallel to the wall. Offer the white bush towards the centre of the wall bracket and lower into position. Ensure both the white bush and locating plate securely engage with the wall bracket. When the white bush is in the horizontal slot your TV is secured.

To remove the TV, rotate TV counter clockwise as far as possible and then lift vertically.

 Standoff Adjustment (optional)

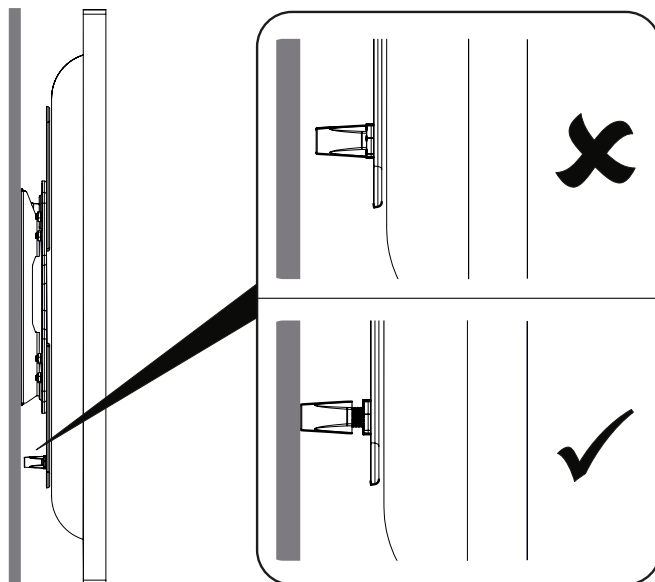



When you have hung your TV, the standoffs should touch the wall. You can adjust the standoffs simply by unscrewing or tightening as required.

TV Levelling (optional)

Adjust the levelling resistance, if necessary, by tightening or loosening the screw in the white bush.



  Gently adjust in small increments. DO NOT overtighten.

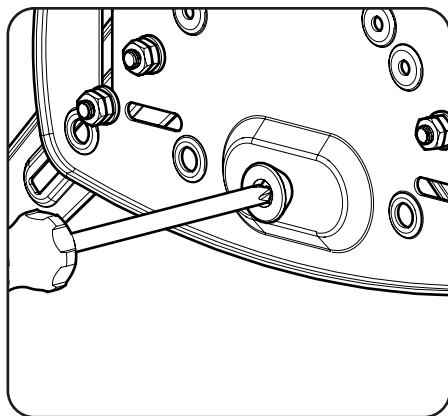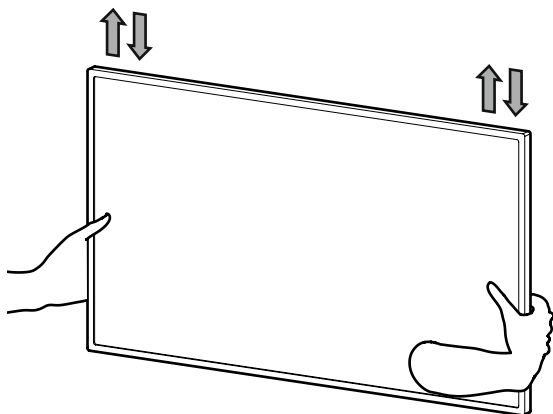

LIFETIME WARRANTY

AVF warrants that the product is free from defects in material and workmanship, as long as the product is owned by the original consumer purchaser. If, during the stated warranty of this product, it proves to be defective, AVF will remedy the defect by either repairing or replacing the defective part or, replacing the entire product. Proof of original purchase is required and should be retained.

AVF reserve the right to substitute replacement products to others of similar value and design (Usually in the event of discontinued product models).

AVF accept no responsibility for failures / loss which result from misuse, negligence, accident, improper assembly or installation or other causes beyond AVF's reasonable control and also excludes and will not pay any incidental and consequential damages.



PLEASE REVIEW ALL NOTES AND PRODUCT INSTRUCTIONS BEFORE COMMENCING THE INSTALLATION.

INSTALLATION: This product is sold as a home DIY product and as such, it is the responsibility of the installer to ensure that the product is correctly installed. AVF accept no responsibility if the product is incorrectly installed.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

IF YOU ARE IN ANY DOUBT, CONSULT A QUALIFIED CONTRACTOR.

NOTES

WALLS: It is the responsibility of the installer to ensure that the wall is of a suitable standard and void of any services (eg gas, electricity, water etc). AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.

WALL FIXINGS: Wall fixings are supplied for wood, brick, solid masonry and also, for some specific products, fixings are supplied for fixing to plasterboard.

DO

- Retain all packaging in case the bracket needs to be returned.
- When fastening to wood studs, be sure to pre-drill holes into the wood stud.
- When fastening to brick or solid masonry, drill the holes in accordance with the instructions. Always remove drill dust from the hole before inserting the wall plug.
- Wall plug body must be fully inserted into the wall (ie fully into the brick).
- Lubricate the wall screws with soap to ease installation.
- Check the strength of the installation before fitting the TV.
- Periodically check strength of installation, signs of corrosion, damage or loose components.

DON'T

- Do not set in mortar joints.
- Do not over tighten screws.

TV HANGING

Must be carried out using the manufacturers threaded holes intended for this purpose. All variables of TV hanging screws are supplied within the product box (Because of the universal nature of this product, expect to have excess parts left over following your installation).

It is the responsibility of the installer to ensure the correct TV hanging screws are selected. If in doubt consult the TV manufacturer. AVF accept no responsibility for any damage caused by the use of the incorrect TV hanging screw or the use of incorrect fixing holes.