
469149 rev00

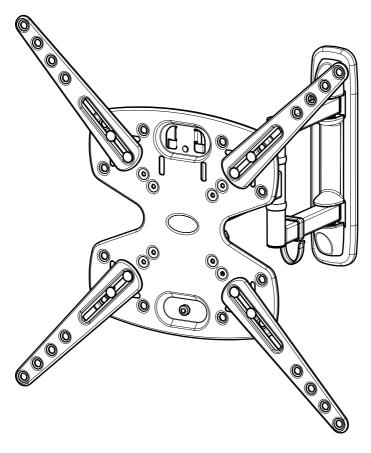






Read through $\underline{\mathsf{ALL}}$ instructions before commencing installation.


If you have any questions about this product or issues with installation, contact the customer services helpline before returning this product to the store.




This TV Wall Mount is intended for use with televisions weighing **Maximum 30kg (66lbs)** . Use with products heavier than maximum weights may result in instability causing possible injury.

CUSTOMER SERVICES HELPLINE NUMBER: 0333 320 0463 (UK)

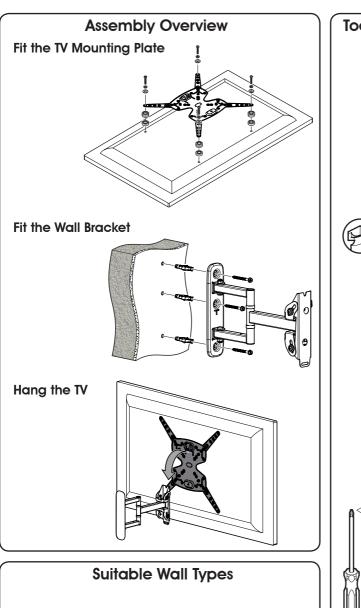

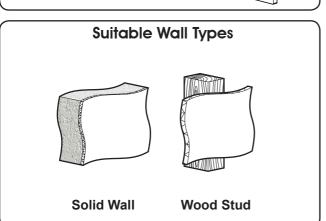

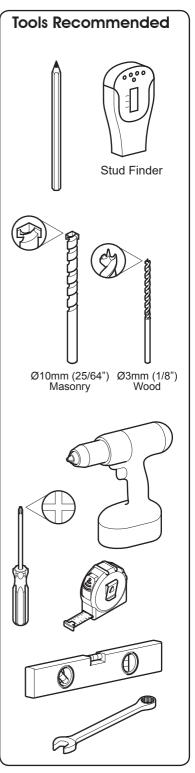

Index

- Measure the TV fixing holes Width and Height
- **2** Preparing the TV Mounting Plate
- Fitting the TV Mounting Plate
- Fitting the Wall Bracket
- **5** Fitting the Wall Bracket Covers
- 6 Hanging the TV
- 7 Fitting the Cable Management
- 8 Tilt Adjustment
- 9 TV Levelling

Retain all packaging in case the product needs to be returned.

Contents may vary from photography / illustrations.


You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a substandard wall.

Boxed Parts

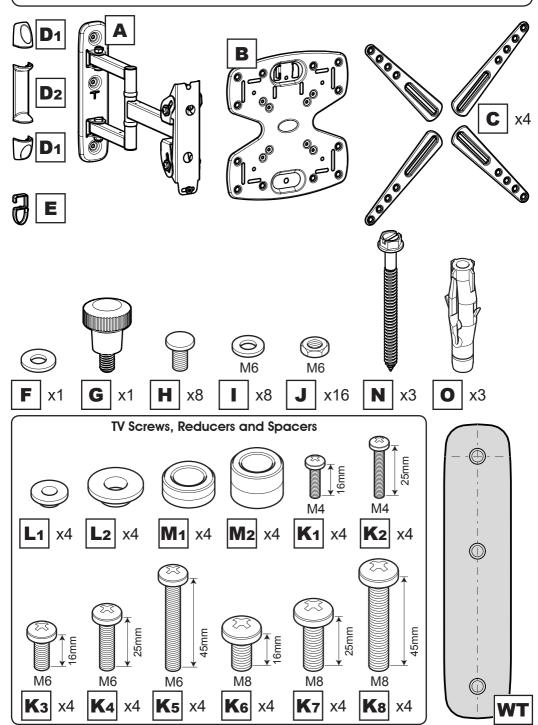


Measure the TV fixing holes Width and Height

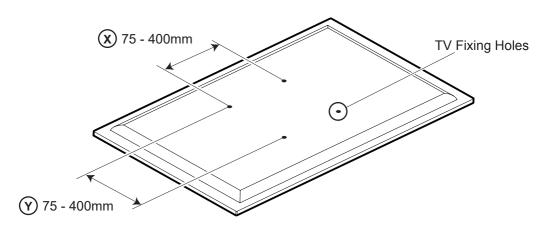



If width (X) is greater than 400mm or height (Y) greater than 400mm STOP installation now and contact the customer help line.

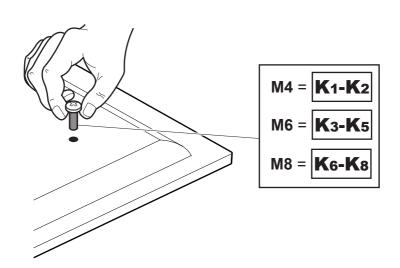

You are provided with 3 diameters of TV fixing screws **M4**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 3.

2

Preparing the TV Mounting Plate

Use the option that fits your TV

OPTION 1

(X) 75mm x (Y) 75mm

(X) 100mm x (Y) 100mm

X) 100mm x **(Y**) 200mm


X) 200mm x **Y**) 100mm

(X) 200mm x (Y) 200mm

When attaching adaptors **C** you must always use **HOLES x4** and either of

OPTION 2


X 75mm - 400mm **Y** 75mm - 400mm

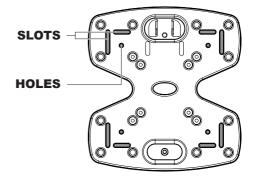





the **SLOTS**.

Before you fully tighten the TV mounting plate check that the mounting plate holes line up with the fixing holes on the back of your TV.

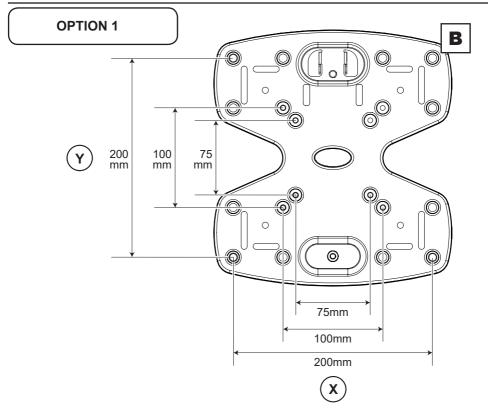

OPTION 2

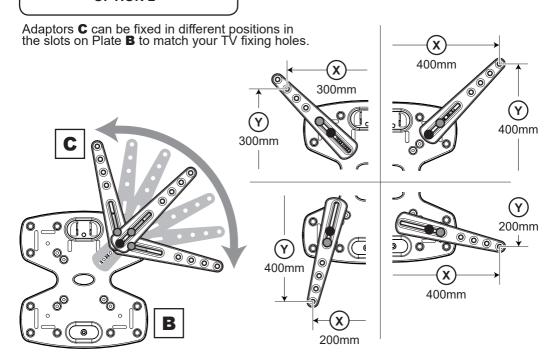

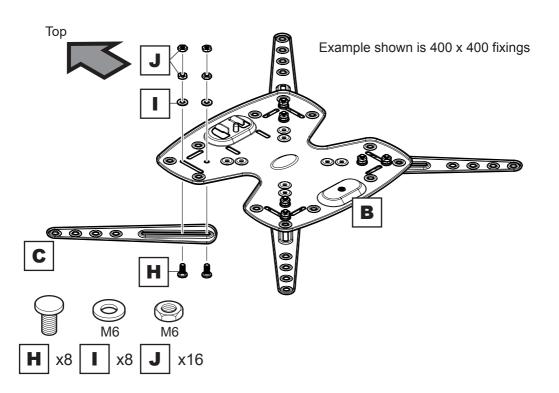


3 Fitting the TV Mounting Plate


No Spacers

For TVs with flat / unobstructed back.





For TVs with irregular / obstructed back.

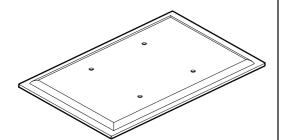


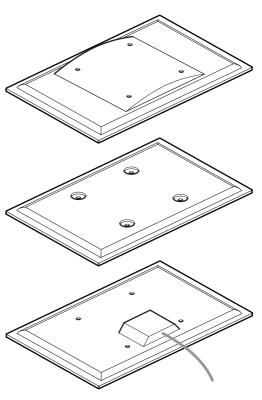


WARNING

 

 

 


 




After completing step 3 you will have fittings left over, please keep for future reference.


Attach the TV Mounting Plate to the back of your TV using suitable screw, reducer and spacer combinations.

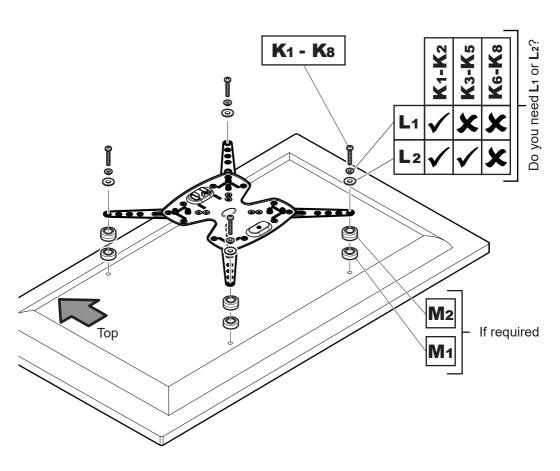



Solid Wall

  Wood Stud

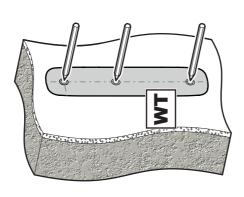



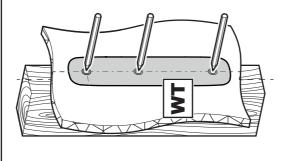







Ensure bracket is in the centre of the wood stud

= Remove Dust from Hole.

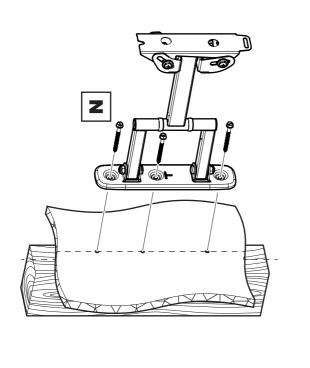


6mm (1/4") MAX

  Ð







 

















5 Fitting the Wall Bracket Covers

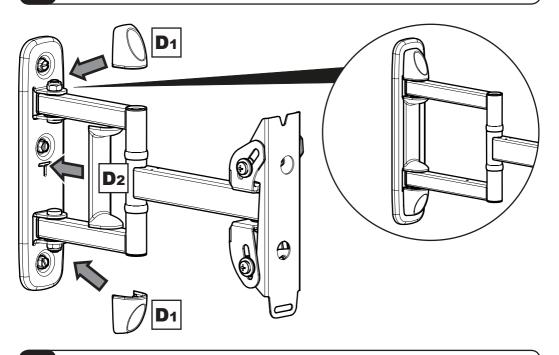


6 Hanging the TV

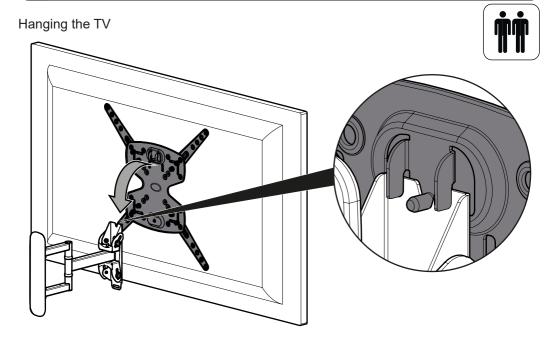

Locking the TV

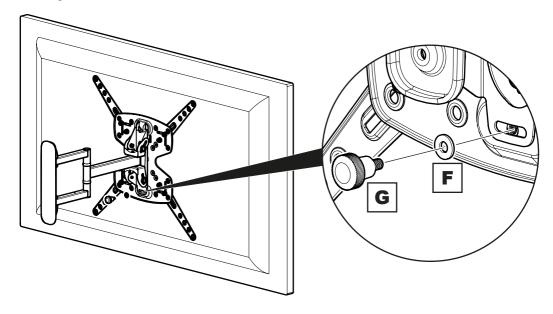


7 Fitting the Cable Management

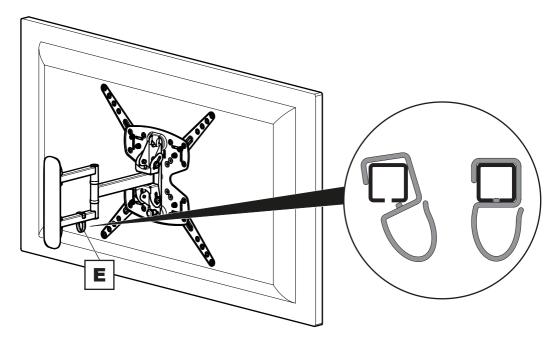

8 Tilt Adjustment

Adjust screws to achieve perfect tilt resistance if required.

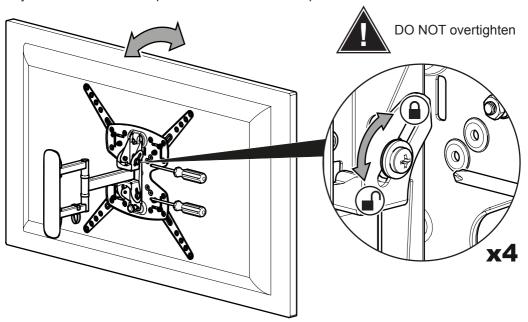

9 TV Levelling

