 


470200 Rev03

Please read these instructions thoroughly before installation.

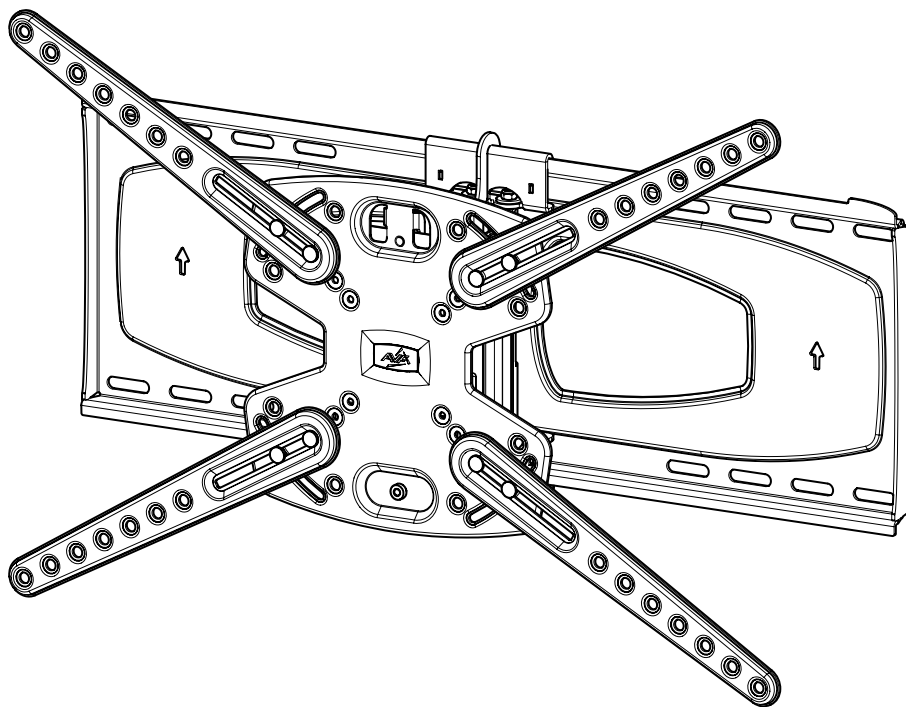

If you have any questions or need spare parts don't worry, we're happy to help.

Customer Helpline

0333 320 0463

Helpline Open Mon to Thurs 9am - 5pm, Fri 9am - 4pm

Online Support

www.avfgroup.com/support

AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England

WARRANTY INFORMATION

10 YEAR WARRANTY

AVF warrants that the product is free from defects in material and workmanship, as long as the product is owned by the original consumer purchaser. If, during the stated warranty of this product, it proves to be defective, AVF will remedy the defect by either repairing or replacing the defective part or, replacing the entire product. Proof of original purchase is required and should be retained.

AVF reserve the right to substitute replacement products to others of similar value and design (Usually in the event of discontinued product models).

AVF accept no responsibility for failures / loss which result from misuse, negligence, accident, improper assembly or installation or other causes beyond AVF's reasonable control and also excludes and will not pay any incidental and consequential damages.



PLEASE REVIEW ALL NOTES AND PRODUCT INSTRUCTIONS BEFORE COMMENCING THE INSTALLATION.

INSTALLATION: This product is sold as a home DIY product and as such, it is the responsibility of the installer to ensure that the product is correctly installed. AVF accept no responsibility if the product is incorrectly installed.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

IF YOU ARE IN ANY DOUBT, CONSULT A QUALIFIED CONTRACTOR.

NOTES

WALLS: It is the responsibility of the installer to ensure that the wall is of a suitable standard and void of any services (eg gas, electricity, water etc). AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.

WALL FIXINGS: Wall fixings are supplied for wood, brick, solid masonry and also, for some specific products, fixings are supplied for fixing to plasterboard.

DO

- Retain all packaging in case the bracket needs to be returned.
- When fastening to wood studs, be sure to pre-drill holes into the wood stud.
- When fastening to brick or solid masonry, drill the holes in accordance with the instructions. Always remove drill dust from the hole before inserting the wall plug.
- Wall plug body must be fully inserted into the wall (ie fully into the brick).
- Lubricate the wall screws with soap to ease installation.
- Check the strength of the installation before fitting the TV.
- Periodically check strength of installation, signs of corrosion, damage or loose components.

DON'T

- Do not set in mortar joints.
- Do not over tighten screws.

TV HANGING

 
Must be carried out using the manufacturers threaded holes intended for this purpose. All variables of TV hanging screws are supplied within the product box (Because of the universal nature of this product, expect to have excess parts left over following your installation).

It is the responsibility of the installer to ensure the correct TV hanging screws are selected. If in doubt consult the TV manufacturer. AVF accept no responsibility for any damage caused by the use of the incorrect TV hanging screw or the use of incorrect fixing holes.

Index

- 1** Measure the TV fixing holes
- 2** Preparing the TV Mounting Plate
- 3** Fitting the TV Mounting Plate
- 4** Marking Wall for Drill Points
- 5** Fitting the Wall Plate - Double Stud Wall Plate
- 6** Fitting the Wall Plate - Single Stud Wall Plate
- 7** Hanging the Mount Arm - Double Stud Wall Plate
- 8** Hanging the Mount Arm - Single Stud Wall Plate
- 9** Connecting the TV
- 10** Lateral Shift (Optional)
- 11** Adjust or Lock Tilt (optional)
- 12** TV Levelling (optional)

Suitable Wall Types

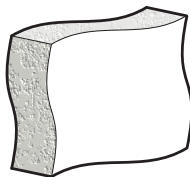


Solid Wall




Wood Stud

 
Parts Included

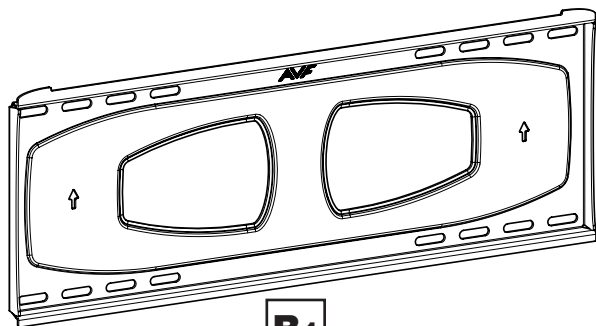


B1

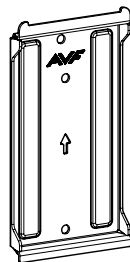 

B2

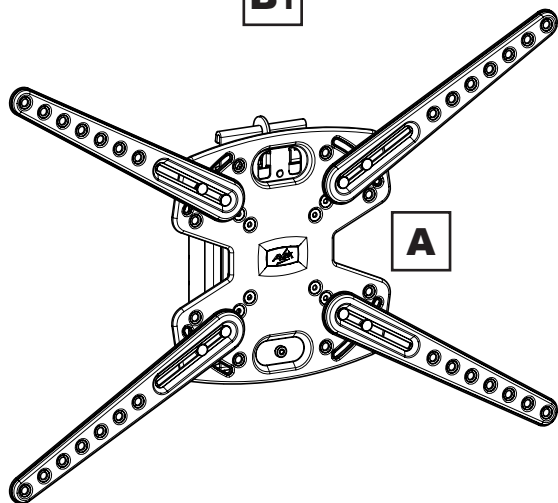 


A

 

K

 x6



L

x6



 
WT




4mm

M

TV Fixings

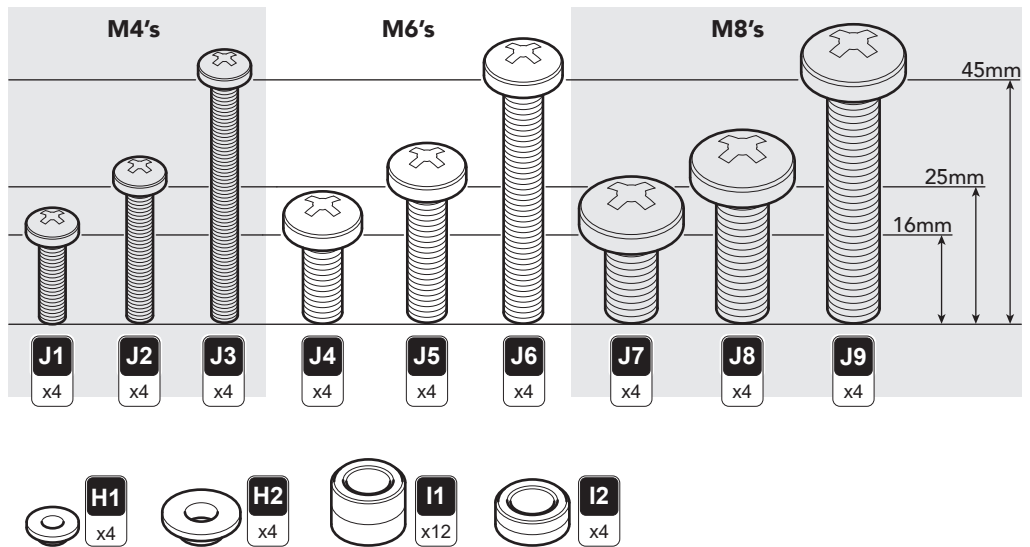


You will need

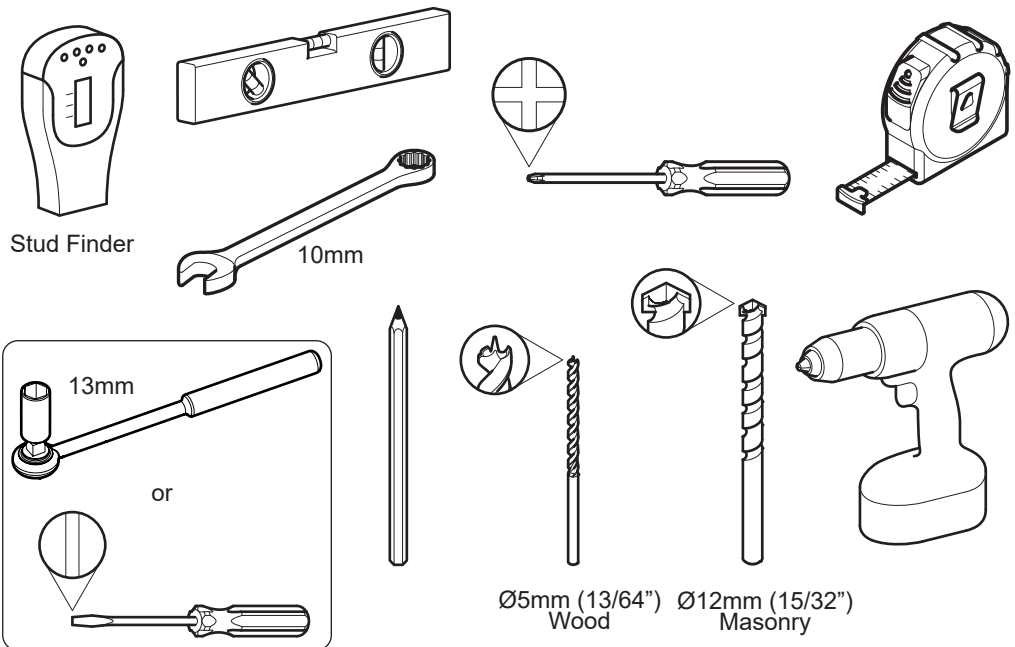 


1

 Measure the TV fixing holes

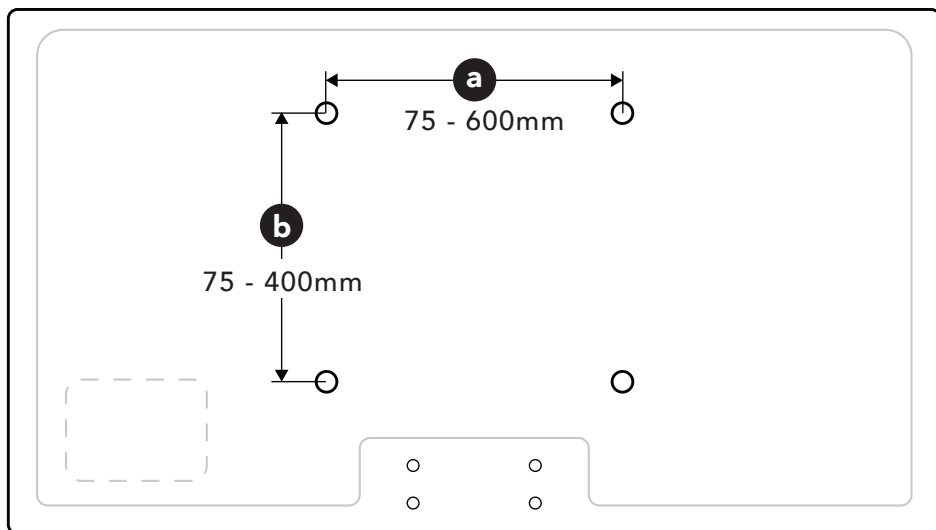

 This product fits fixing holes up to 600 x 400mm (MAX).

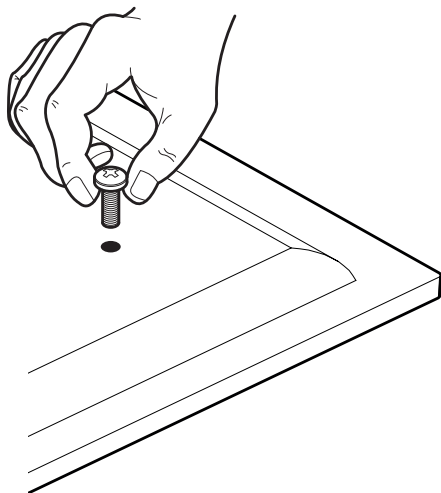

Determine which diameter TV Screws fit your TV and put them to one side.

 
M4, M6 or M8

We will select the correct length later.

2

Preparing the TV Mounting Plate

Before you can attach the TV mounting plate to your TV you need to remove the plate from your wall mount.

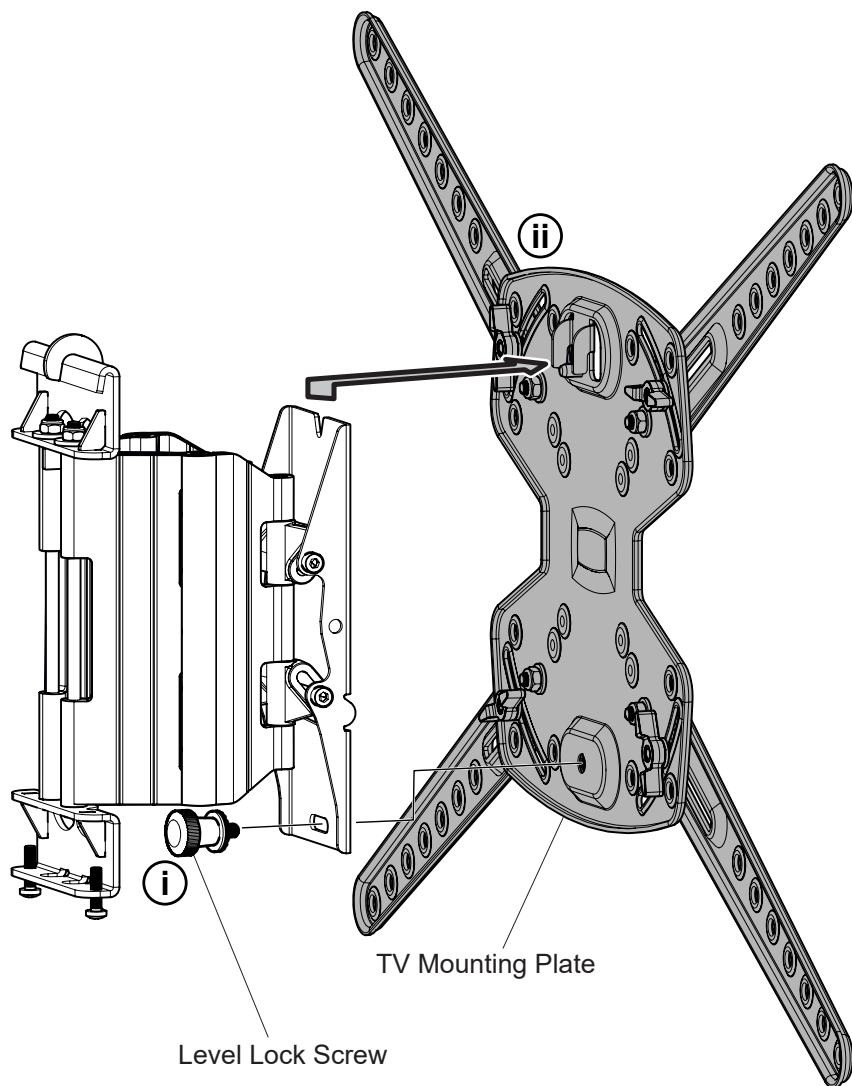

i

Remove the Level Lock Screw and safely keep for step 9.

ii

Remove the TV Mounting Plate.

Use the option that fits your TV.

OPTION 1


- | | |
|--|--|
| <input checked="" type="radio"/> 300mm x <input type="radio"/> 100mm | <input checked="" type="radio"/> 600mm x <input type="radio"/> 100mm |
| <input checked="" type="radio"/> 300mm x <input type="radio"/> 200mm | <input checked="" type="radio"/> 600mm x <input type="radio"/> 200mm |
| <input checked="" type="radio"/> 300mm x <input type="radio"/> 300mm | <input checked="" type="radio"/> 600mm x <input type="radio"/> 300mm |
| <input checked="" type="radio"/> 400mm x <input type="radio"/> 100mm | <input checked="" type="radio"/> 600mm x <input type="radio"/> 400mm |
| <input checked="" type="radio"/> 400mm x <input type="radio"/> 200mm | |
| <input checked="" type="radio"/> 400mm x <input type="radio"/> 300mm | |
| <input checked="" type="radio"/> 400mm x <input type="radio"/> 400mm | |

OPTION 2

- | |
|--|
| <input checked="" type="radio"/> 75mm x <input type="radio"/> 75mm |
| <input checked="" type="radio"/> 100mm x <input type="radio"/> 100mm |
| <input checked="" type="radio"/> 100mm x <input type="radio"/> 200mm |
| <input checked="" type="radio"/> 200mm x <input type="radio"/> 100mm |
| <input checked="" type="radio"/> 200mm x <input type="radio"/> 200mm |



If in any doubt please call the customer helpline.

 OPTION 1

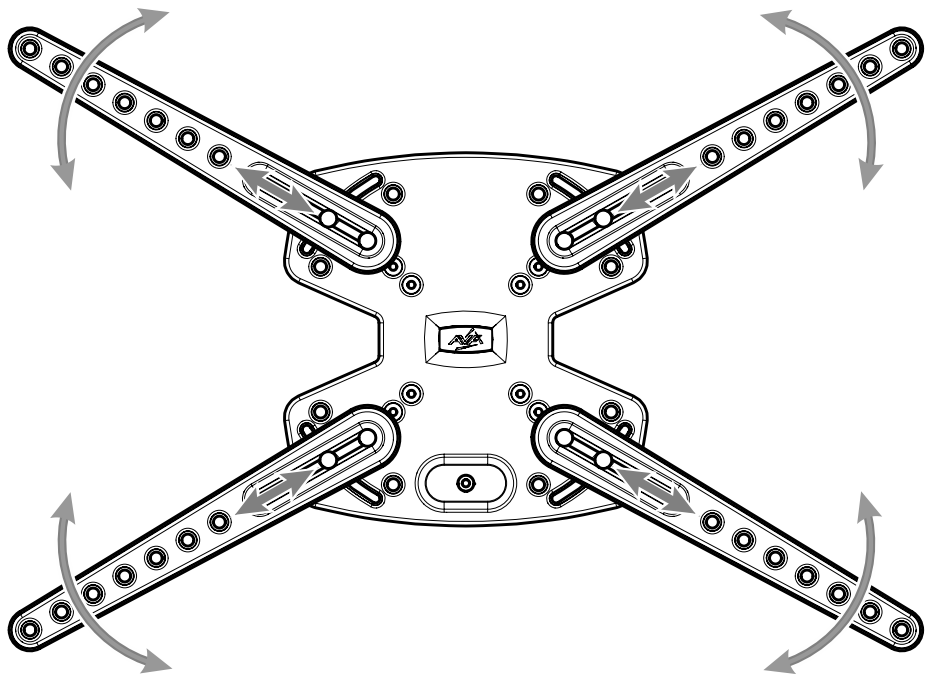

OPTION 2

  
If using Option 2 you need to remove the four VESA Adaptors. Keep the adaptors and fixings in a safe place in case they are needed in the future.

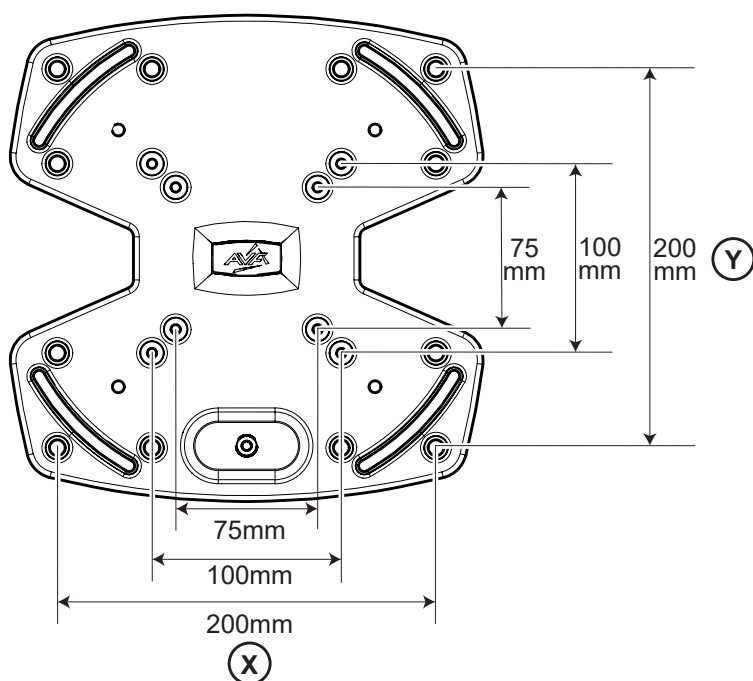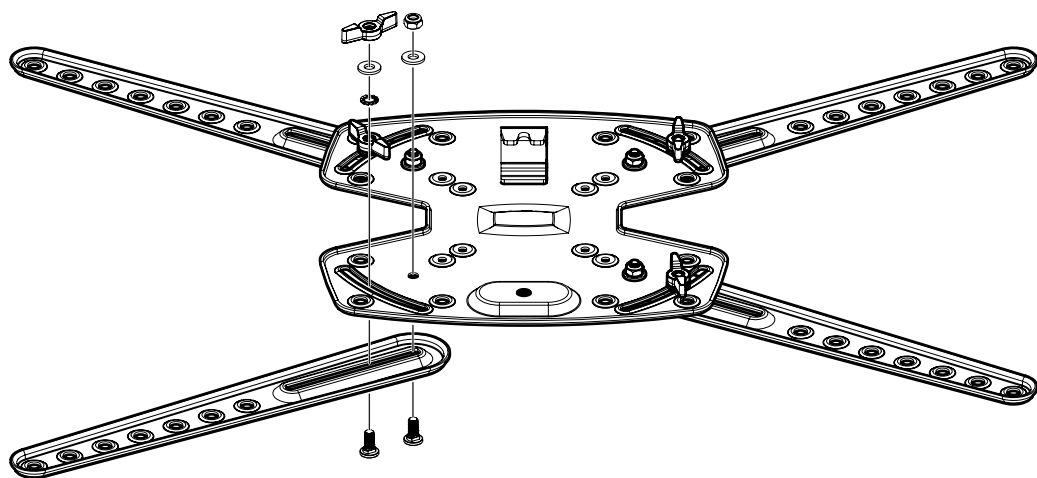

3 Fitting the TV Mounting Plate

No Spacers

 
For TVs with flat / unobstructed back.

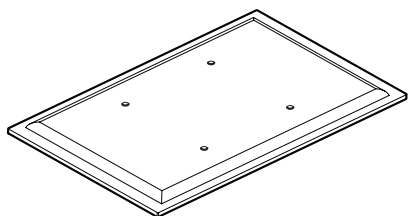


Spacers

11/12


 
For TVs with irregular / obstructed back.

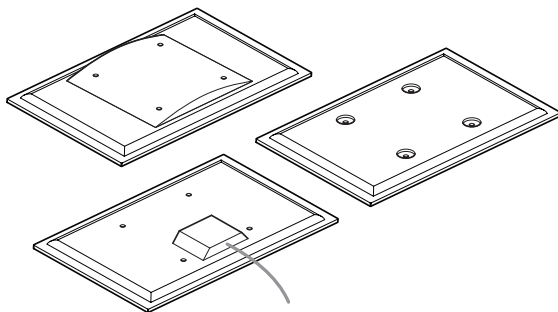

WARNING

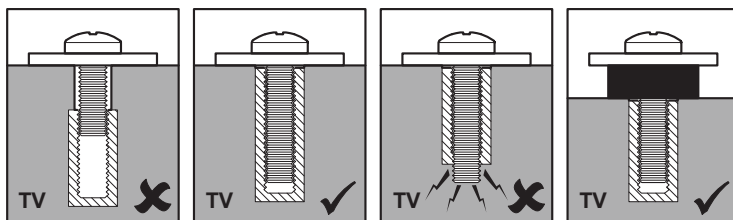 


  - i** Loosen the Thumb Screws and adjust the VESA Adaptors to fit the holes on the back of your TV. You can use any hole on the adaptors. The TV Mounting Plate must be level and vertically centred on the back of your TV.

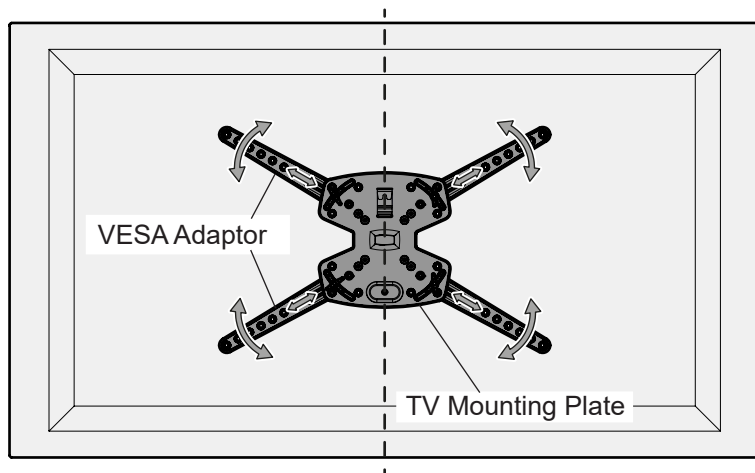
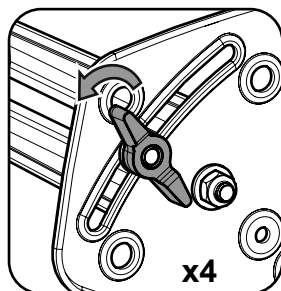




 Attach the mounting plate to the back of your TV using suitable screw, reducer and spacer combinations.

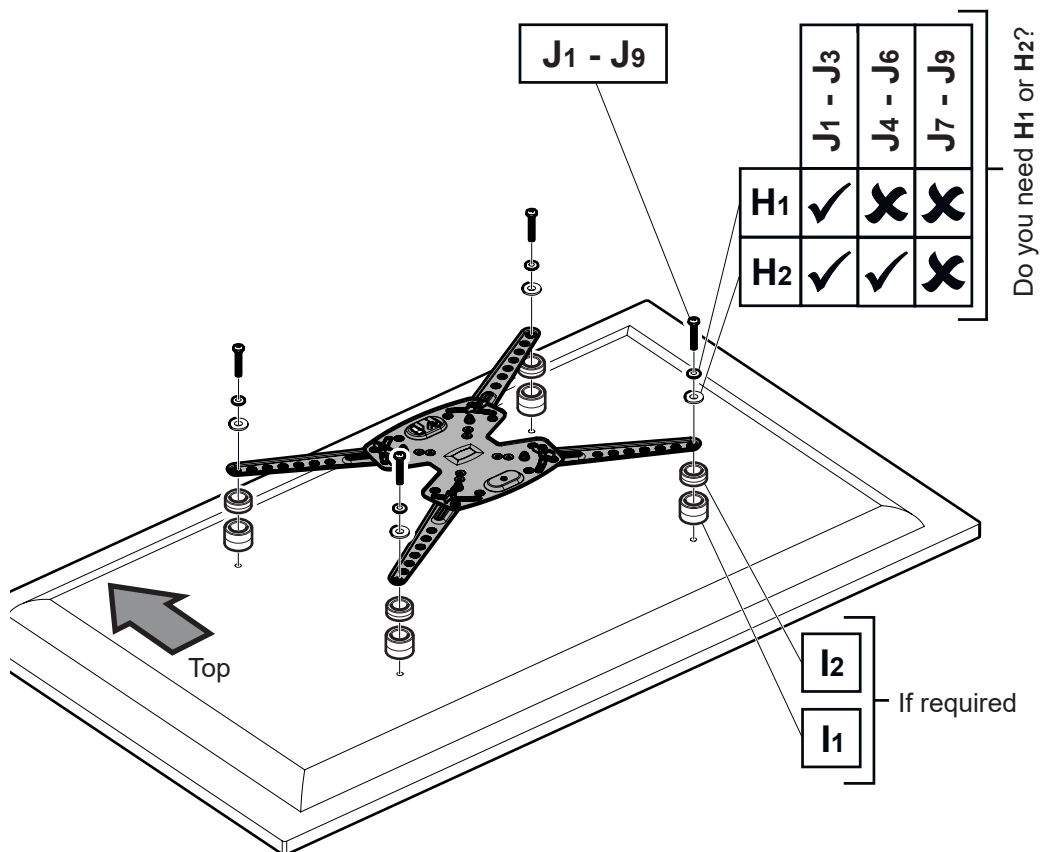

  Make sure the TV Mounting Plate is still level and vertically centred on the back of your TV. Tighten the Thumb Screws.

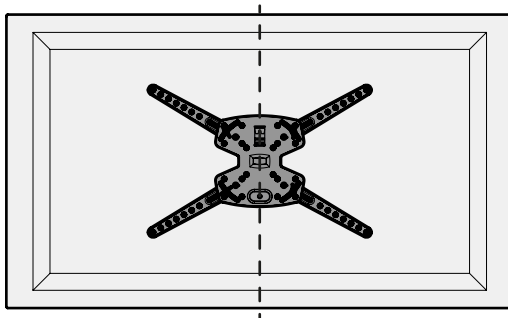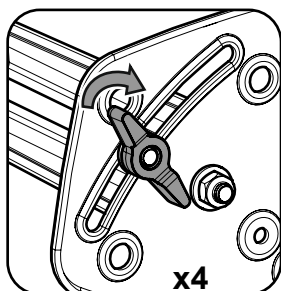


If your TV has an irregular/obstructed back or if you have any issues fitting to the back of your TV with the supplied screws, please call the customer services helpline.

4

Marking Wall for Drill Points



 For this step you will need your Wall Marking Template **WT**.

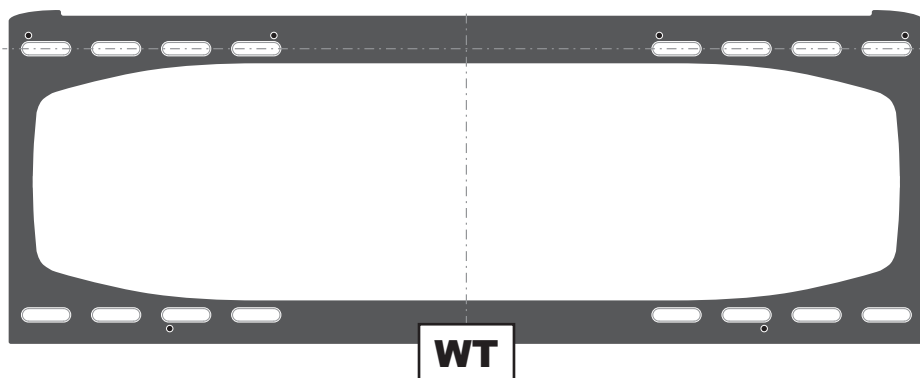


To determine the exact position for your drill points use the Height Calculator app. Follow the link to the app shown on your Wall Marking Template.

You will first need to decide whether you want to use the Double (**B1**) or Single (**B2**) Stud Wall Plate. The Double Stud Wall Bracket is for solid or wood stud walls and has a lateral shift option for perfect TV alignment. The Single Stud Wall Bracket is for wood stud walls only and has a much smaller on-wall footprint.

Before marking any drill points you will need to determine the wall type that you have, either **Solid Wall** or **Wood Stud Wall**. Ensure the drilling area is free from mains services (Gas / Electric / Water). If fixing to a solid wall it is recommended that you place the drilling template so that the Wall Plate Centre line is where you want the centre of your TV to be. If you need to avoid services embedded in the wall then you may need to laterally shift the arms on the wall plate a small amount. **See Lateral Shift Option.**

If fixing to a wood stud wall you must place the drilling template so that the drilling holes are over two wood studs. If you want the centre of your TV in a different position to the Wall Plate Centre Line you can laterally shift the arms on the wall plate to ensure your TV is in the desired position. **See Lateral Shift Option.**

 
If using the Single Stud Wall Plate, use the plate itself to mark the drill points required.

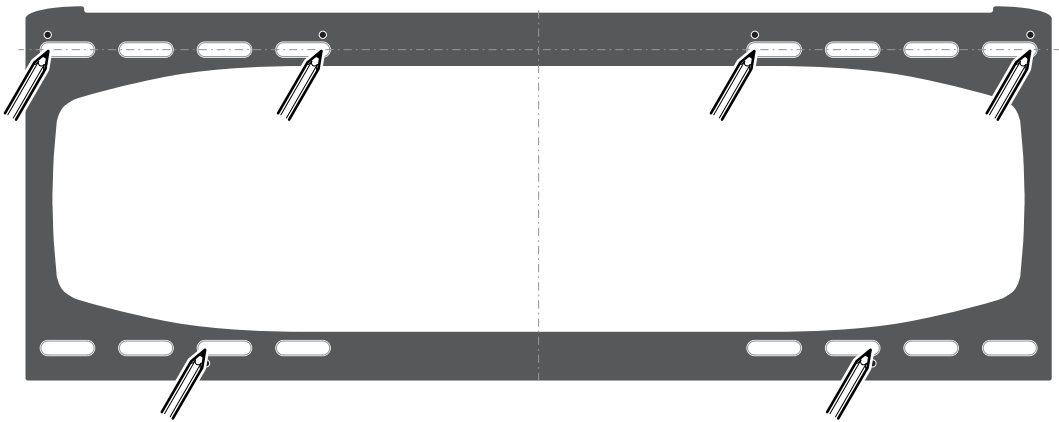


If fixing the Double Stud Wall Plate to a solid wall use the six fixing holes shown. If fixing to a wood stud wall only four screws are required. Position the Wall Plate so that it spans two wood studs and ensure each screw is in the centre of a wood stud.


 
Before you drill make sure you are happy with the position and ensure template is level.

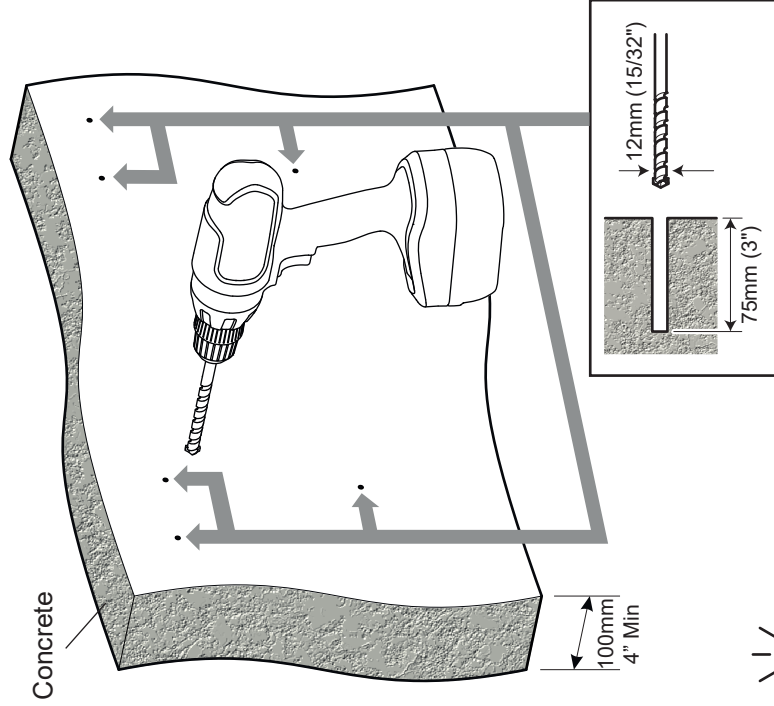

Solid Wall

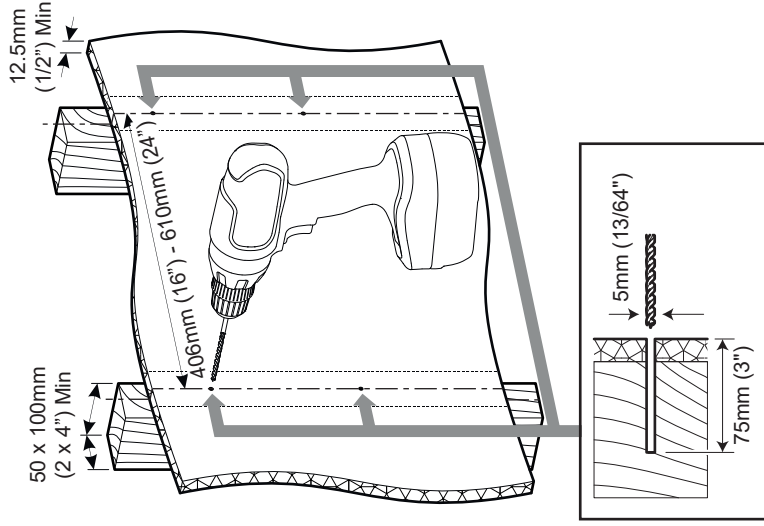 

Wood Stud

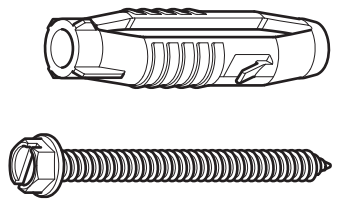 
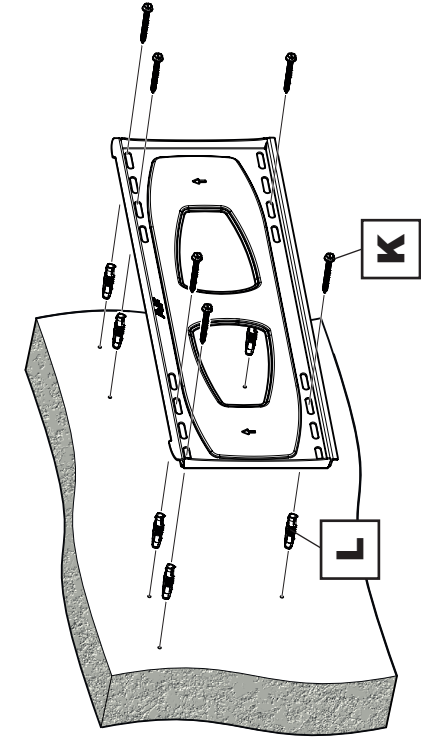 






Lubricate screw thread with soap.

  DO NOT overtighten screws.
Tighten screws by hand only

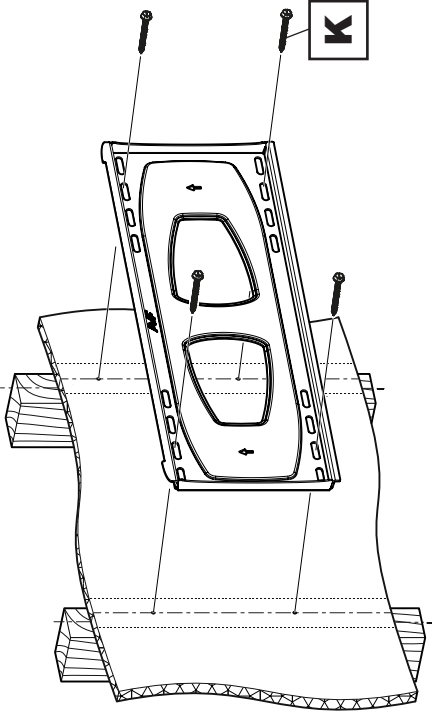






Lubricate screw thread with soap.


DO NOT overtighten screws.
Tighten screws by hand only.

DO NOT use wall plugs in a wood stud wall.

  Wood Stud

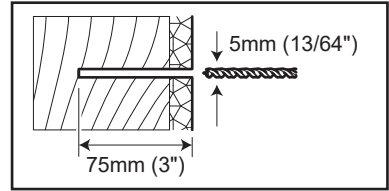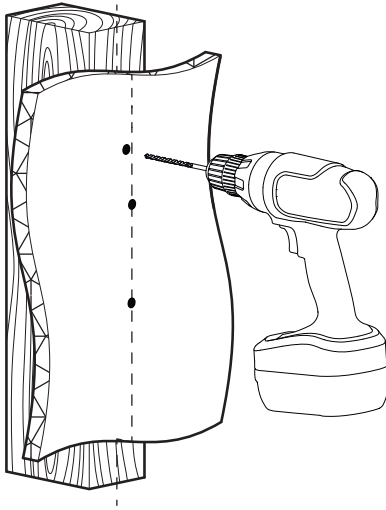

 Ensure you drill in the centre of the wood stud.

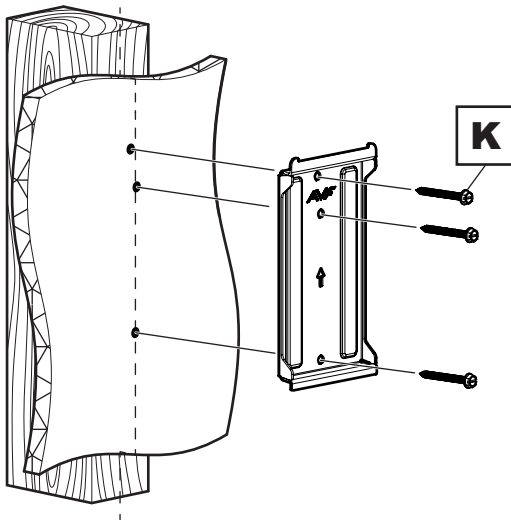


DO NOT overtighten screws.
Tighten screws by hand only.

DO NOT use wall plugs in a
wood stud wall.





 Lubricate screw thread with soap.




7

  Hanging the Mount Arm - Double Stud Wall Plate

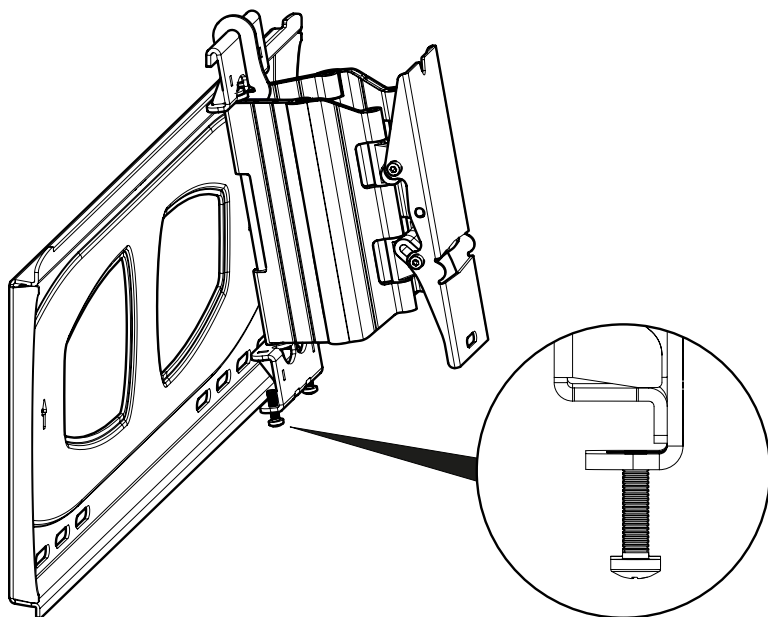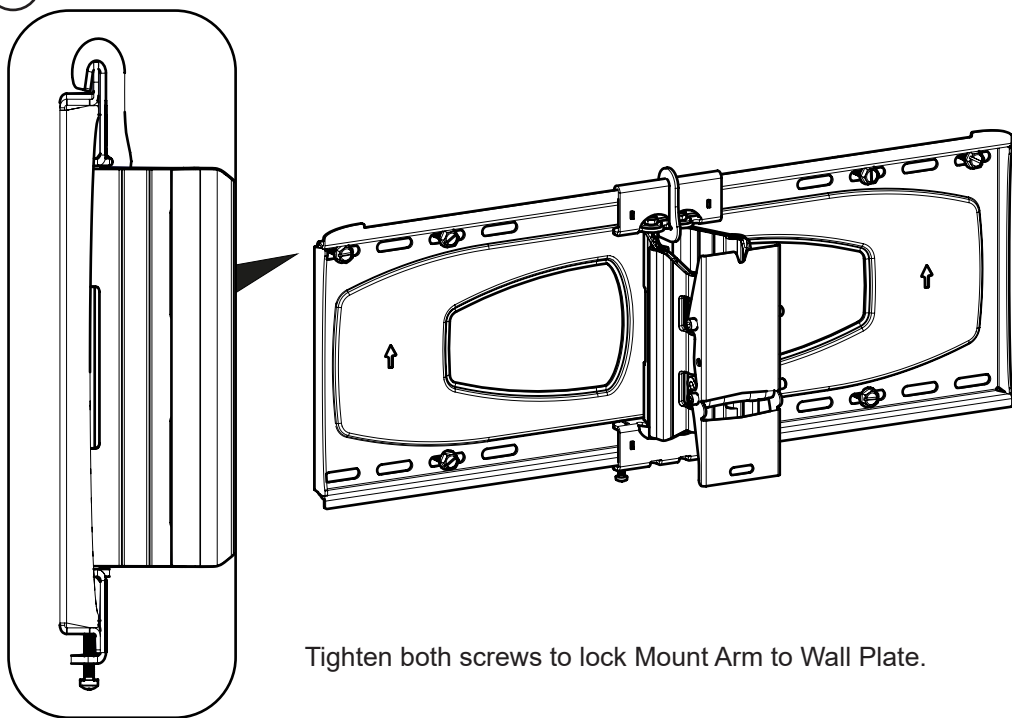
i**ii**

Tighten both screws to lock Mount Arm to Wall Plate.

 
i

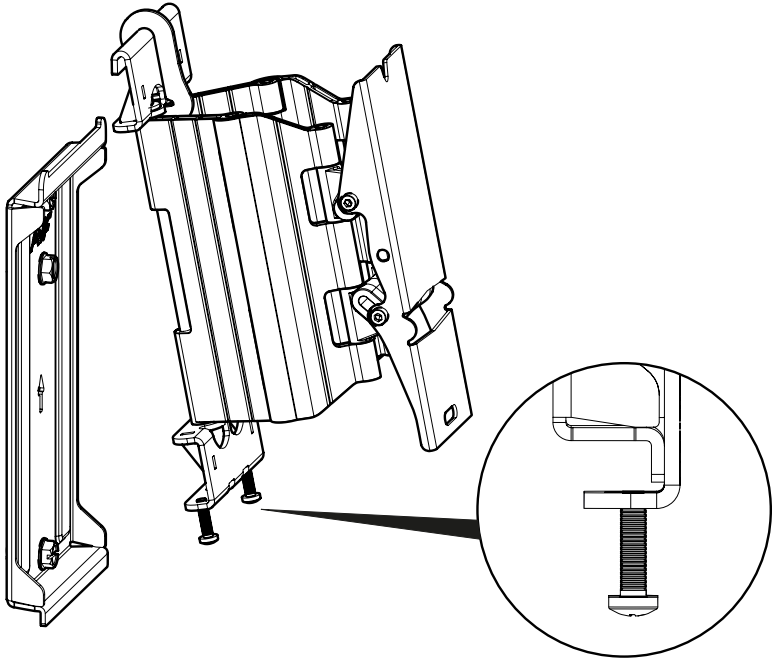

ii

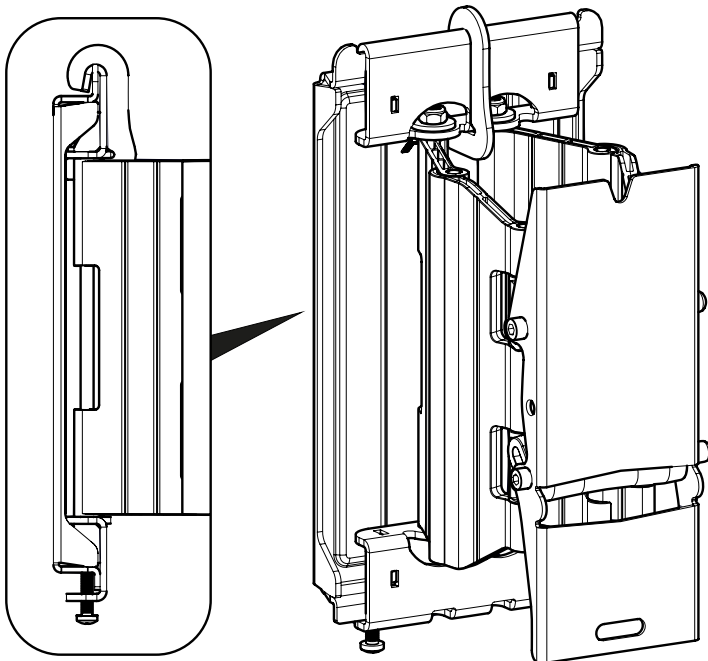 

 Tighten both screws to lock Mount Arm to Wall Plate.

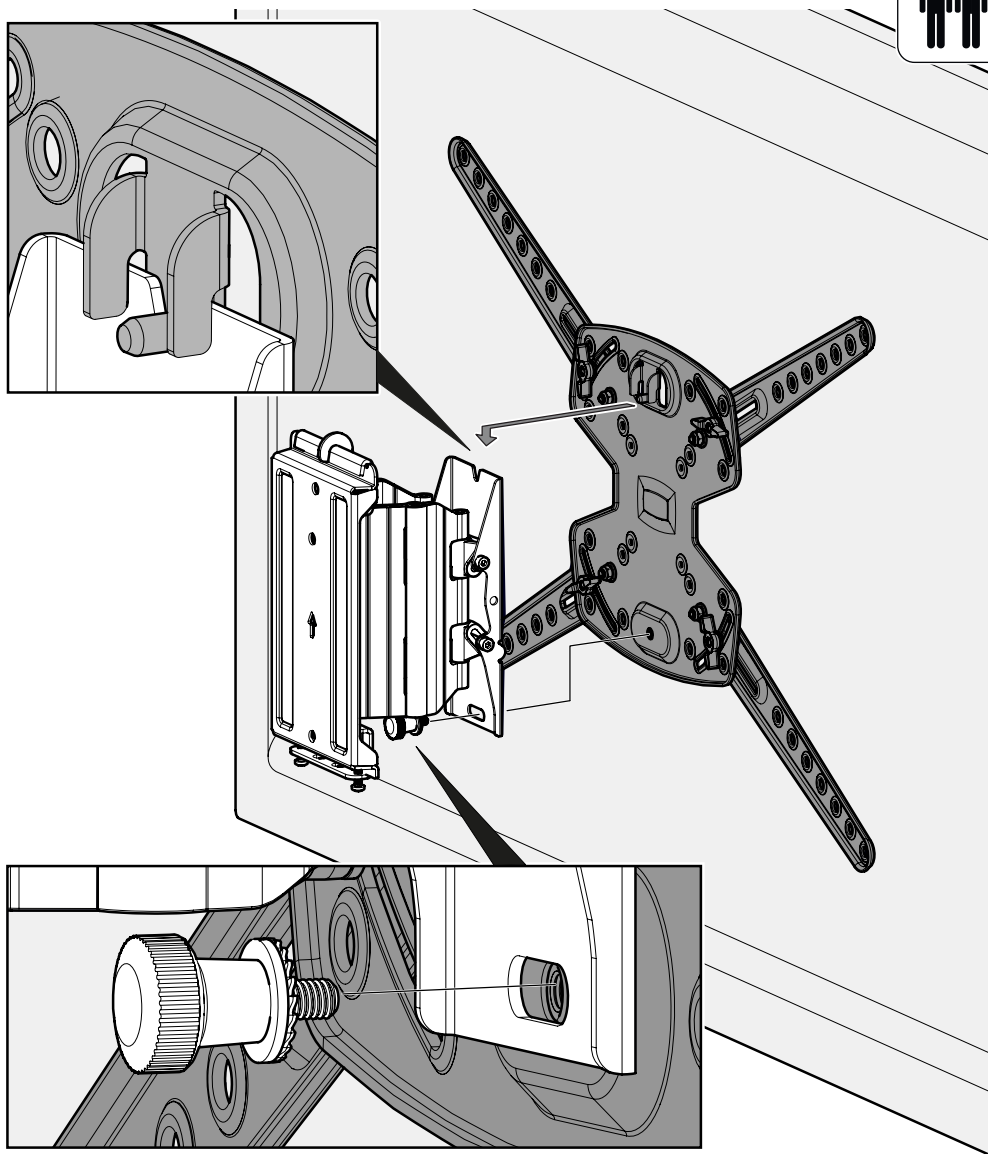

Reuse Level Lock Screw saved in step 2.



To remove the TV, reverse this procedure.

 
10 Lateral Shift (Optional)

The position you have chosen for your TV might not be central between the wood studs, or you may have to avoid services in the wall. In this case you can laterally shift the arms of the mount so the TV is exactly where you want it.




Remove TV before starting.


i

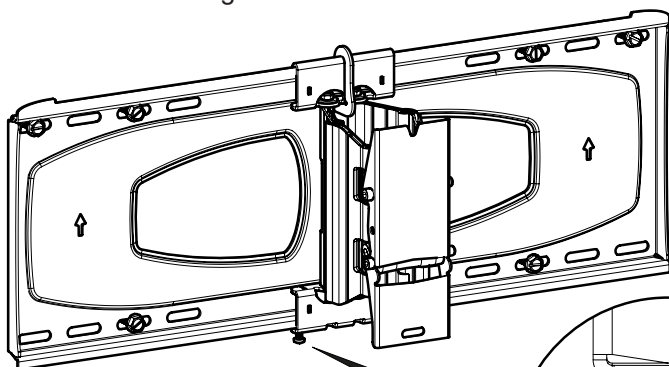


Loosen both locking screws.

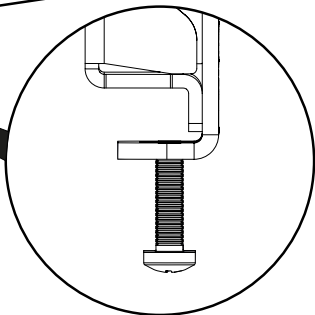 



ii

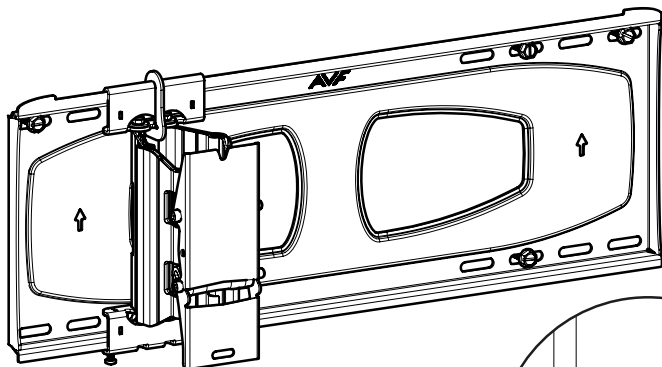 

 Slide arm into the required position and re-tighten both locking screws.


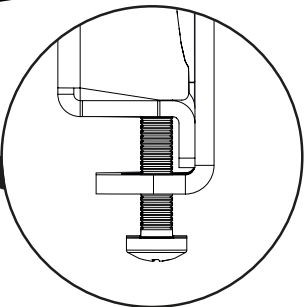


11 Adjust or Lock Tilt (optional)

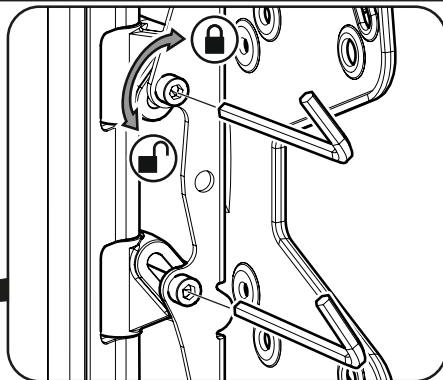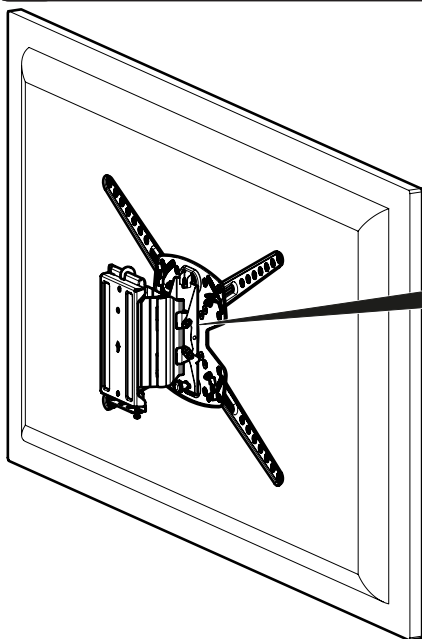  

Adjust screws to achieve perfect tilt resistance if required. You must adjust both screws equally. You can also lock the tilt if required.

  12 TV Levelling (optional)

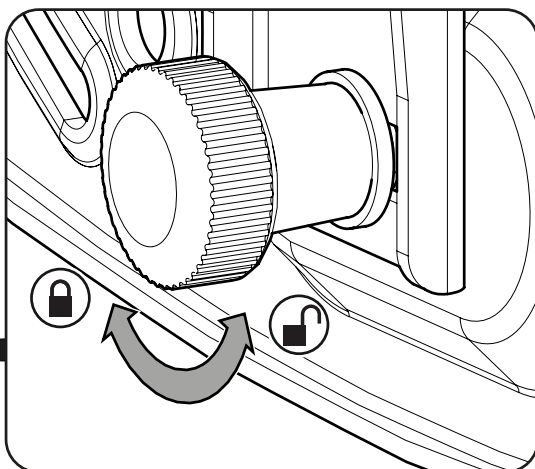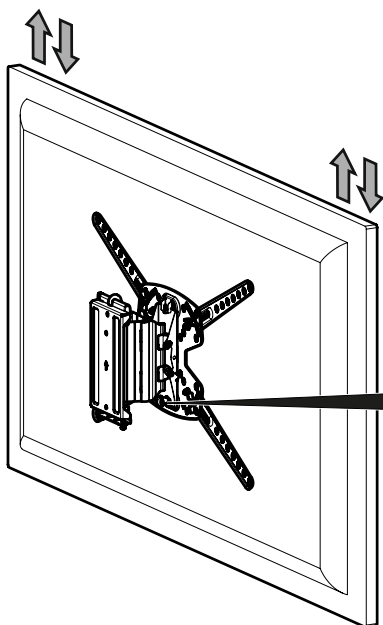

Loosen the Level Lock Screw, adjust your TV until it is level, then re-tighten the screw.