


471002 rev00

Please read these instructions thoroughly before installation.

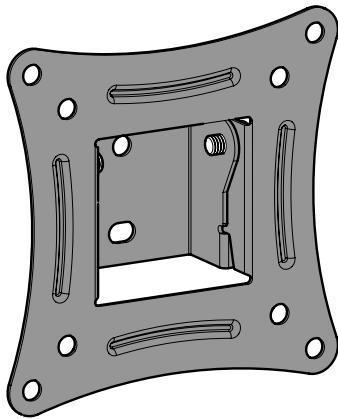

Please don't return me to the store

If you are unsure or need advice please contact our support team:

0333 320 0463 or **avfgroup.com**

Phone lines open Mon-Fri during AVF office hours



AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England

Retain all packaging in case the product needs to be returned.

Contents may vary from photography / illustrations.


You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.



It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc). AVF accept no responsibility for any damage or loss caused by installing this product in a substandard wall.

Periodically check all the nuts and bolts are tight.


You will need

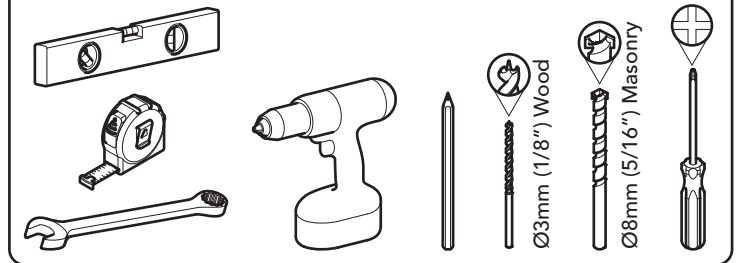

Fixings Included:

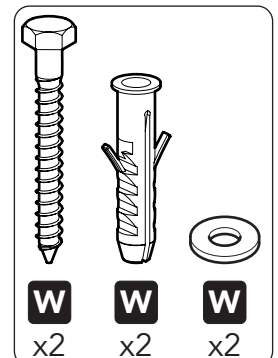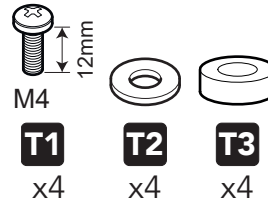


1 Separating the Brackets

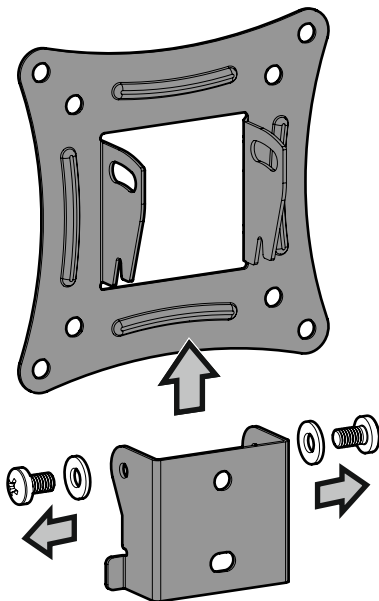

Remove the Screws and Washers and safely keep for step 4.



2 Fitting the TV Mounting Plate

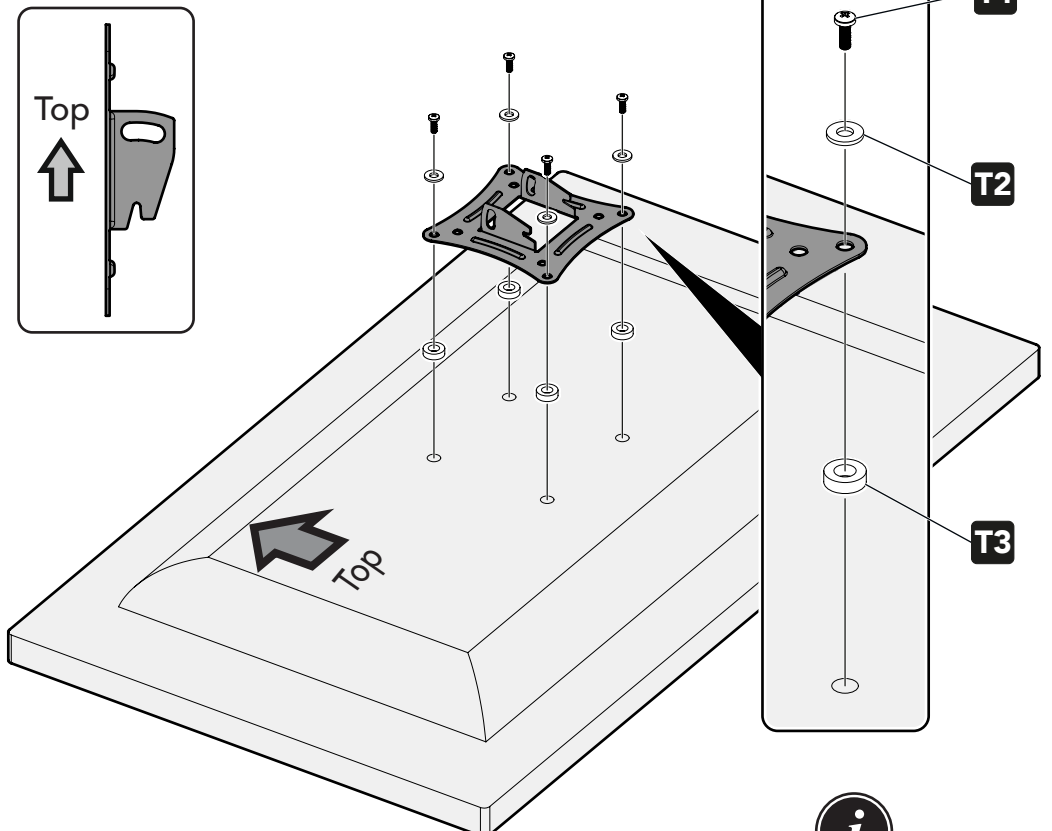


You only need to use spacers **T3** if the screws are too long or the back of your TV is not flat.

3 Fitting the Wall Bracket


Solid Wall

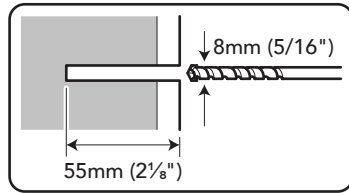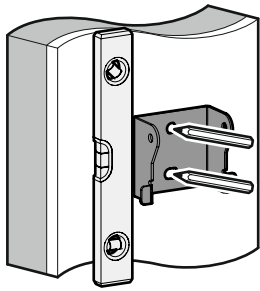

Remove Dust from Holes.


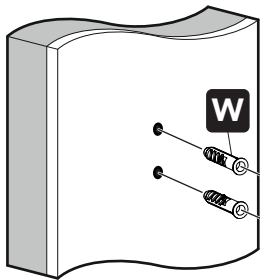


Lubricate screw thread with soap.

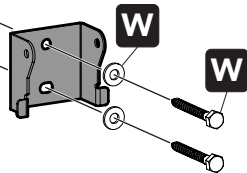


DO NOT overtighten screws. Tighten screws by hand only.


Wood Stud

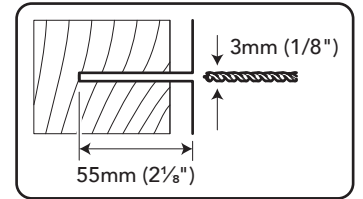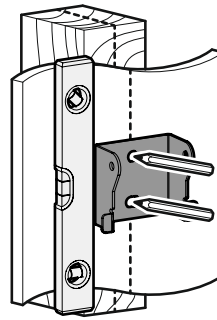

Ensure bracket is in the centre of the wood stud.

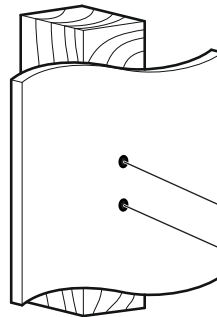



Lubricate screw thread with soap.

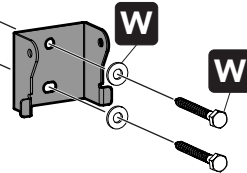

DO NOT overtighten screws. Tighten screws by hand only.

DO NOT use wall plugs in a wood stud wall.

4 Hanging the TV

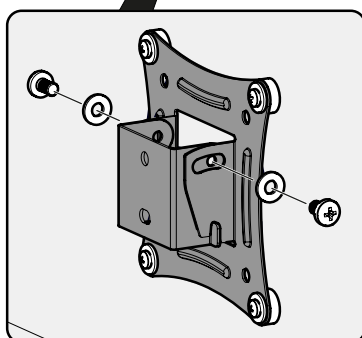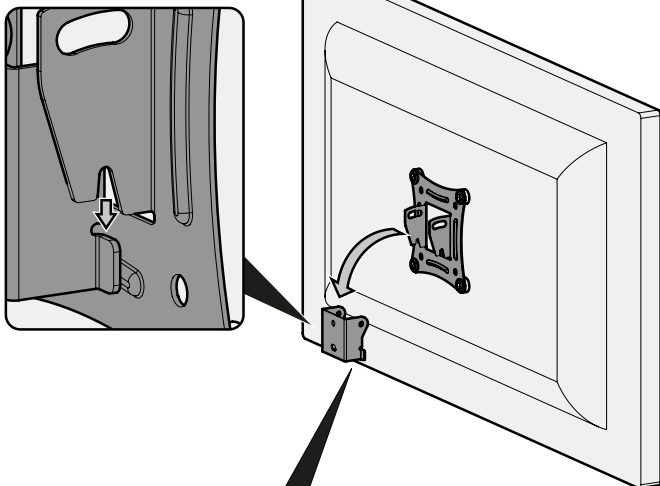

Reuse screws and washers saved in step 1.

5 Tilt Adjustment

