

40kg
88lb

STOP

Read through ALL instructions before commencing installation.

Please don't return me to the store

If you are unsure or need advice
please contact our support team:

0333 320 0463 or **avfgroup.com**

Phone lines open Mon-Fri during AVF office hours



IMPORTANT INFORMATION!

We advise that before starting the assembly of this product that you familiarise yourself with the instructions and the parts list in this leaflet.


Do not's

- Do not over tighten any part of this assembly.
- Do not place hot or cold objects on to or next to any glass surface unless the object is sufficiently insulated to prevent contact.
- Do not strike the glass with hard or pointed items.
- Do not use the product if the glass is chipped or damaged.
- Do not sit or stand upon horizontal glass surfaces.
- Do not use washing powders or other substances containing abrasives when cleaning the glass.

Do's




- Do use a damp cloth with diluted washing up liquid for cleaning the glass surfaces.
- Check all nuts and bolts from time to time.

Maximum TV weight and shelf capacities


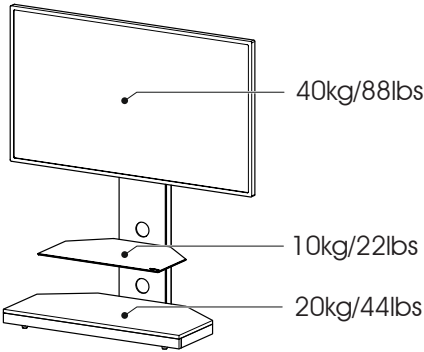


WARNING: Wherever possible distribute weight evenly.

TV Screws, Reducers and Spacers

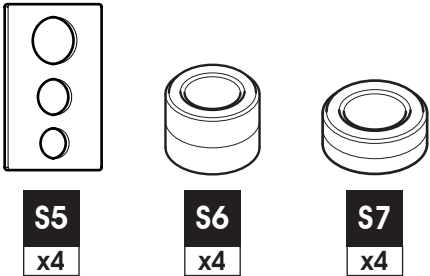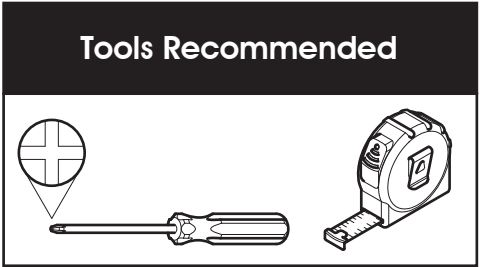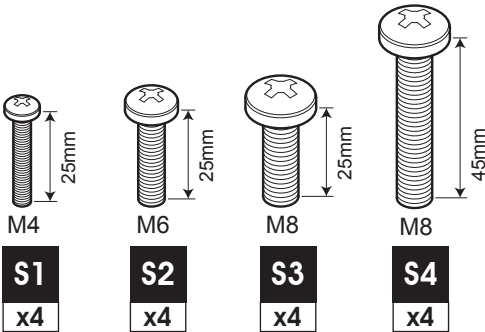


Boxed Parts

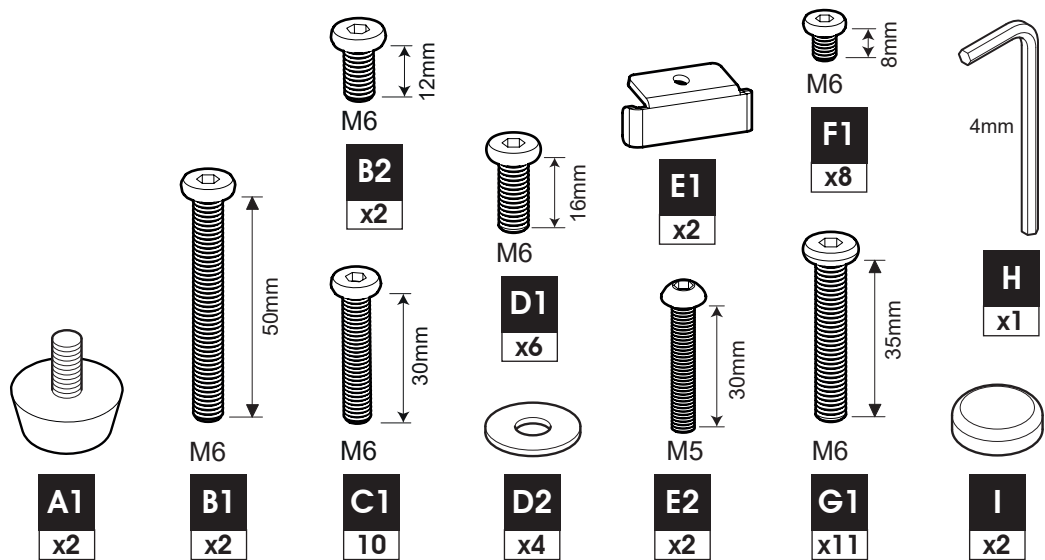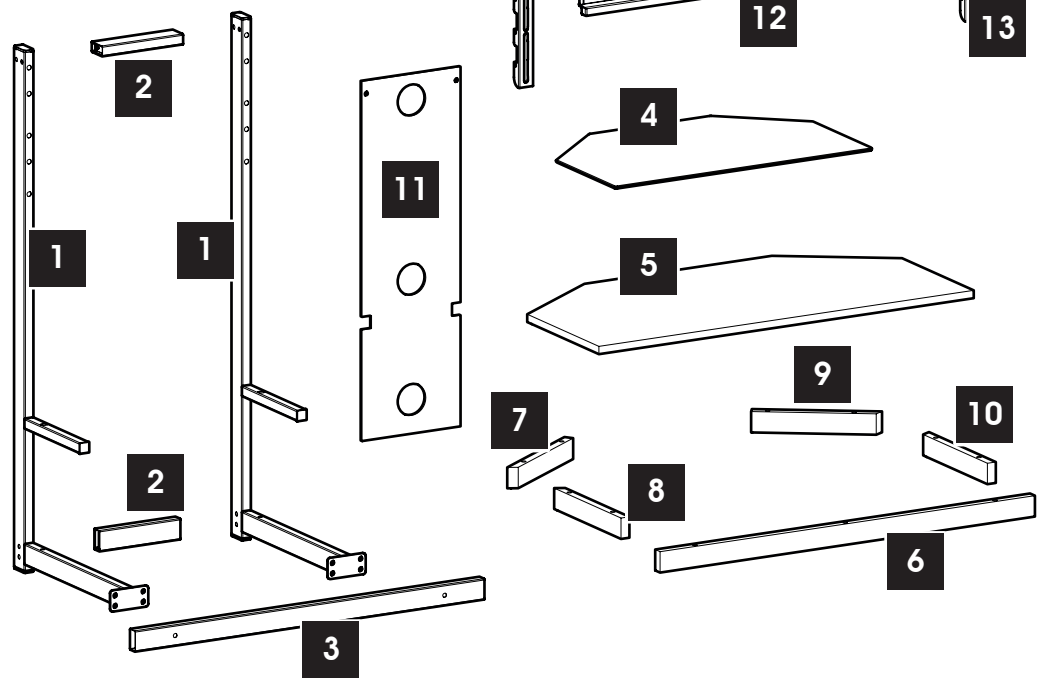


1

Measure the TV fixing holes Width and Height

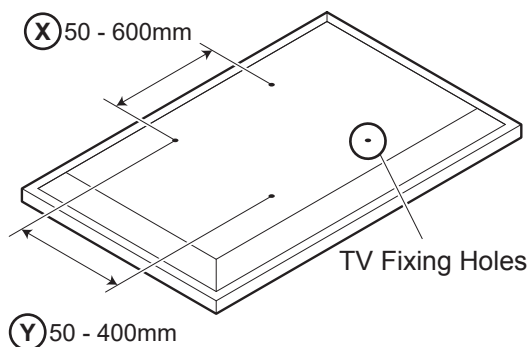

If width **X** is greater than 600 mm or height **Y** greater than 400 mm **STOP** installation now and contact the customer help line.

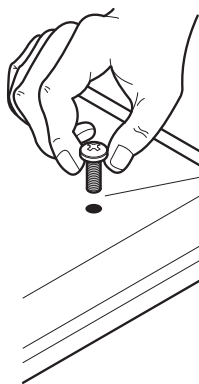


M4 = S1

M6 = S2



M8 = S3/S4

You are provided with 3 diameters of TV fixing screws, **M4**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 12.

2

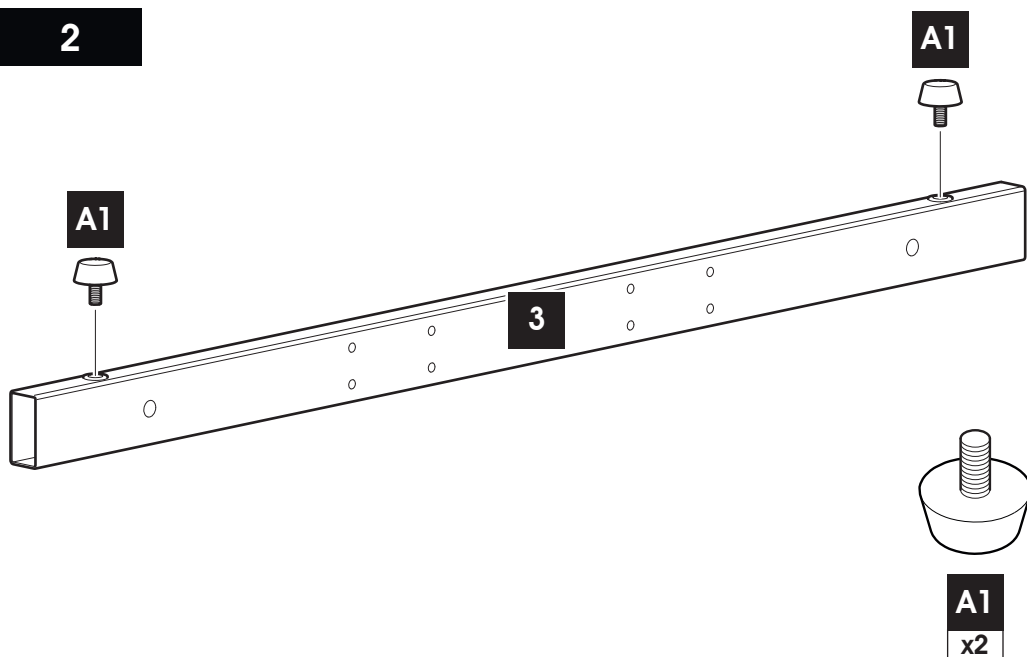



3

 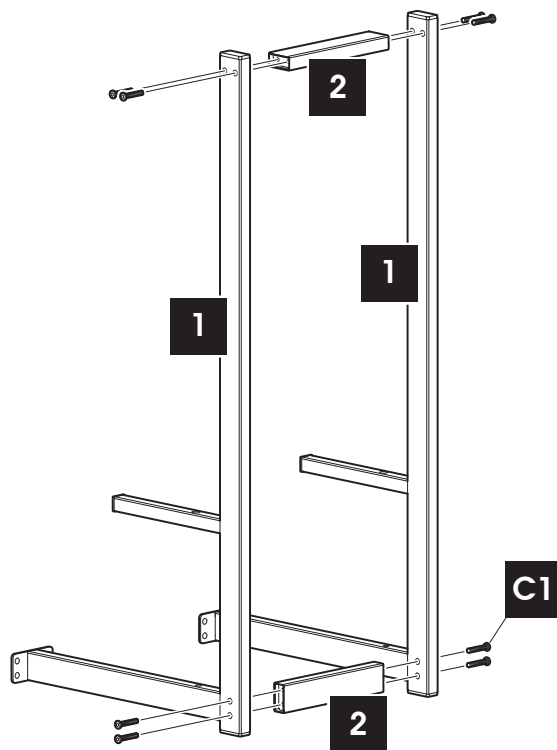

M6

C1
8

 4

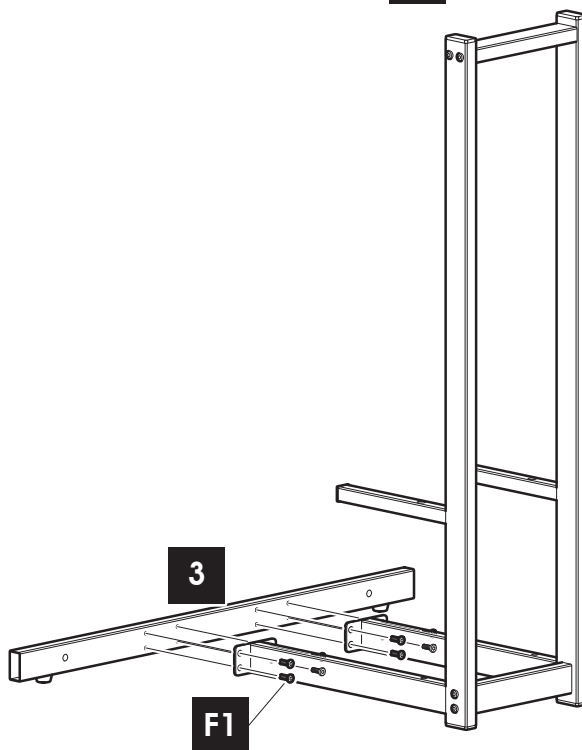

M6

F1
x8

5




x2

6





x11

7

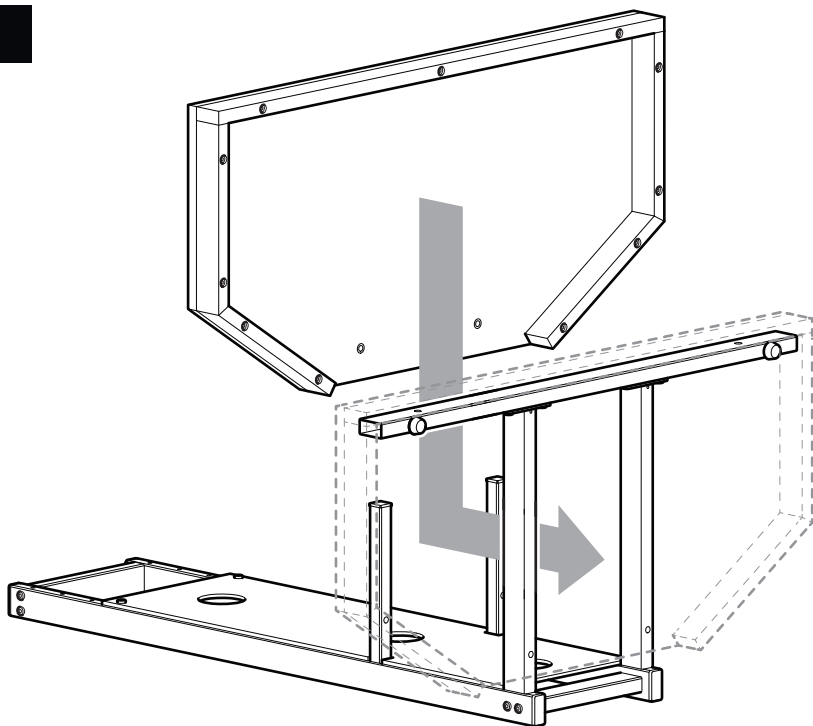


8

 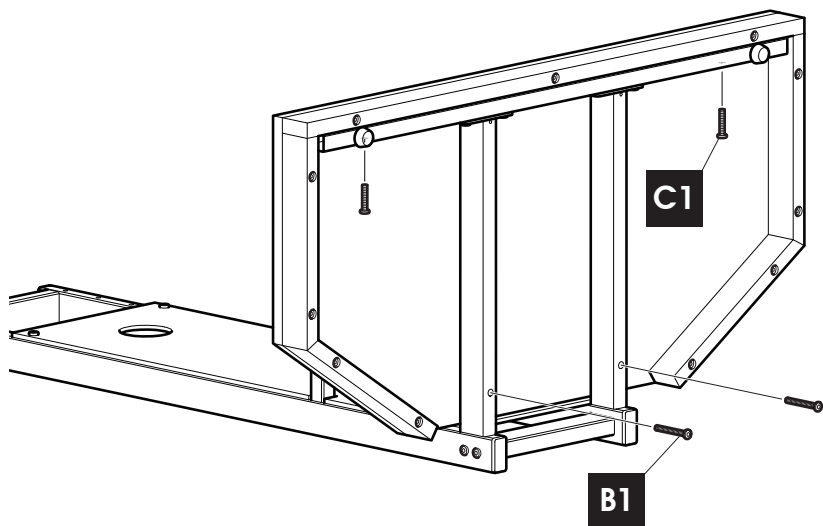

M6

 
B1
x2



M6



C1
2

9

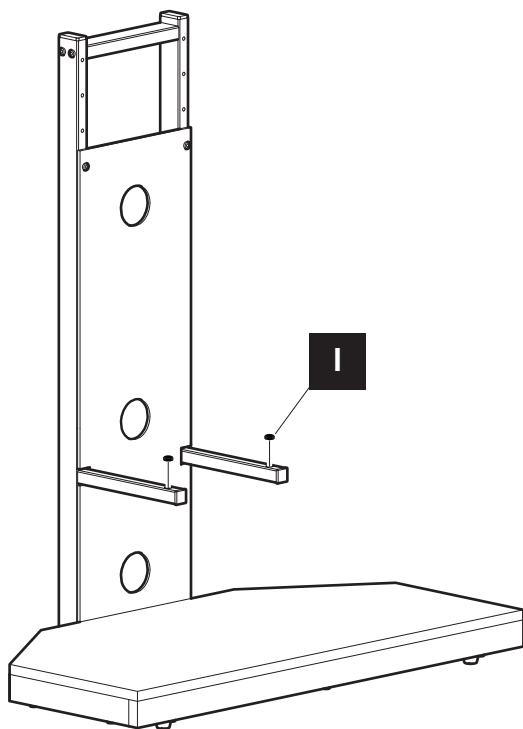



I
x2

 10


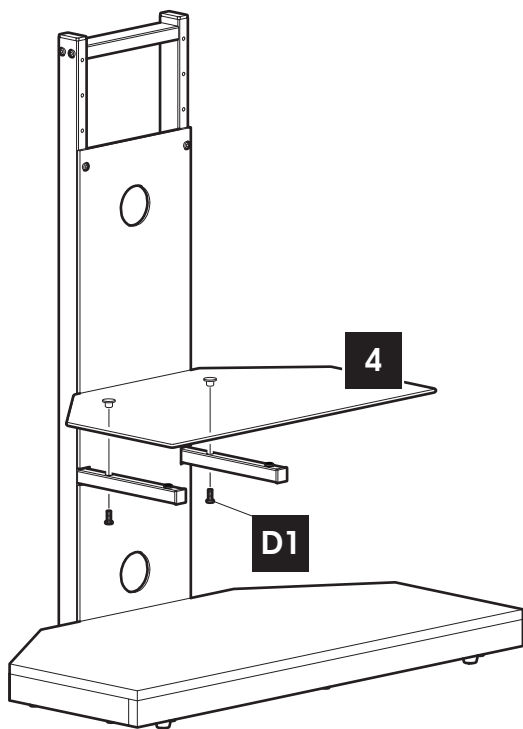


M6

D1
x2

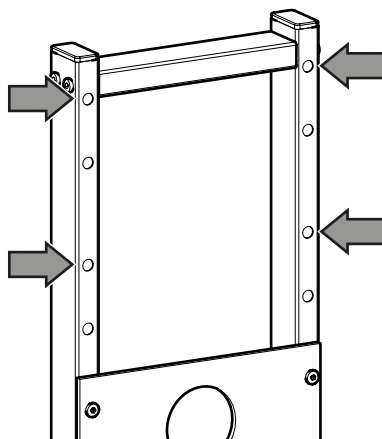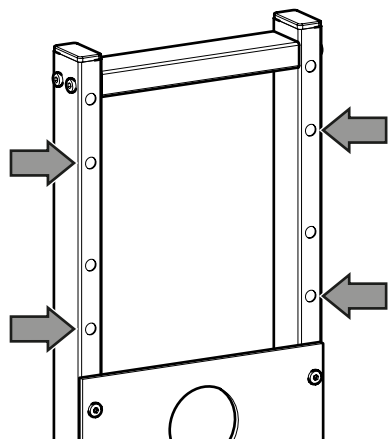

 There are two height options for mounting the TV bracket. Choose the option that best allows you to mount the TV at your preferred height.

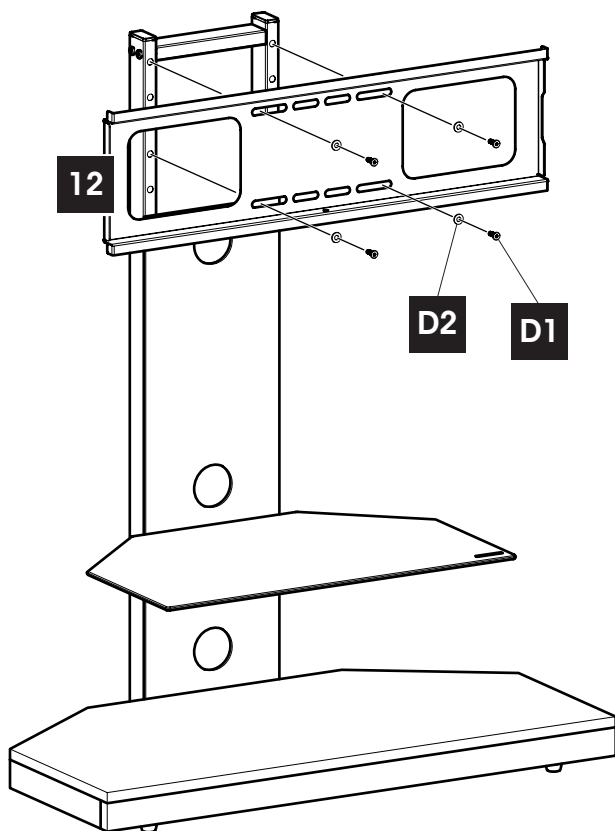

M6

D1


x4

**D2**

x4



After completing this step, you will have lots of TV screws left over. Keep them in a safe place in case you require them in future.

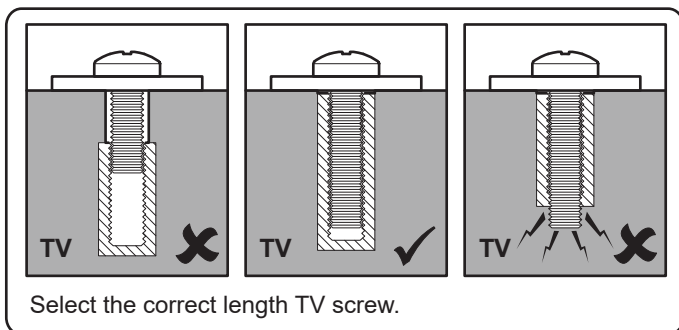

S1 - S4


S5

M8

M6

M4

13

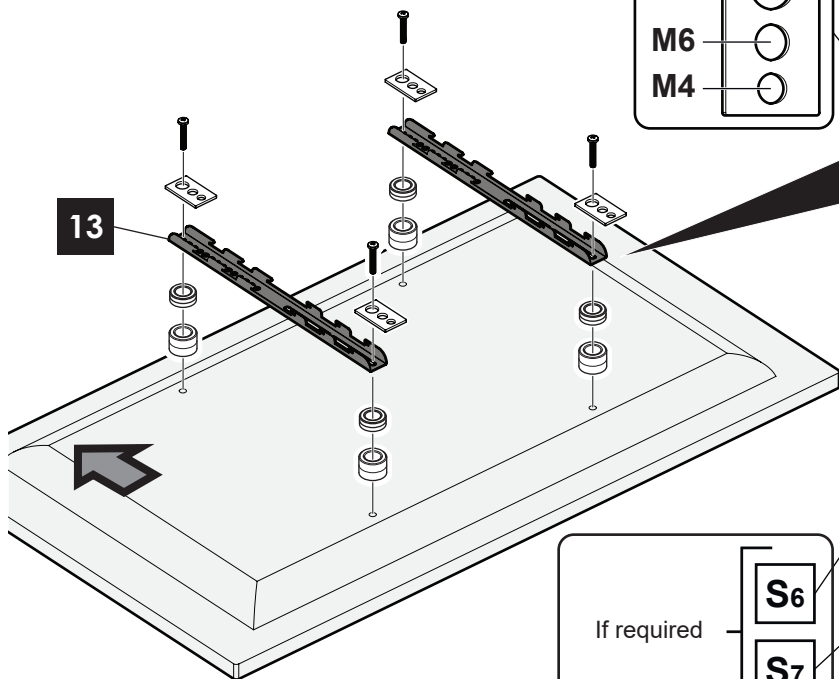

If required

S6

S7

You may need to use Spacers **S6** or **S7** if the screws are too long or the back of your TV is not flat.

