

40kg  
88lb

**STOP**

Read through ALL instructions before commencing installation.

Please don't return me to the store

If you are unsure or need advice  
please contact our support team:

**0333 320 0463** or **avfgroup.com**

Phone lines open Mon-Fri during AVF office hours



**IMPORTANT INFORMATION!**

We advise that before starting the assembly of this product that you familiarise yourself with the instructions and the parts list in this leaflet.

 
**Do not's**

- Do not over tighten any part of this assembly.
- Do not place hot or cold objects on to or next to any glass surface unless the object is sufficiently insulated to prevent contact.
- Do not strike the glass with hard or pointed items.
- Do not use the product if the glass is chipped or damaged.
- Do not sit or stand upon horizontal glass surfaces.
- Do not use washing powders or other substances containing abrasives when cleaning the glass.

**Do's**



- Do use a damp cloth with diluted washing up liquid for cleaning the glass surfaces.
- Check all nuts and bolts from time to time.

**Maximum TV weight and shelf capacities**


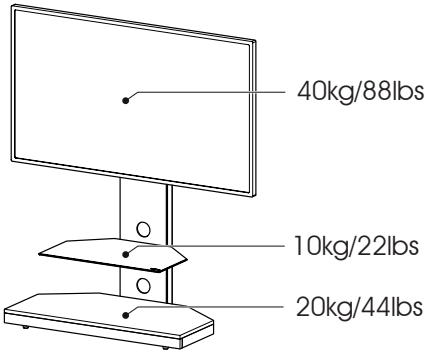


**WARNING:** Wherever possible distribute weight evenly.

**TV Screws, Reducers and Spacers**

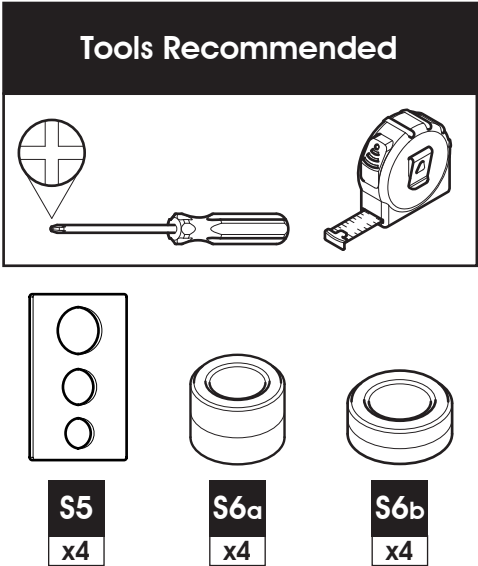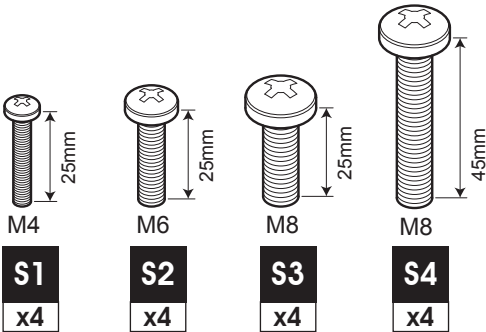  


Boxed Parts

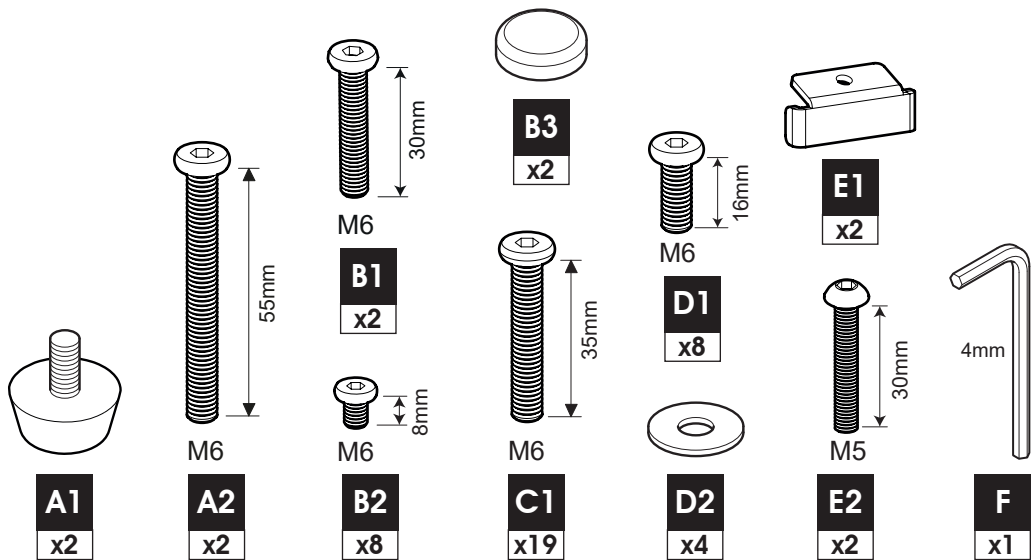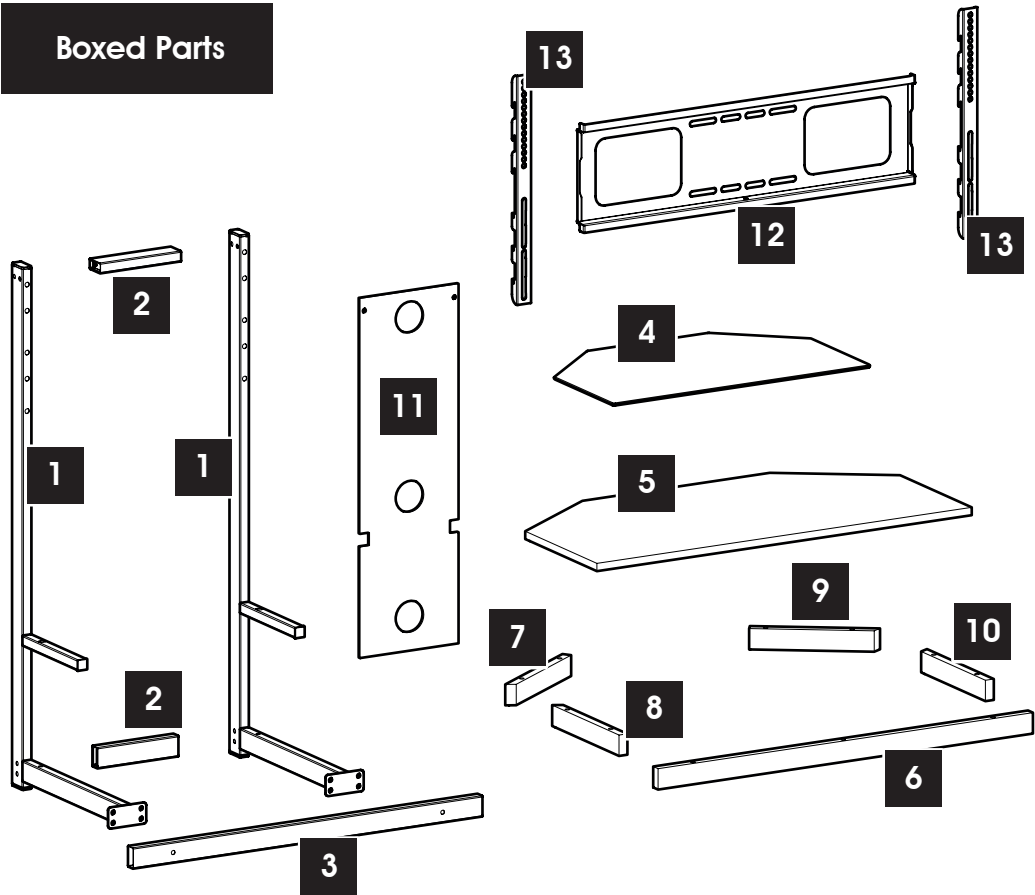  


1

## Measure the TV fixing holes Width and Height

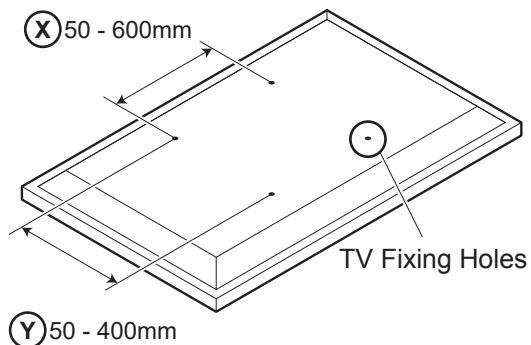 

 If width **X** is greater than 600 mm or height **Y** greater than 400 mm **STOP** installation now and contact the customer help line.

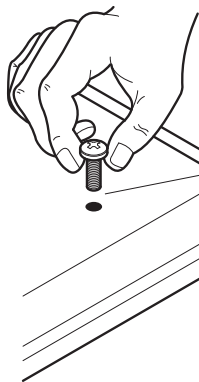


**M4 = S1**

**M6 = S2**



**M8 = S3/S4**

You are provided with 3 diameters of TV fixing screws, **M4**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 12.

2

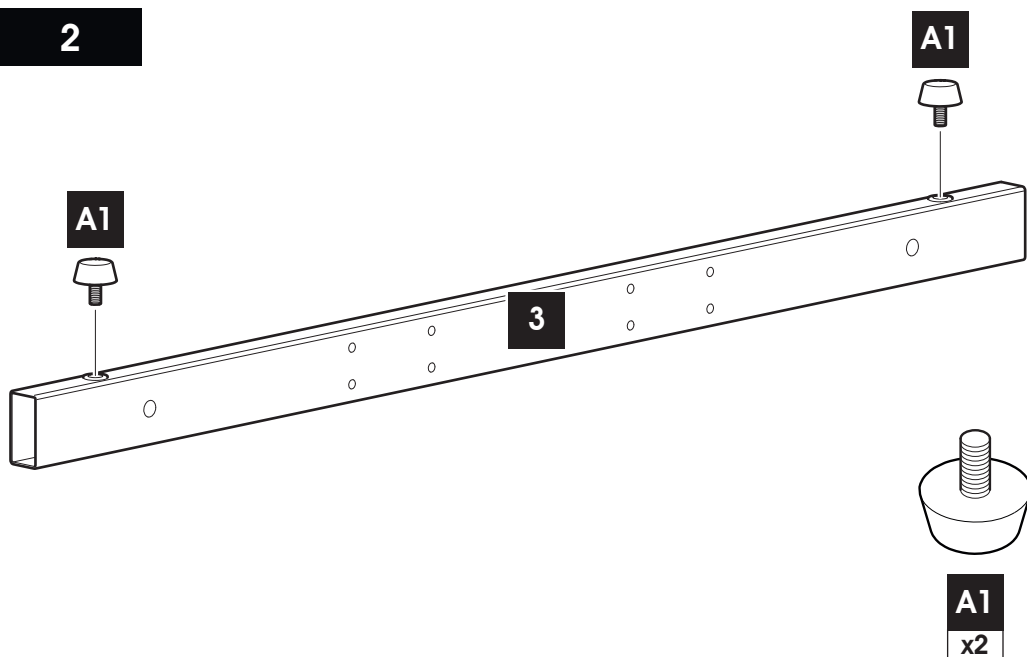



3

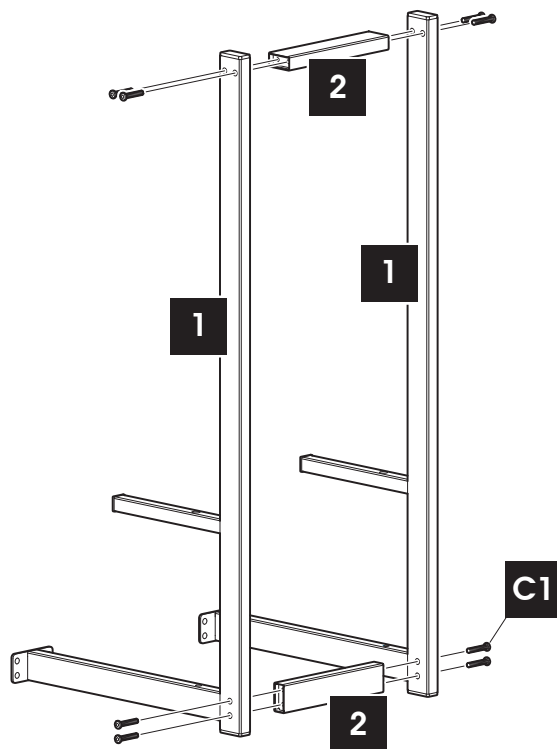  

M6

C1  
x8

 
 
4

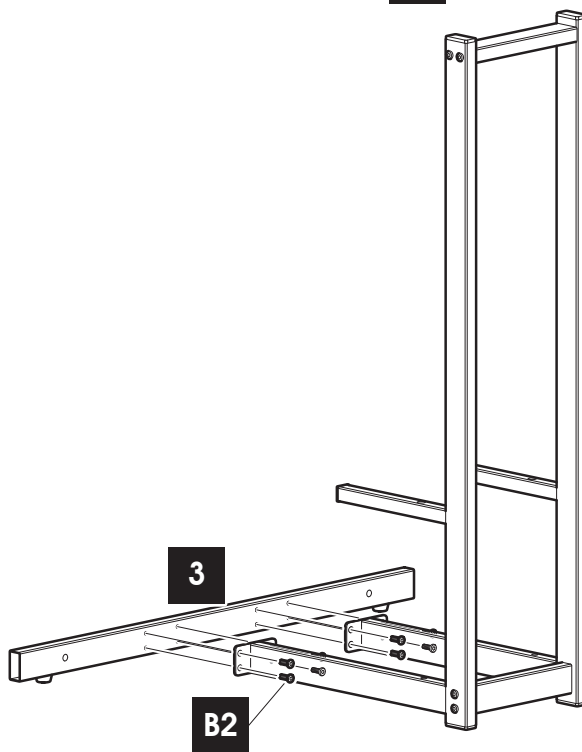

M6

B2  
x8

 
 
5

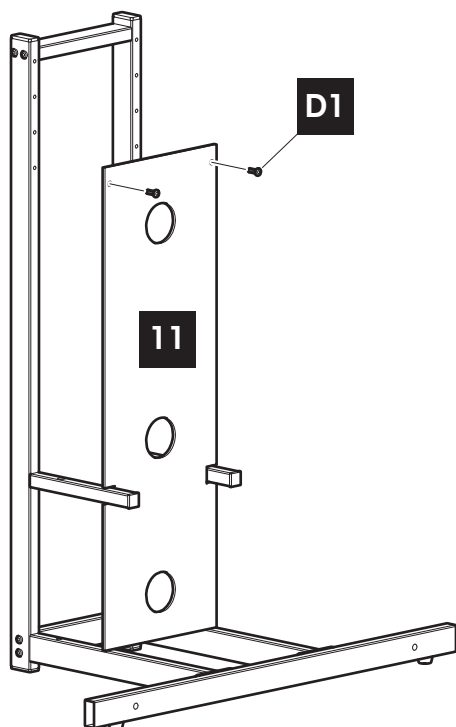

M6

D1  
x2

  
6

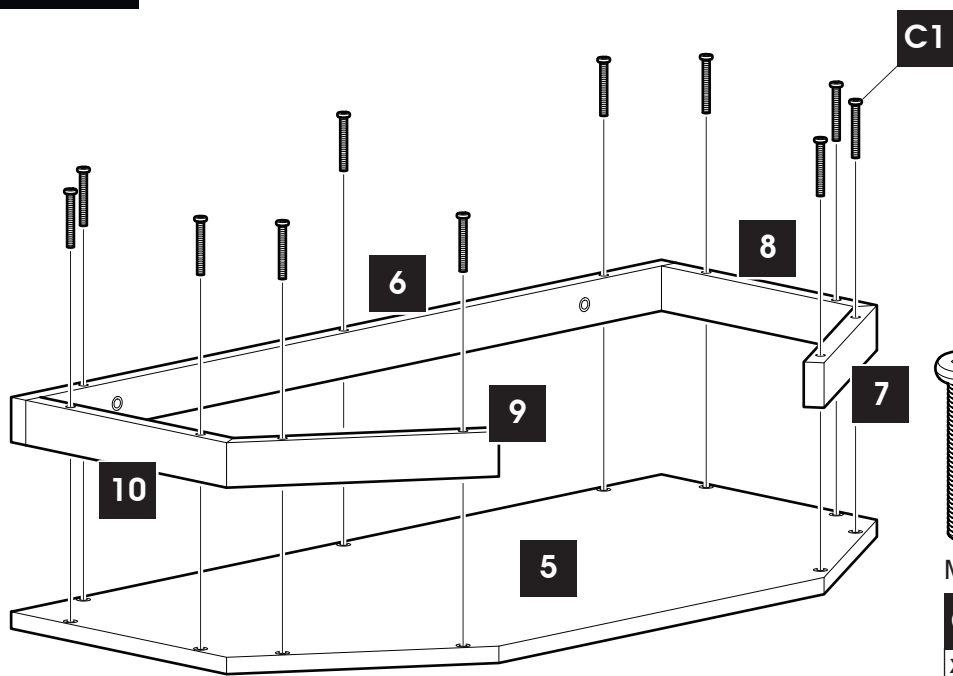



M6

C1  
x11

 7

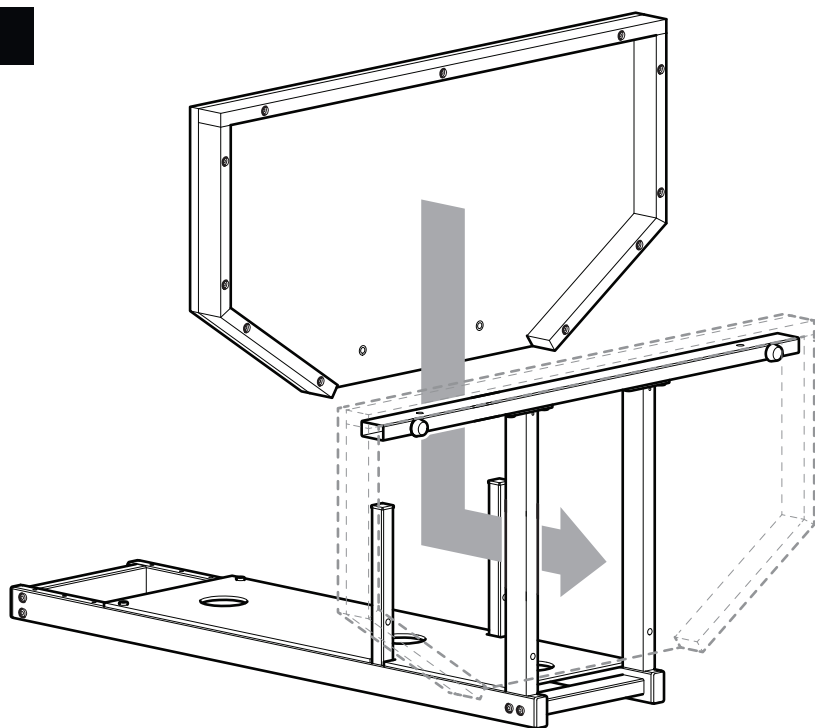


8

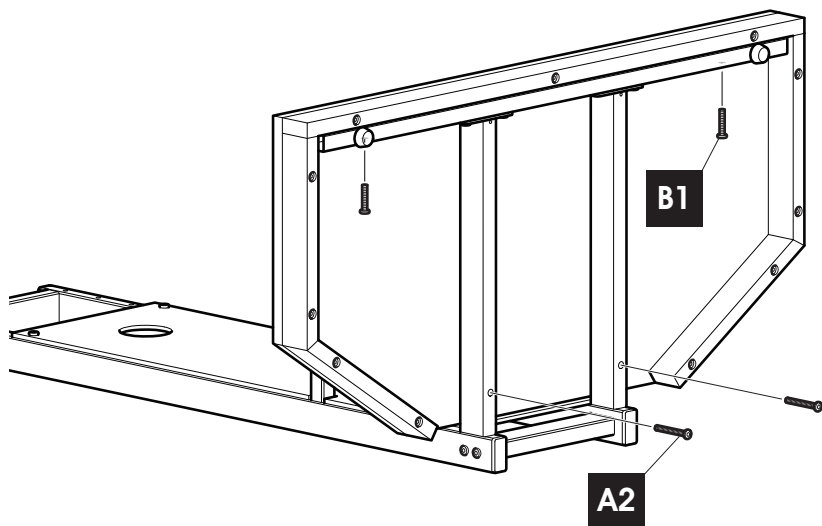  

M6

 
**A2**  
x2



M6



**B1**  
x2

 9

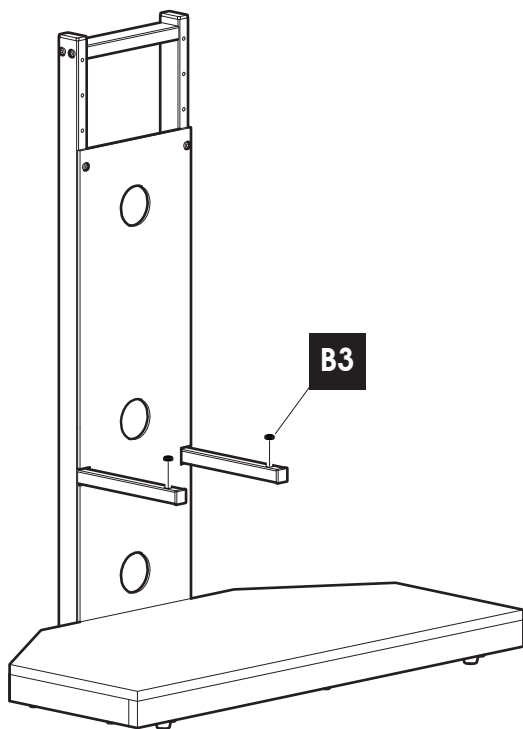

**B3**  
x2

 

10

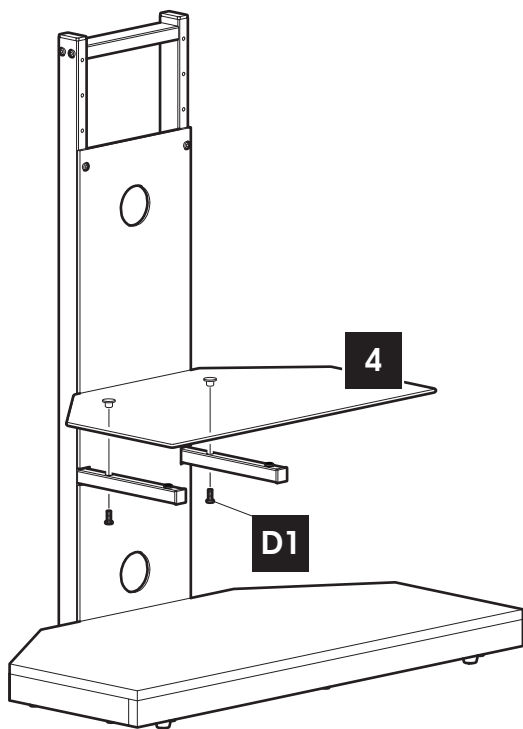



M6

  **D1**  
x2



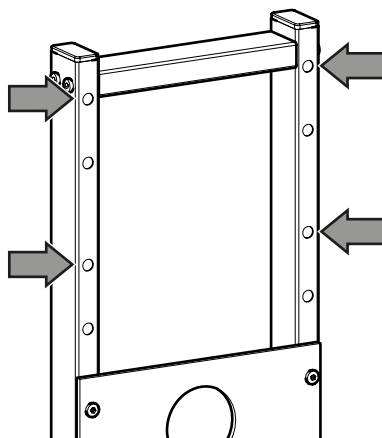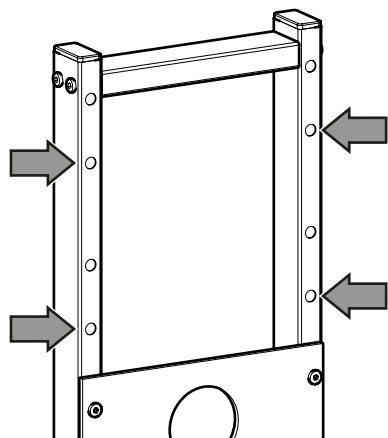

 There are two height options for mounting the TV bracket. Choose the option that best allows you to mount the TV at your preferred height.

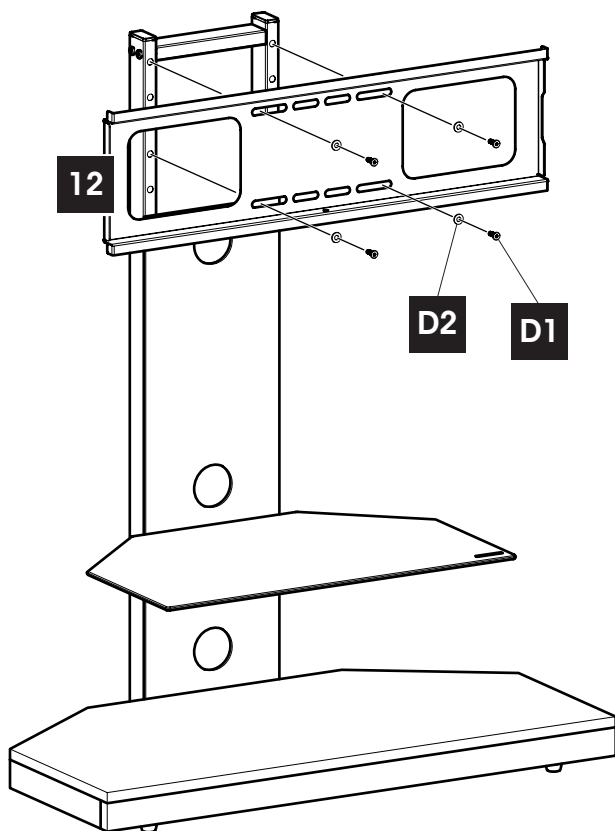


M6

**D1**  
x4**D2**  
x4



 After completing this step, you will have lots of TV screws left over. Keep them in a safe place in case you require them in future.

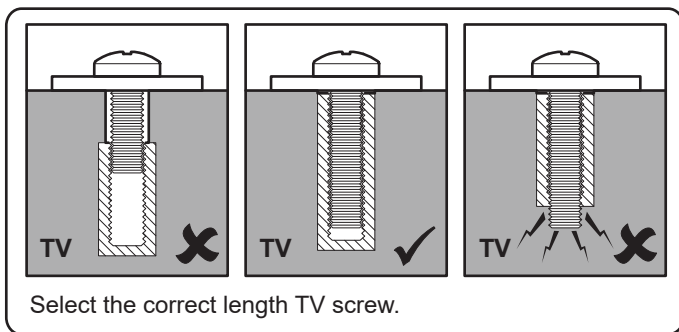

**S1 - S4**

 
**S5**

**M8**

**M6**

**M4**

**13**

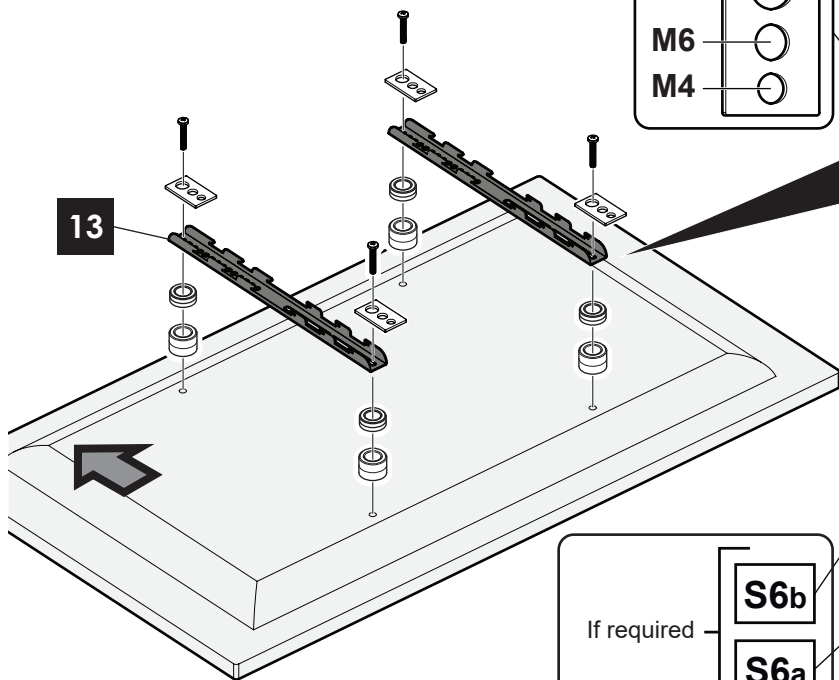

**S6b**

**S6a**

If required

You may need to use Spacers **S6a** or **S6b** if the screws are too long or the back of your TV is not flat.

