 
 


Please read these instructions thoroughly
before installation.

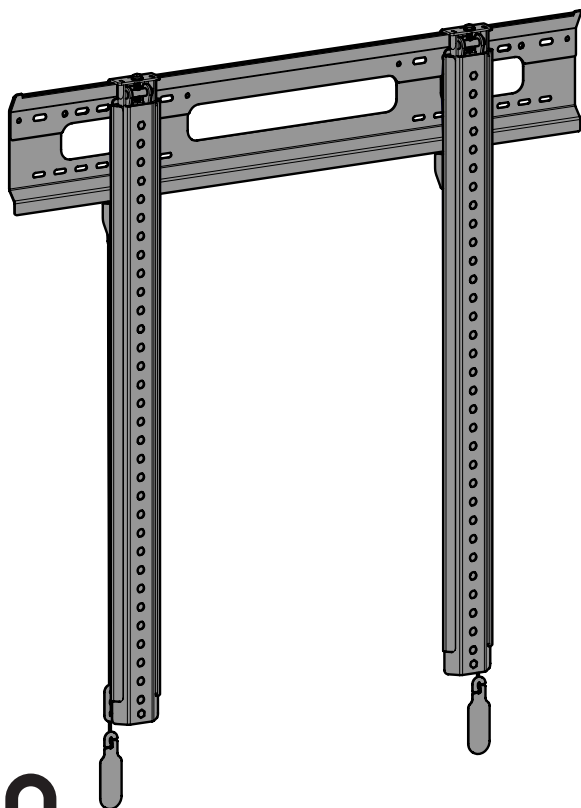

68kg
150lb

You will need

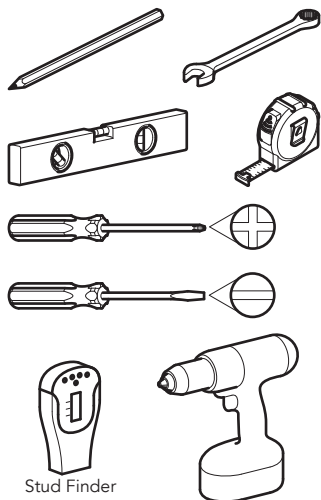

Wood
Ø3mm (1/8")

Masonry
Ø7mm (1/4")

Masonry
Ø5.5mm (7/32")

Metal
Ø3.5mm (9/64")

If you have any questions or need
spare parts don't worry, we're happy to help.

Customer Helpline

0333 320 0463

 
Helpline Open Mon to Thurs 9am - 5pm, Fri 9am - 4pm

Online Support

www.avfgroup.com/support


Assembly Overview

Fitting the TV Brackets

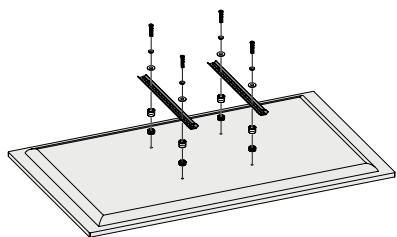

This product comes with screws to fit a huge range of TVs. You will have a lot of screws left over. We recommend keeping them in a safe place in case you change your TV in the future.

 
Fitting the Wall Plate

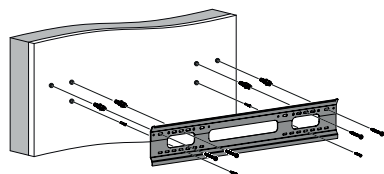

This mount is suitable for attaching to plasterboard, wood stud, brick, dot and dab, concrete, or any combination of these wall types. Establish which wall type you are mounting to and follow the corresponding steps.

This product comes with fixings for all the wall types mentioned above. You will have lots of wall fixings left over. We recommend keeping them in a safe place in case you want to move your TV to a different wall type in future.

Hanging the TV

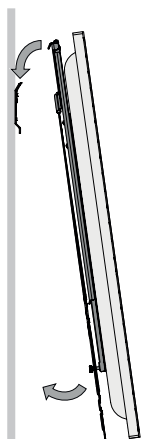

Index

1.1 Measure your VESA fixings and select TV Screws

1.2 Preparing the TV Brackets

1.3 Fitting the TV Brackets

2.1 Marking the Wall for Drill Points

2.2 Fitting the Wall Plate

3.1 Hanging the TV

3.2 TV Levelling

3.3 Removing the TV

Retain all packaging in case the product needs to be returned.

Contents may vary from photography / illustrations.



You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a substandard wall.




Parts Included

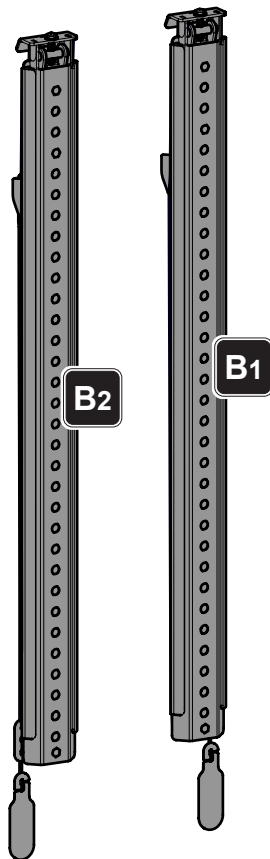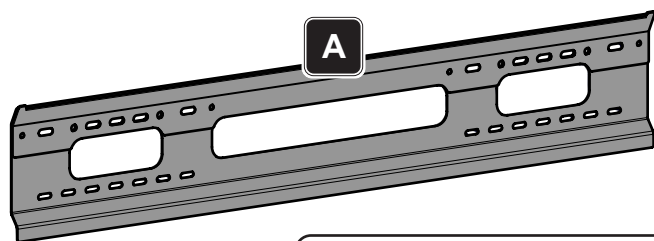

Wall Fixings

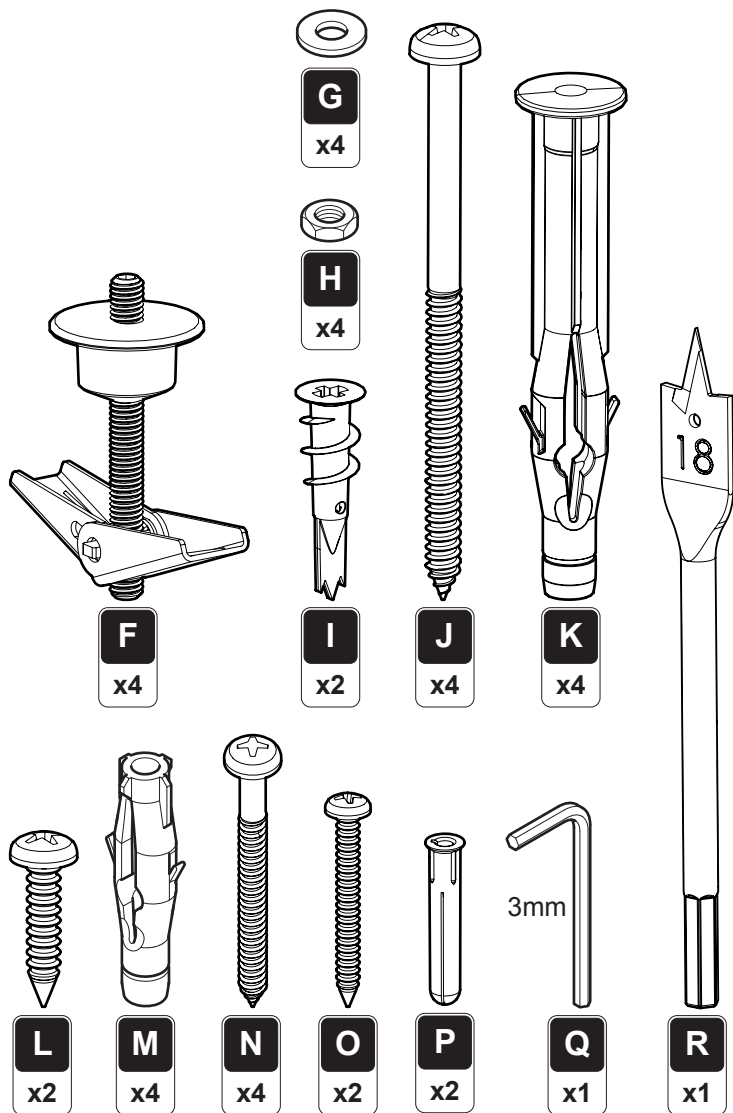


TV Fixings


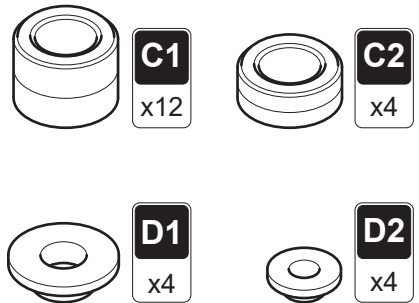
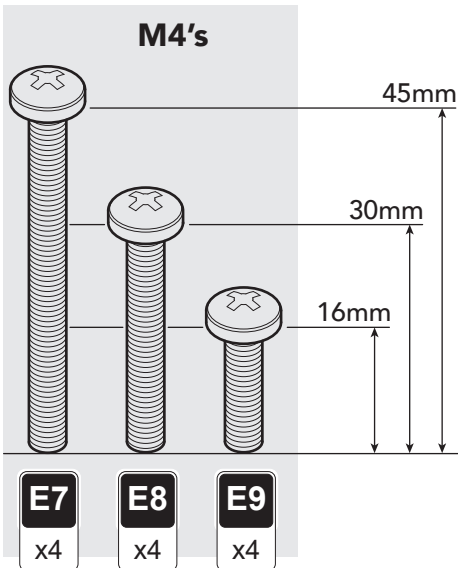
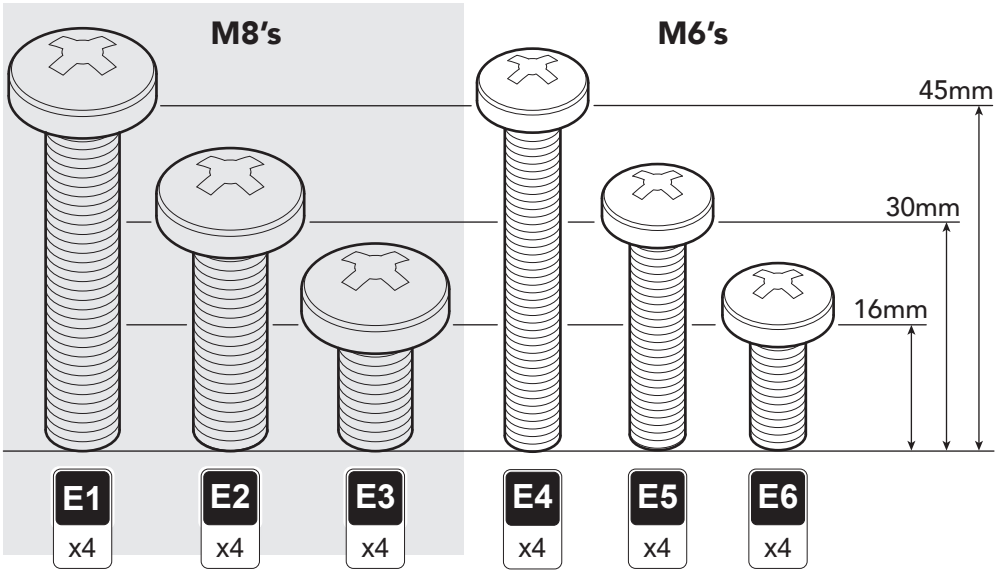


1.1

Measure your VESA fixings and select TV Screws

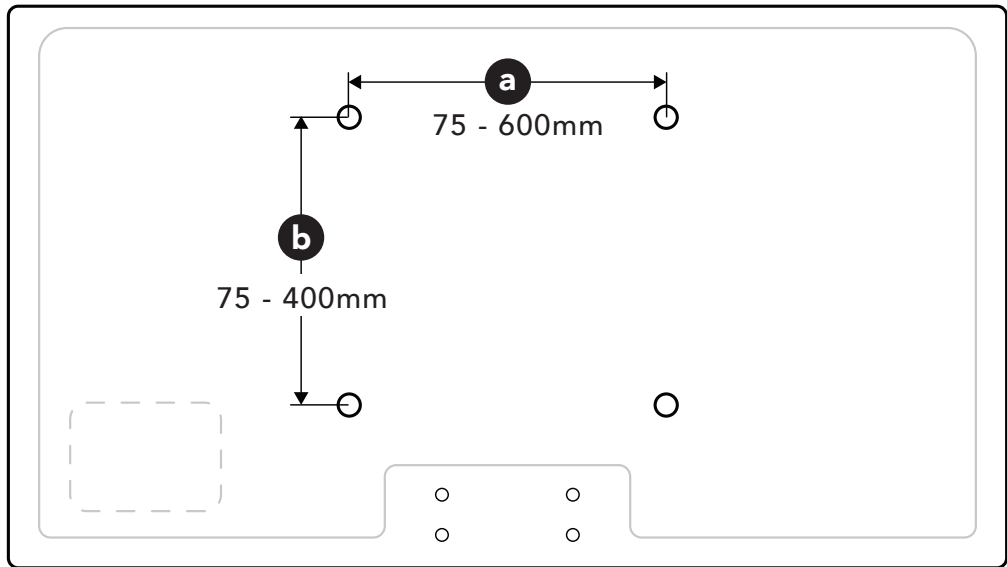


600 x 400mm (MAX).

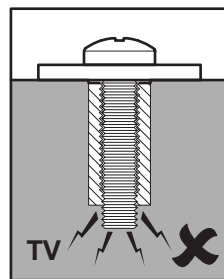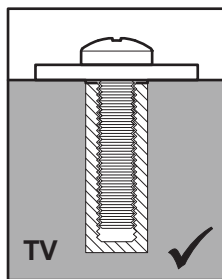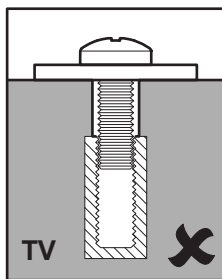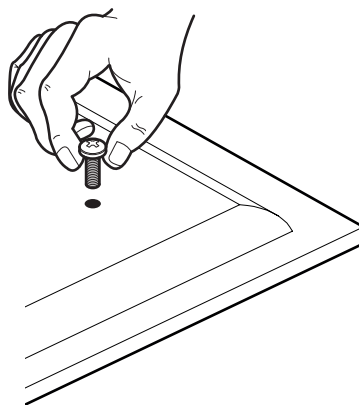

1.2

Preparing the TV Brackets

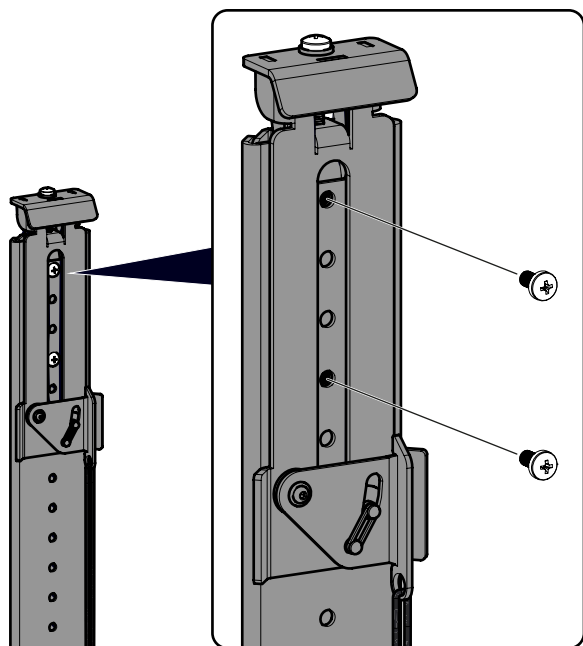

Separate parts for both **B1** and **B2**.
Remove screws and keep for step 1.4.




1.3

Fitting the TV Brackets



After completing this step, you will have lots of TV screws left over. Keep them in a safe place in case you require them in future.

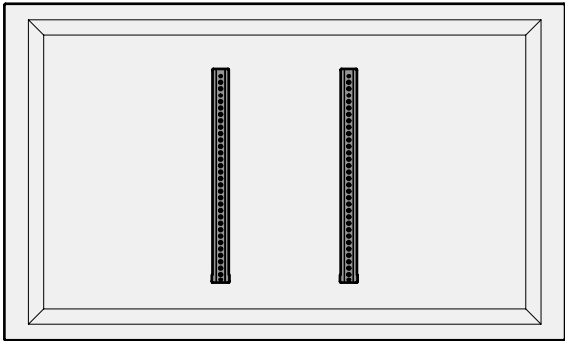

Fit the TV Brackets as centrally as possible.

Select the correct length TV screw.

E1 - E9

	E1 - E3	E4 - E6	E7 - E9
D2	✗	✗	✓
D1	✗	✓	✓

C1


C2

If required



Do you need D1 or D2?

You may need to use Spacers **C1** or **C2** if the screws are too long or the back of your TV is not flat.


You can also use longer screws and the spacers to help avoid cabling or plug sockets on your wall.

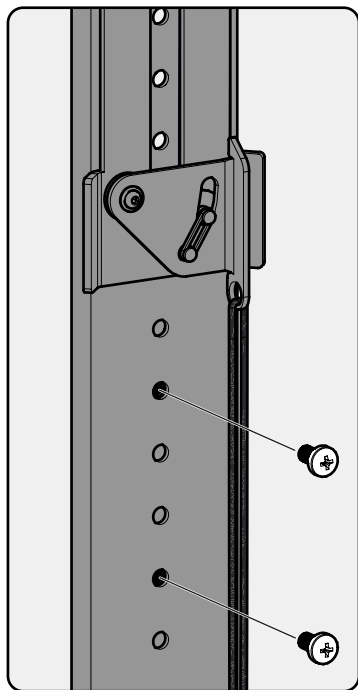

Attach the bracket so the top is just below the top of the TV (we recommend 50mm). Measure the distance X and note for Step 2.1.

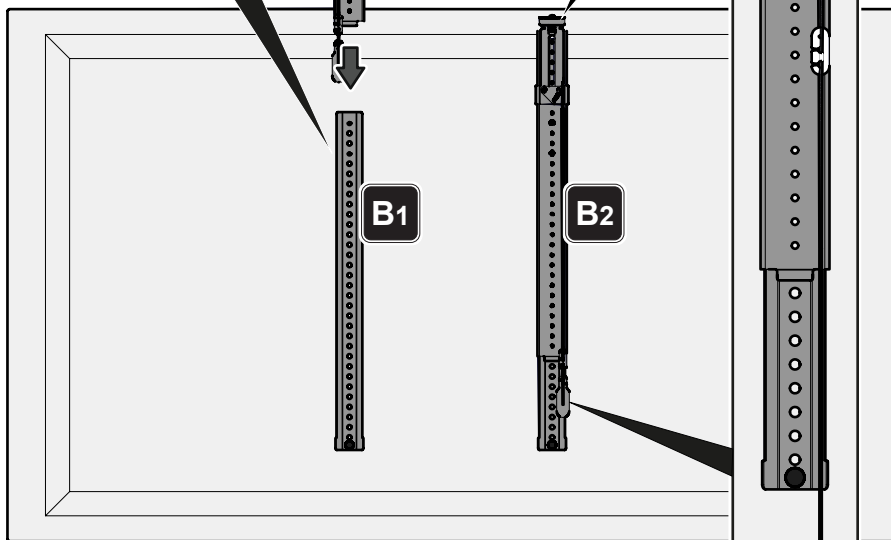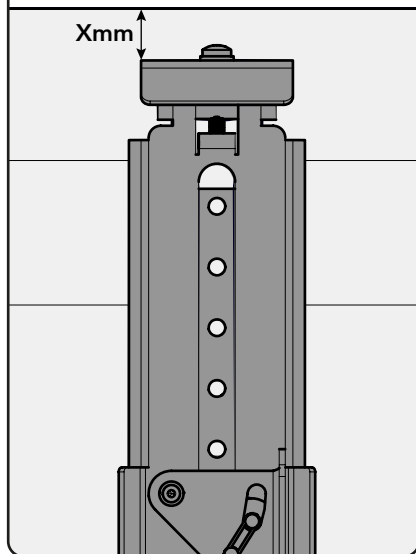


For easy access, adjust the pull cord so that toggle is level with bottom of the TV.

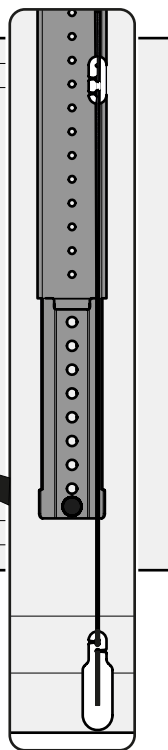

2.1

Marking the Wall for Drill Points

Mark a line on the wall where you want the top of your TV
Measure down Xmm (from Step 1.3) and place your Wall Plate. Make sure the wall plate is level
and mark the appropriate holes for your type of wall.

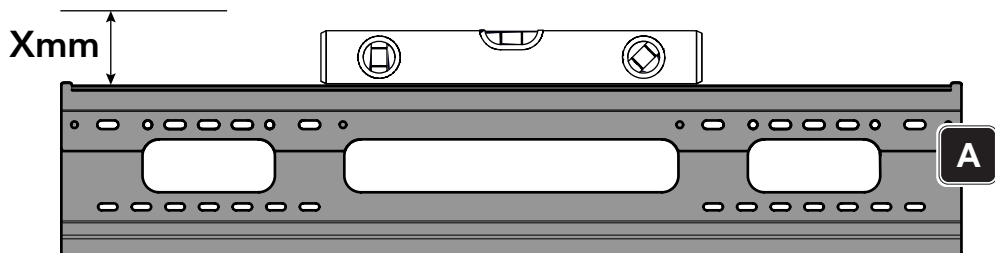


For Solid Wall, Plasterboard and Dot and Dab mark the holes indicated below.

For Wood Stud walls use whichever sets of holes align with your wood studs.

Solid Wall




Wood Stud Wall

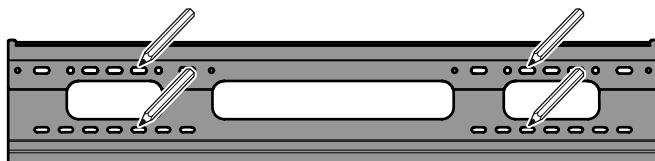

Plasterboard Wall



Dot and Dab Wall


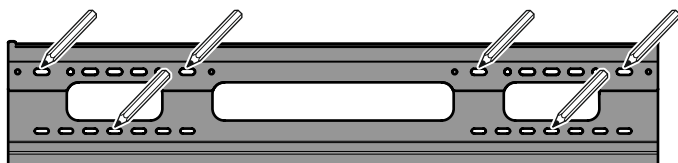


2.2 Fitting the Wall Plate

This product is designed to be fitted to many different types of wall.


i Identify your wall type and follow the relevant instruction. Make sure you use the correct fixings for your wall.

Solid Wall

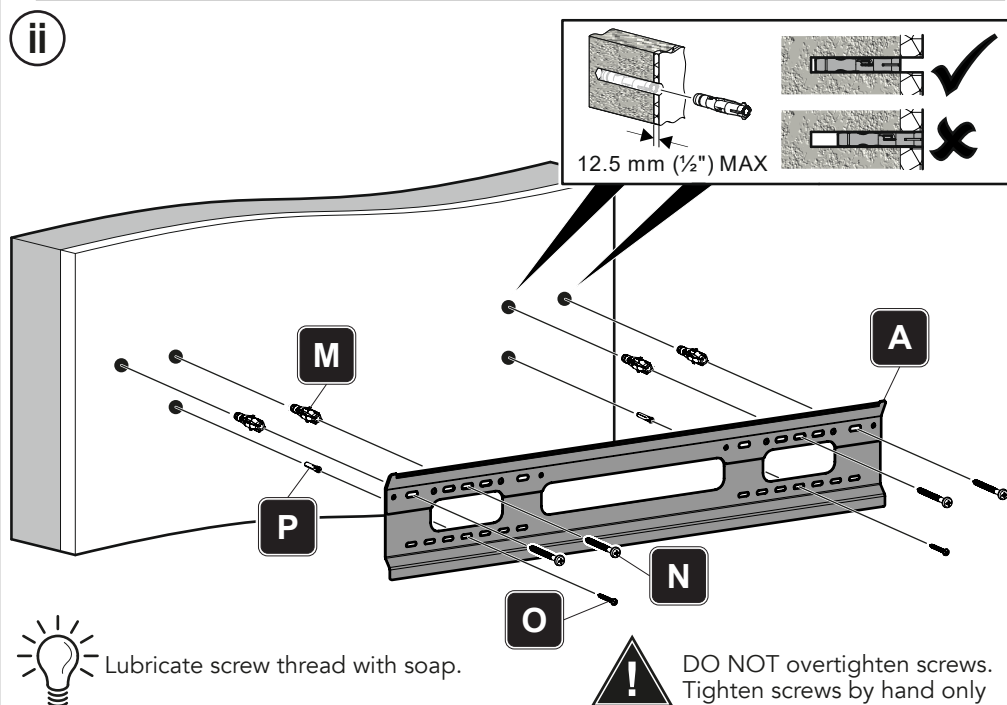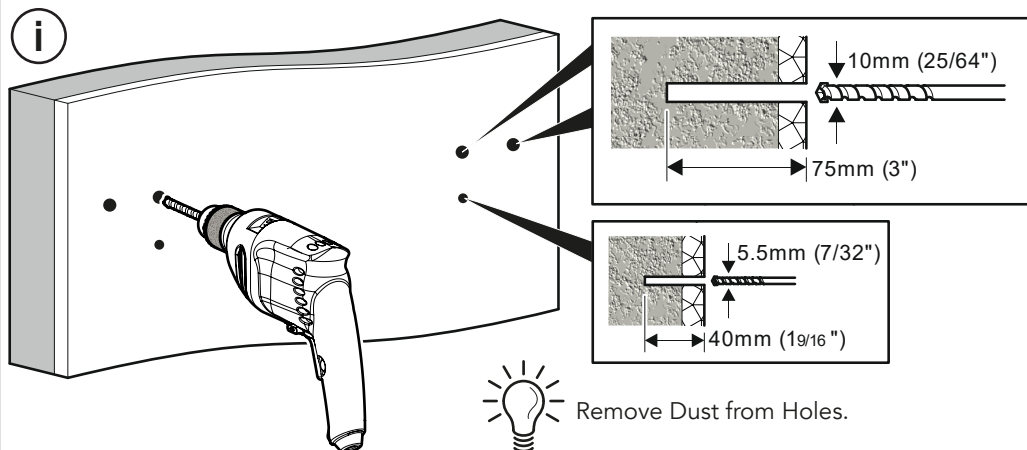


Wood Stud Wall

i

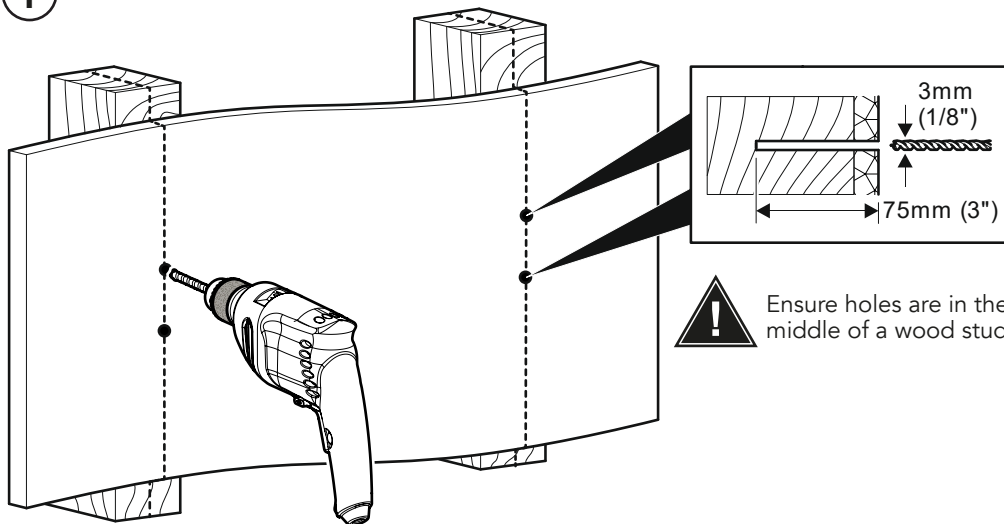

ii



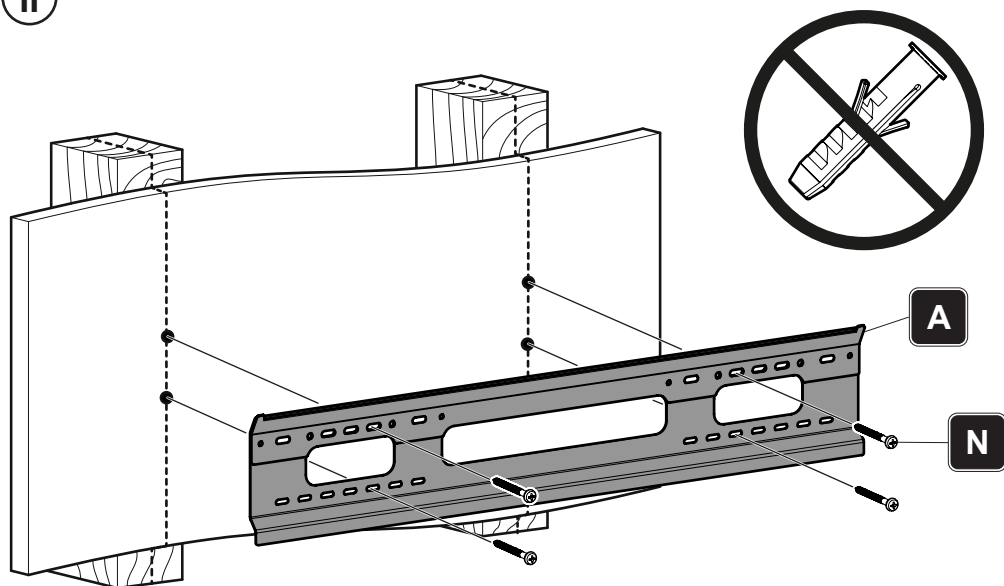


Lubricate screw thread with soap.



DO NOT overtighten screws.
Tighten screws by hand only

Plasterboard Wall

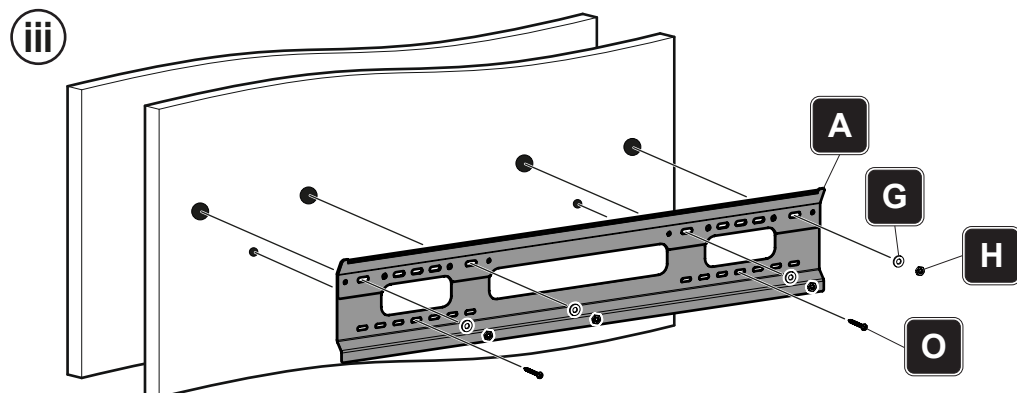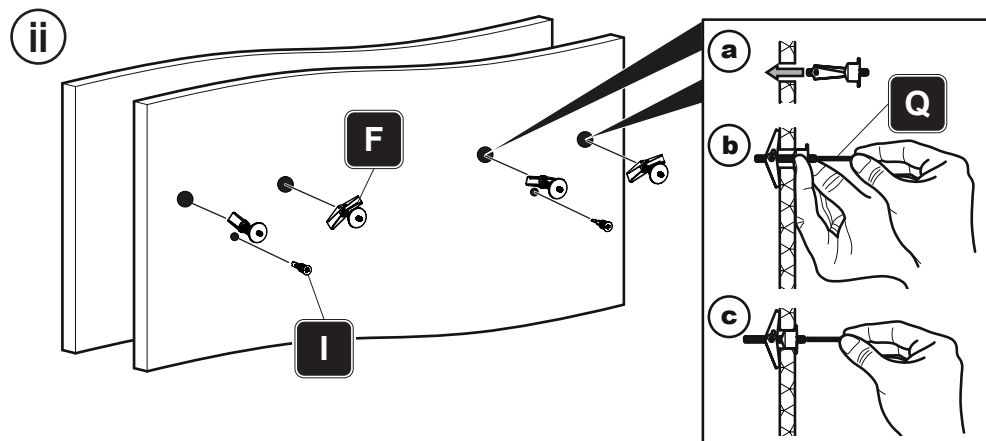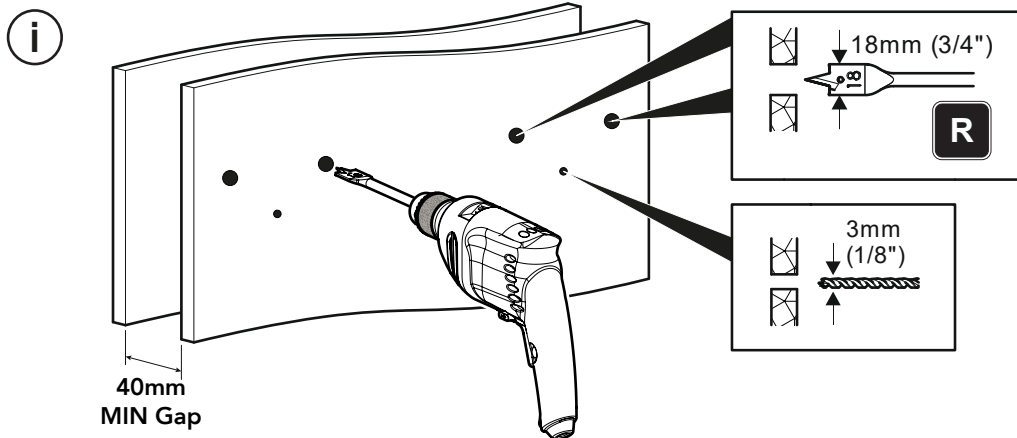


Lubricate screw thread with soap.




DO NOT overtighten screws.
Tighten screws by hand only

Dot and Dab Wall

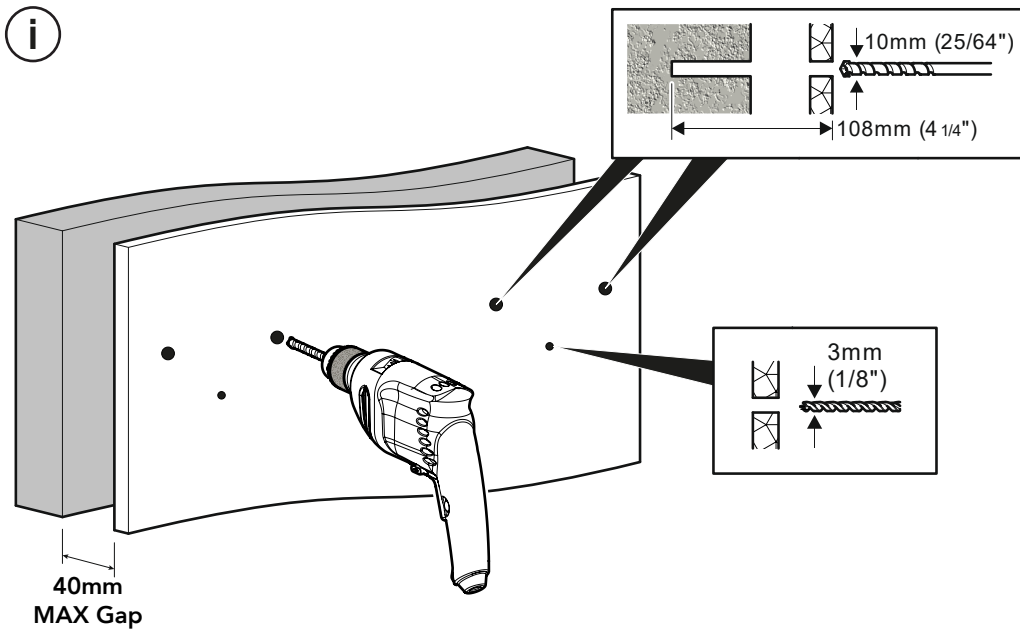

If the gap is above 40mm use the plasterboard wall fixing method.

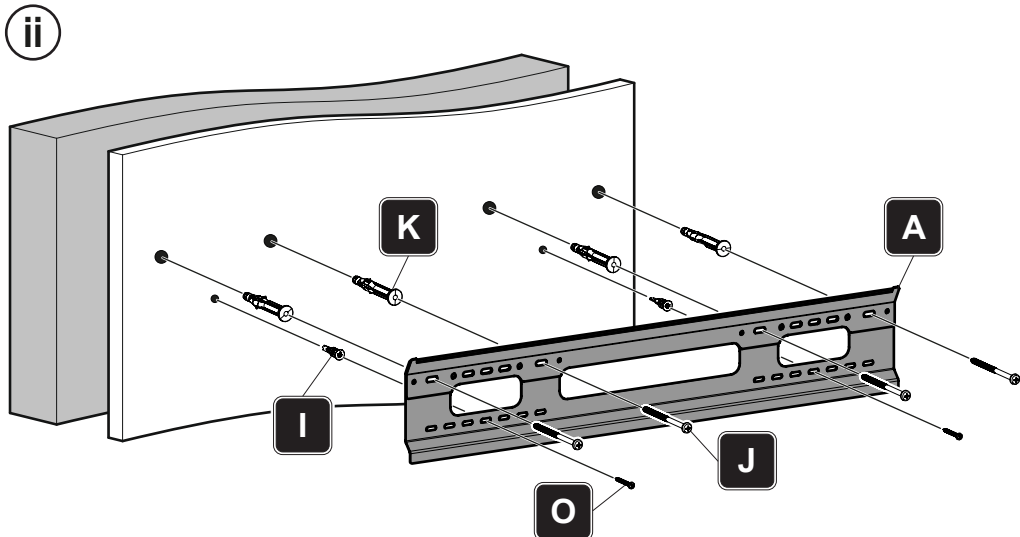



Lubricate screw thread with soap.




DO NOT overtighten screws.
Tighten screws by hand only

3.1

Hanging the TV

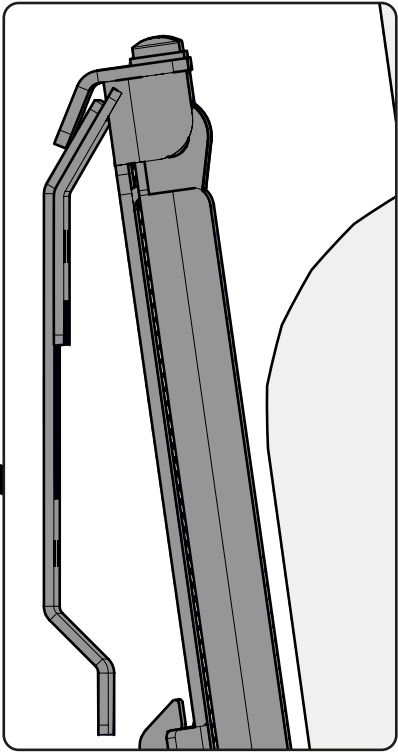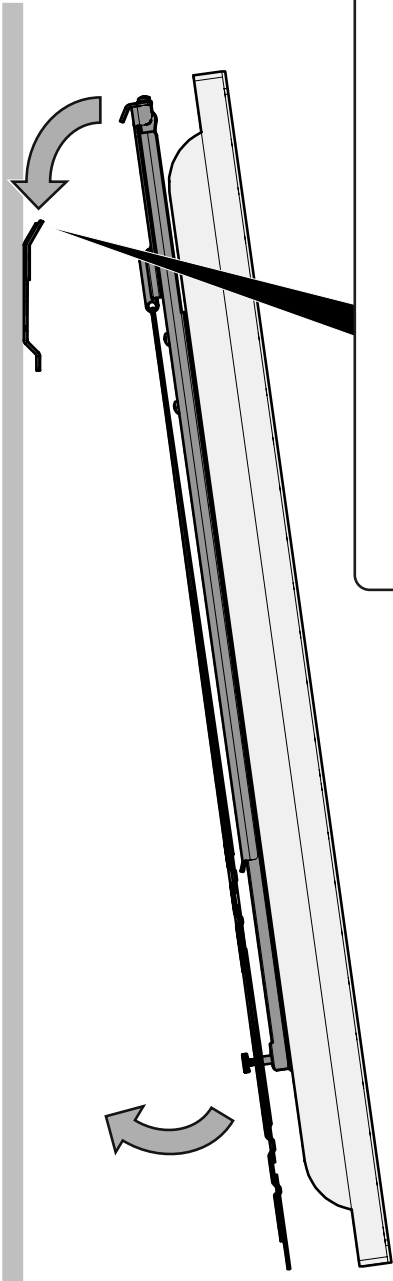


3.2 TV Levelling

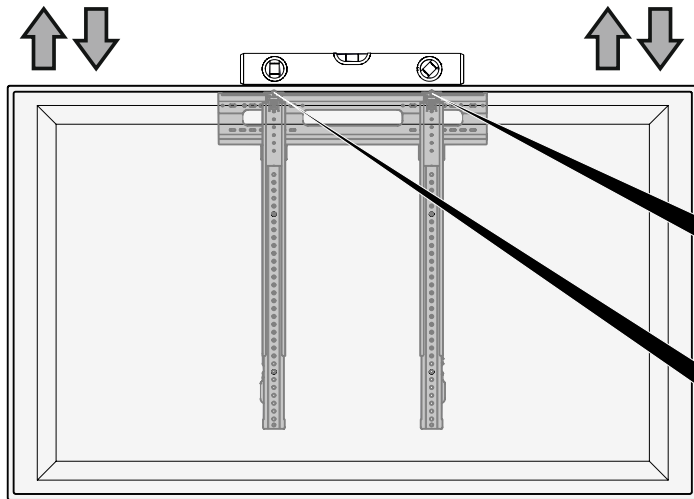

i If your TV needs leveling, only adjust the TV Leveling Screw on the low side of the TV. For example, if the left hand side of your TV is low, adjust the left hand TV Leveling Screw only, until your TV is level.

3.3 Removing the TV

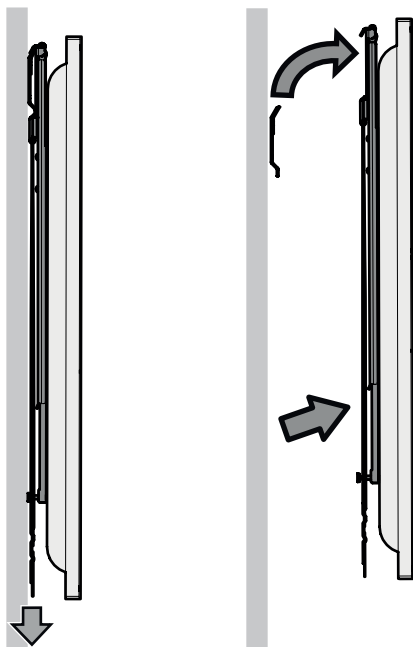

Pull and hold both Cord Toggles down to release the locking mechanism. Lift and remove the TV from the wall plate.