


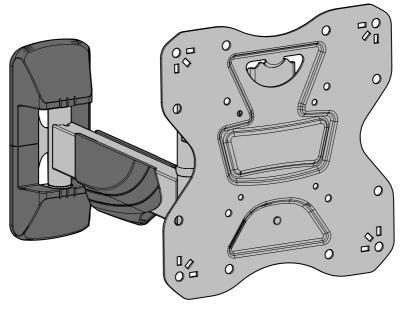

## Please read these instructions thoroughly before installation.





# Please don't return me to the store

If you are unsure or need advice please contact our UK-based support team:



Phone lines open Mon-Fri during AVF office hours

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/illustrations.

You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).


AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.





This product comes with a 10 Year Warranty.

This will be honoured as long as the product is owned by the original consumer purchaser. Proof of purchase is required.


For detailed warranty information please visit: www.avfgroup.com/uk/warranties

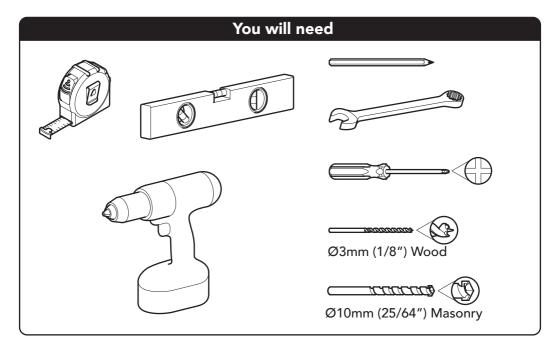

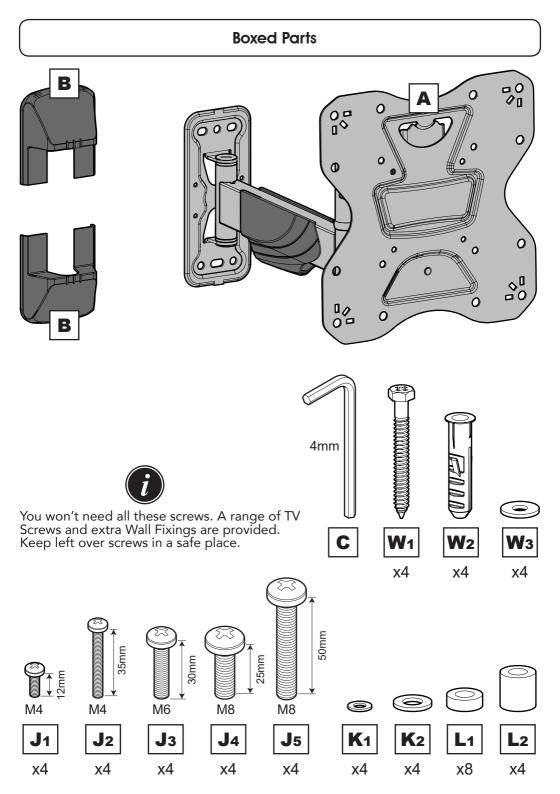

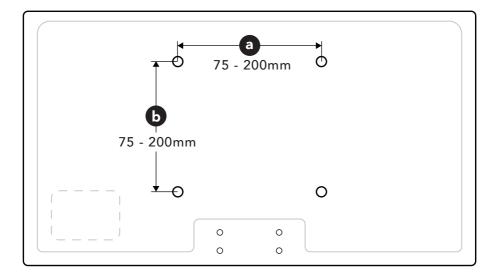

If width **a** is greater than 200mm or height **b** greater than 200mm STOP installation now and contact the customer helpline.

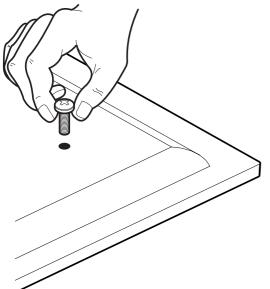


Determine which diameter TV Screws fit your TV and put them to one side.

#### M4, M6 or M8

We will select the correct length later.



Before you can attach the TV mounting plate to your TV you need to remove the plate from your wall mount.

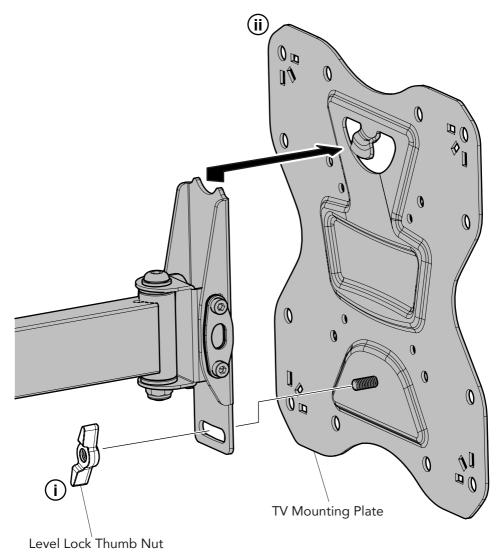


Remove the Level Lock Thumb Nut and safely keep for step 6.

Remove the TV Mounting Plate.

i.

T

## Fitting the TV Mounting Plate

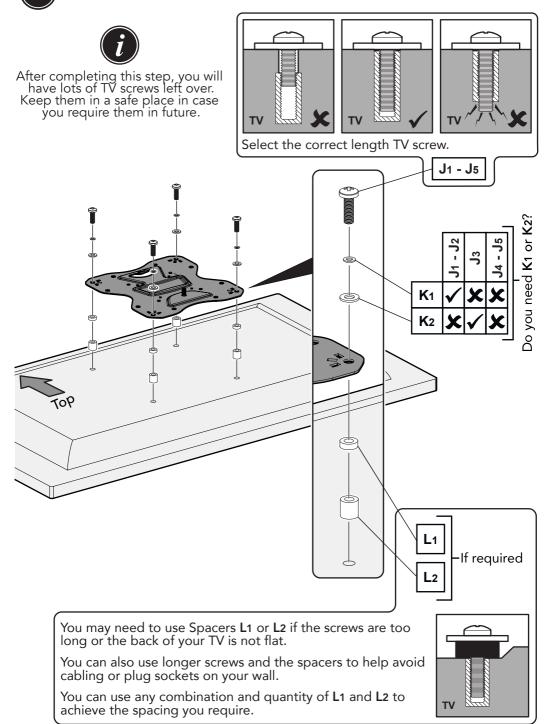




Fitting the Wall Bracket


### Solid Wall





If fitting to a Wood Stud Wall follow the installation instructions on the next page.

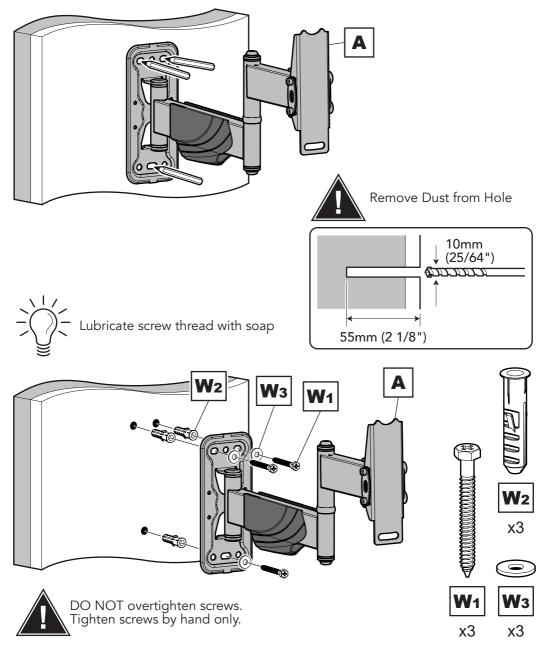


#### Wood Stud Wall

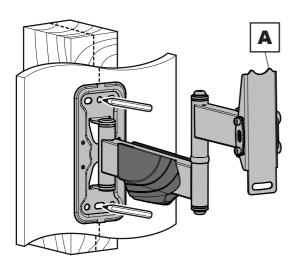


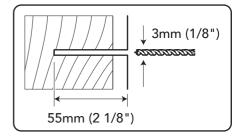

 

 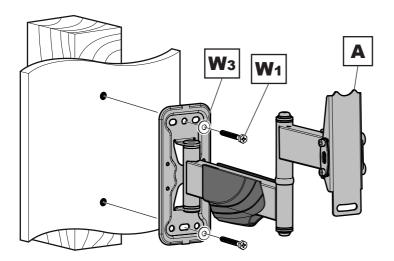











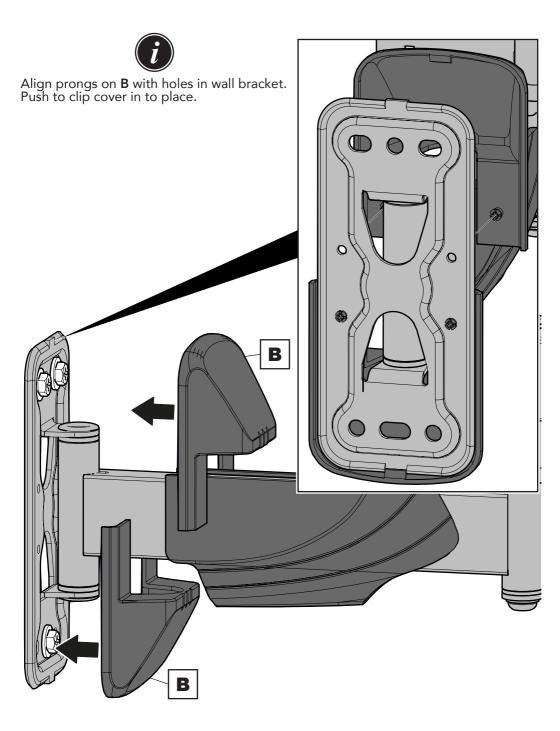

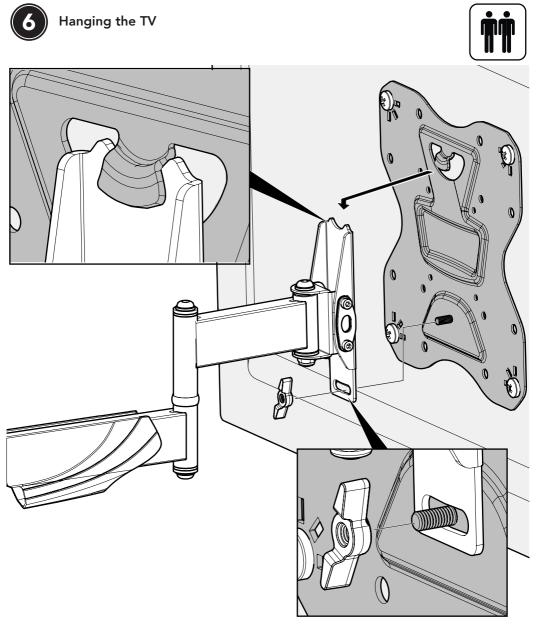


Reuse the Level Lock Thumb Nut saved in step 2.





When the TV is level, ensure the thumb nut is fully tightened.




To remove the TV, reverse this procedure.

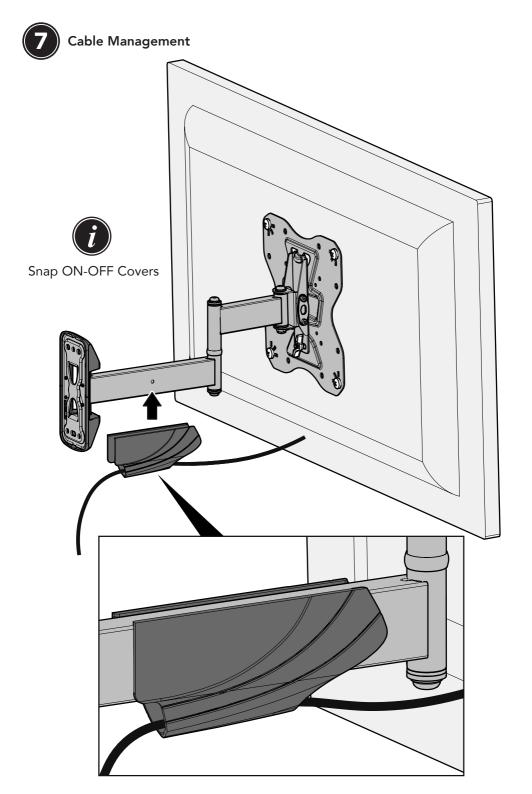

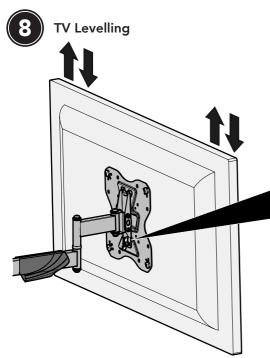

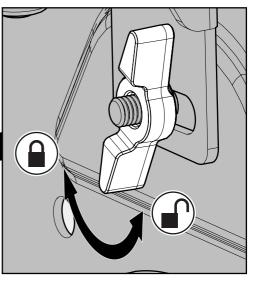

Loosen the Level Lock Thumb Nut, adjust your TV until it is level, then re-tighten the thumb nut.

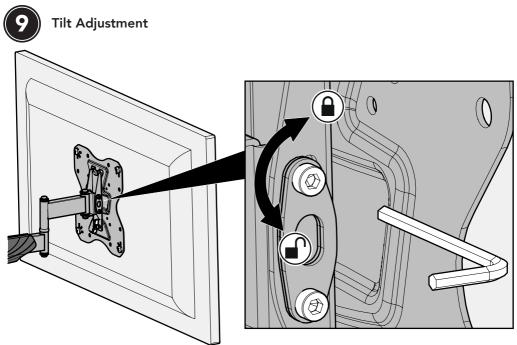

Adjust screws to achieve perfect tilt resistance if required. You must adjust both screws equally. You can also lock the tilt if required.