

If your TV requires M4 diameter fixing screws, please use these instructions instead of the image shown at Step 2 of your instruction manual.

TV Screws, Reducers and Spacers




R2 x4




M4

T7 x4

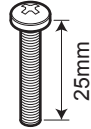


M4

T8 x4

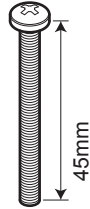

M4

T9 x4

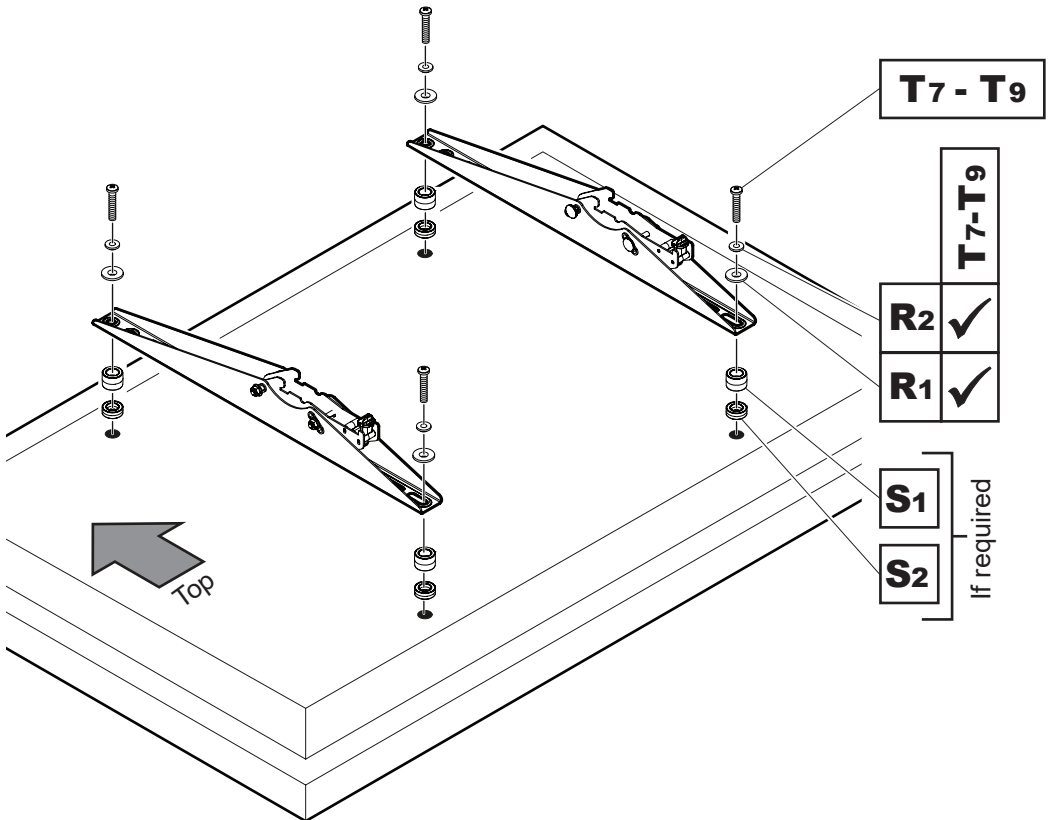

If your TV requires M4 diameter fixing screws, please use these instructions instead of the image shown at Step 2 of your instruction manual.


TV Screws, Reducers and Spacers




R2 x4



M4
T7 x4

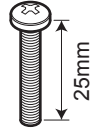

M4
T8 x4

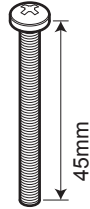

M4
T9 x4

