

# 472509 Rev01

Please read these instructions thoroughly before installation.

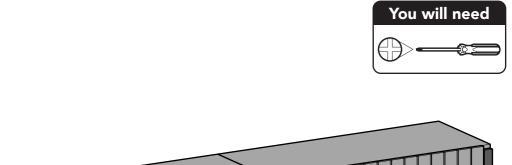

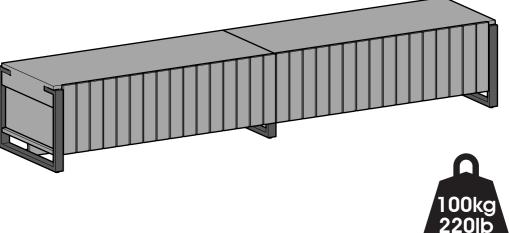

### **Customer Helpline**

0333 320 0463

Helpine Open Mon to Thurs 9am - 5pm, Fri 9am - 4pm

## **Online Support**

www.avfgroup.com/support

#### IMPORTANT INFORMATION!

We advise that before starting the assembly of this product that you familiarise yourself with the instructions and the parts list in this leaflet.

#### Do not's

Do not overtighten any part of this assembly.

Do not place hot or cold objects on to or next to any wood surface unless the object is sufficiently insulated to prevent contact.

Do not strike the wood with hard or pointed items.

Do not sit, stand or climb upon any part of this furniture.

Do not use washing powders or other substances containing abrasives when cleaning the wood.


#### Do's

Do use a soft cloth with a suitable furniture polish when cleaning wooden panels.


Check all nuts and bolts from time to time.

Be careful when moving the unit and try to avoid any stress on the centre of the unit.

### Maximum TV weight and shelf capacities

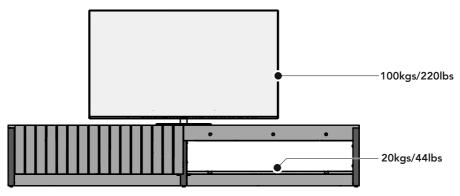

WARNING: Wherever possible distribute weight evenly.

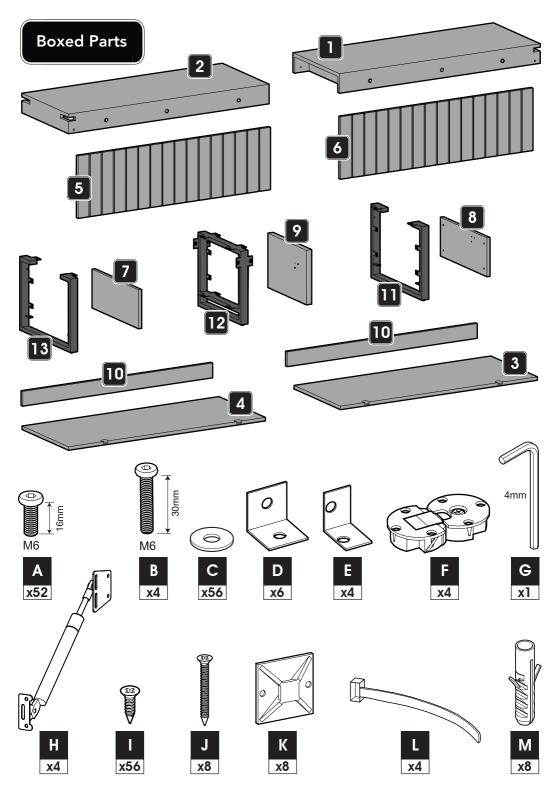





Due to the size and weight of this TV Stand we would recommend a two person build for all steps.








When assembling, place a piece of material under the wooden top to prevent any damage.

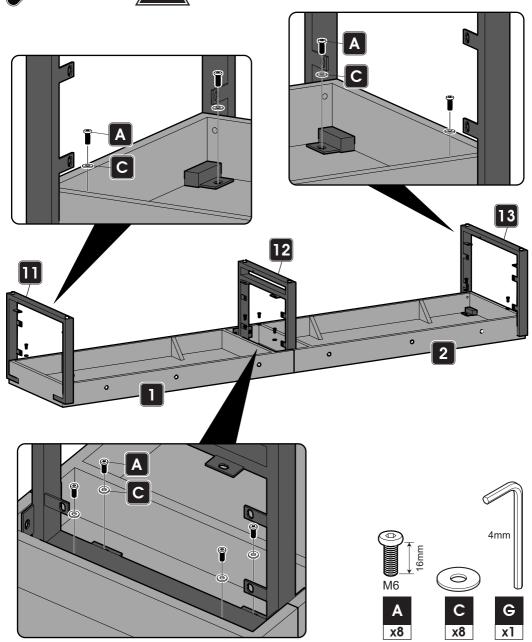


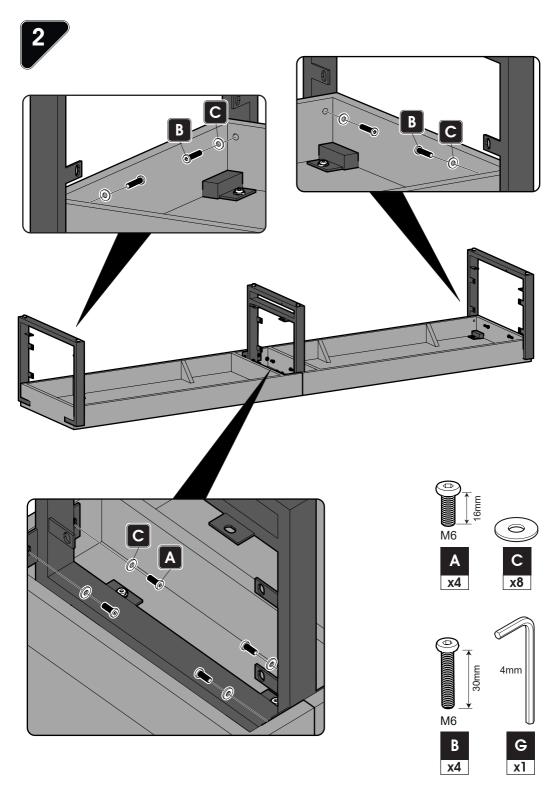


 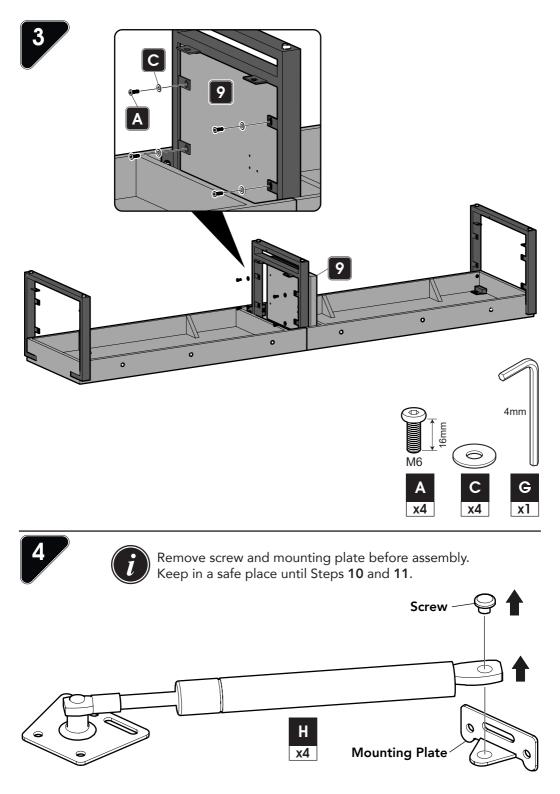


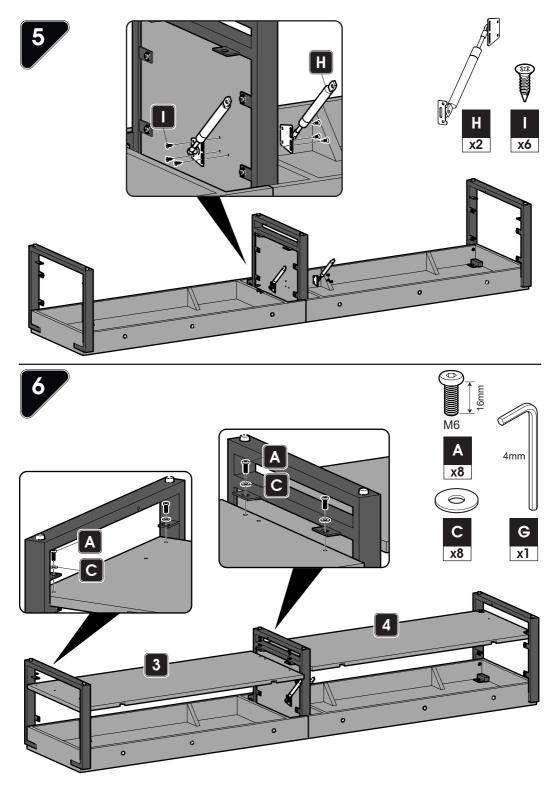


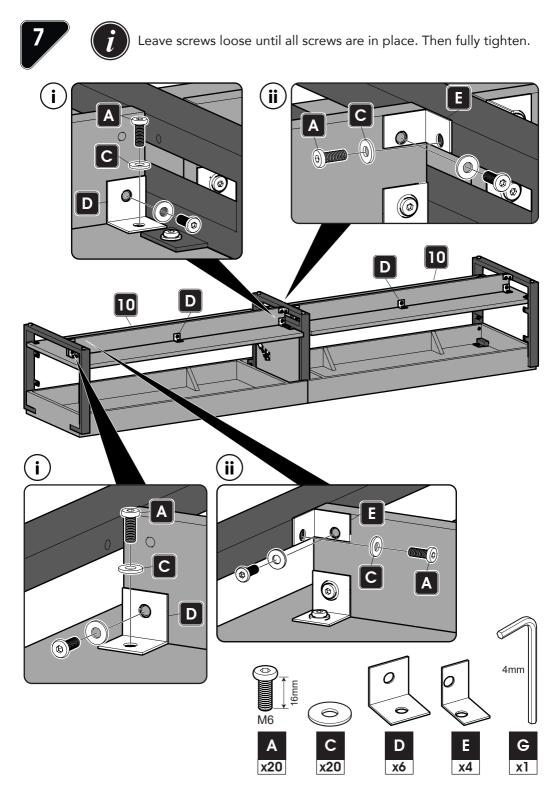

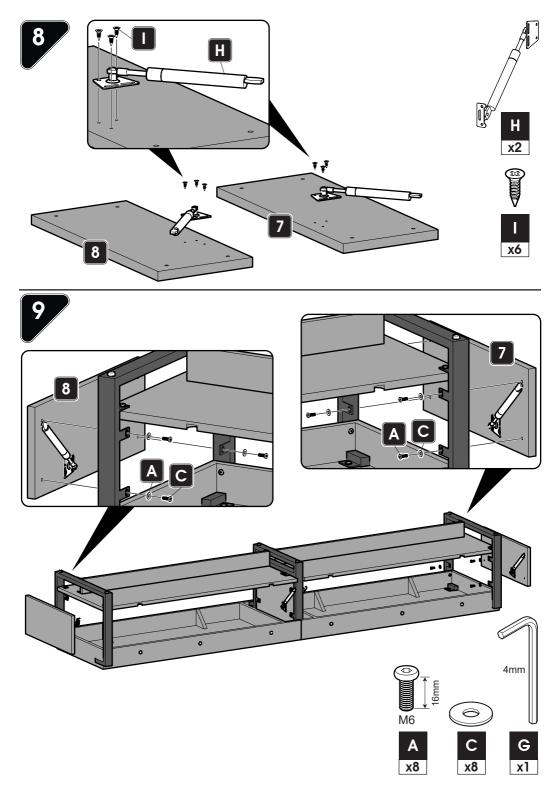

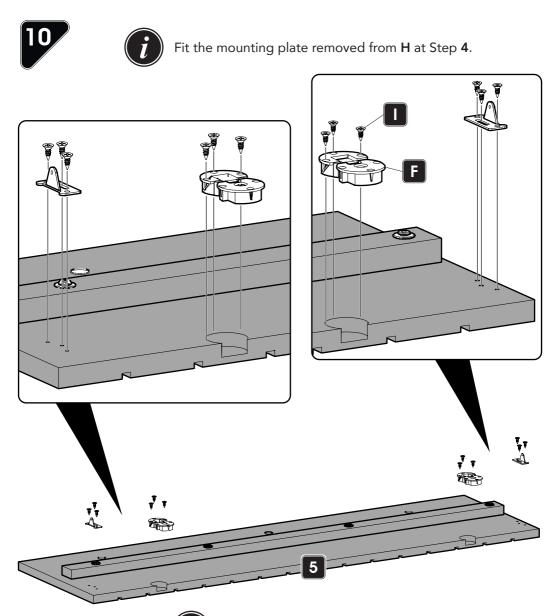



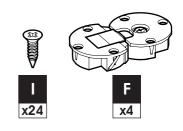






Support the weight of both doors until all four door stays (Part H) have been connected to the doors.



Use the screw removed from  ${\bf H}$  at Step  ${\bf 4}.$ 

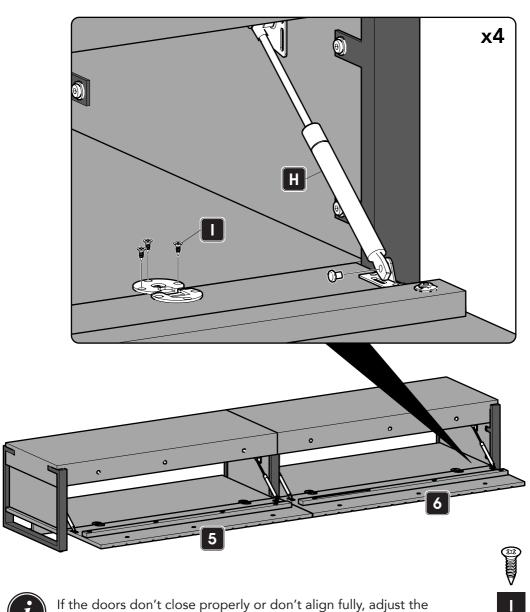

door hinge alignment screws small amounts until they do.

