
# 472572 Rev00

Please read these instructions thoroughly before installation.

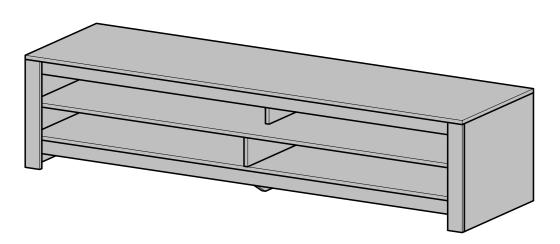



## Helpline



0333 320 0463 (UK)

1300 762 219 (Australia)

(+64) 9 306 1020 (New Zealand)

#### IMPORTANT INFORMATION!

We advise that before starting the assembly of this product that you familiarise yourself with the instructions and the parts list in this leaflet.

#### Do not's

Do not overtighten any part of this assembly.

Do not place hot or cold objects on to or next to any wood surface unless the object is sufficiently insulated to prevent contact.

Do not strike the wood with hard or pointed items.

Do not sit, stand or climb upon any part of this furniture.


Do not use washing powders or other substances containing abrasives when cleaning the wood.

#### Do's

Do use a soft cloth with a suitable furniture polish when cleaning wooden panels.

Check all nuts and bolts from time to time.

### Maximum TV weight and shelf capacities

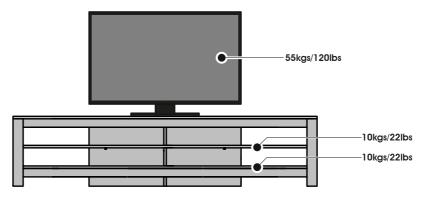

WARNING: Wherever possible distribute weight evenly.



