

2

Top
Haut
Parte Supérieur

✓ X

C1x4

C2x4

D1x4

M4
16mm

D2x4

M4
25mm

D3x4

M5
16mm

D4x4

M5
25mm

D5x4

M6
16mm

D6x4

M6
25mm

D7x4

M8
16mm

D8x4

M8
25mm

E1x4

M5

E2x4

M6

X ✓

D1/D2

D3/D4

D5/D6

D7/D8

E1

E1

E2

E2

If required
Si nécessaire
Si se requiere

C1

and / or

C2

TV

3

Concrete
Béton
Cemento

65mm (2 9/16")

12.5mm (1/2") Max

Remove dust from hole
Retirez la poussière du trou
Elimine el polvo del agujero

Ø8mm (5/16")

E2x4
M6

Fx4

Gx4

Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

3

50mm (2")

12.5mm (1/2") Min

Ensure bracket is in the centre of the wood stud
 Assurez-vous que l'applique est au centre de la latte de bois
 Asegúrese de que el soporte está en el centro de la viga de madera

Ø3mm (1/8")

E2x4

Fx4

M6

Lubricate screw thread with soap
 Lubrifiez le pas de vis avec du savon
 Lubrique la rosca del tornillo con jabón

4

i

ii

Diagram 4 illustrates the final steps of mounting the TV to the wall. It consists of two parts, labeled 'i' and 'ii'. Part 'i' shows the TV being tilted into position against the wall. A circular inset provides a close-up view of the TV's mounting bracket engaging with the wall plate. Part 'ii' shows the TV being locked into place. A circular inset provides a close-up view of the TV's locking mechanism engaging with the wall plate. At the top right of the diagram, there are two icons: one showing two people and another showing a screwdriver with a plus sign, indicating that two people and a screwdriver are required for this step.