

1

Top Haut
Parte Supérieure

B1

B2

Dx8

E1x4
M5

E2x4
M6

C1x4
M4 x 12mm

C2x4
M4 x 30mm

C3x4
M6 x 12mm

C4x4
M6 x 30mm

C5x4
M8 x 12mm

C6x4
M8 x 30mm

TV

TV

TV

C1/C2+E1
C3/C4+E2
C5/C6

C1/C2+E1+D
C3/C4+E2+D
C5/C6+D

2

UP

65mm (2 9/16")

Remove dust from hole
Retirez la poussière du trou
Elimine el polvo del agujero

Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

Gx4
M6
Hx4
Fx4

2

↑ UP

50mm (2")

Ø3mm (1/8")

+

Gx4

M6

Fx4

Ensure bracket is in the centre of the wood stud
Assurez-vous que l'applique est au centre de la latte de bois
Asegúrese de que el soporte está en el centro de la viga de madera

Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

3 Connect the TV / Connecter le téléviseur / Conecte la TV

Diagram illustrating the connection of the TV to the wall mount. The main illustration shows the TV being attached to the wall plate. Two callout boxes provide details: the left one shows the TV's mounting bracket being lowered into the wall plate's slots, indicated by a downward arrow; the right one shows the wall plate's bracket being pushed up into the TV's slots, indicated by an upward arrow. In the top right corner, there are two icons: one showing two people (indicating two people should assist) and another showing a screwdriver and a plus sign (indicating a screwdriver is needed). A side-view illustration at the bottom right shows the TV mounted on the wall plate.