

1

Top Haut
Parte Supérieure

B1

B2

T11x4

T12x8

T1x4
M4 16mm

T2x4
M4 30mm

T3x4
M5 16mm

T4x4
M5 30mm

T5x4
M6 16mm

T6x4
M6 30mm

T7x4
M8 16mm

T8x4
M8 30mm

T9x4
M5

T10x4
M6

TV

T1-T4&T9
T5/T6&T10
T7/T8

T1-T4&T9&T12
T5/T6&T10&T12
T7/T8&T12

2

↑ UP

65mm (2 9/16")

Ø8mm (5/16")

Remove dust from hole
Retirez la poussière du trou
Elimine el polvo del agujero

Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

W3x4
M6

W2x4

W1x4

2

↑ UP

Ensure bracket is in the centre of the wood stud
 Assurez-vous que l'applique est au centre de la latte de bois
 Asegúrese de que el soporte está en el centro de la viga de madera

50mm (2")

Ø3mm (1/8")

W3x4

M6

W1x4

Lubricate screw thread with soap
 Lubrifiez le pas de vis avec du savon
 Lubrique la rosca del tornillo con jabón

3 Connect the TV / Connecter le téléviseur / Conecte la TV

Diagram illustrating the connection of the TV to the wall mount. The main illustration shows the TV being attached to the wall plate using a long horizontal bar. Two callout boxes provide details: the left one shows a pin being inserted into a slot on the wall plate, and the right one shows a screw being tightened into the wall plate. An icon in the top right corner shows two people and a plus sign, indicating that two people are required for this step. Another icon shows a screwdriver, indicating the tool needed.