

1

Top Haut
Parte Supérieure

B1

B2

T1_{x4}
M4 x 16mm

T2_{x4}
M4 x 30mm

T5_{x4}
M6 x 16mm

T6_{x4}
M6 x 30mm

T7_{x4}
M8 x 16mm

T8_{x4}
M8 x 30mm

T9_{x4}
M5

T10_{x4}
M6

T12_{x8}

T1/T2+T9 T5/T6+T10 T7/T8	T1/T2+T9+T12 T5/T6+T10+T12 T7/T8+T18
--------------------------------	--

TV

2

↑ UP

65mm (2 9/16")

Remove dust from hole
Retirez la poussière du trou
Elimine el polvo del agujero

W2_{x4}

W1_{x4}

W3_{x4}

M6

Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

2

↑ UP

50mm (2")

Ø3mm (1/8")

W3x4

M6

W1x4

Ensure bracket is in the centre of the wood stud
Assurez-vous que l'applique est au centre de la latte de bois
Asegúrese de que el soporte está en el centro de la viga de madera

Lubricate screw thread with soap
Lubrifiez le pas de vis avec du savon
Lubrique la rosca del tornillo con jabón

3

Diagram 3 illustrates the final step of mounting the TV. The main image shows the TV being lowered into the bracket. Two callout boxes provide details: the left one shows a downward arrow indicating the TV is lowered into the bracket's cradle; the right one shows an upward arrow indicating the TV is pushed up to lock into the bracket. Icons in the top right corner show two people (indicating two people should assist) and a screwdriver with a plus sign (indicating a screwdriver is needed). A side-view inset at the bottom right shows the TV mounted on the wall bracket.