

Instructions

471678
Rev00



55 - 100" / 140 - 254 cm




600 x 400 max






68 kg / 150 lb.

Please read these instructions thoroughly before installation.

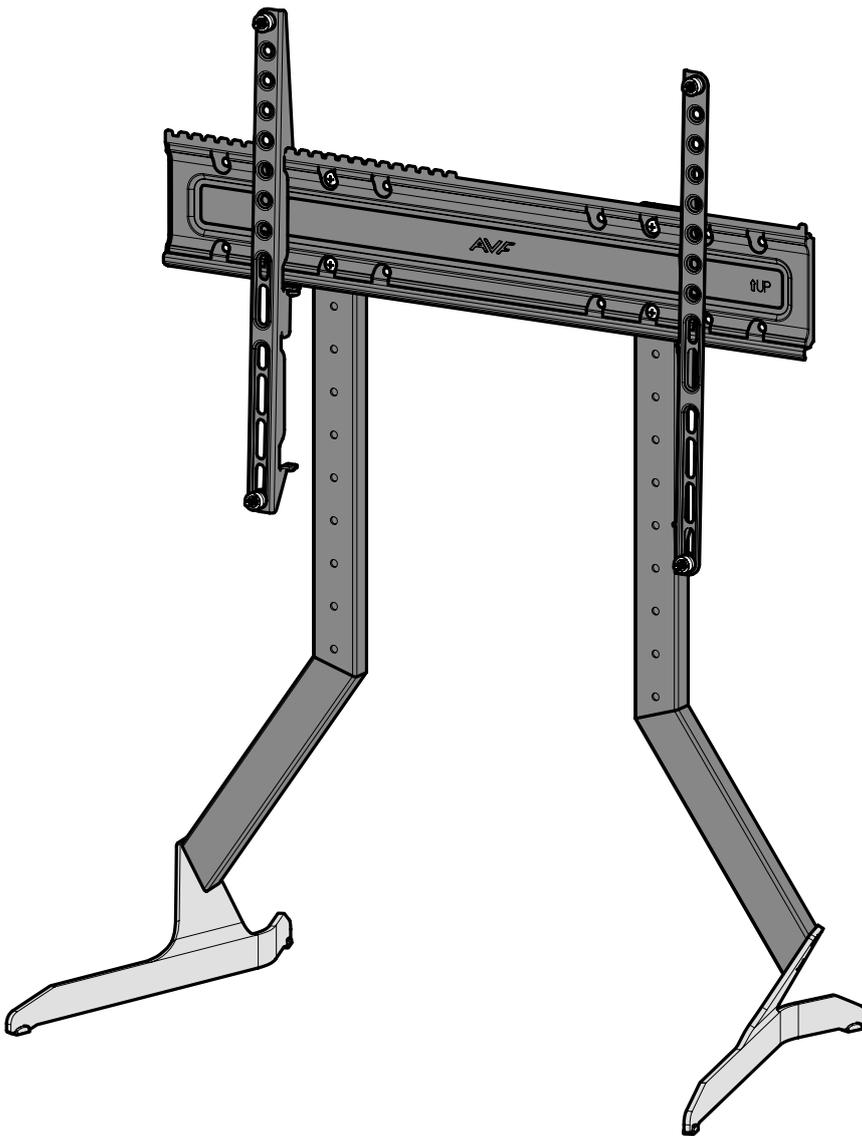

You will need

 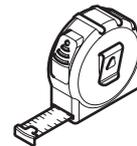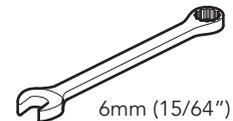


Helpline



1300 762 219 (Australia)
(09) 9302 0077 (New Zealand)



Product Information

bit.ly/QB600S-AU

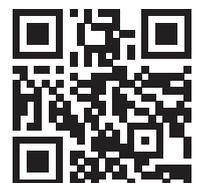

Australian Supplier - Arisit P/L · 40-50 Mark Anthony Drive · Dandenong · South Victoria · 3175
New Zealand Supplier - Arisit P/L · 1a Howe Street · Newton · Auckland · 1145 · New Zealand

 Parts Included

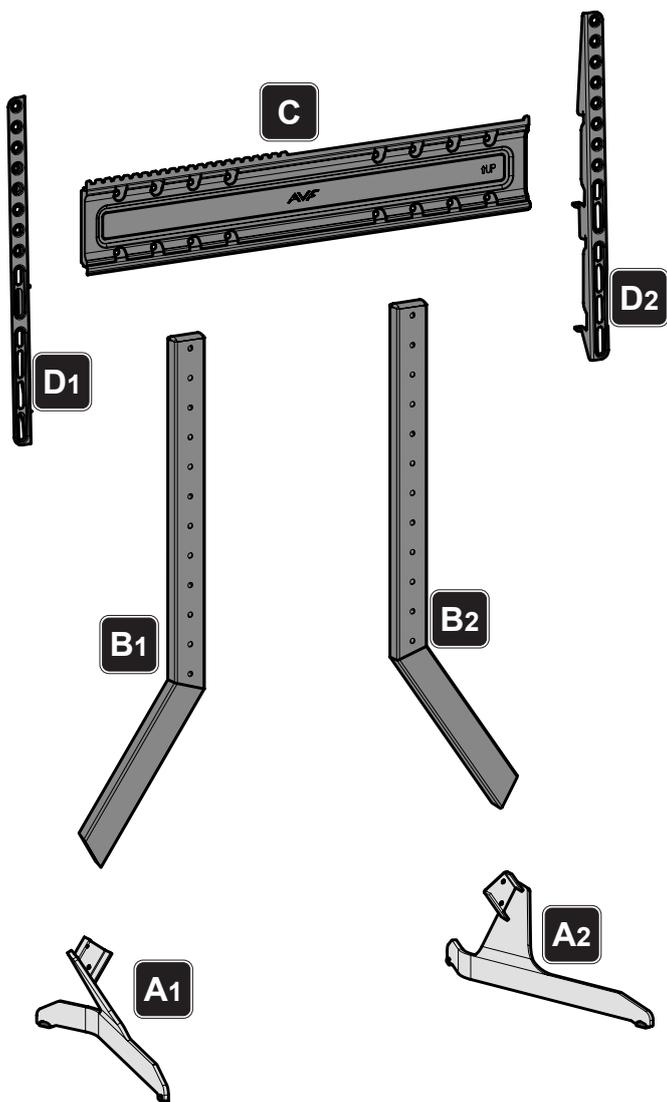

E
x4



F
x4



G
x4



H
x4




I
x2



M
x1

TV Screws, Reducers and Spacers

M4's

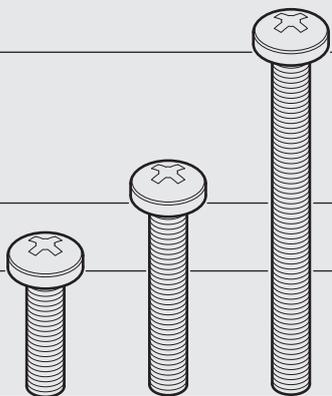


L1
x4

L2
x4

L3
x4

M6's

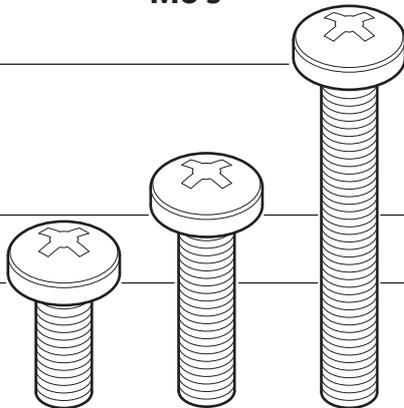


L4
x4

L5
x4

L6
x4

M8's

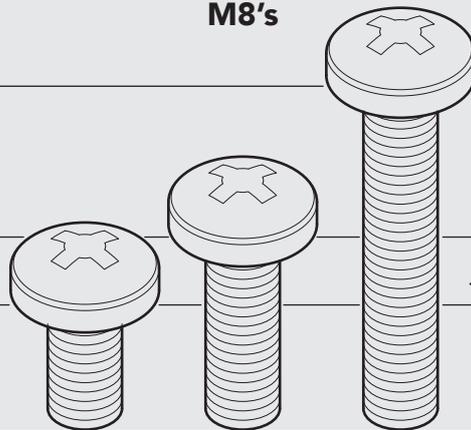

L7
x4

L8
x4

L9
x4

45mm

25mm


16mm



You will only need one set of TV Screws


3 Easy Steps

1

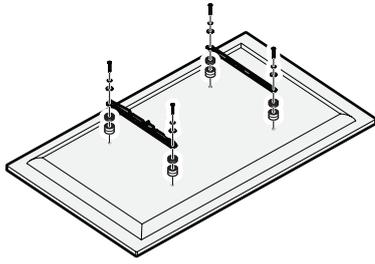


Attach the Brackets
to your TV

2

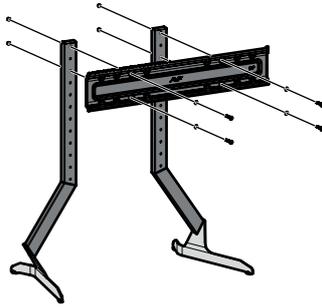

Assemble the Stand


3

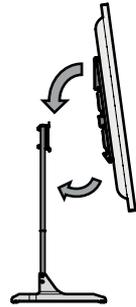


Hang and secure

1.1

Measure your VESA fixings and select TV Screws

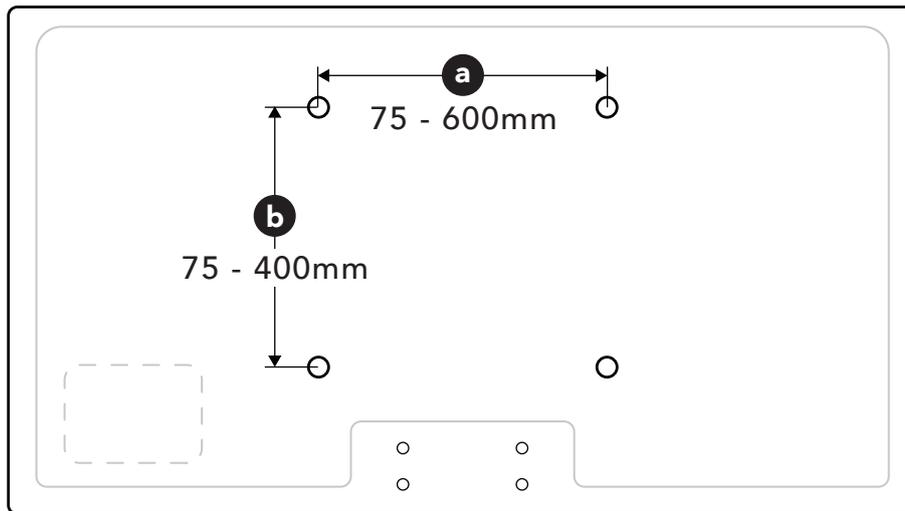

This product fits fixing holes up to 600 x 400mm (MAX).

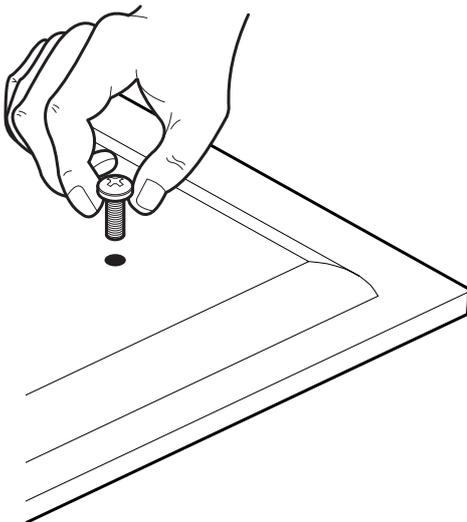

Determine which diameter TV Screws fit your TV and put them to one side.


M4, M6 or M8

We will select the correct length later.




1.2 Fitting the TV Brackets



After completing this step, you will have lots of TV screws left over. Keep them in a safe place in case you require them in future.

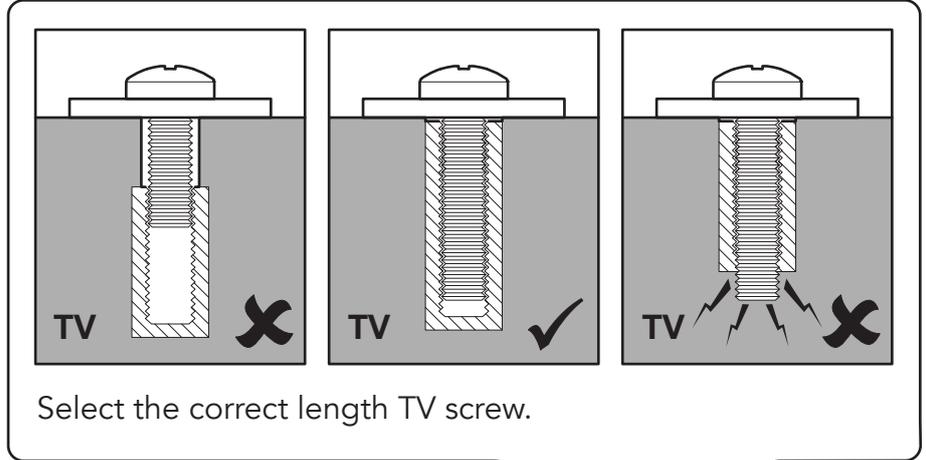




L1 - L9

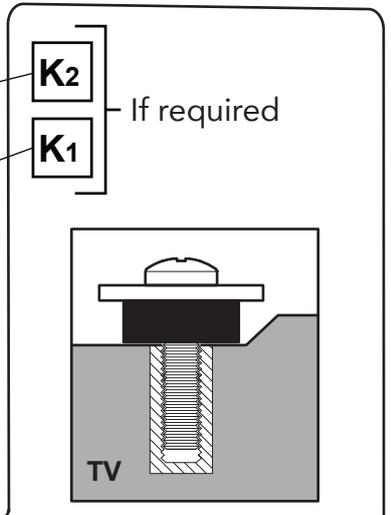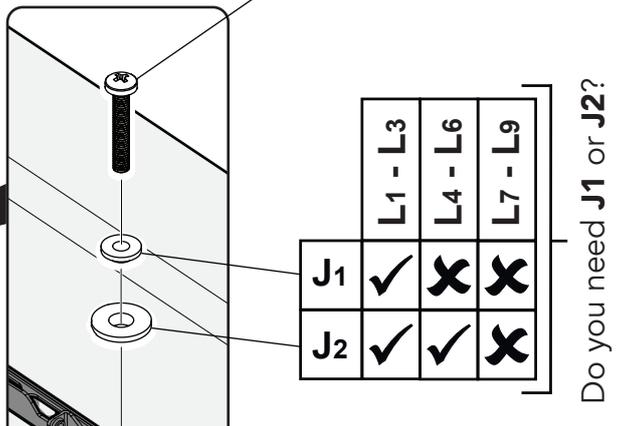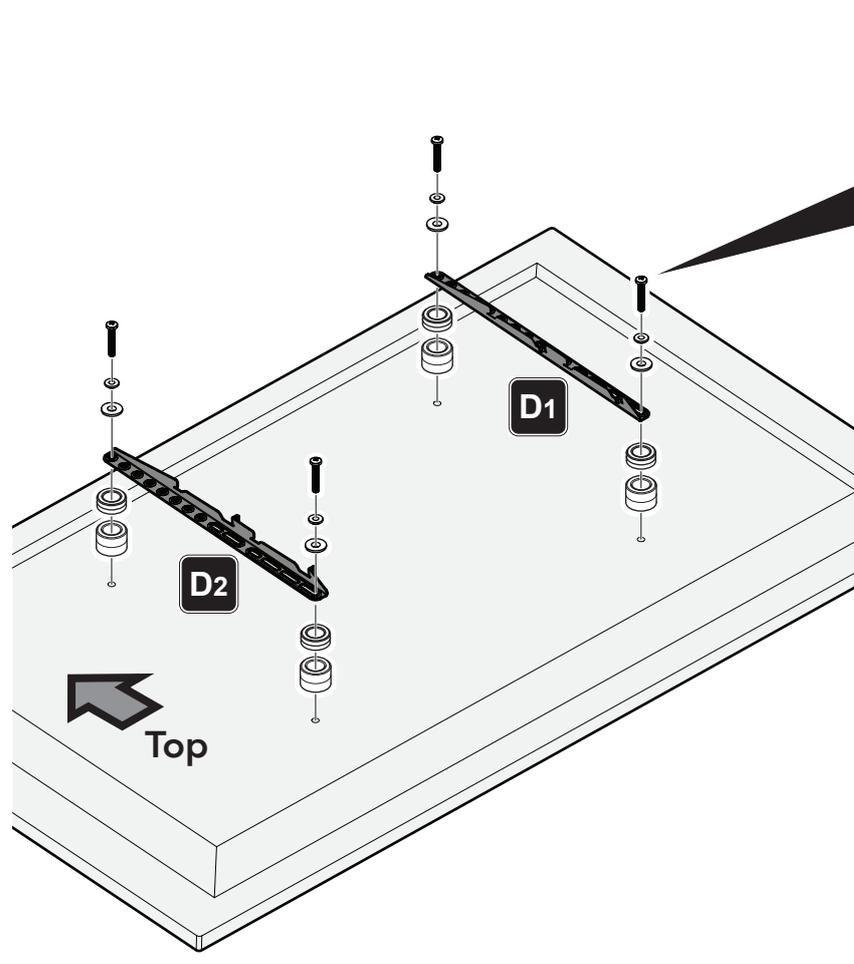

You may need to use Spacers **K1** or **K2** if the screws are too long or the back of your TV is not flat.

2.1

Assemble the Legs

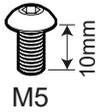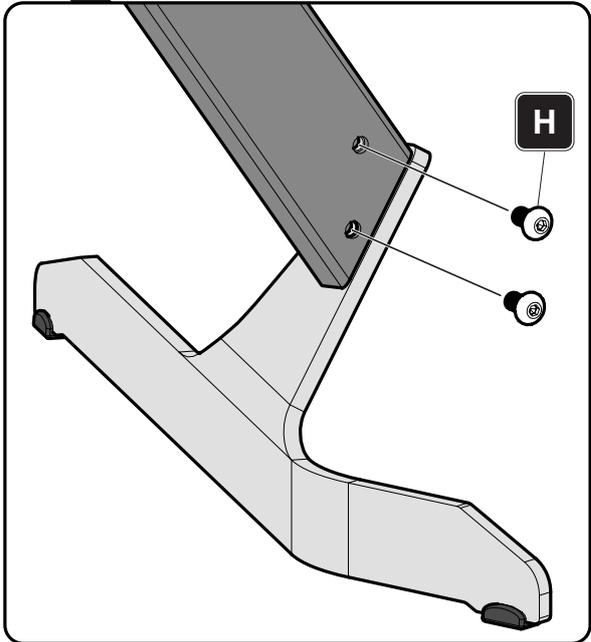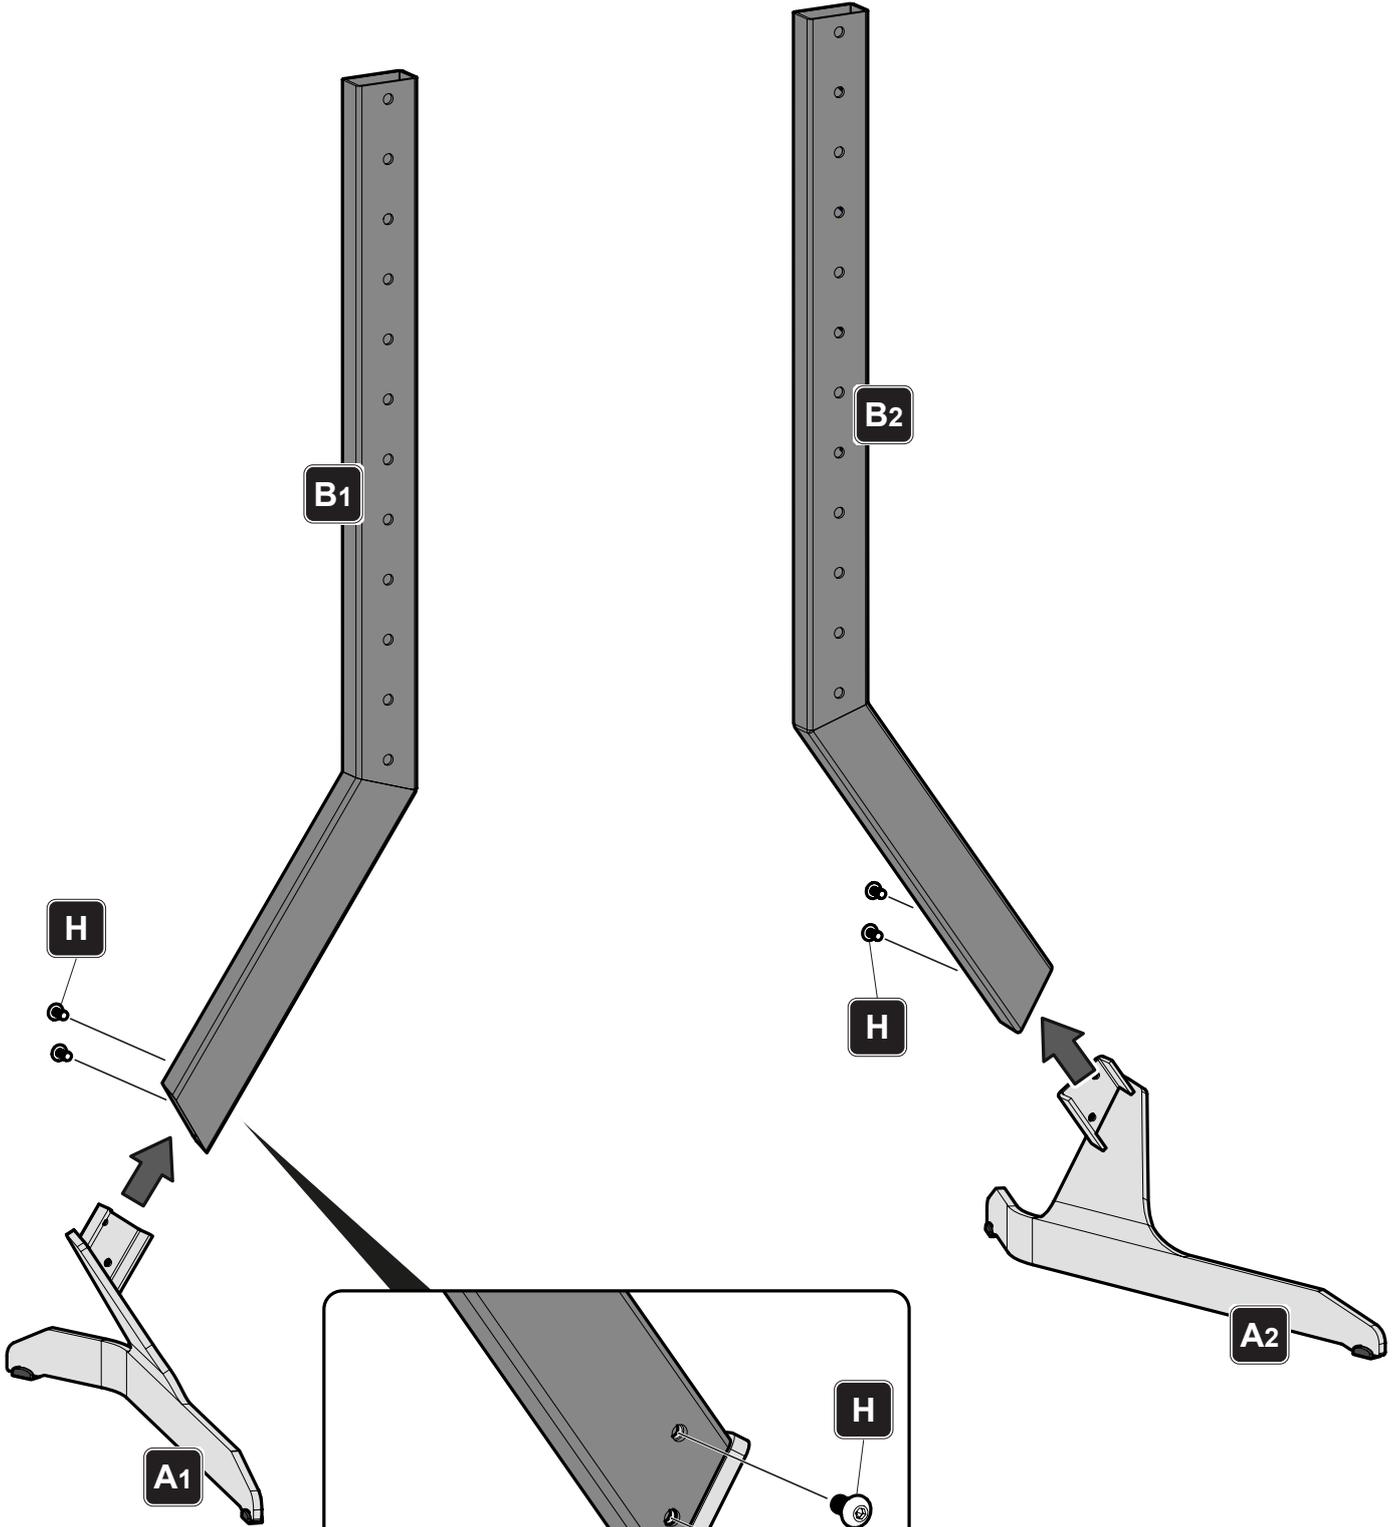


H
x4




M
x1

2.2

Attach the Backplate

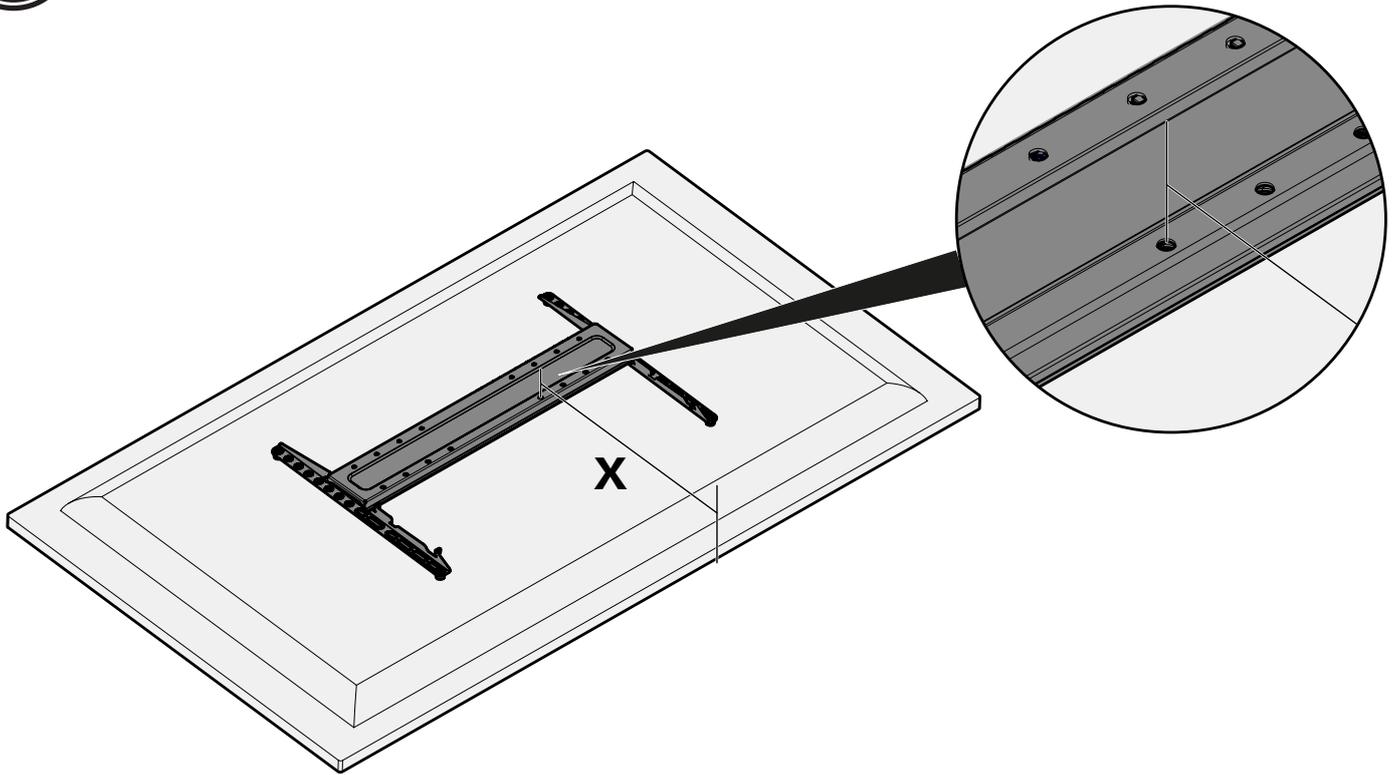

Place the Backplate in the top slot on the TV Brackets. Measure from the lower mounting holes on the Backplate to the bottom of your TV.

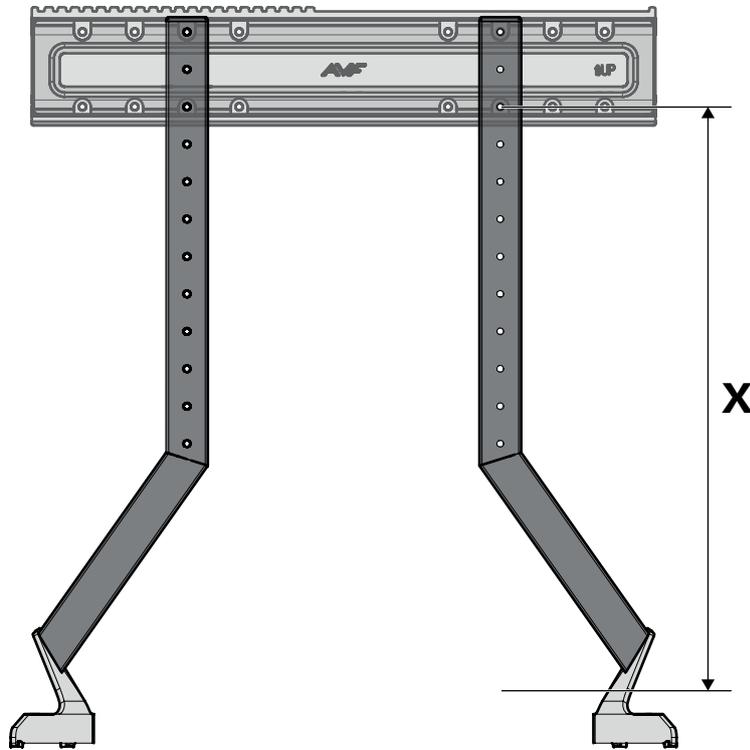






Measure the legs, from above the feet, the same distance to find the bottom hole for fixing the backplate.



If you need some extra height to stop the bottom of the TV hitting the feet, you can place the Backplate in the bottom slot on the TV Brackets.




The legs can be attached in four different positions. Choose the setup that works best for your TV and furniture.

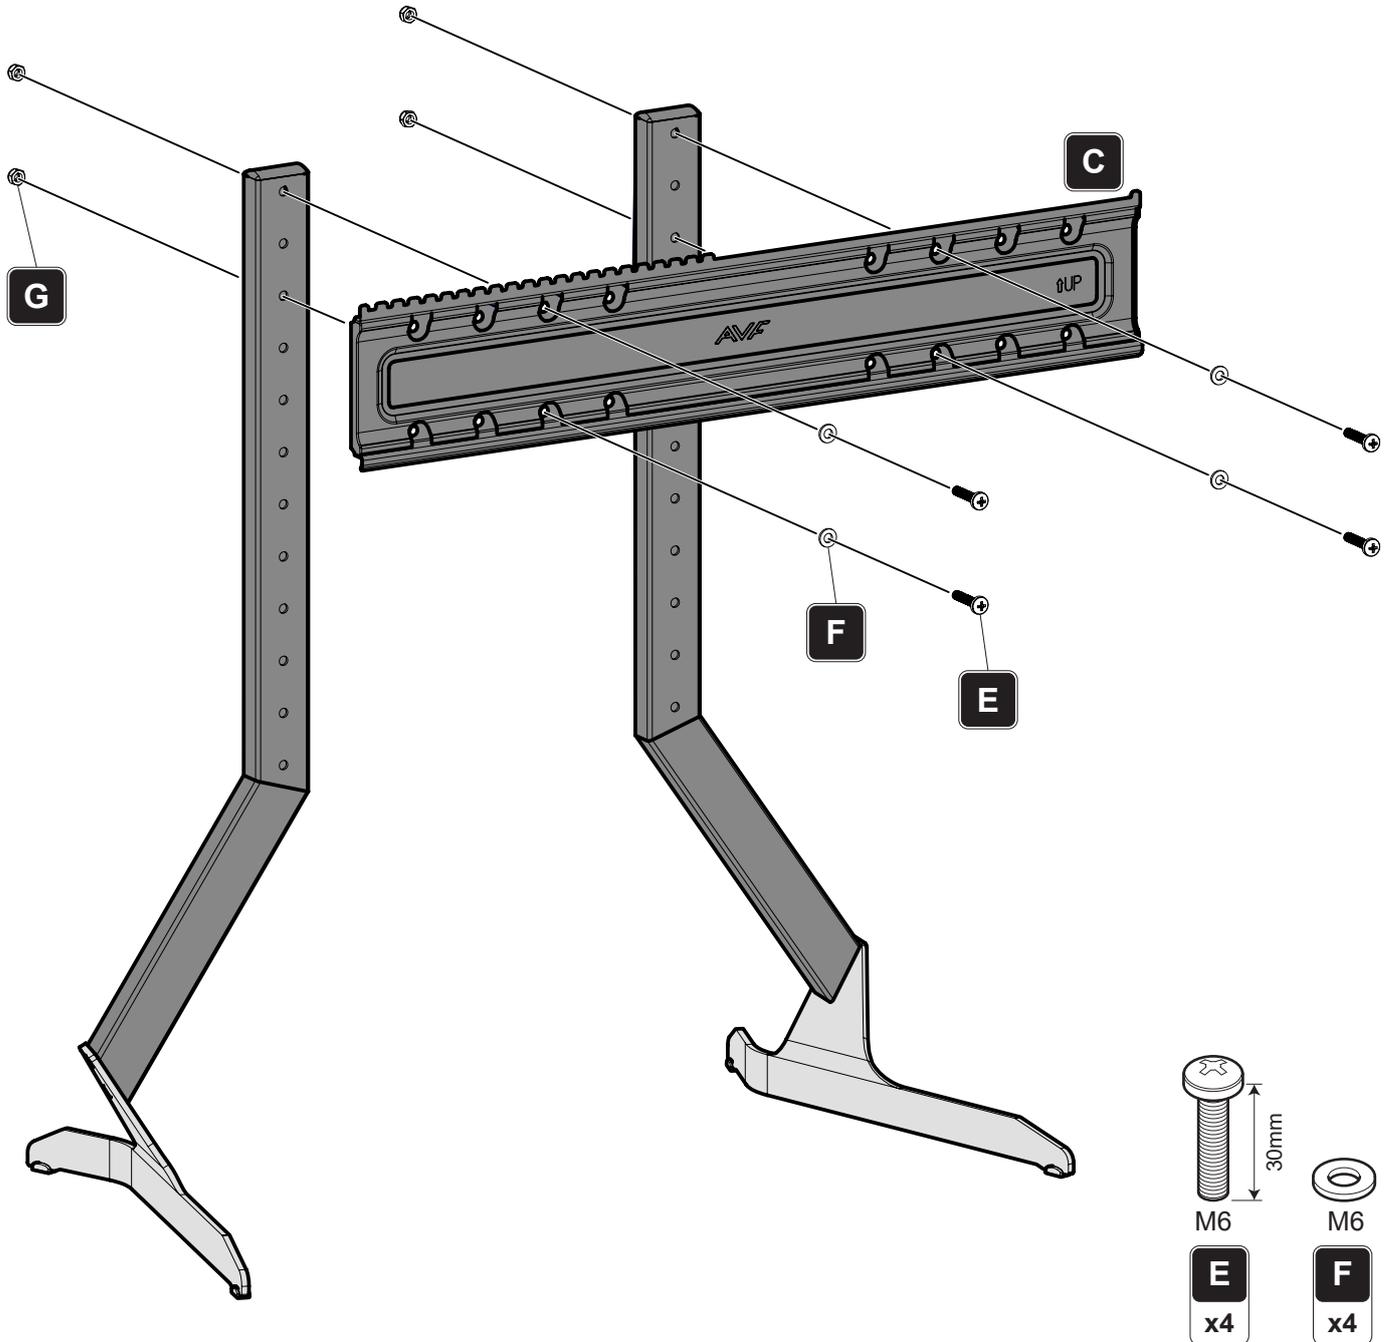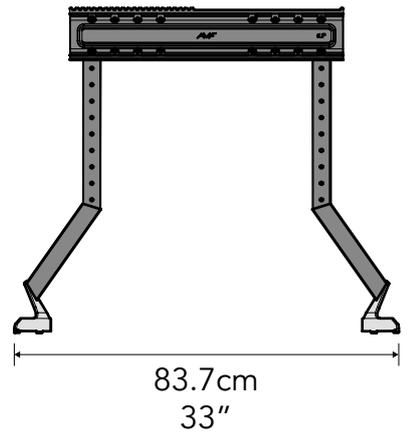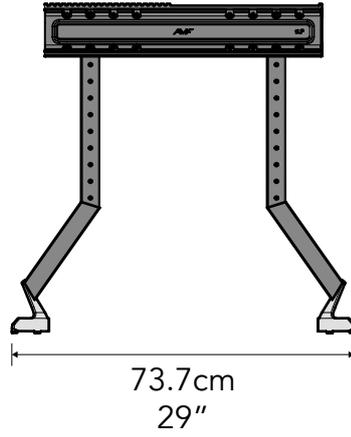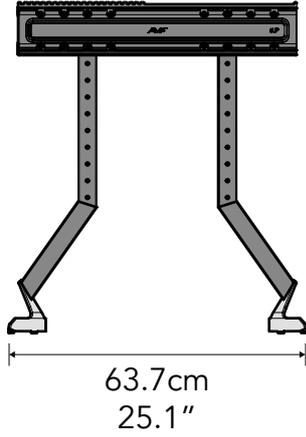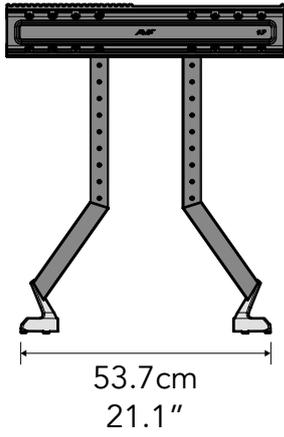

3.1

Hanging the TV

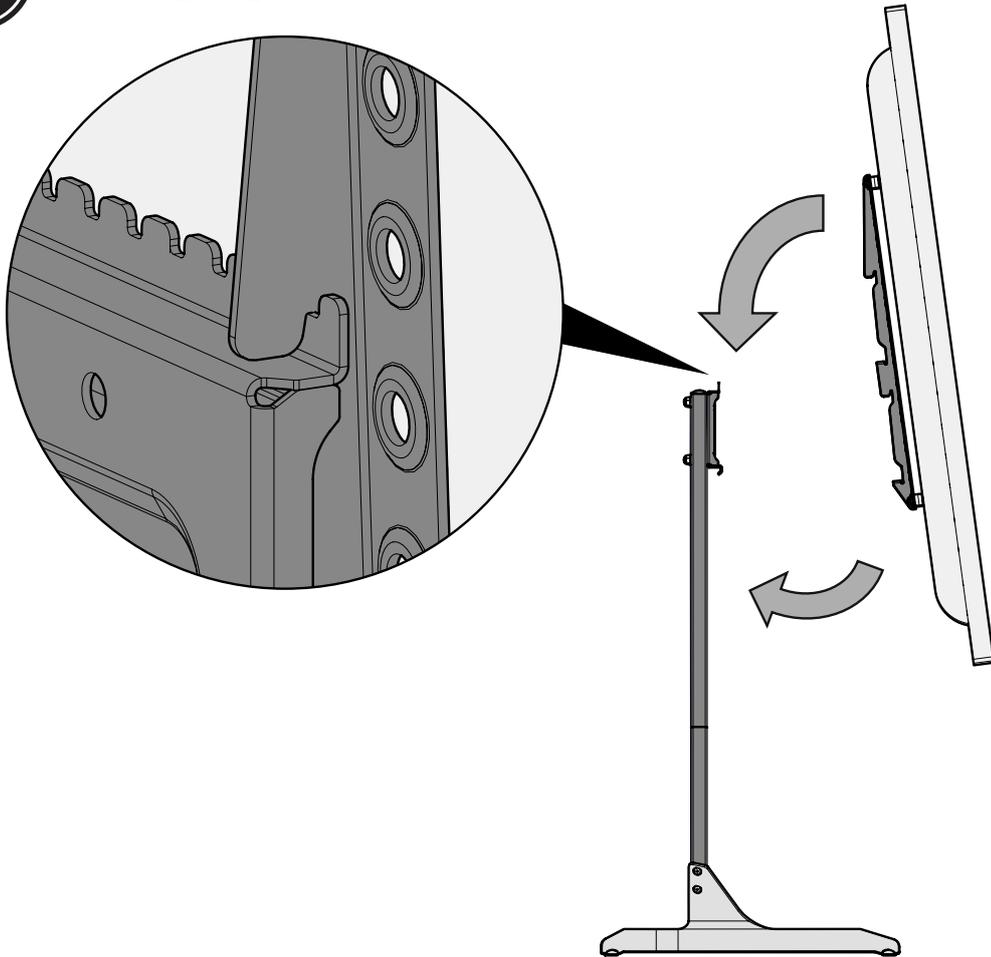

3.2

Locking the TV

