TESCO

STOP

Read the operating instructions and keep them in a safe place.
If you have any questions about this product or issues with installation
contact the help line before returning this product to the store.

Help Line: 0333 320 8027
Monday - Thursday 08:30 - 17:00 Friday 08:30 - 16:00
Calls charged at local rate

30 KG

26-55" TVs

VESA TV Fixing Holes

75 x 75mm
100 x 100mm, 200 x 100mm
200 x 200mm, 300 x 300mm
400 x 200mm, 400 x 400mm

Retain all packaging in case the bracket needs to be returned.
Contents may vary from photography/ illustrations.
You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.
This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.
This product is sold as a home DIY product and as such, it is the responsibility of the installer to ensure the product is correctly installed.
It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).
TESCO accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.
Periodically check all nuts and bolts are tight.

IF YOU ARE IN ANY DOUBT, CONSULT A QUALIFIED CONTRACTOR

Tools Recommended

Ø3mm Wood   Ø8mm Masonry   10mm

Box Contents

T1 x4 M4 16mm	T2 x4 M4 30mm	T3 x4 M5 16mm	T4 x4 M5 30mm
T5 x4 M6 16mm	T6 x4 M6 30mm	T7 x4 M8 16mm	T8 x4 M8 30mm
T9 x4 M5	T10 x4 M6	T11 x4 M6	T12 x8 M6
W1 x3	W2 x3 (for solid wall only)	W3 x4 M6	U1 x8 M6
U2 x8 M6			

(1) Prepare TV Bracket

! Remove and keep for step 3

! Remove and keep for step 5

---

(2) Measure the TV fixing holes
Your TV mount fits the following TV fixing sizes

OPTION 1
75 x 75mm, 100 x 100mm,
200 x 100mm, 200 x 200mm

OPTION 2
400 x 200mm

OPTION 3
300 x 300mm, 400 x 400mm

(3) Prepare the TV mounting plate
Use the option that fits your TV fixing sizes

OPTION 1

200 mm
100 mm
75 mm
100 mm
75 mm
200 mm

OPTION 2

400 mm
200 mm

B1 B2 B2 B1

OPTION 3

400 mm
300 mm
300 mm
400 mm

B1 B2 B2 B1

B1 or B2
U1 U1 x4
10mm
U2 U2

---

(7) Fit Wall Bracket Covers

C   C

(8) Connect TV

i

ii

(9) Cable Management

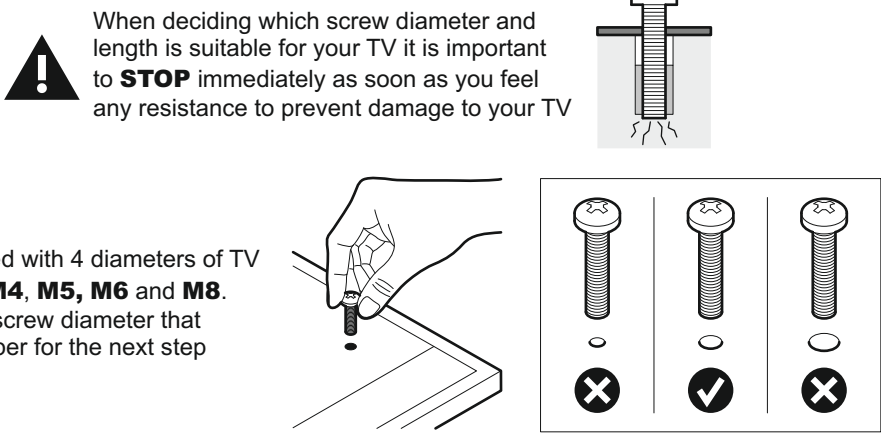! Ensure cables don't restrict arm movement
Check all fittings are tight
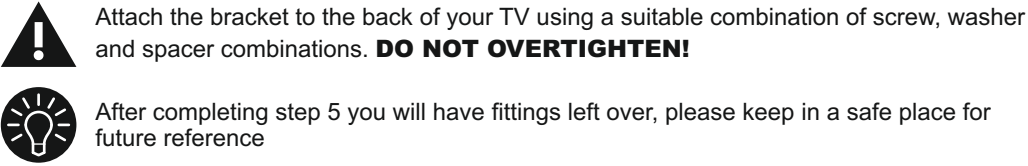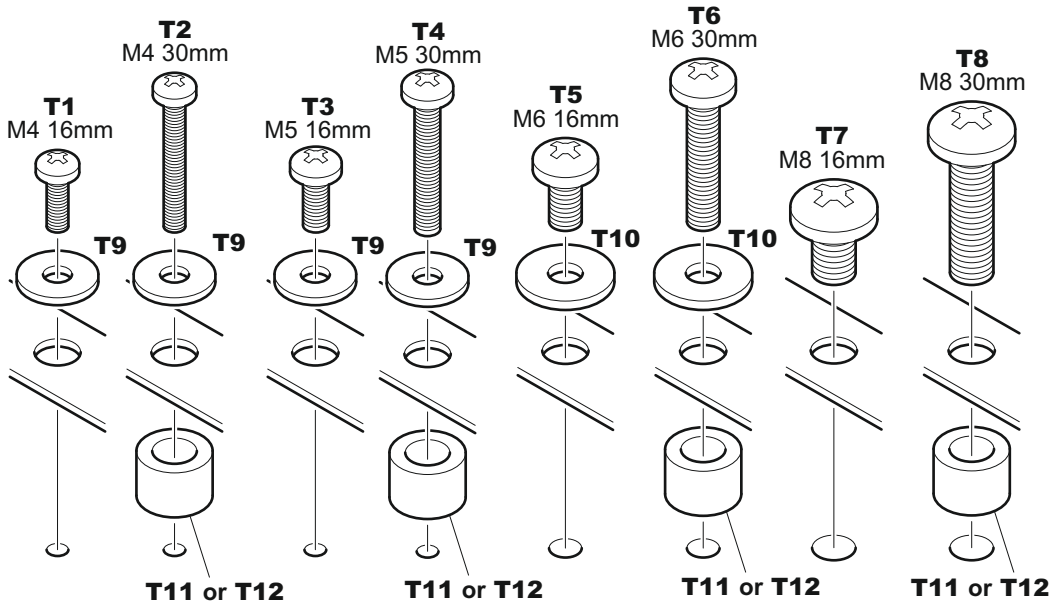
Lock tilt

4 Deciding the correct screw and spacer combination

⚠️ When deciding which screw diameter and length is suitable for your TV it is important to **STOP** immediately as soon as you feel any resistance to prevent damage to your TV
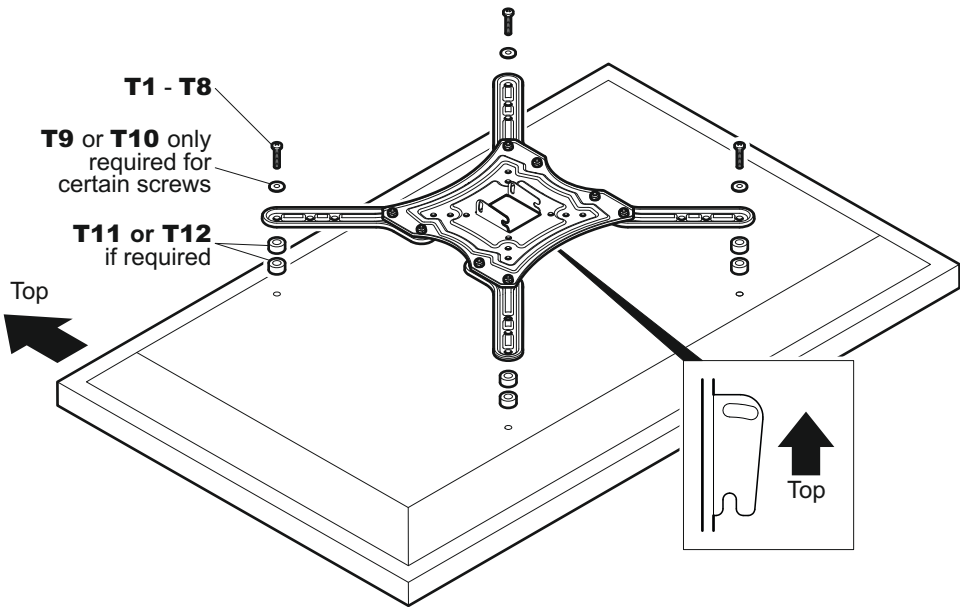
You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for the next step

❌ ✔️ ❌

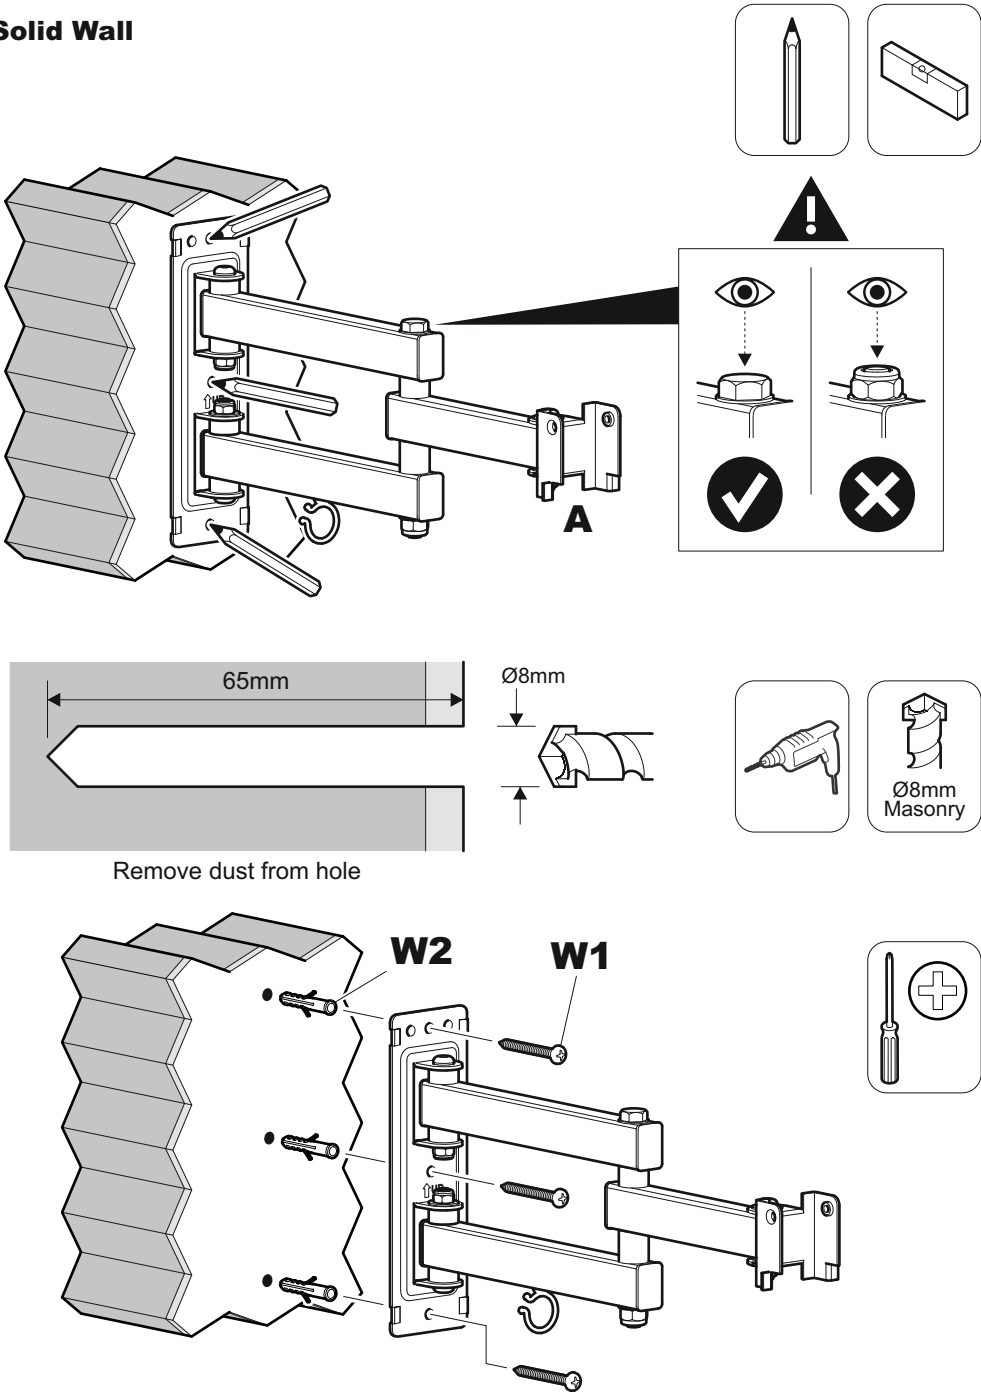### Do I need to use spacers T11 or T12 ?

Spacers are provided so that you can achieve the correct fit between the back of your TV and Mounting Plate, please see below for examples of when spacers are required

No
TV has flat back and flush fixing holes
✔️

Maybe
TV has flat back with recessed fixing holes
✔️ ✔️
❌ ❌
✔️ ✔️

Yes
TV has irregular or obstructed back
❌
✔️ ✔️
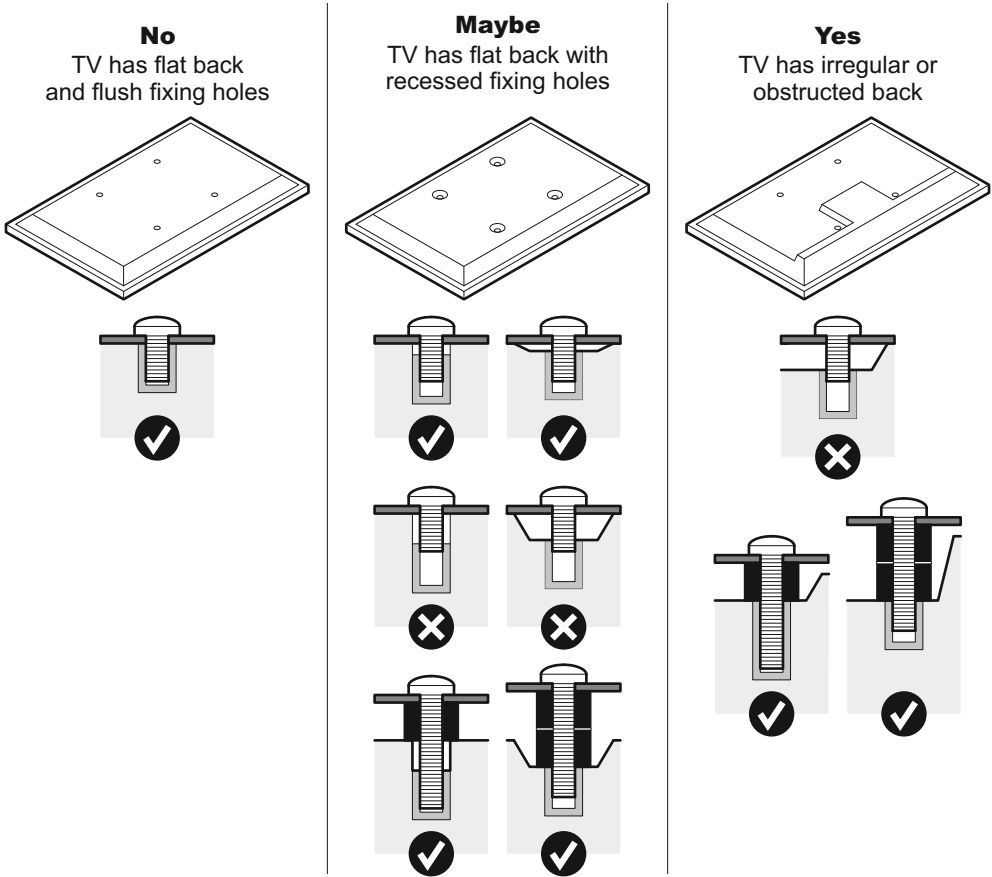
5 Fitting the TV Mounting Plate

T1 - T8
T9 or **T10** only required for certain screws
T11 or **T12** if required

Top

Top

| T1 M4 16mm | T2 M4 30mm | T3 M5 16mm | T4 M5 30mm | T5 M6 16mm | T6 M6 30mm | T7 M8 16mm | T8 M8 30mm |

T9 **T9** **T9** **T9** **T10** **T10**

T11 or T12 · **T11 or T12** · **T11 or T12** · **T11 or T12**

⚠️ Attach the bracket to the back of your TV using a suitable combination of screw, washer and spacer combinations. **DO NOT OVERTIGHTEN!**

💡 After completing step 5 you will have fittings left over, please keep in a safe place for future reference

6 Solid Wall

✔️ ❌

65mm | Ø8mm
Remove dust from hole
Ø8mm Masonry

W2 **W1**

⚠️ Tighten with hand tools only
💡 Lubricate screw thread with soap

6 Wood Stud

✔️ ❌

⚠️ Ensure drill marks are in the centre of the wood stud

50mm | Ø3mm
Ø3mm Wood

W1

⚠️ Do not use W2 wall plugs in wood stud

⚠️ Tighten with hand tools only
💡 Lubricate screw thread with soap