


# JMS1200

Leaflet No. **463454** rev00

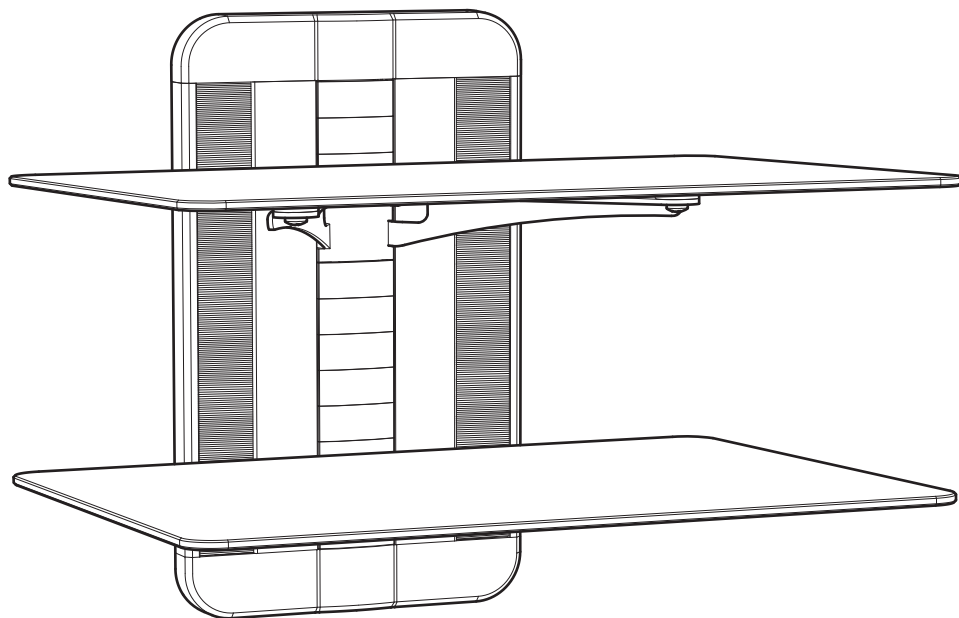

*Read through **ALL** instructions before commencing installation. If you have any questions about this product or issues with installation contact the customer services helpline before returning this product to the store. See [jl.avfgroup.com/p/jms1200](http://jl.avfgroup.com/p/jms1200) for more information.*

**CUSTOMER SERVICES HELP LINE NUMBER:**

**01952 670009**


**0870 0609777**




**AVF Group Ltd.** Road 30. Hortonwood Ind Est, Telford, Shropshire, TF1 7YE, England

# 1 Boxed Parts

(A) - x1

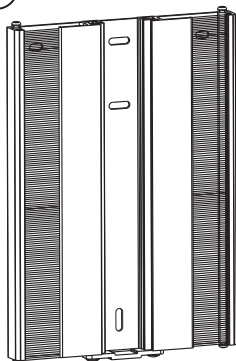

(B) - x2




(C) - x2



(E) - x9



(D) - x2

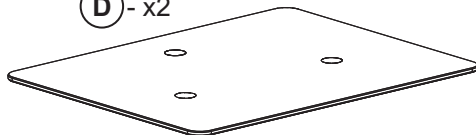

(F) - x6




M6x8mm Screw

**Wall Fixings:** Parts to attach to the wall (type of wall will determine which fixings you require).



(G)



(H)



(I) - x2




(J) - x2




(K) - x2




(L) - x1

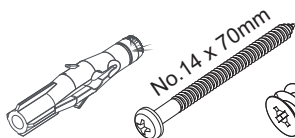

(M) - x2

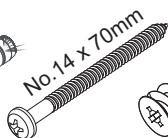


(N) - x2



(O) - x1




(P) - x1



(Q) - x1




(R) - x1



(S) - x2






Long Wall Plug

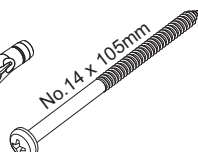

(T) - x2

Long Screw

# 2 Tools Required

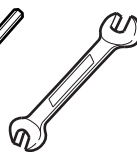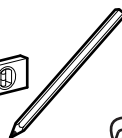

## 3 Planning & Preparation


Determine the wall type that you have (i.e. Brick/Stud/Plasterboard/Sheetrock).

Ensure the drilling area is free from mains services (Gas/Electric/Water).

Drill three 3mm pilot holes to verify the wall type and select the appropriate fixings (See Section 5).

## 4 Marking Wall For Drill Points


Use the wall bracket (A) as a template and position it on your wall. Ensure the bracket is level and mark the three drill points with a pencil.

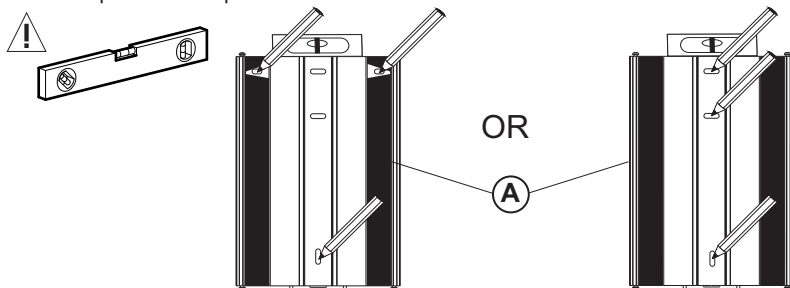


## 5 Fit Bracket To Wall

Use the correct fixings for your wall type. Mixing fixing types may be required for installations that span different wall types. DO NOT OVER TIGHTEN SCREWS.

### Solid Wall

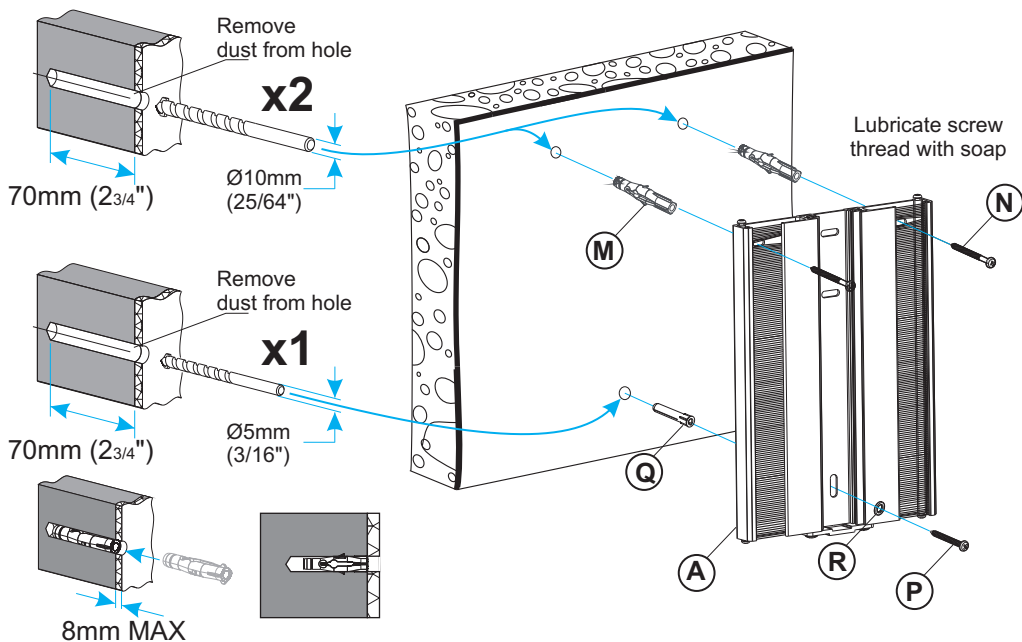


## Plasterboard/ Sheetrock

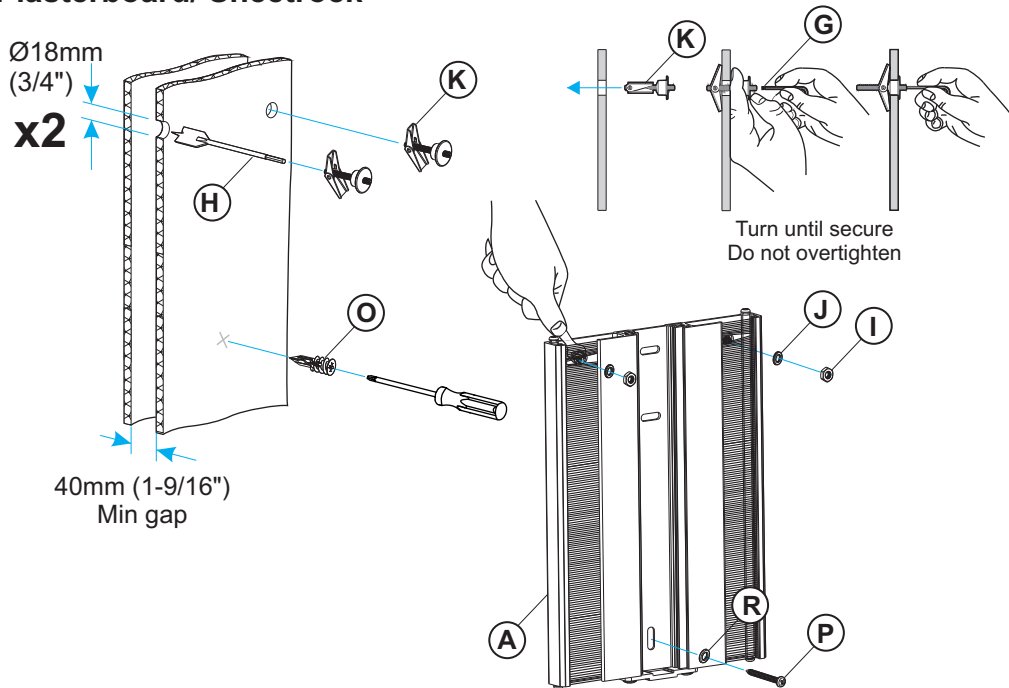


## Wood Stud

### Option 1

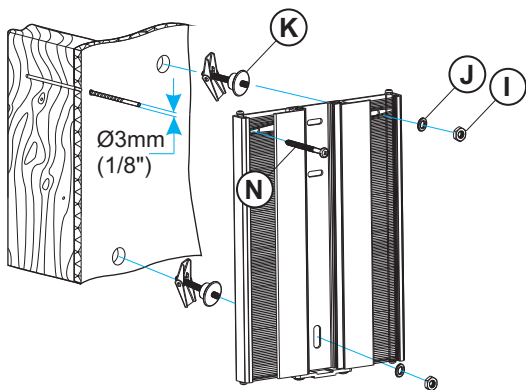

Only one fixing will be in the wood stud.  
The other fixings will be in  
plasterboard/ sheetrock(see above).


### Option 2

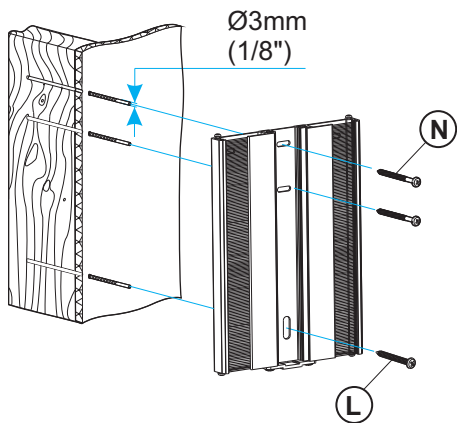


Lubricate screw  
thread with soap

## Metal Stud

### Option 1

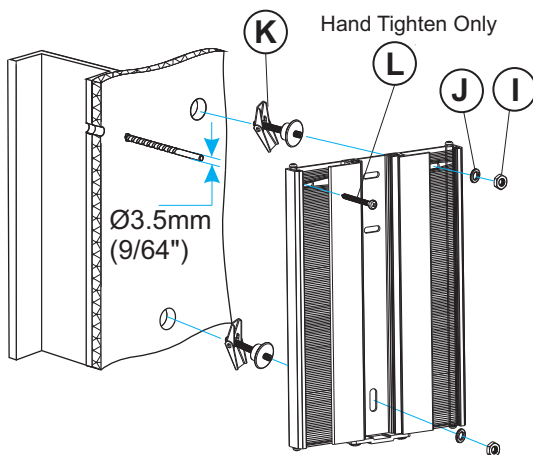


### Option 2

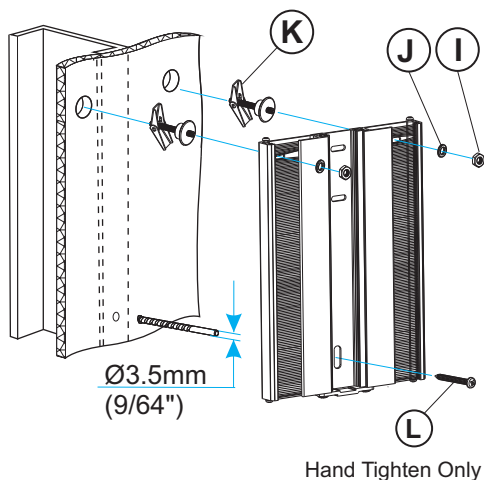


Only one fixing will be in the metal stud. The other fixings will be in plasterboard/ sheetrock.

## Dot & Dab

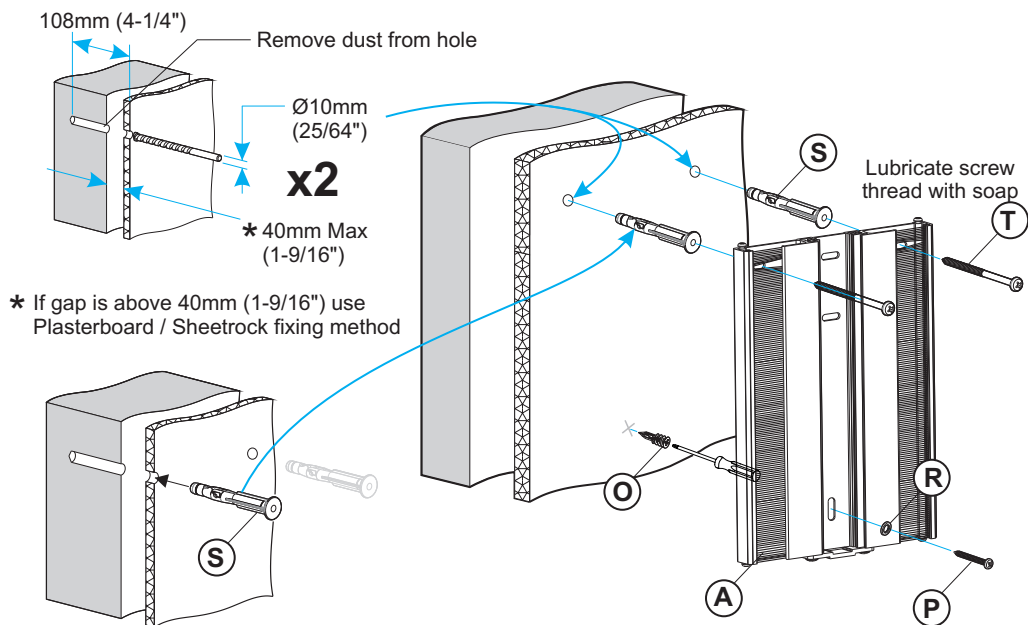

## 6 Shelf Assembly

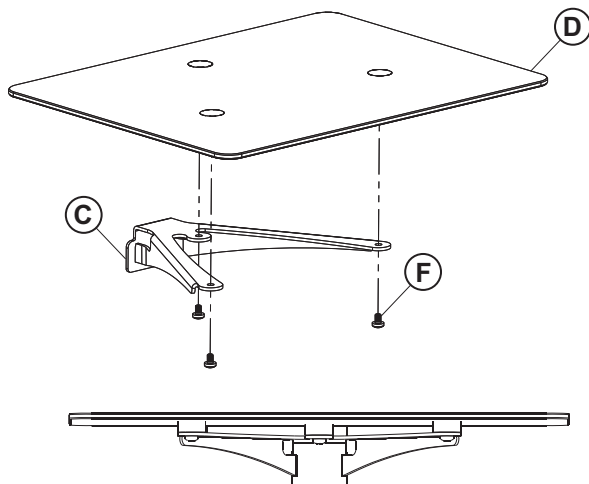



x2

## 7 Assemble

Select desired shelf and spacer configuration, ensuring at least one spacer (E) is at the top.

Ensure locating bracket is securely in place & slide assembled shelf unit (C,D) into the wall bracket.

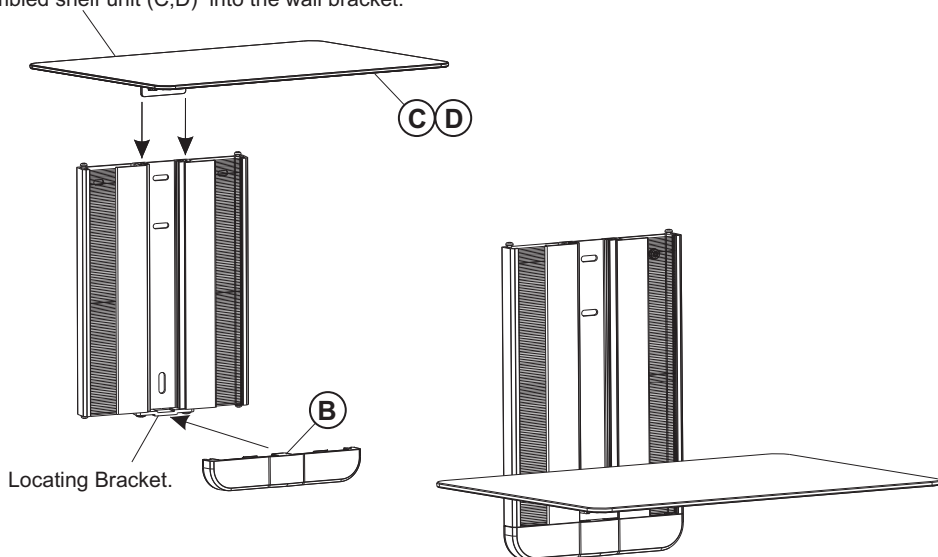

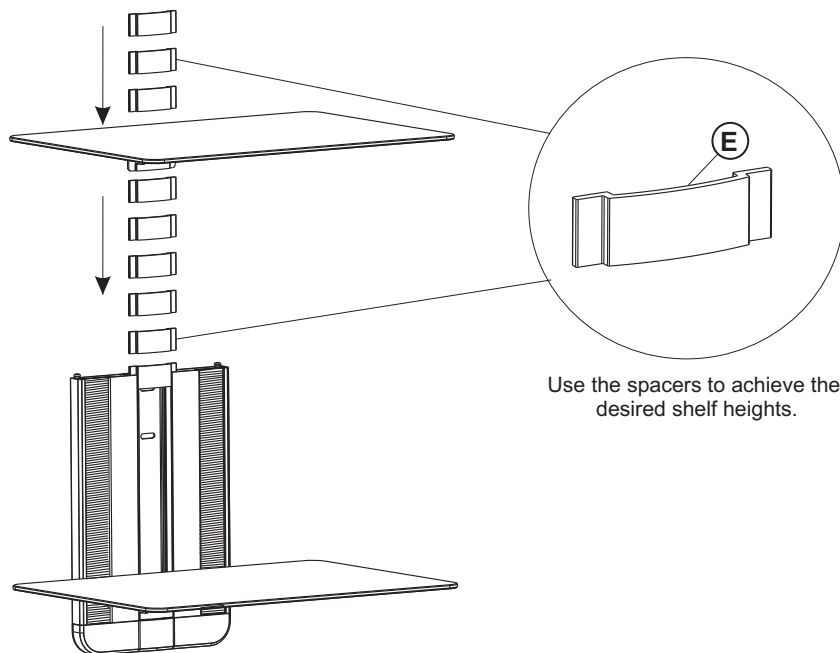

## 8 Final Assembly

