



Read through <u>ALL</u> instructions before commencing installation. If you have any questions about this product or issues with installation contact the customer services helpline before returning this product to the store. See jl.avfgroup.com/p/jzl6701 for more information.

**CUSTOMER SERVICES HELP LINE NUMBER:** 


01952 670009





AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England

### **Assembly Overview**

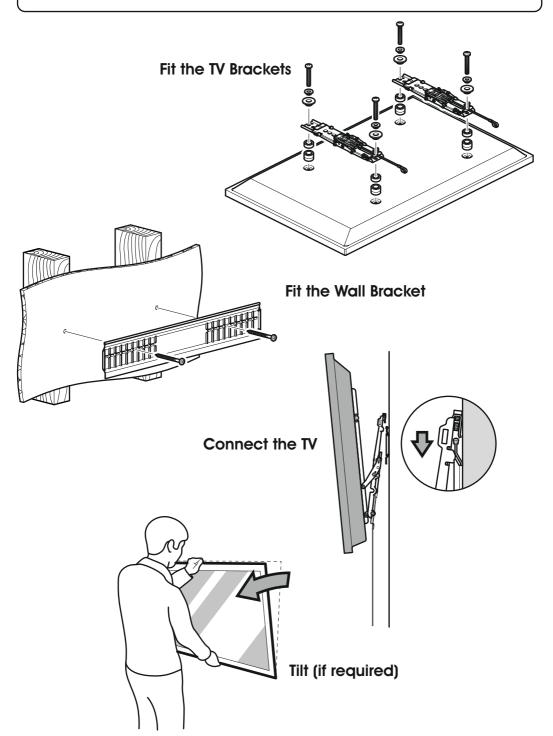

#### Index

- Measure the TV fixing holes Width and Height
- Preparing the TV Brackets
- Fitting the TV Brackets
- Fitting the Wall Bracket
- **5** Connecting the TV

Retain all packaging in case the bracket needs to be returned.


Contents may vary from photography/ Illustrations.

You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.


This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc). AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.


#### **Tools Recommended**

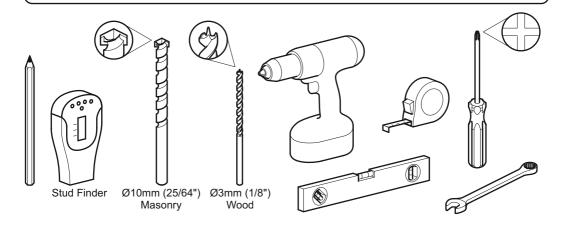

### **Boxed Parts**

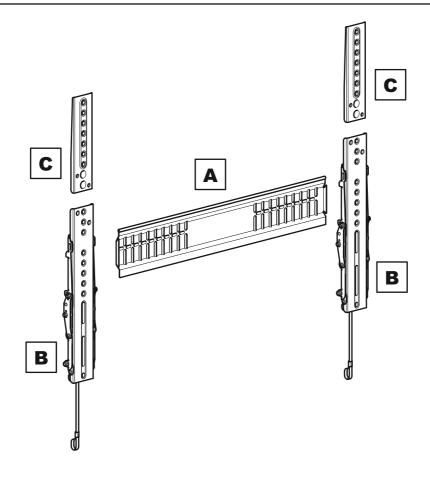


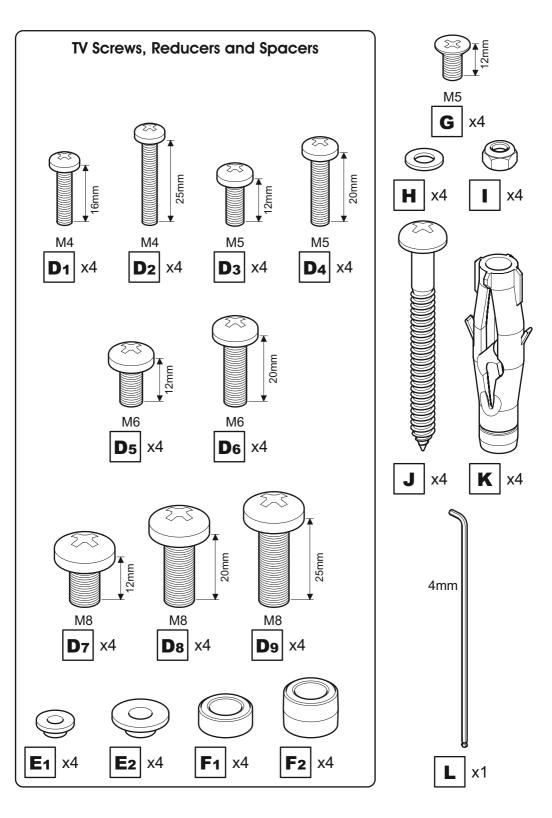

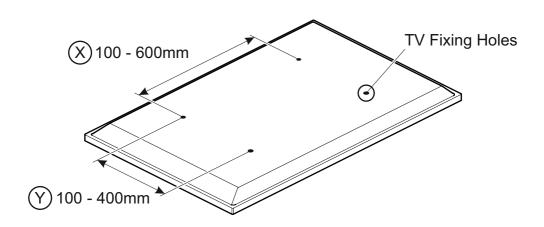


If width (X) is greater than 600mm or height (Y) greater than 400mm STOP installation now and contact the customer help line

You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 3.

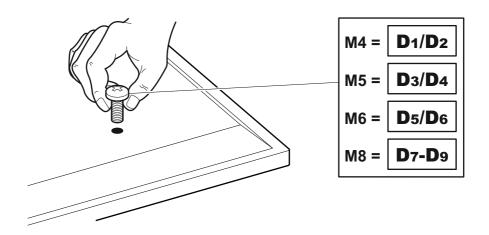


# 2 Preparing the TV Brackets

To ensure maximum tilt is possible after installation you will need to ensure that your TV does not clash with the wall.

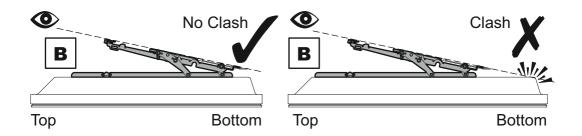

If a clash is observed you will need to use adaptors **C** to position the TV Brackets **B** closer to the bottom of the TV to achieve maximum tilt.

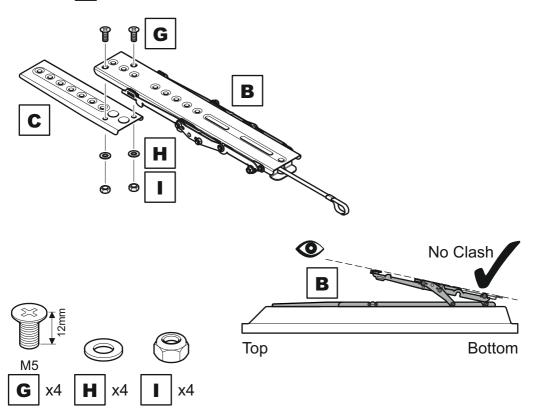



#### No Spacers

For Tvs with flat/unobstructed back


# Spacer F<sub>1</sub>/F<sub>2</sub>


For Tvs with irregular/obstructed back

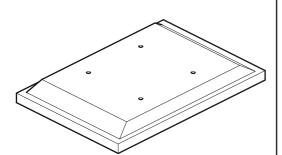


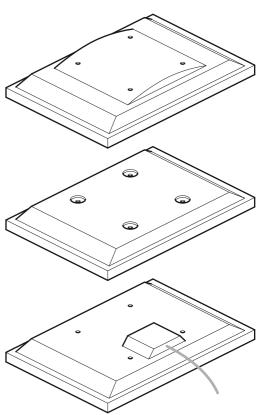


### WARNING














After completing step 3 you will have fittings left over, please keep for future reference

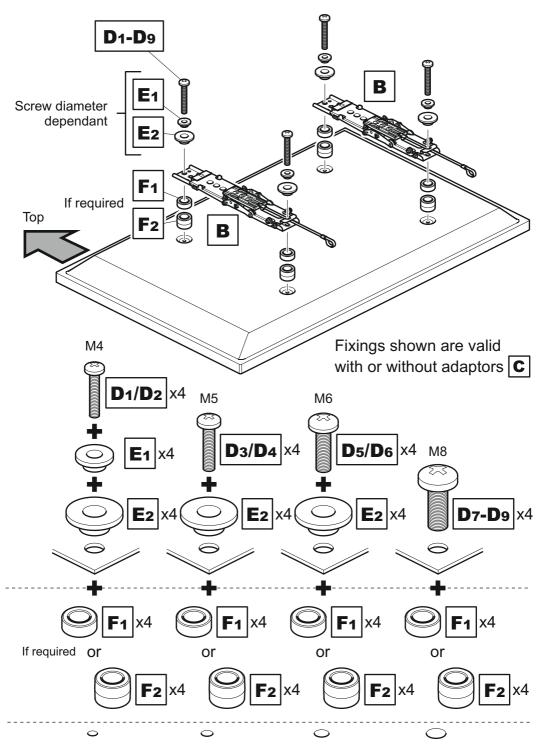


Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.

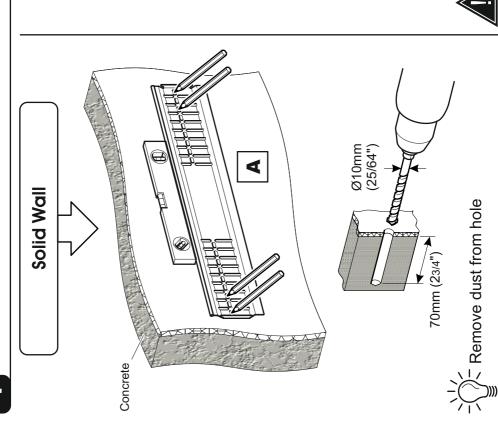

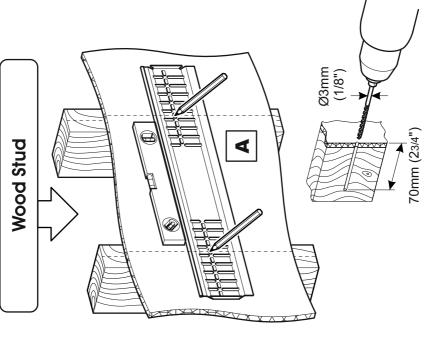

Ensure bracket is in the centre of the wood stud

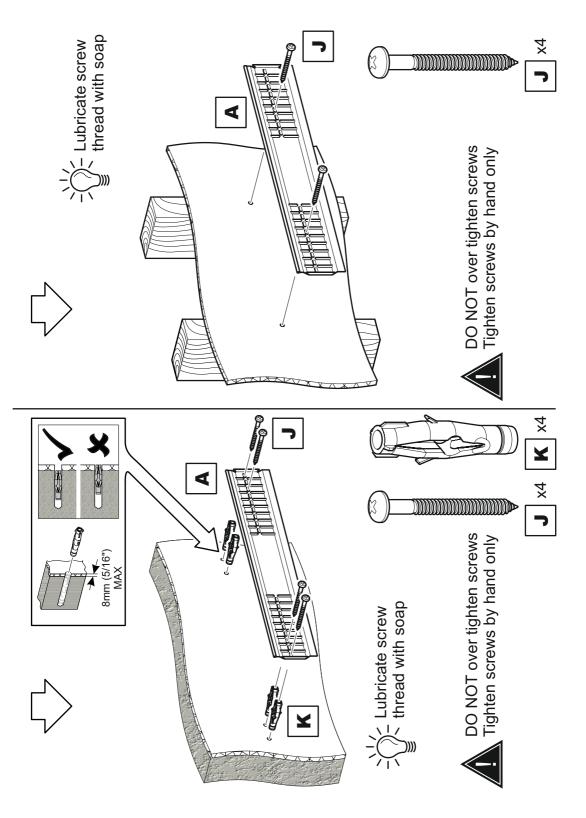

## 5 Connecting the TV

