


wilko

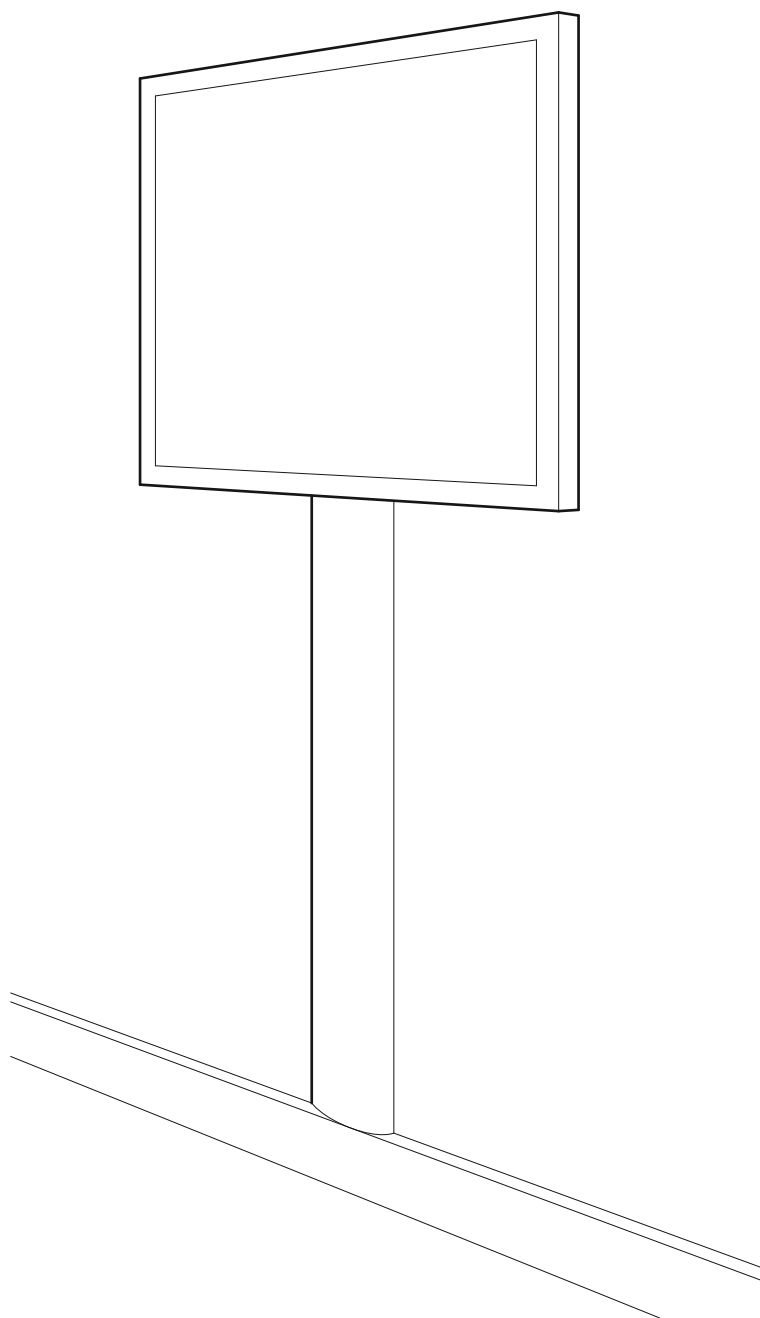

WUA150

cable trunking

instructions

464491 rev00

Please Read

Retain all packaging in case the product needs to be returned.

Contents may vary from photography/ Illustrations.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.


It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).





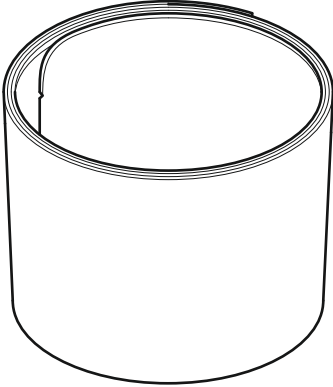

Please read the hints and tips below to help you with the application of your cable management.

- i** Ensure you roll wall strip **A** and cover strip **B** smoothly and evenly to prevent creasing.
- ii** Ensure both wall strip **A** and cover strip **B** are as flat as possible before attaching to the wall.
- iii** Ensure the surface you wish to attach the cable management to is clean and dry.
- iv** Ensure that before you attach wall strip **A** you are happy with the position.
- v** Ensure when you attach wall strip **A** to the wall that you press firmly and that you remove all air bubbles, repeat after 5 minutes.

Tools Recommended

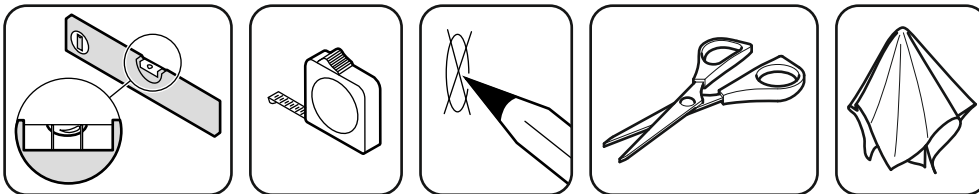


Boxed Parts

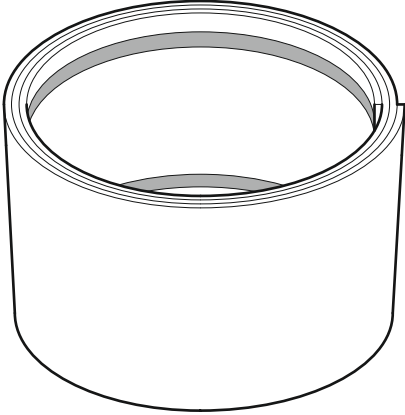A	  <p>Wall Strip</p>	x1
B	  <p>Cover Strip</p>	x1

Step 1 Unpack


Care must be taken when
unpacking product as
it can spring open

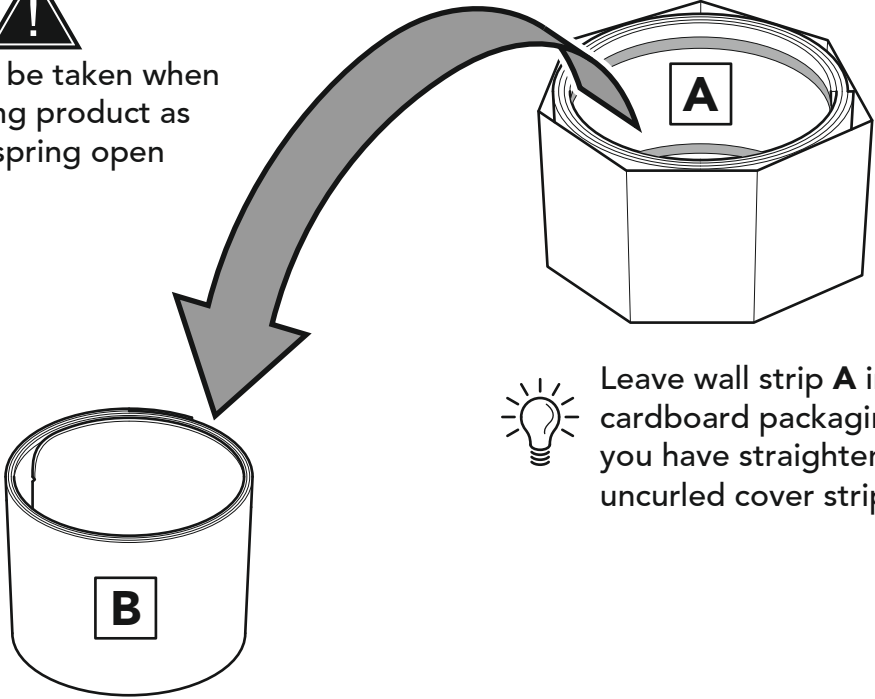

Leave wall strip **A** in the
cardboard packaging until
you have straightened and
uncurled cover strip **B**.


Step 2 Uncurling and Flattening



Care must be taken when uncurling and flattening as product can spring open




Be careful not to crease, roll smoothly and evenly.

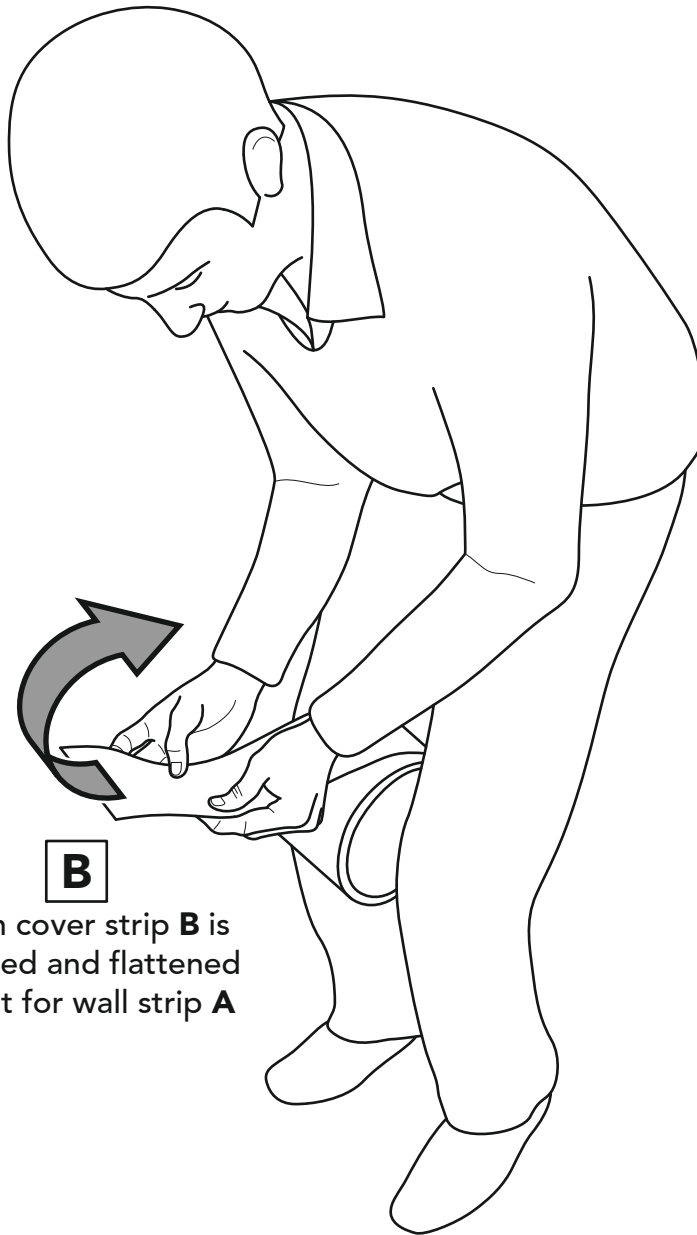

B

When cover strip **B** is uncurred and flattened repeat for wall strip **A**


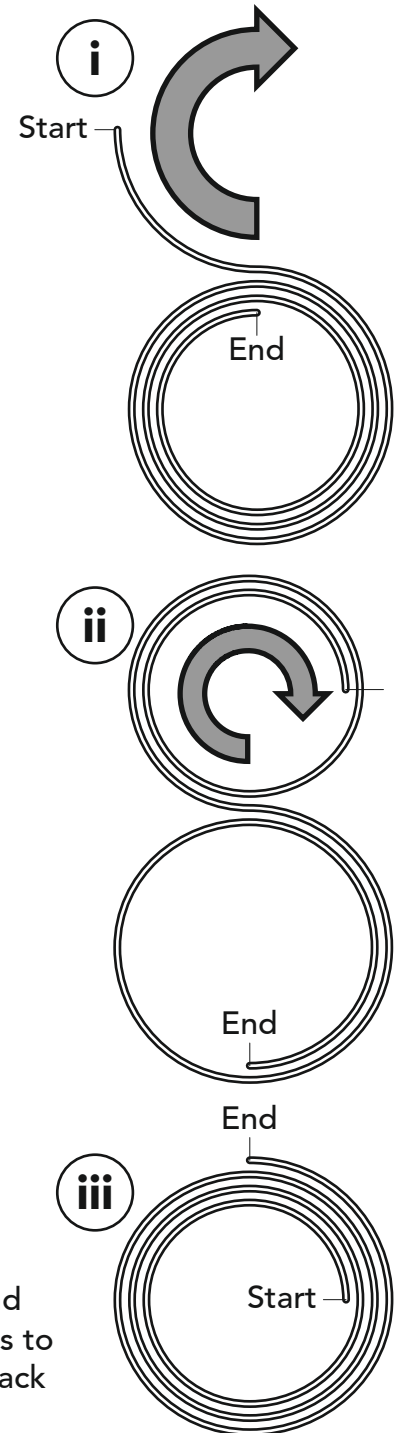


When uncurling and flattening wall strip **A** and cover strip **B**, put the roll between your knees to keep the roll steady while you roll the strip back on itself.

We recommend this action is performed a minimum of 3 times to get the required result.

Step 3 - Measuring and Cutting

Measure and cut wall strip **A** and cover strip **B**

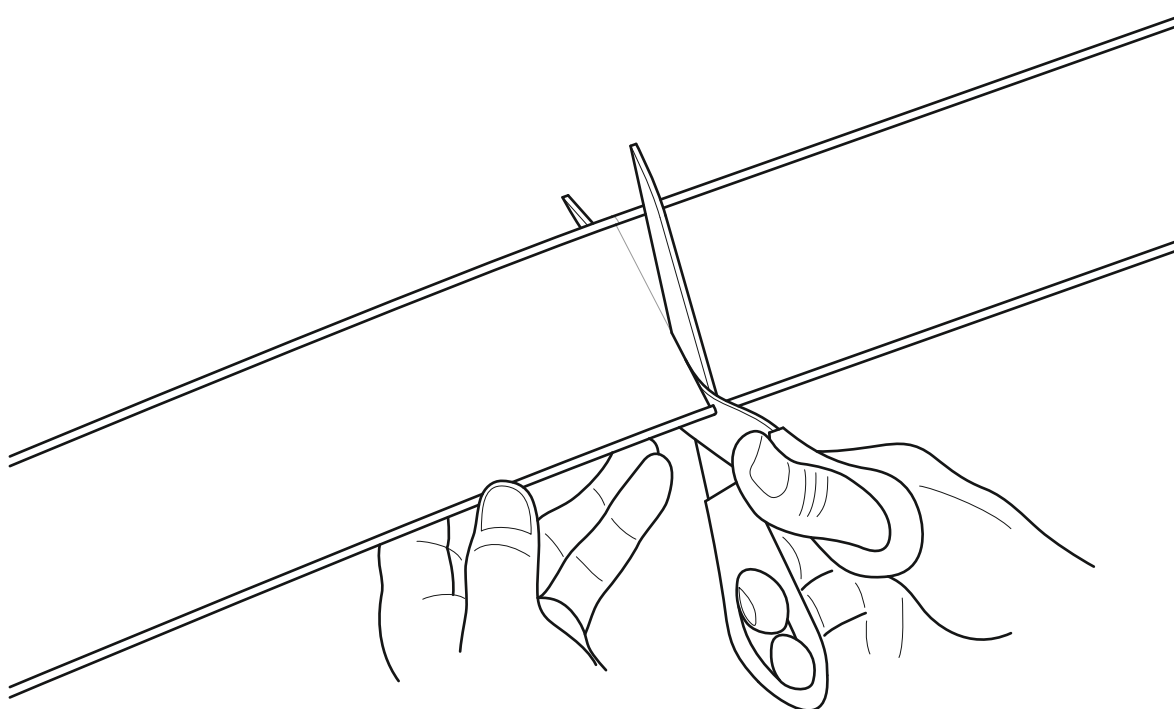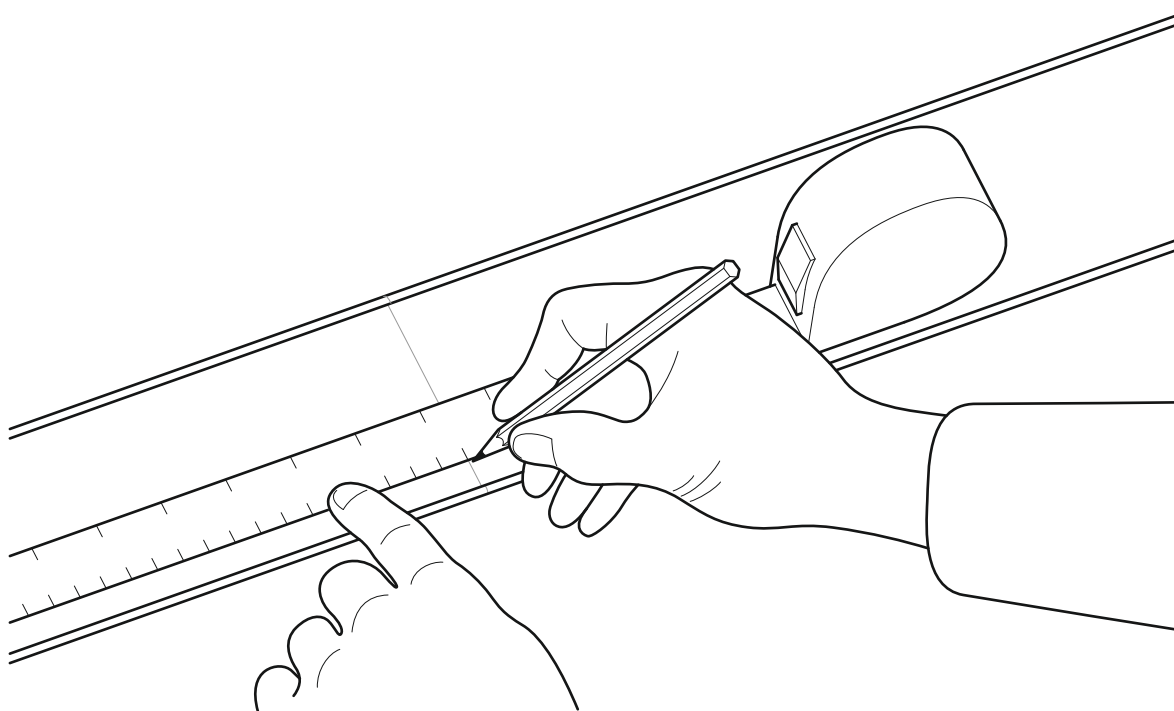


Step 4 - Attaching Wall Strip A



Before you attach wall strip **A**, make sure you are happy with the position

i

Before you attach wall strip **A**, use a clean, slightly damp cloth to clean the surface, let it dry thoroughly. Failure to do this will result in poor attachment.

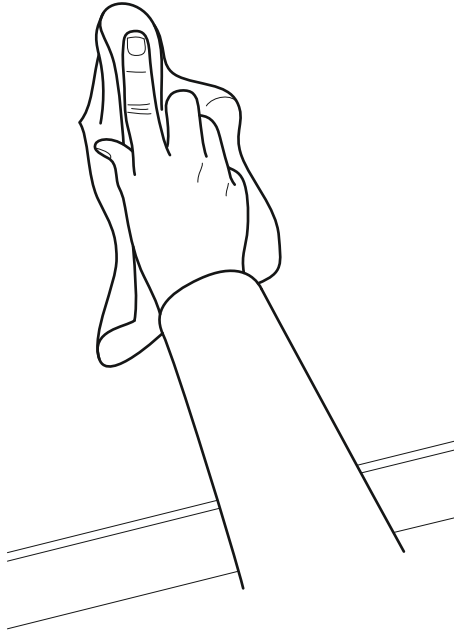


iii

Using a spirit level as a guide, carefully stick wall strip **A** to the wall.




ii

Remove backing paper from the self adhesive strips on wall strip **A**.

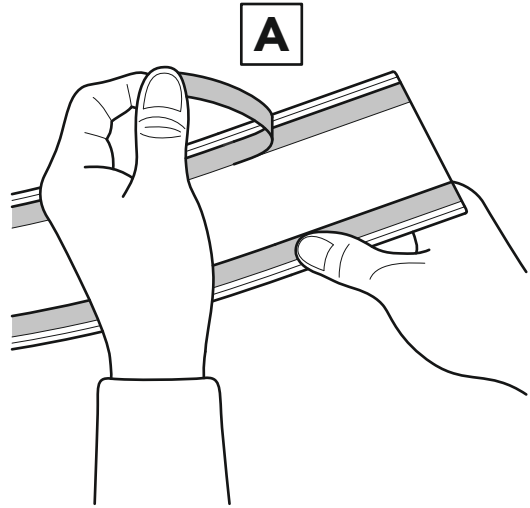

iv

Using a clean, dry cloth firmly press and rub up and down in the channels to ensure all air bubbles have been removed from wall strip **A**. Repeat after 5 minutes to ensure wall strip **A** is firmly attached to the wall.

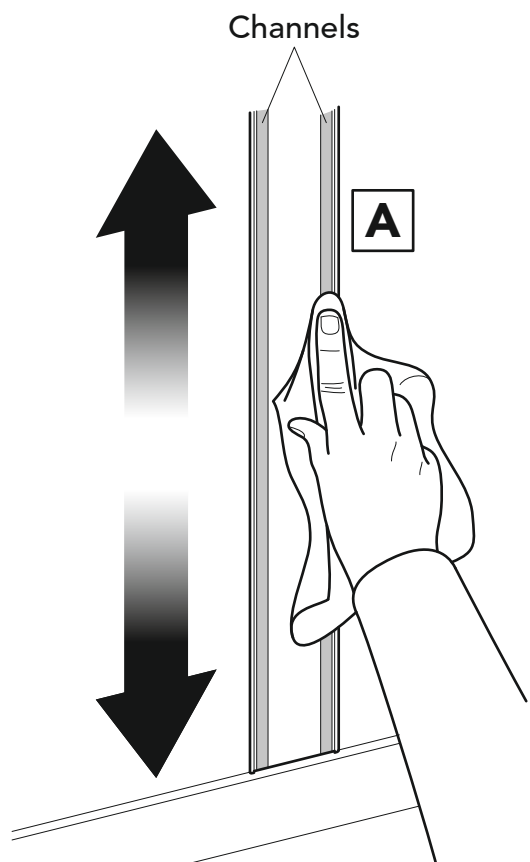


Step 5 - Attaching Cover Strip B



You can tie a piece of string around your cables at the top and bottom to make it easier to attach cover front strip **B**.


i

With cables in place, hook one side of cover strip **B** into wall strip **A**.

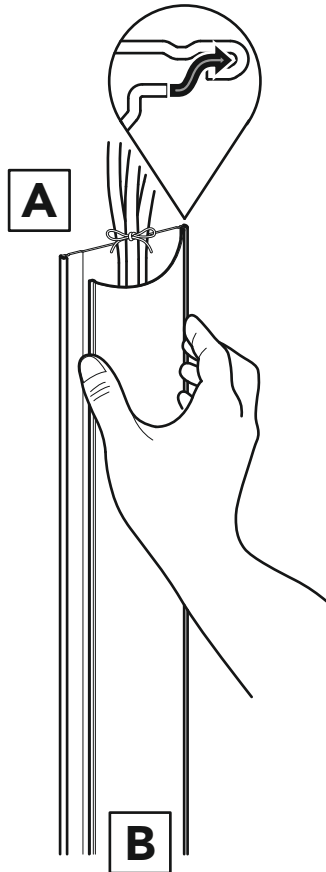


ii

Working from the top, squeeze cover strip **B** so the other side hooks into place.

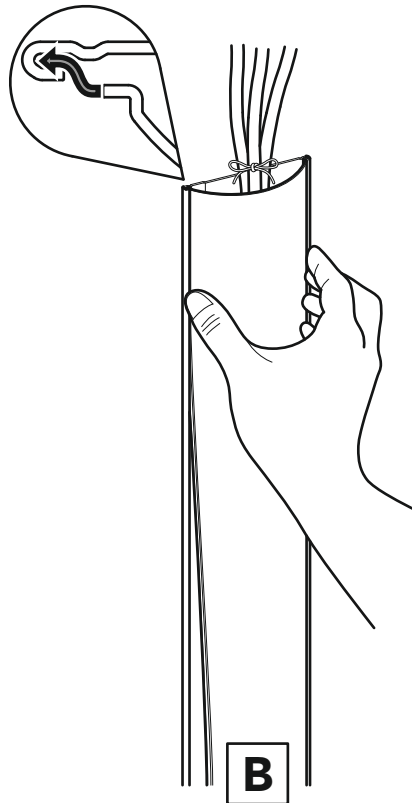

iii

With the top of cover strip **B** in place you will be able to hook the rest of cover strip **B** into place by firmly squeezing and sliding your thumb downwards.

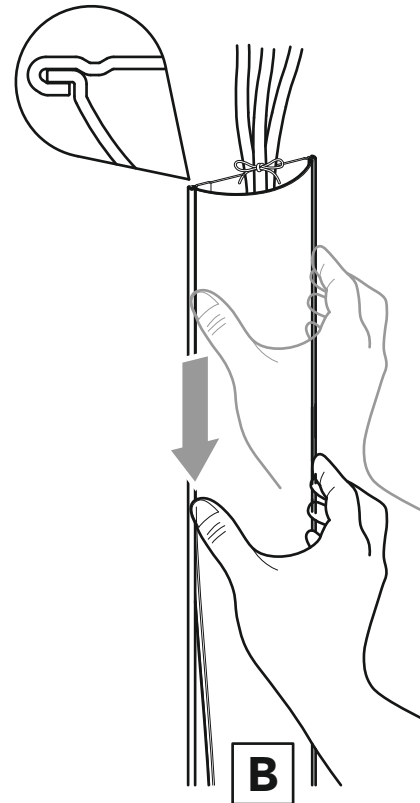

Step 6 - Finishing Touch



If you desire you can paint your cable management to suit your decor for an even more stylish, low key finish.

Shop online [wilko.com](https://www.wilko.com)



wilko PROMISE

Shop with confidence. If not completely satisfied, simply return this product with the receipt, within 28 days, and we'll gladly exchange it or refund you. That's a promise. This does not affect your statutory rights.

Produced in China for Wilkinson, Roebuck Way, Manton Wood, Worksop, Nottinghamshire, S80 3YY
Careline 0333 320 7024

All measurements are approximate. Images are for illustration only.

