
jl.avfgroup.com

466525 rev00 ###

JNL202

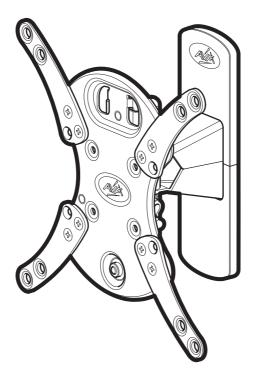






Read through ALL instructions before commencing installation.

If you have any questions about this product or issues with installation, contact the customer services help line before returning this product to the store.

CUSTOMER SERVICES HELP LINE NUMBER: 0333 320 0463

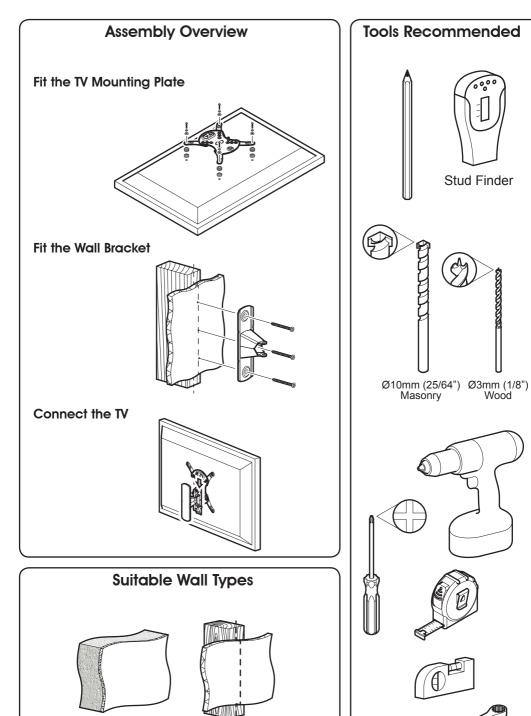

Wood Stud

Solid Wall

Index

- Measure the TV fixing holes Width and Height
- Preparing the TV Mounting Plate
- Fitting the TV Mounting Plate
- 4. Fitting the Wall Bracket
- **5** Assemble the Bracket
- 6 Fitting the Wall Covers
- Connecting the TV

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/ Illustrations.


You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.


This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).


AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.

Boxed Parts

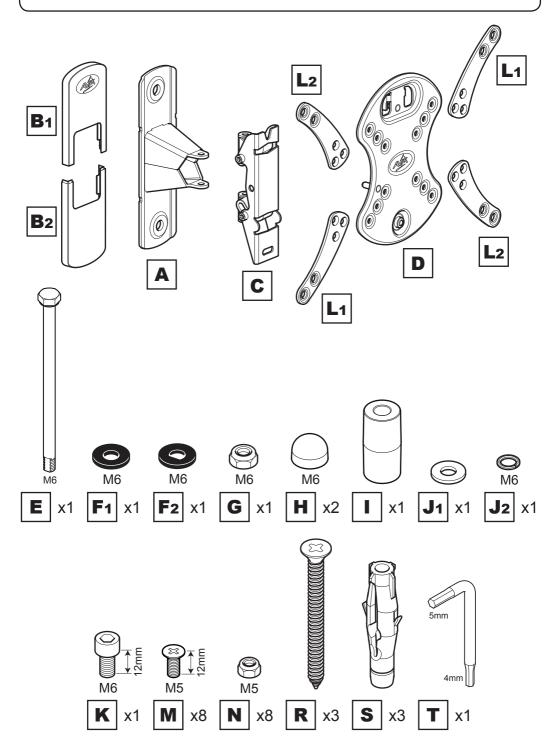

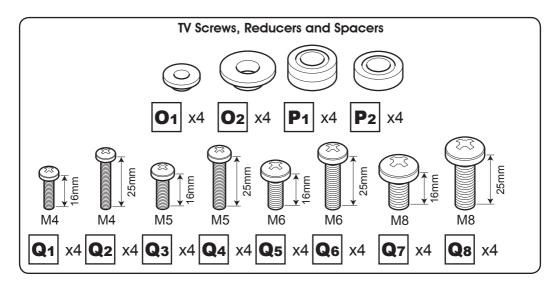


Measure the TV fixing holes Width and Height

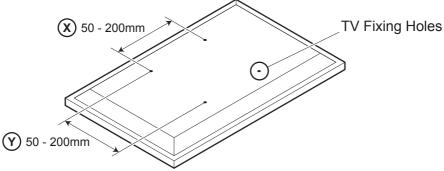



If width (X) is greater than 200mm or height (Y) greater than 200mm STOP installation now and contact the customer help line

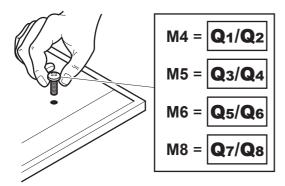

You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 3.

2 Preparing the TV Mounting Plate

Use the option that fits your TV

OPTION 1

- (X) 50mm x (Y) 50mm
- (X) 75mm x (Y) 75mm
- (X) 100mm x (Y) 100mm

OPTION 2


- X 100mm x Y 200mm
- (X) 200mm x (Y) 100mm

OPTION 3


X 200mm x Y 200mm

If in any doubt please call the customer help line


OPTION 1

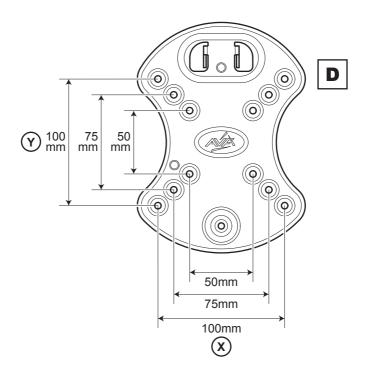

If your TV fixing holes match any of the sizes shown above you will not need to use any adaptors. Please go to step 3.

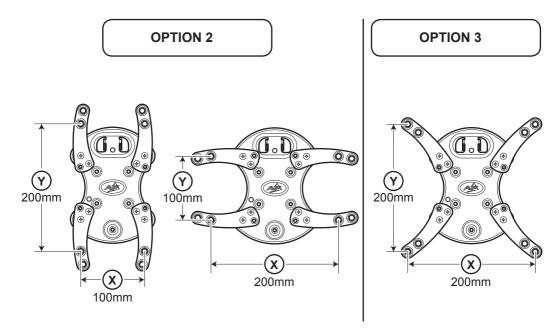

Example shown is 200 x 200 fixings

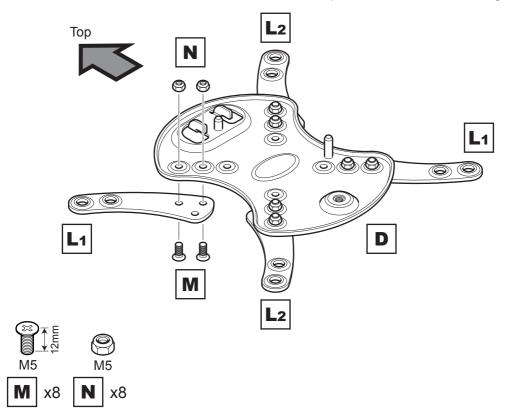





No Spacers

For TVs with flat / unobstructed back


Spacers P₁/P₂


For TVs with irregular / obstructed back

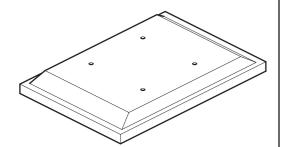


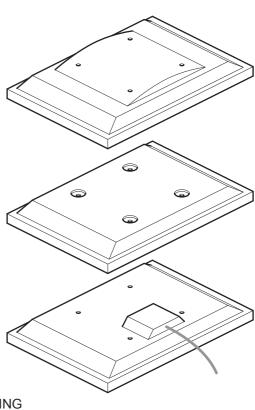


WARNING













After completing step 3 you will have fittings left over, please keep for future reference

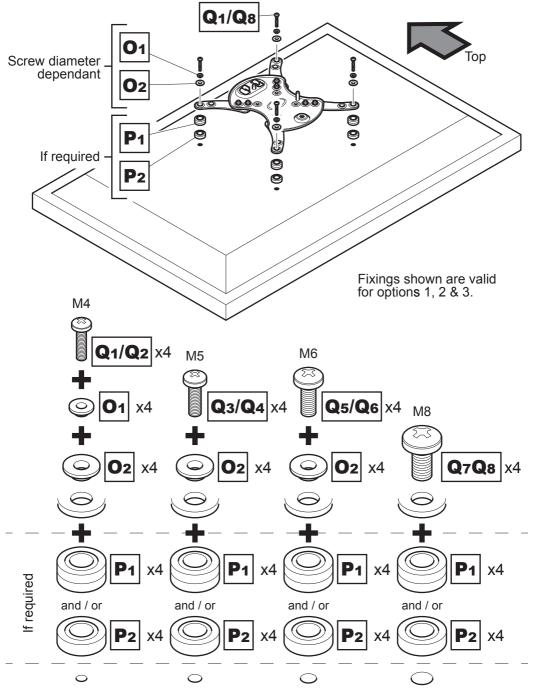



Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations


Solid Wall

Wood Stud

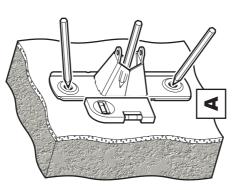

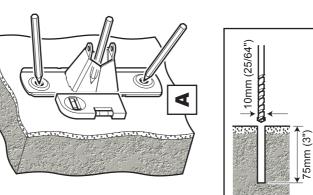

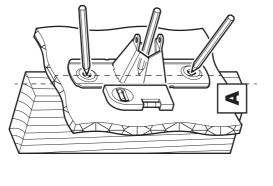








Ensure bracket is in the centre of the wood stud



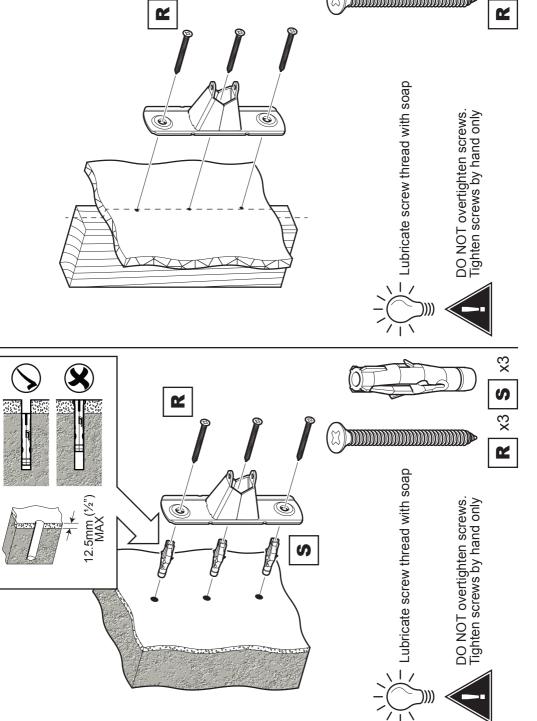


Assemble the Bracket

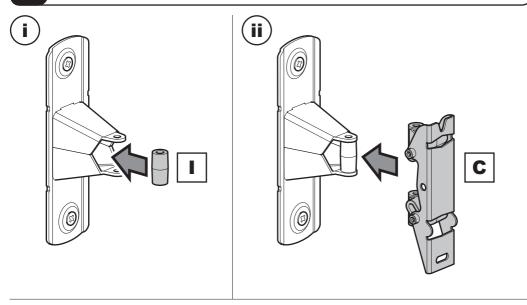


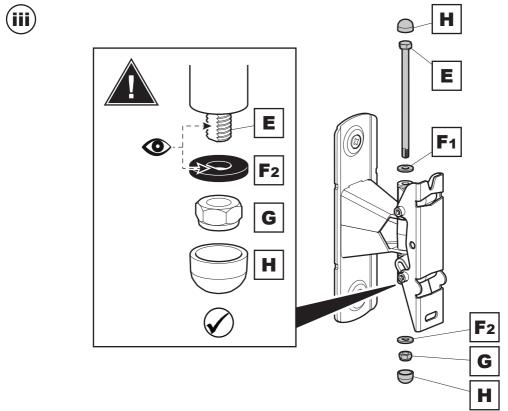


6 Fitting the Wall Covers



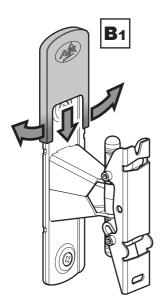







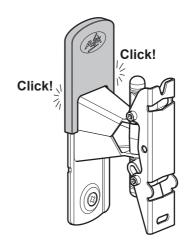



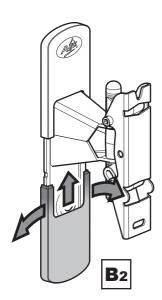


Carefully bend apart the 2 highlighted sections shown above and then slide into position

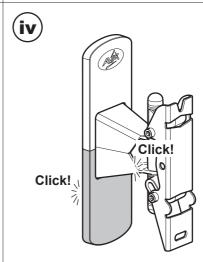


7 Connecting the TV



TV Locking

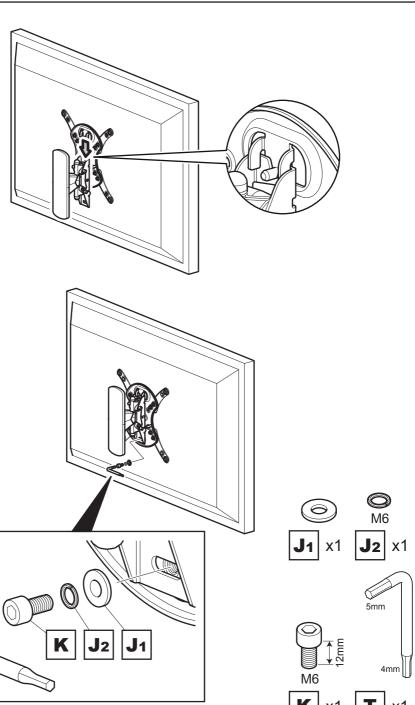

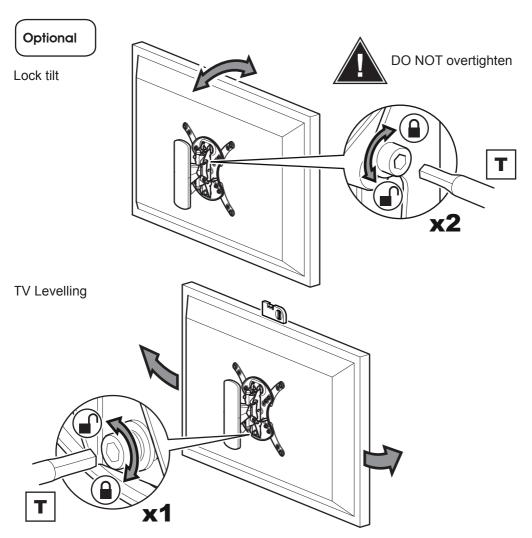

Storing the Allen Key

