




JNL204

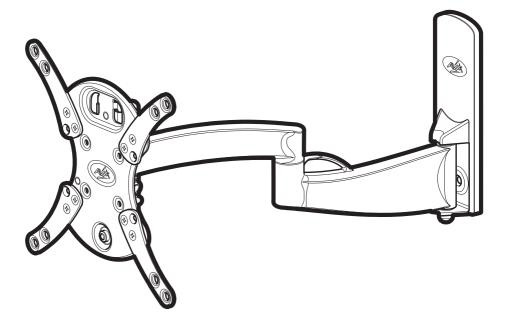







Read through <u>ALL</u> instructions before commencing installation. If you have any questions about this product or issues with installation, contact the customer services help line before returning this product to the store.

CUSTOMER SERVICES HELP LINE NUMBER: 0333 320 0463

AVF Group Ltd. Hortonwood 30, Telford, Shropshire, TF1 7YE, England

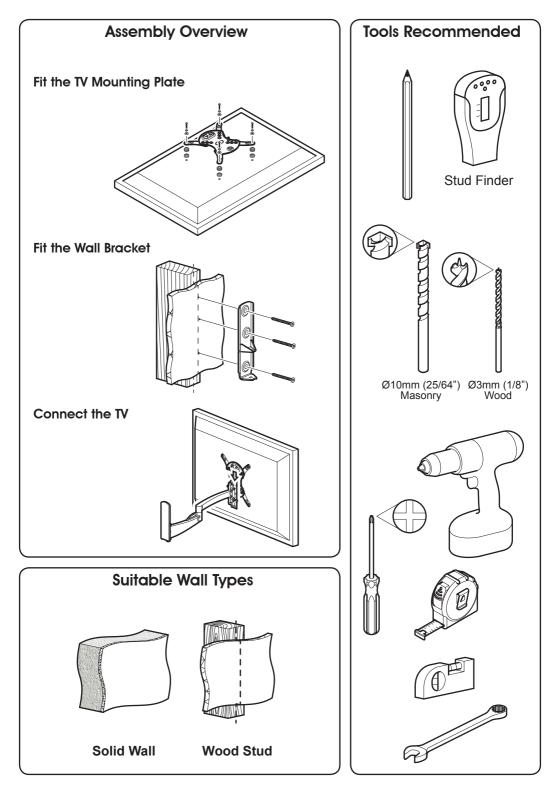

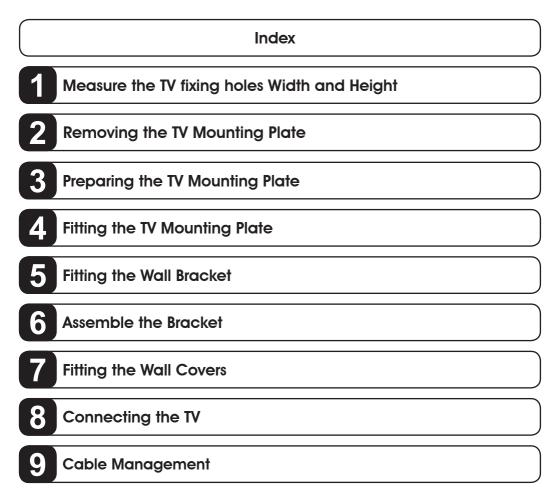

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/ Illustrations.


You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.


This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).


AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall.

Boxed Parts

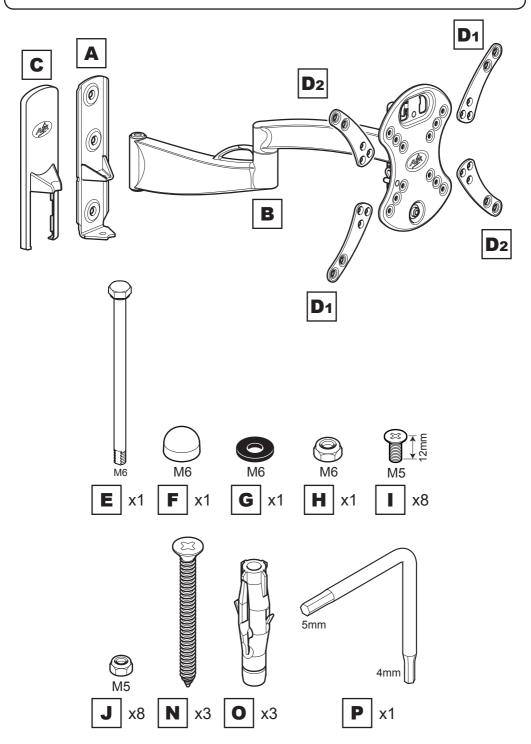


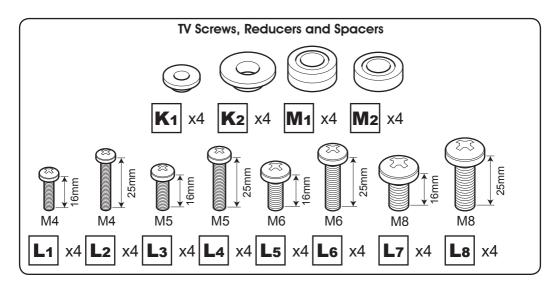

Measure the TV fixing holes Width and Height

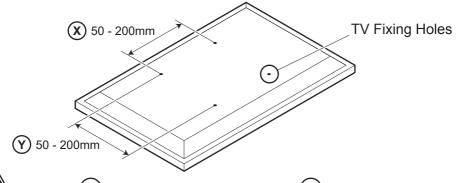


If width (X) is greater than 200mm or height (Y) greater than 200mm STOP installation now and contact the customer help line

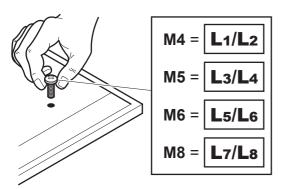

You are provided with 4 diameters of TV fixing screws, **M4**, **M5**, **M6** and **M8**. Determine the screw diameter that fits and remember for step 3.


Removing the TV Mounting Plate

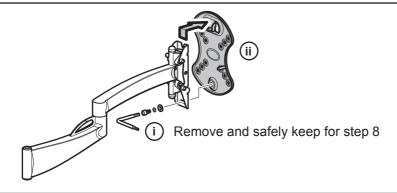




Preparing the TV Mounting Plate


Use the option that fits your TV




If in any doubt please call the customer help line

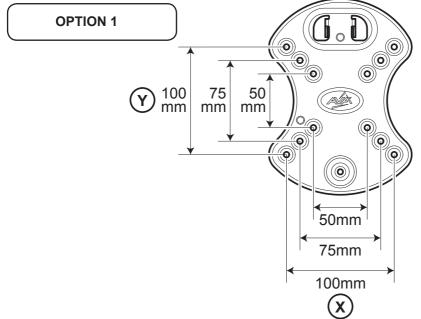


If your TV fixing holes match any of the sizes shown above you will not need to use any adaptors. Please go to step 3.

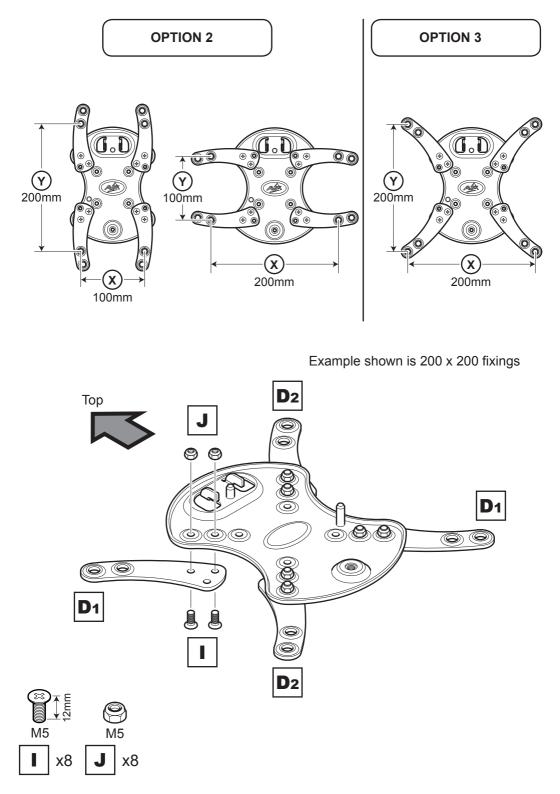

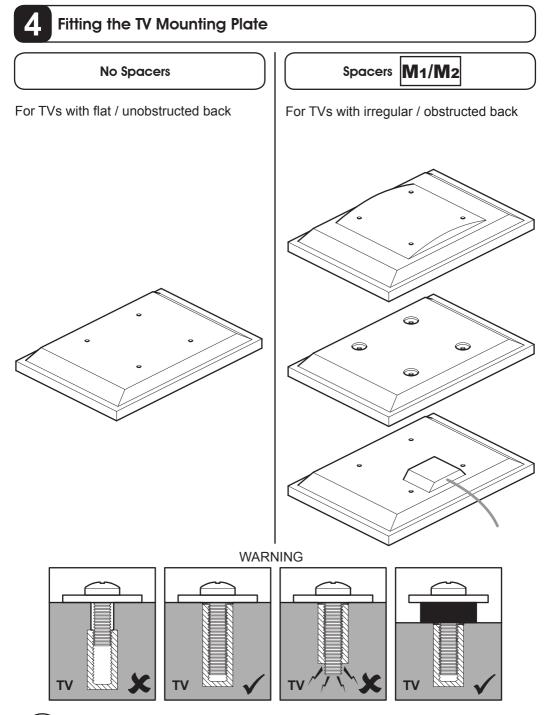


(i)


After completing step 4 you will have fittings left over, please keep for future reference

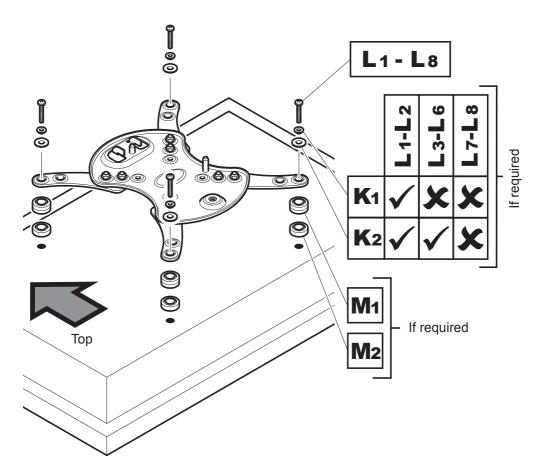


Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations

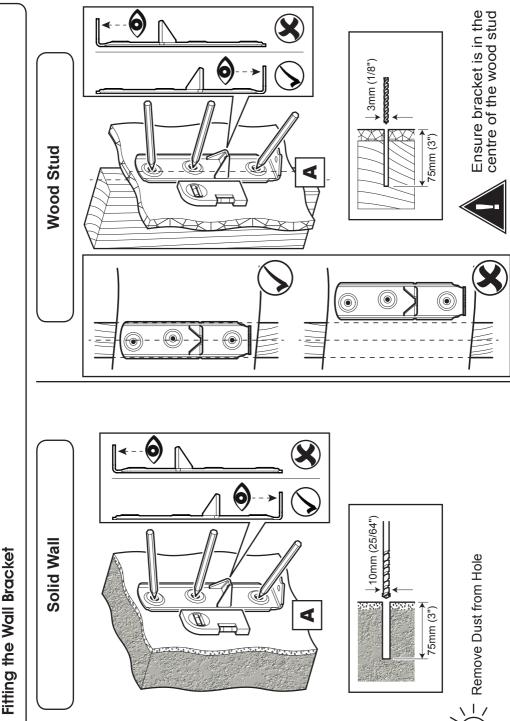

S

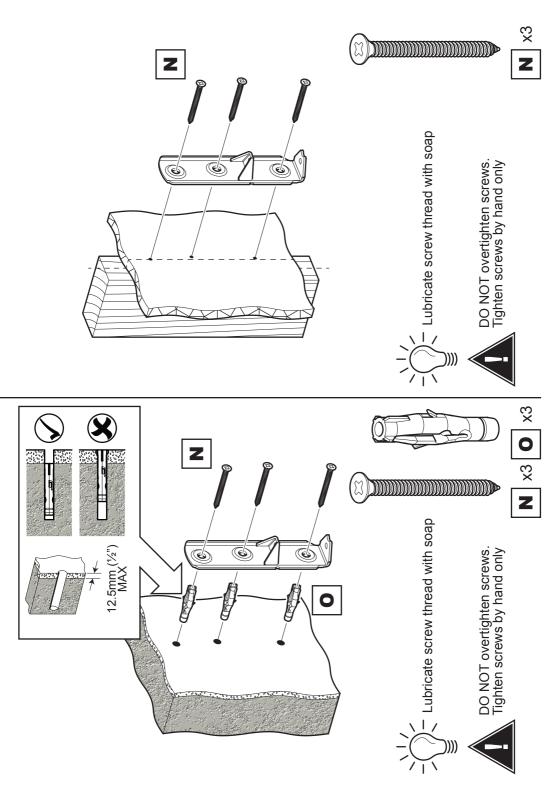


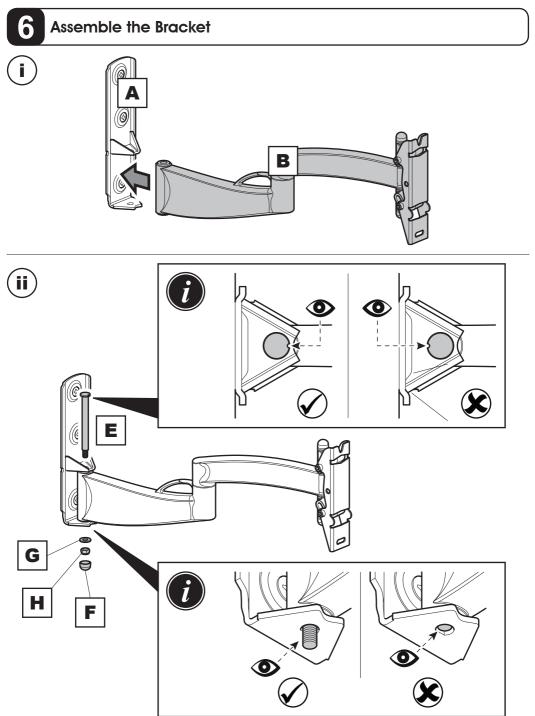


i


Firmly push part ${\bf E}$ with an even steady force (do not use a hammer) until part ${\bf E}$ has slid into position and enough thread is showing to attach parts ${\bf F},\,{\bf G}$ and ${\bf H}$

Fitting the Wall Covers

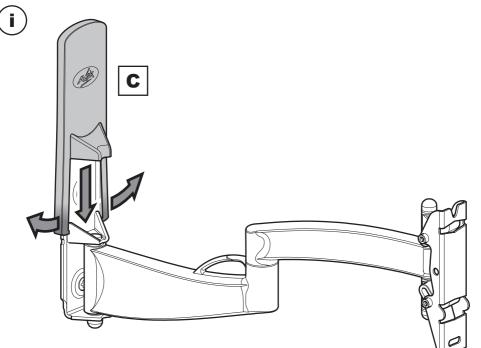

Carefully bend apart the 2 highlighted sections shown above and then slide into position

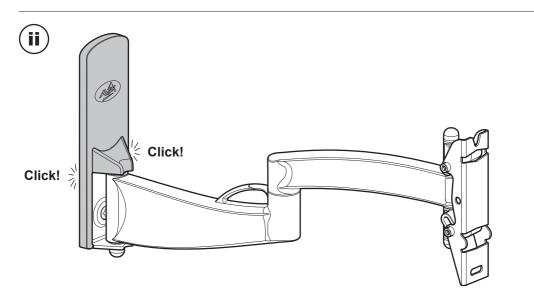

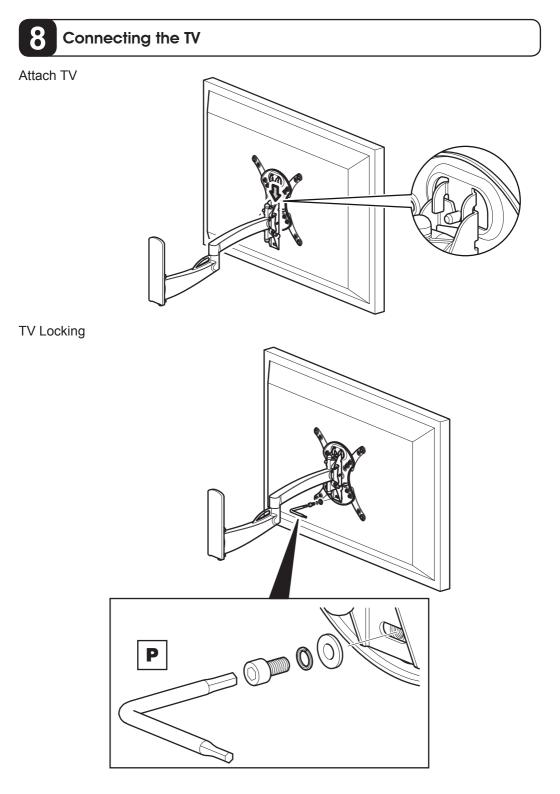

9

