


PRO-SIGNAL

TV Mount Installation Kit

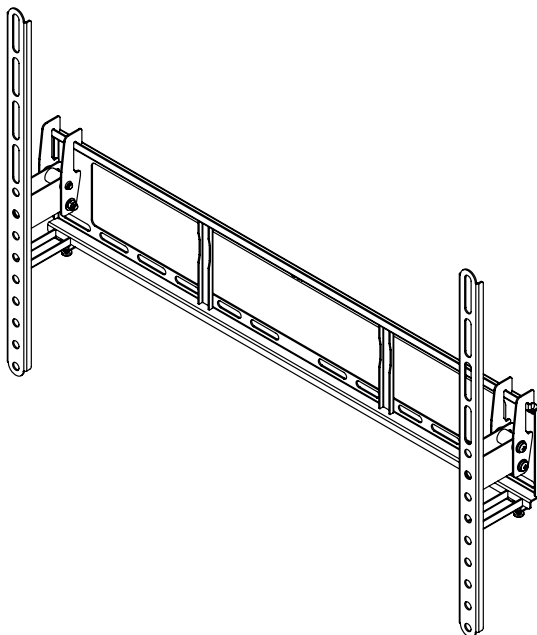

Read through ALL instructions before commencing installation.

Retain all packaging in case the bracket needs to be returned.






Contents may vary from photography/illustrations.

You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

Tools Recommended

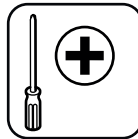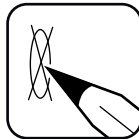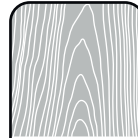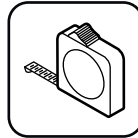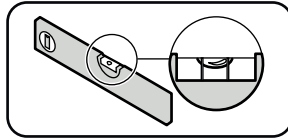


Boxed Parts

C1_{x4}



M6 x 12mm

C2_{x4}




M6 x 30mm

C3_{x4}



M8 x 12mm

C4_{x4}



M8 x 30mm

D_{x8}




E_{x4}



M6

F_{x4}




G_{x4}




M6



H_{x4}

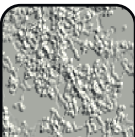

Ø8mm (5/16")

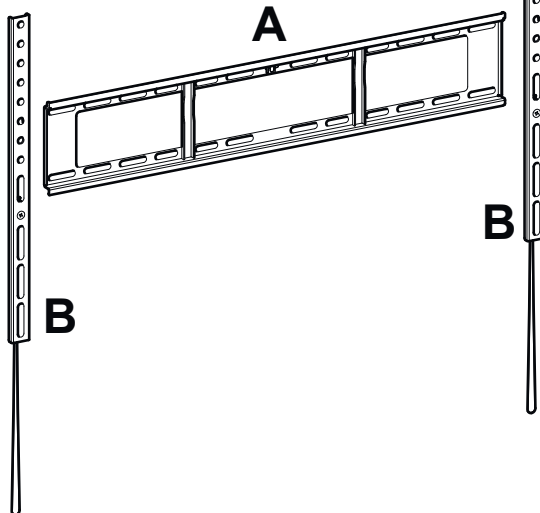

Top

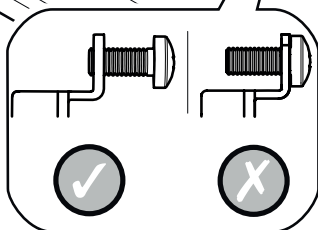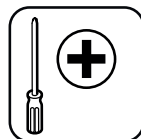**D**_{x8}**E1**_{x4}


M5

E2_{x4}

M6

C1_{x4}


M4 x 12mm

C2_{x4}

M4 x 30mm

C3_{x4}


M6 x 12mm

C4_{x4}



M6 x 30mm

C5_{x4}






M8 x 12mm

C6_{x4}





M8 x 30mm

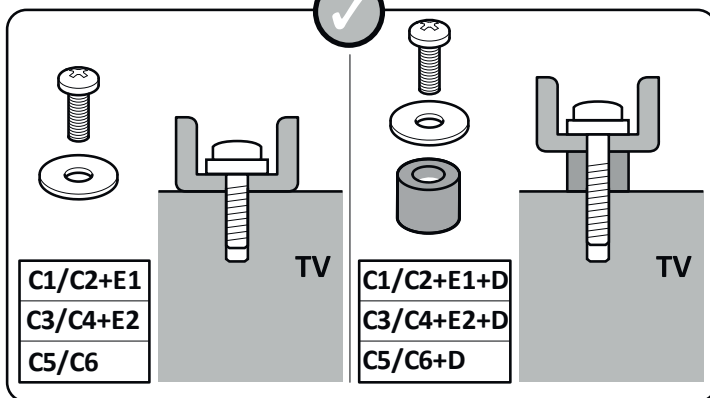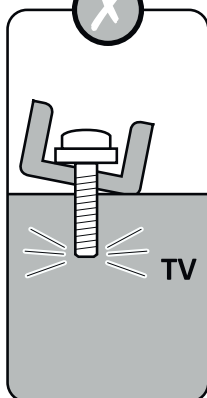


Solid Wall

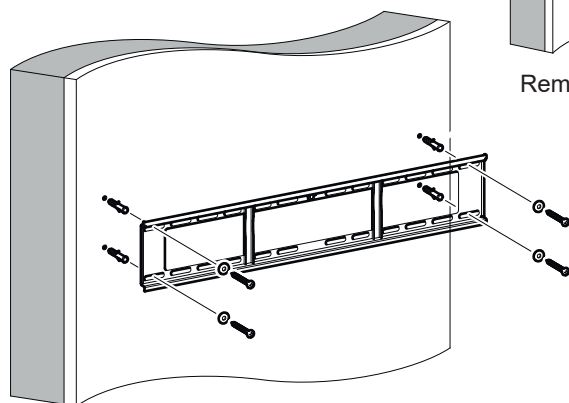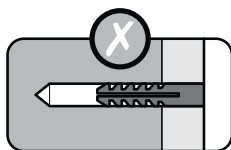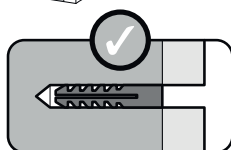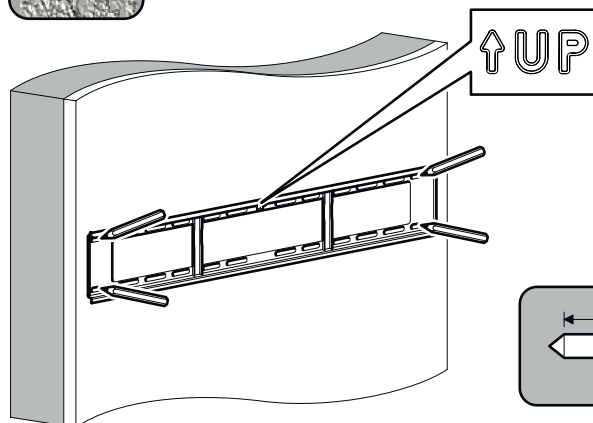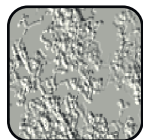


Lubricate screw thread with soap

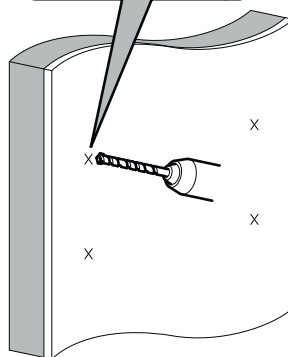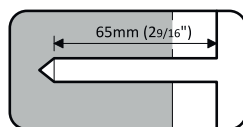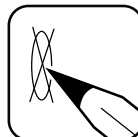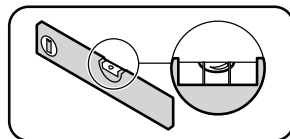

Remove Dust from Hole

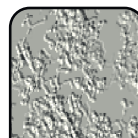

Ø8mm (5/16")

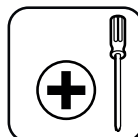

G_{x4}




M6


H_{x4}






F_{x4}






Wood Stud

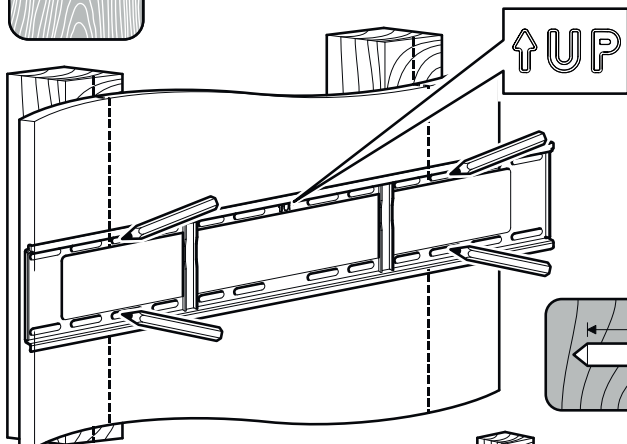




Ensure bracket is in the centre of the wood stud

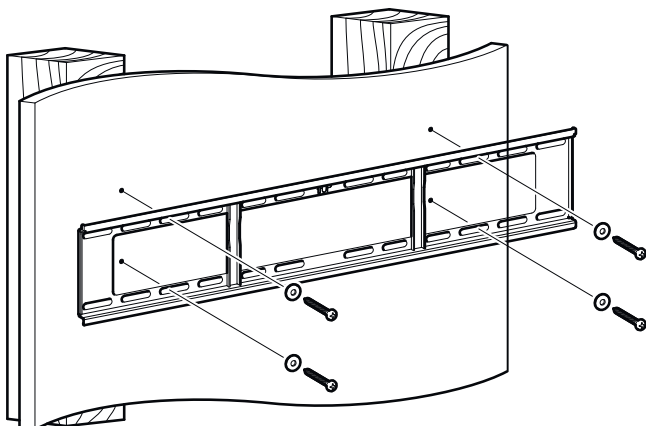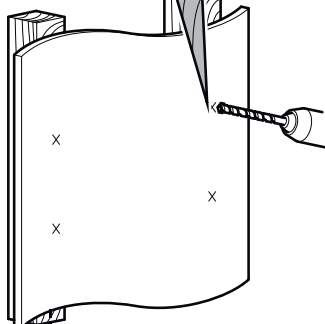

Lubricate screw thread with soap

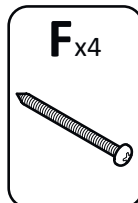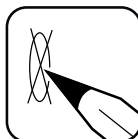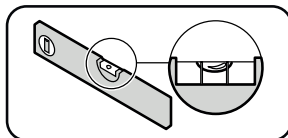


Connect the TV

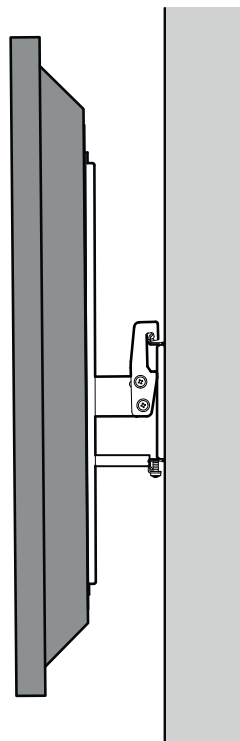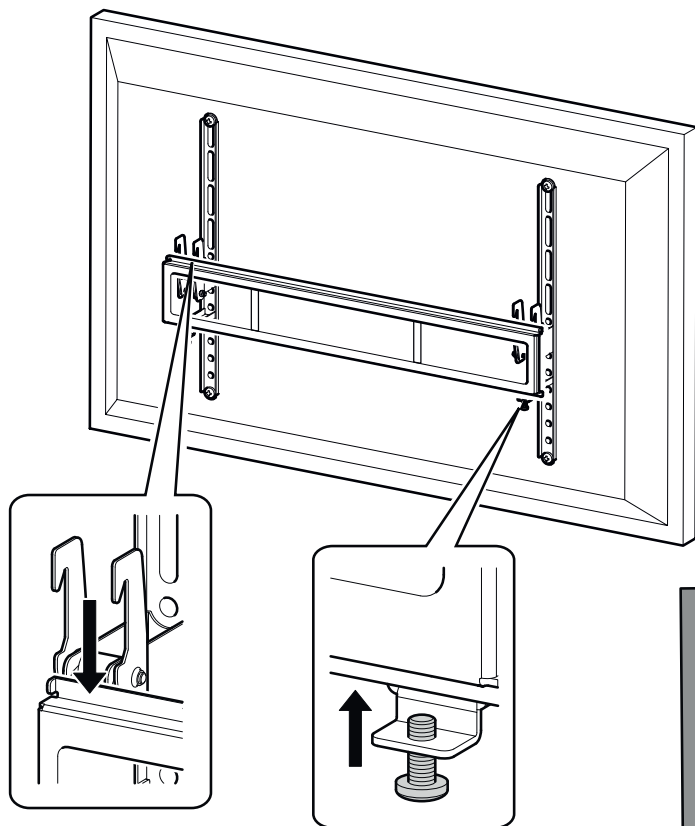

Optional

You can slide your TV horizontally by small amounts if required

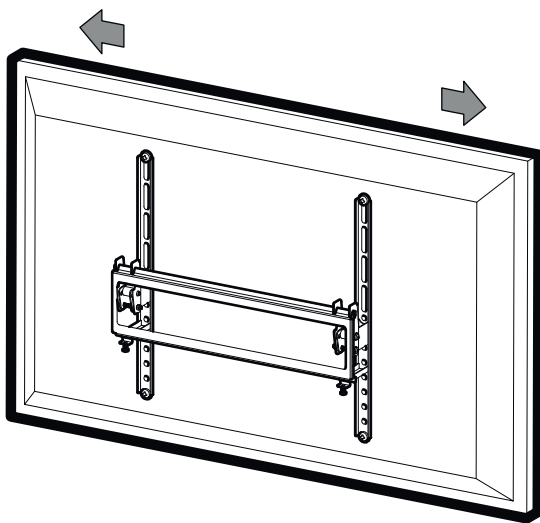

Lock tilt

