


# **468344** rev01

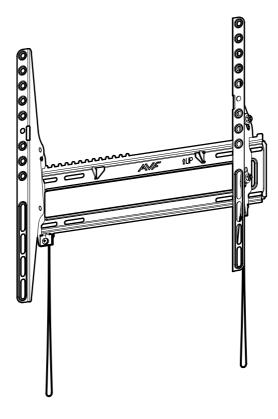





Read through  $\underline{\mathsf{ALL}}$  instructions before commencing installation.


## Please don't return me to the store

If you are unsure or need advice please contact our **UK-based support team**:



0333 320 0463 | avfgroup.com

Phone lines open Mon-Fri during AVF office hours

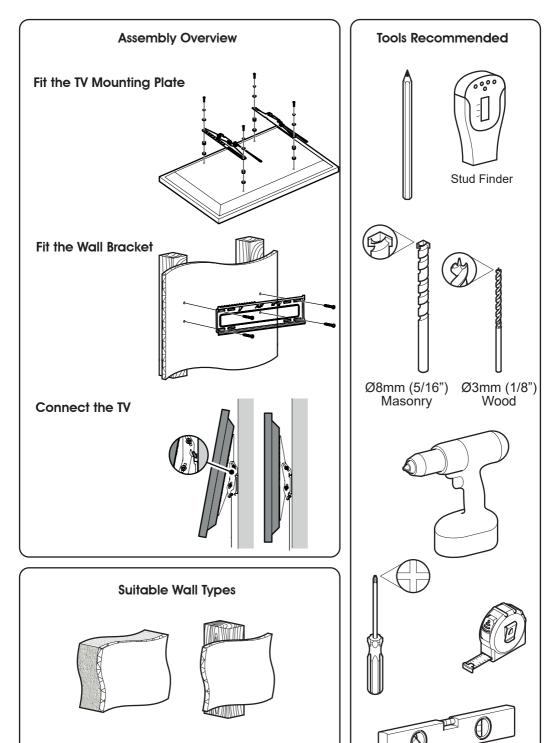

Solid Wall

**Wood Stud** 

#### Index

- Measure the TV fixing holes Width and Height
- 2 Fitting the TV Brackets
- Fitting the Wall Bracket
- Connecting the TV
- To Remove the TV

Retain all packaging in case the bracket needs to be returned.

Contents may vary from photography/illustrations.

You will not need all these parts, so expect there to be some left over depending upon the specification of your TV.

This product is intended for indoor use only. Use of this product outdoors could lead to failure and personal injury.

It is the responsibility of the installer to ensure that the mounting wall is of a suitable standard and void of any services (eg gas, electricity, water etc).

AVF accept no responsibility for any damage or loss caused by installing this product in a sub standard wall





This product comes with a 10 Year Warranty.


This will be honoured as long as the product is owned by the original consumer purchaser. Proof of purchase is required.


For detailed warranty information please visit: www.avfgroup.com/warranties

#### **Boxed Parts**

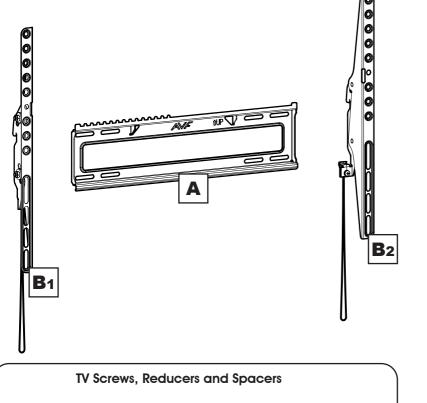

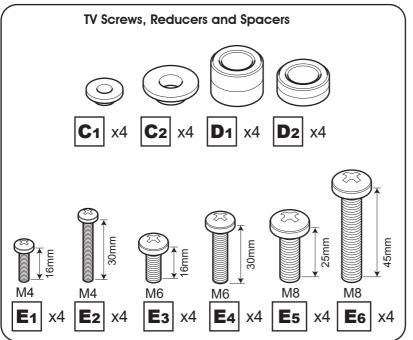




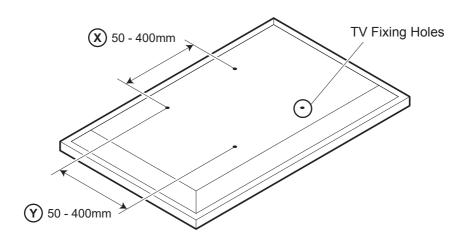




If width (X) is greater than 400 mm or height (Y) greater than 400 mm STOP installation now and contact the customer help line.

You are provided with 3 diameters of TV fixing screws,  $\bf M4,\,M6$  and  $\bf M8.$  Determine the screw diameter that fits and remember for step 2

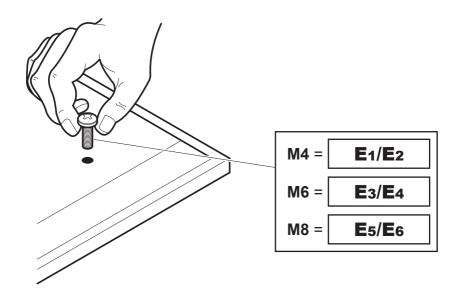




#### No Spacers


For TVs with flat / unobstructed back.

Spacers


**D**1/**D**2


For TVs with irregular / obstructed back.

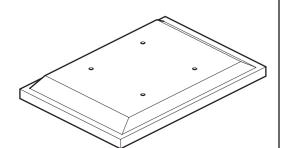


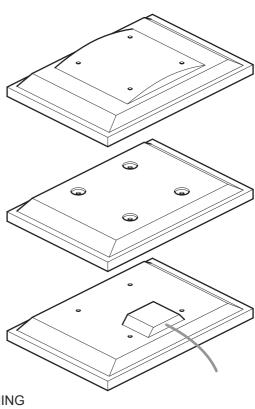

### WARNING













After completing step 2 you will have fixings left over, please keep for future reference.

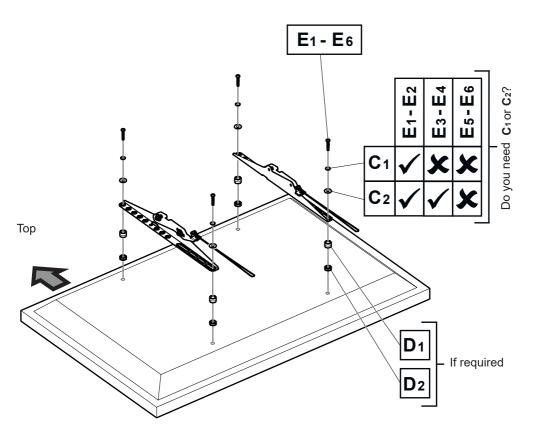


Attach the bracket to the back of your TV using suitable screw, reducer and spacer combinations.

Solid Wall

Wood Stud

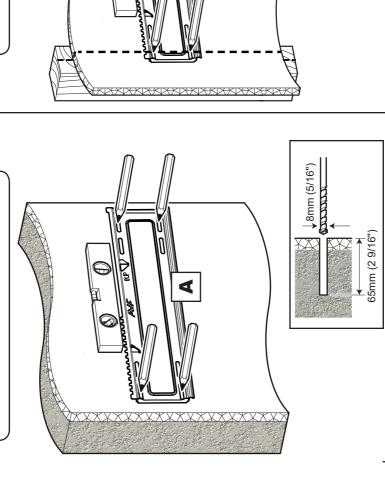

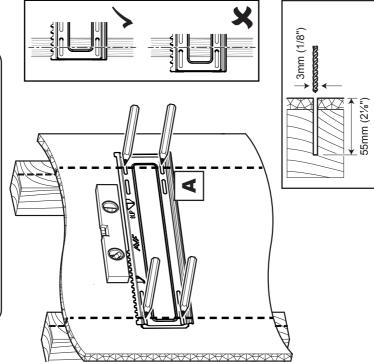

√ Remove Dust from Hole.

Ensure drill marks are in the centre of the wood stud.

