







# IMPORTANT!

Ensure no bends or kinks before installation.



## You will need

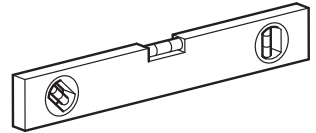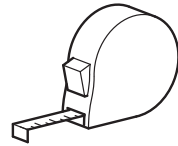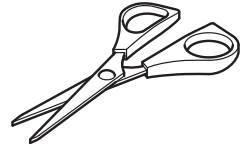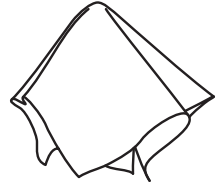

# IMPORTANT!

Wall must be clean and dry before installation.



## Video Guide



[vimeo.com/462633266](https://vimeo.com/462633266)




+44 (0) 333 320 0463 (UK)  
1-800 667 0808 (USA)

# Parts Included


**A**

Wall Strip

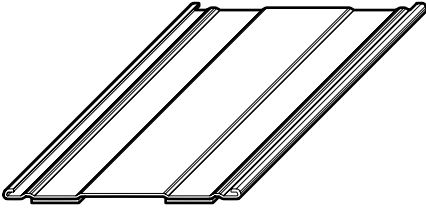

**B**

Cover Strip

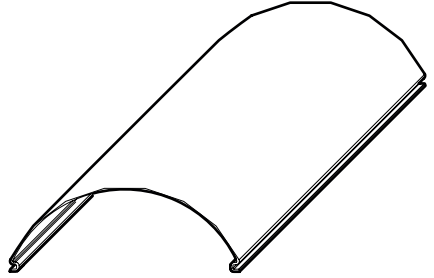


**C**

Clip x2





**Ensure strips A and B have no bends or kinks before installation.**

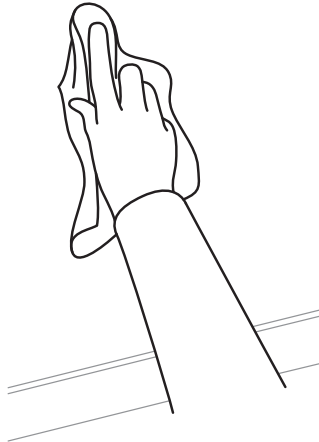

**For adhesive to be effective ensure wall is clean and dry**

1

Measure and cut strips **A** and **B** to fit your required space.

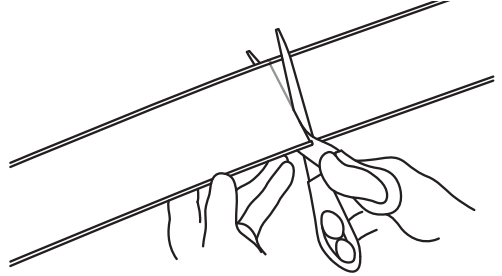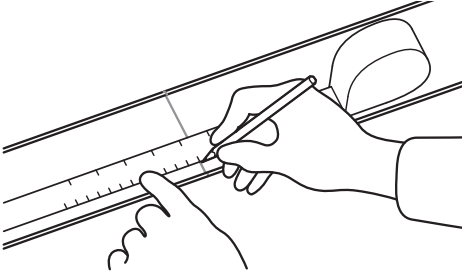

Remove backing paper from adhesive strips on Wall Strip **A**.


Use a spirit level as a guide and apply Wall Strip **A** to the wall.



Use a clean, dry cloth to firmly press and rub along the channels.

This will help create a strong bond with your wall.


Repeat after 5 minutes.

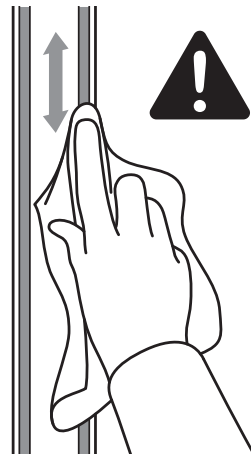

2

With cables in place, hook one side of Cover Strip **B** into Wall Strip **A**.

Working from the top, squeeze Cover Strip **B** until the other side hooks into place, then slide thumb downwards until the rest of Cover Strip **B** is hooked into place.

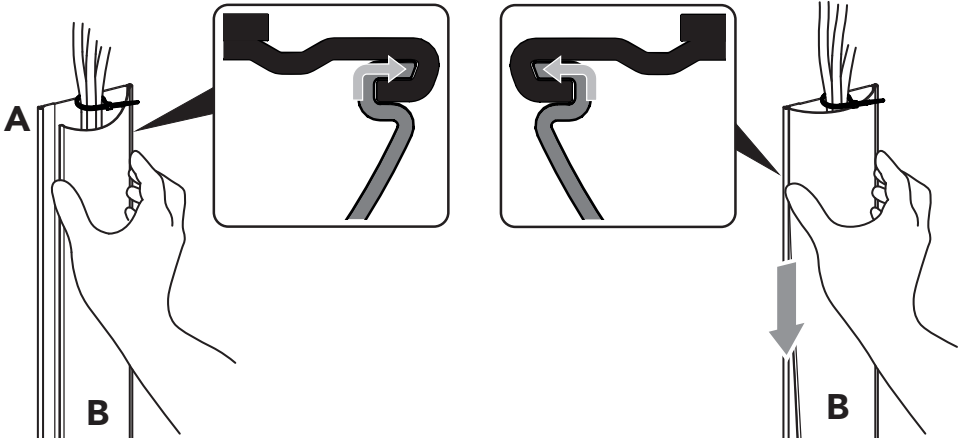

TIP

To make it easier to keep cables in place while attaching Cover Strip **B**, you can wrap tape, or use a cable tie, around your cables at the top and bottom.

3

Secure the cable management strip at the top and bottom using clips **C**.

Push clip **C** over the cable management strip. Make sure it clips into place behind the wall strip.

